


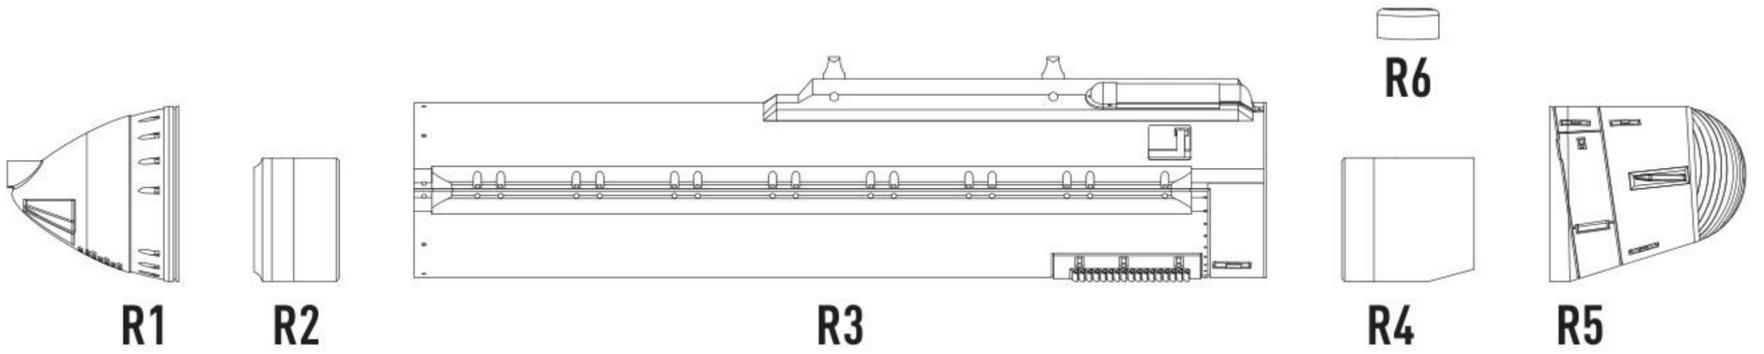



DETAILS AFTER REMOVAL FROM SUPPORTS

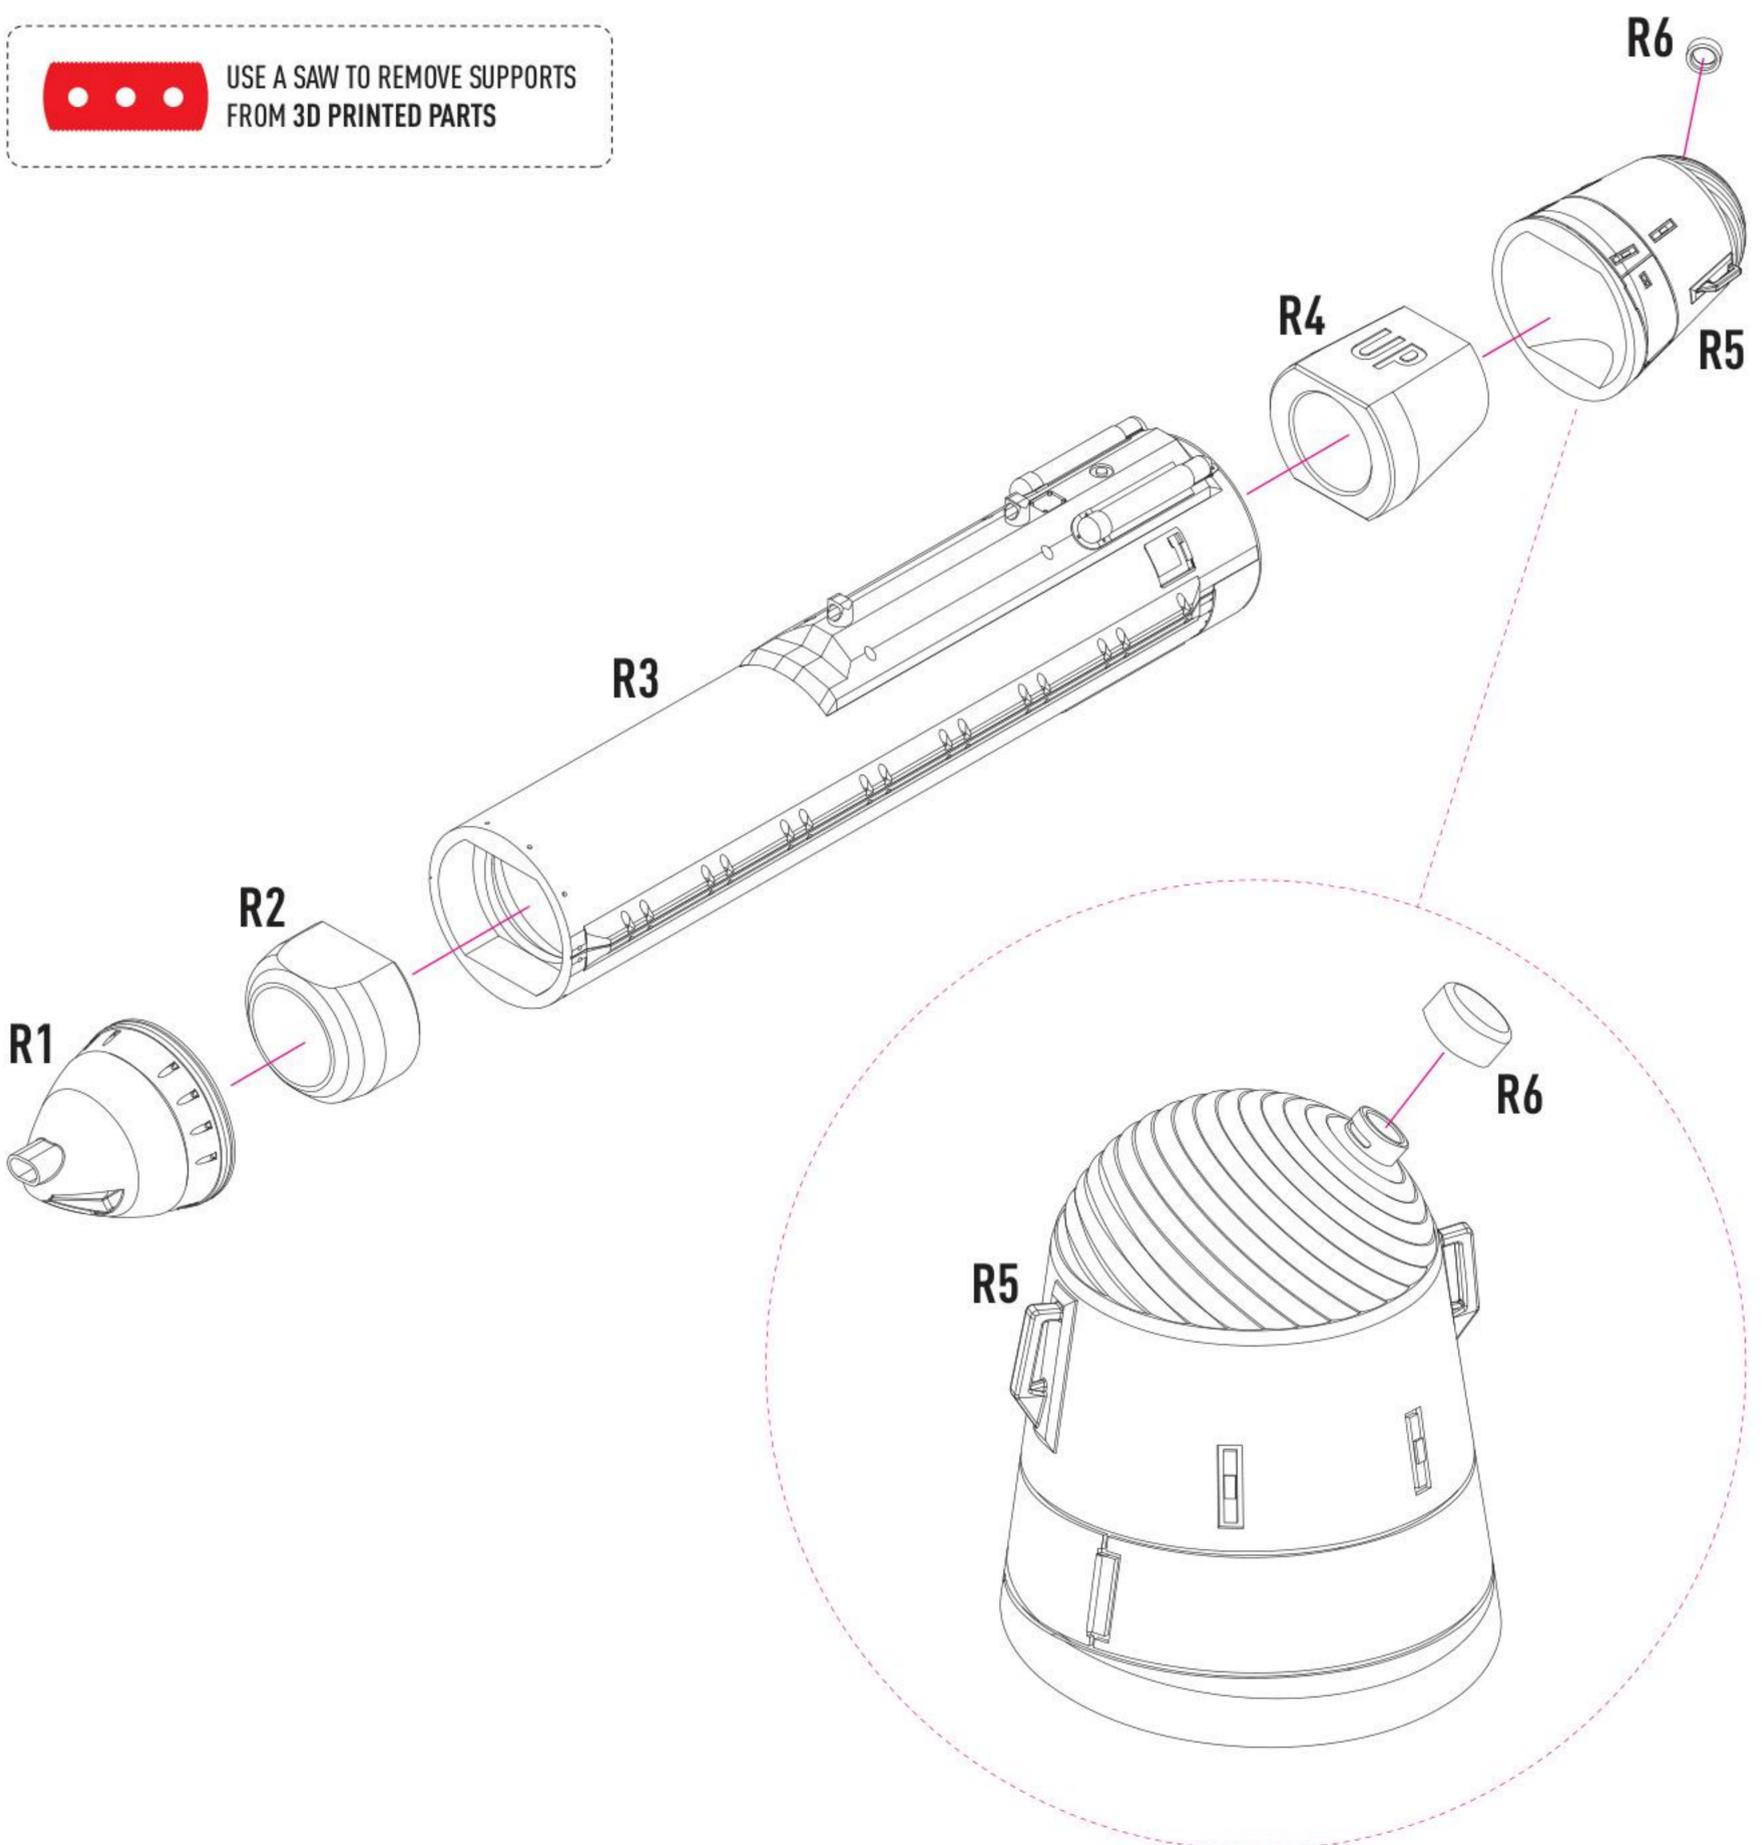

 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

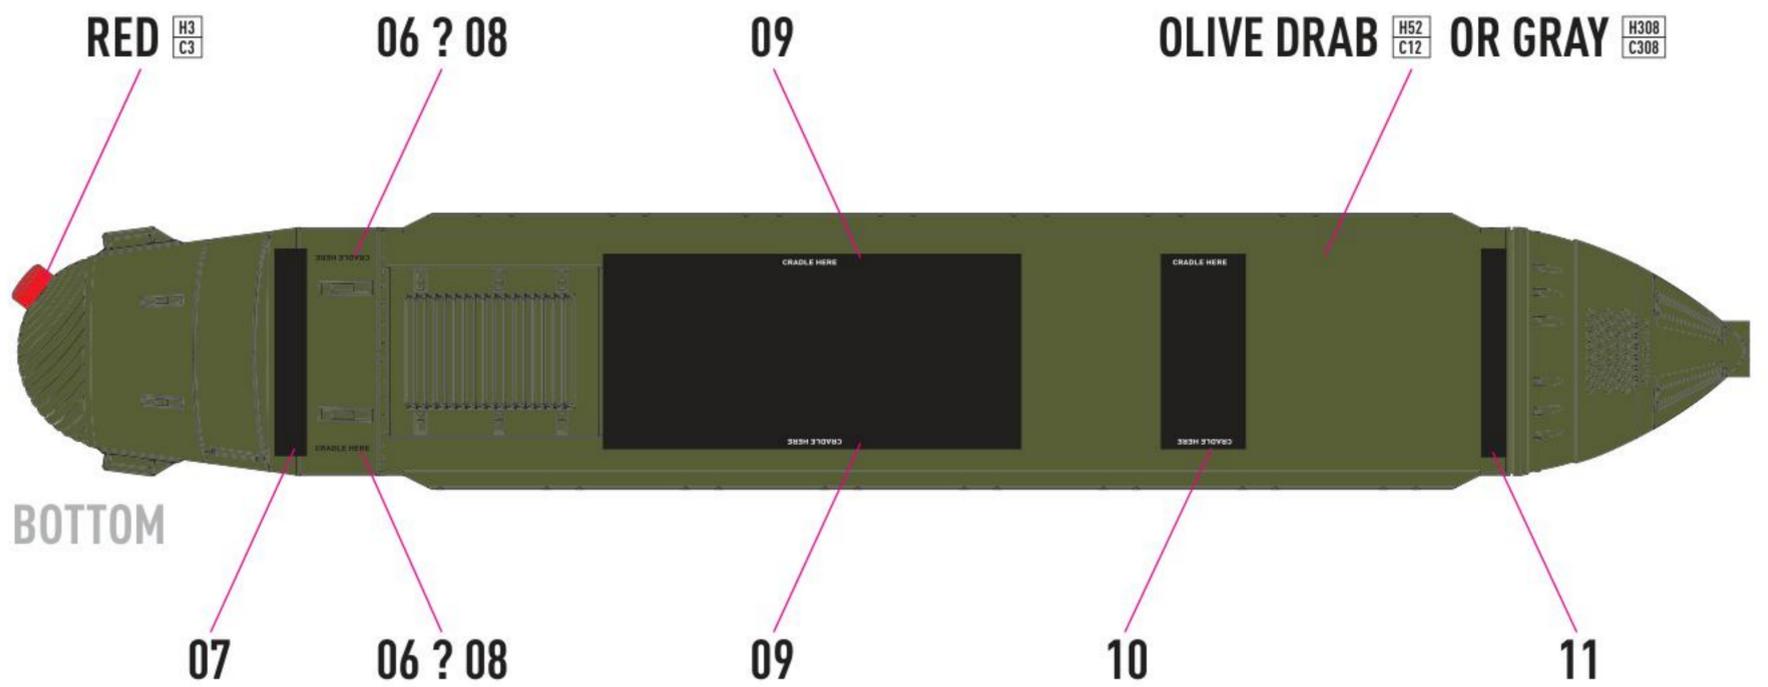

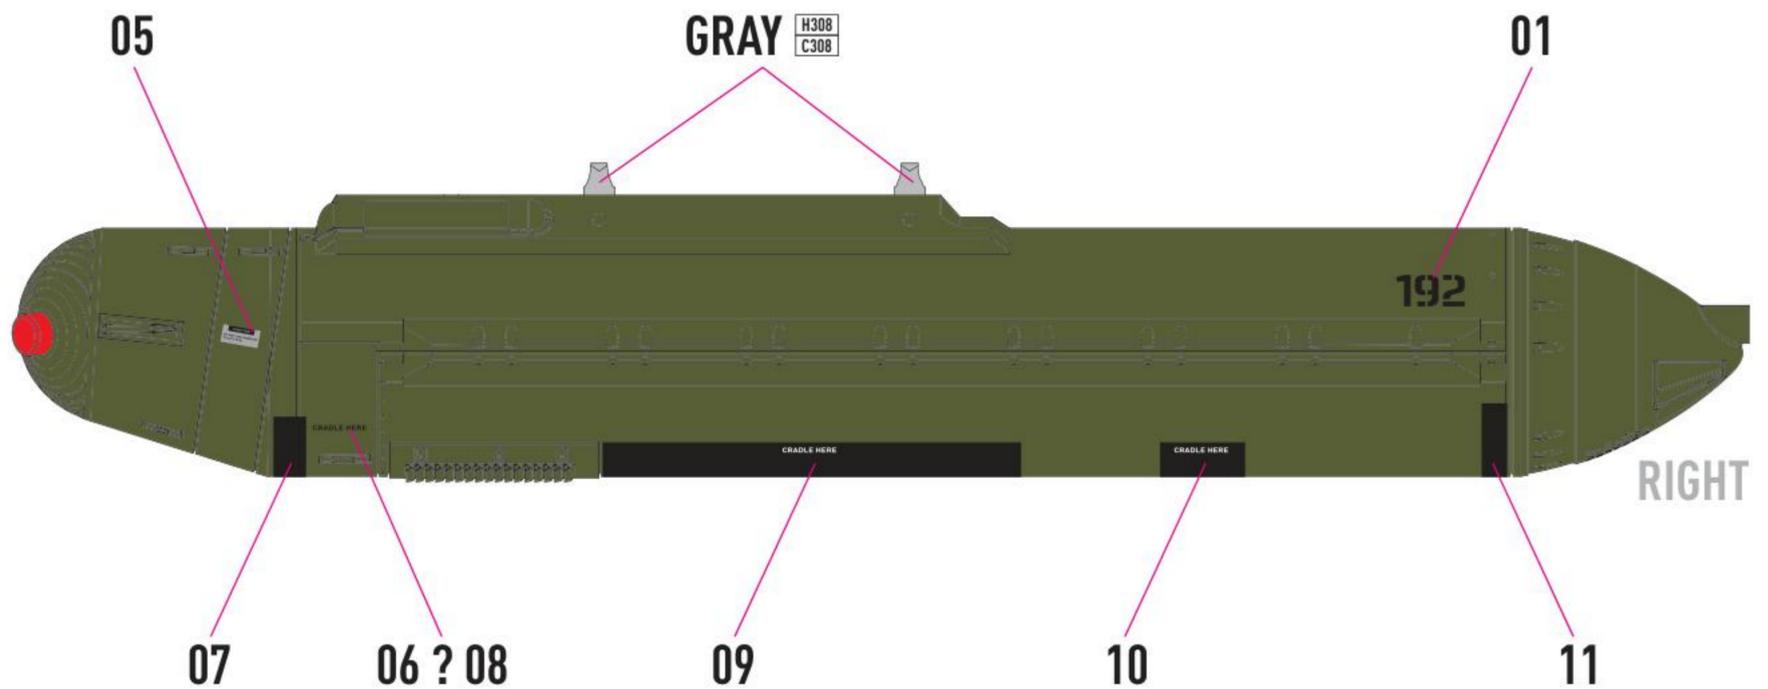

| COLORS | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|------------|-----------------|------------------|
| OLIVE DRAB | H52 | C12 |

| COLORS | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|--------|-----------------|------------------|
| GRAY | H308 | C308 |

| COLORS | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|--------|-----------------|------------------|
| RED | H3 | C3 |