


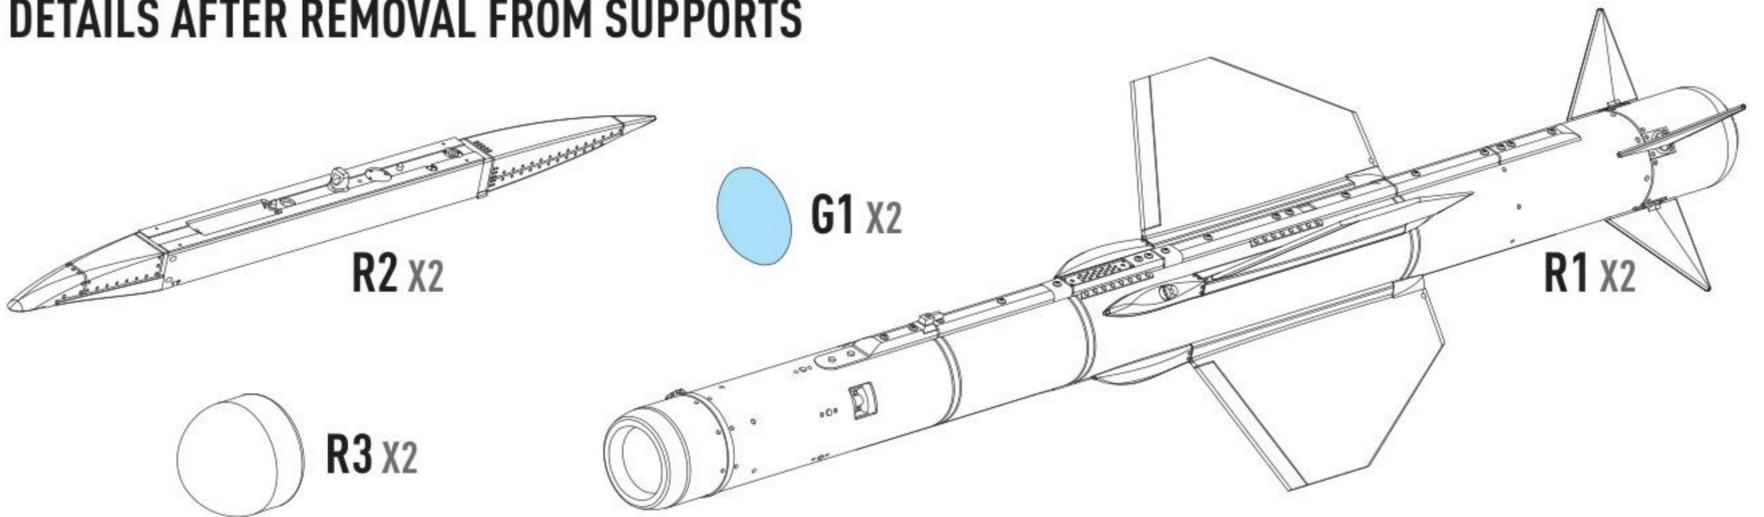
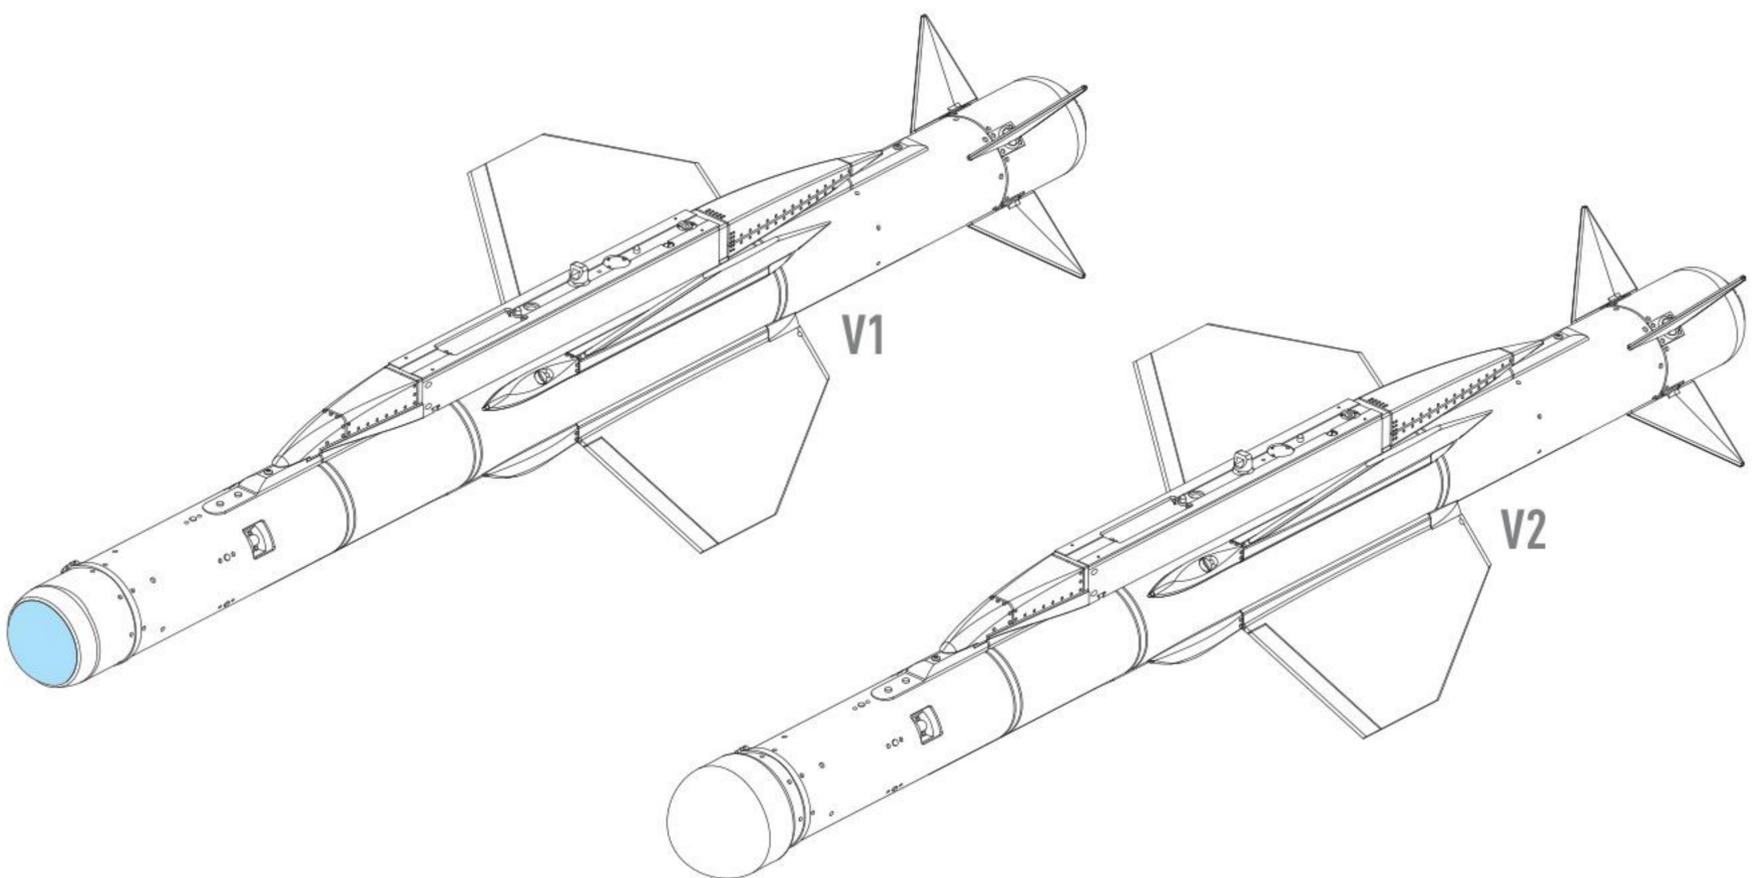
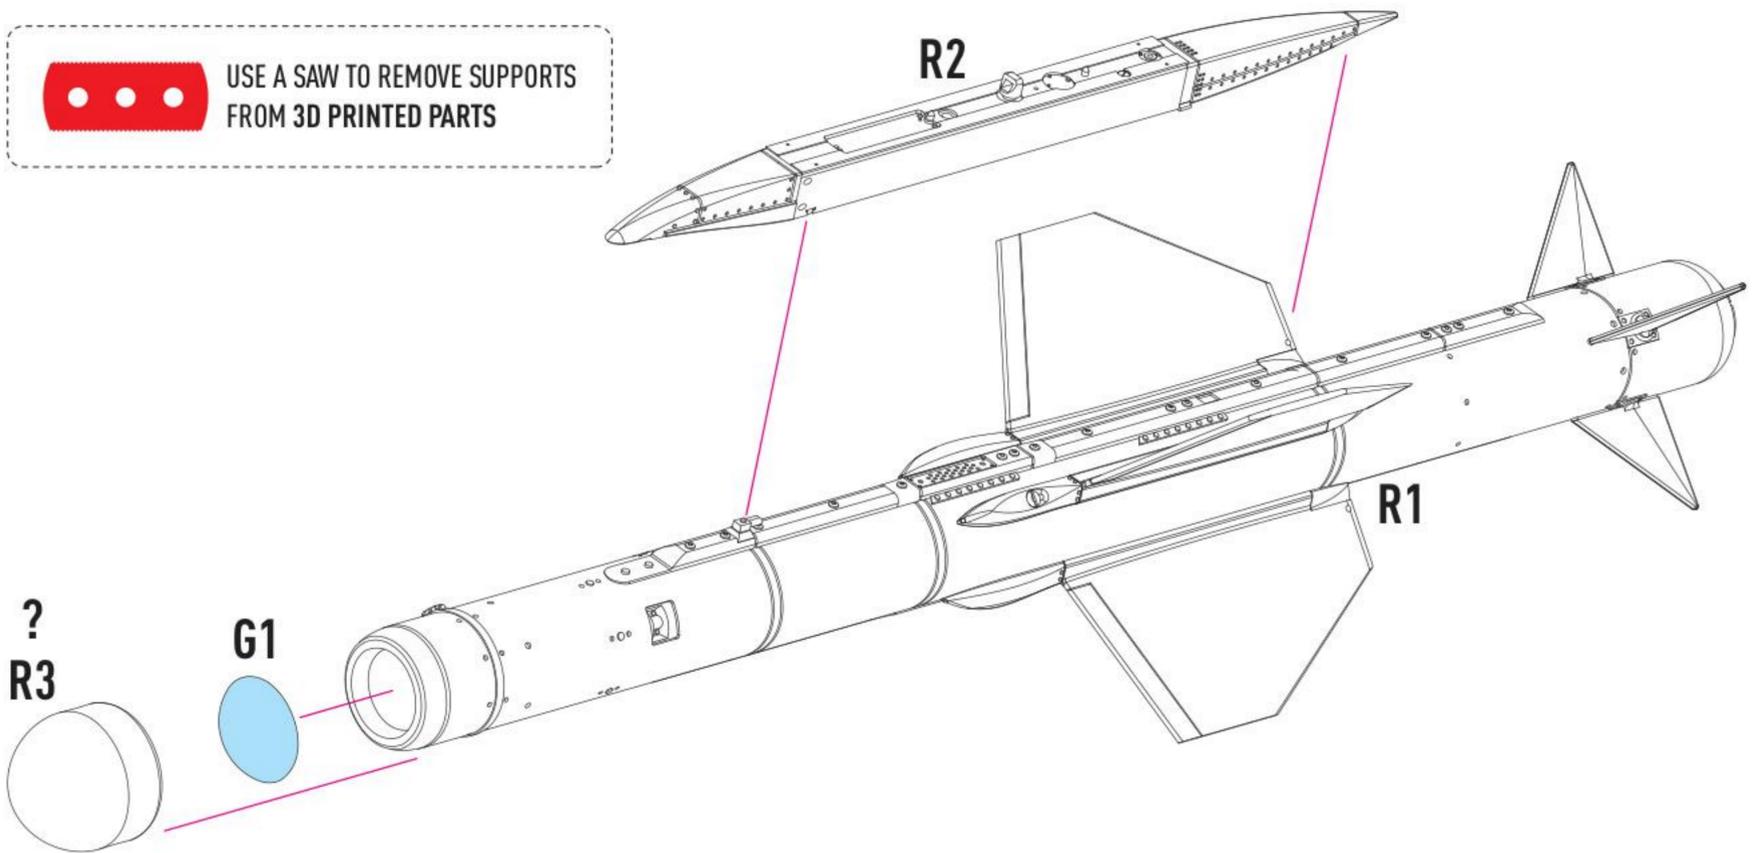


DETAILS AFTER REMOVAL FROM SUPPORTS

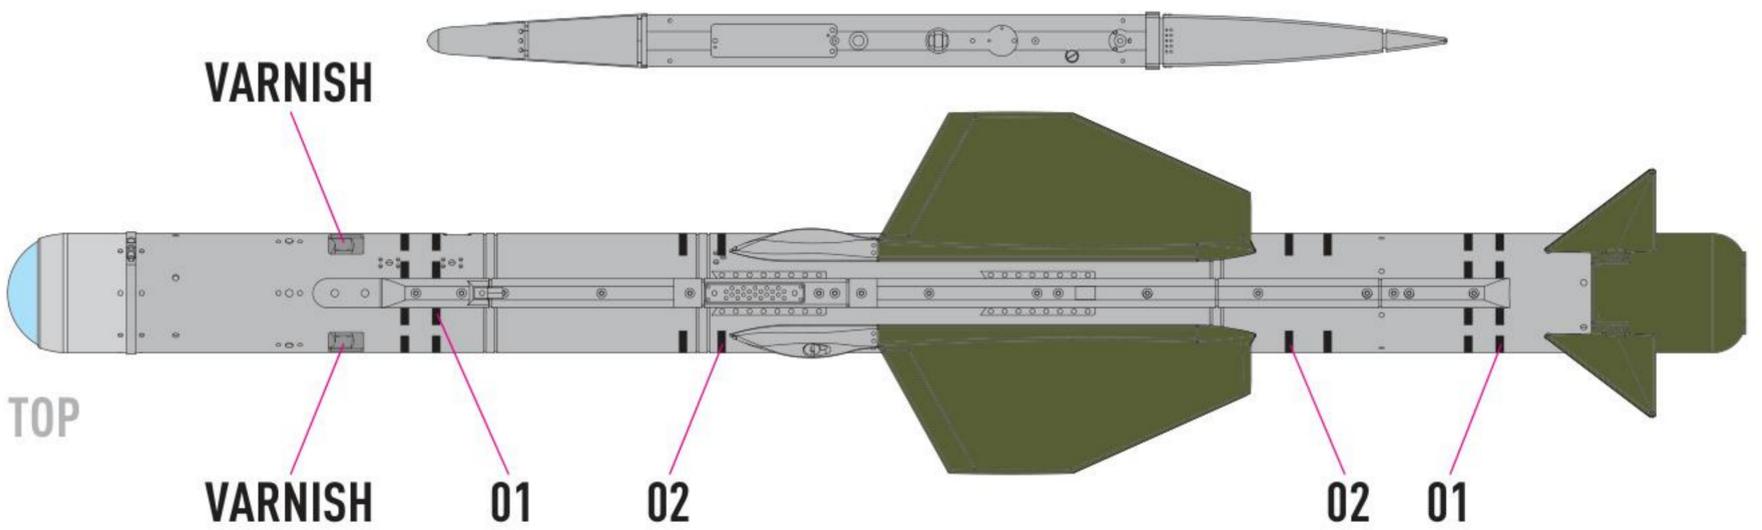

 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

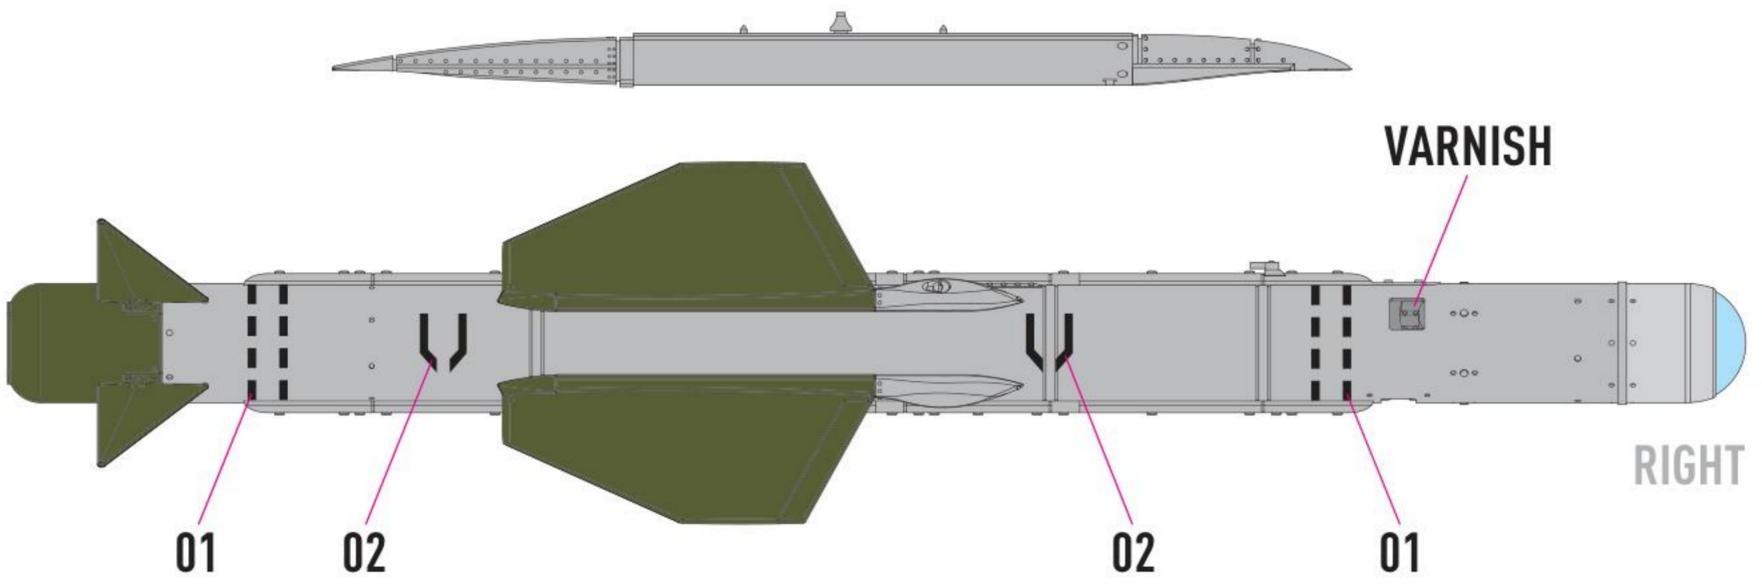

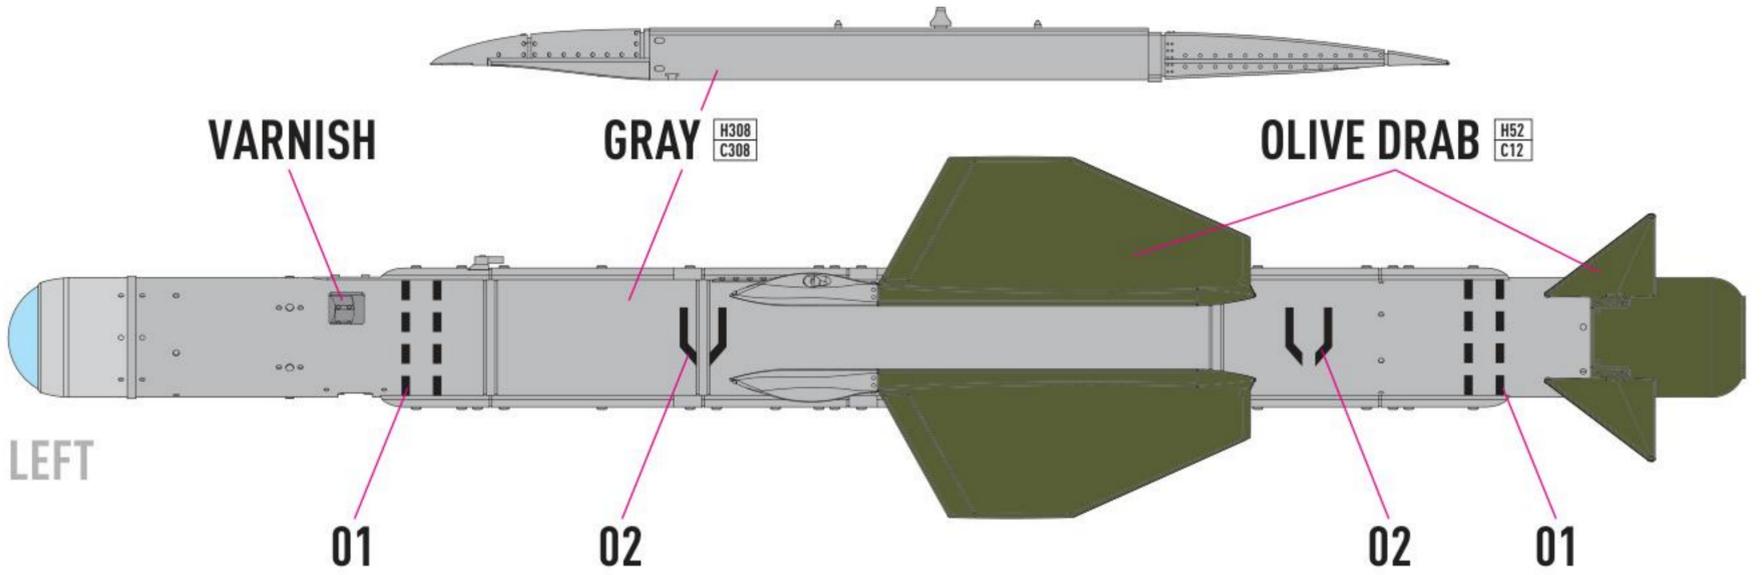

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
 OLIVE DRAB	H52	C12
 GRAY	H308	C308
 RED	H3	C3

