



# DECAL INSTRUCTION


V1

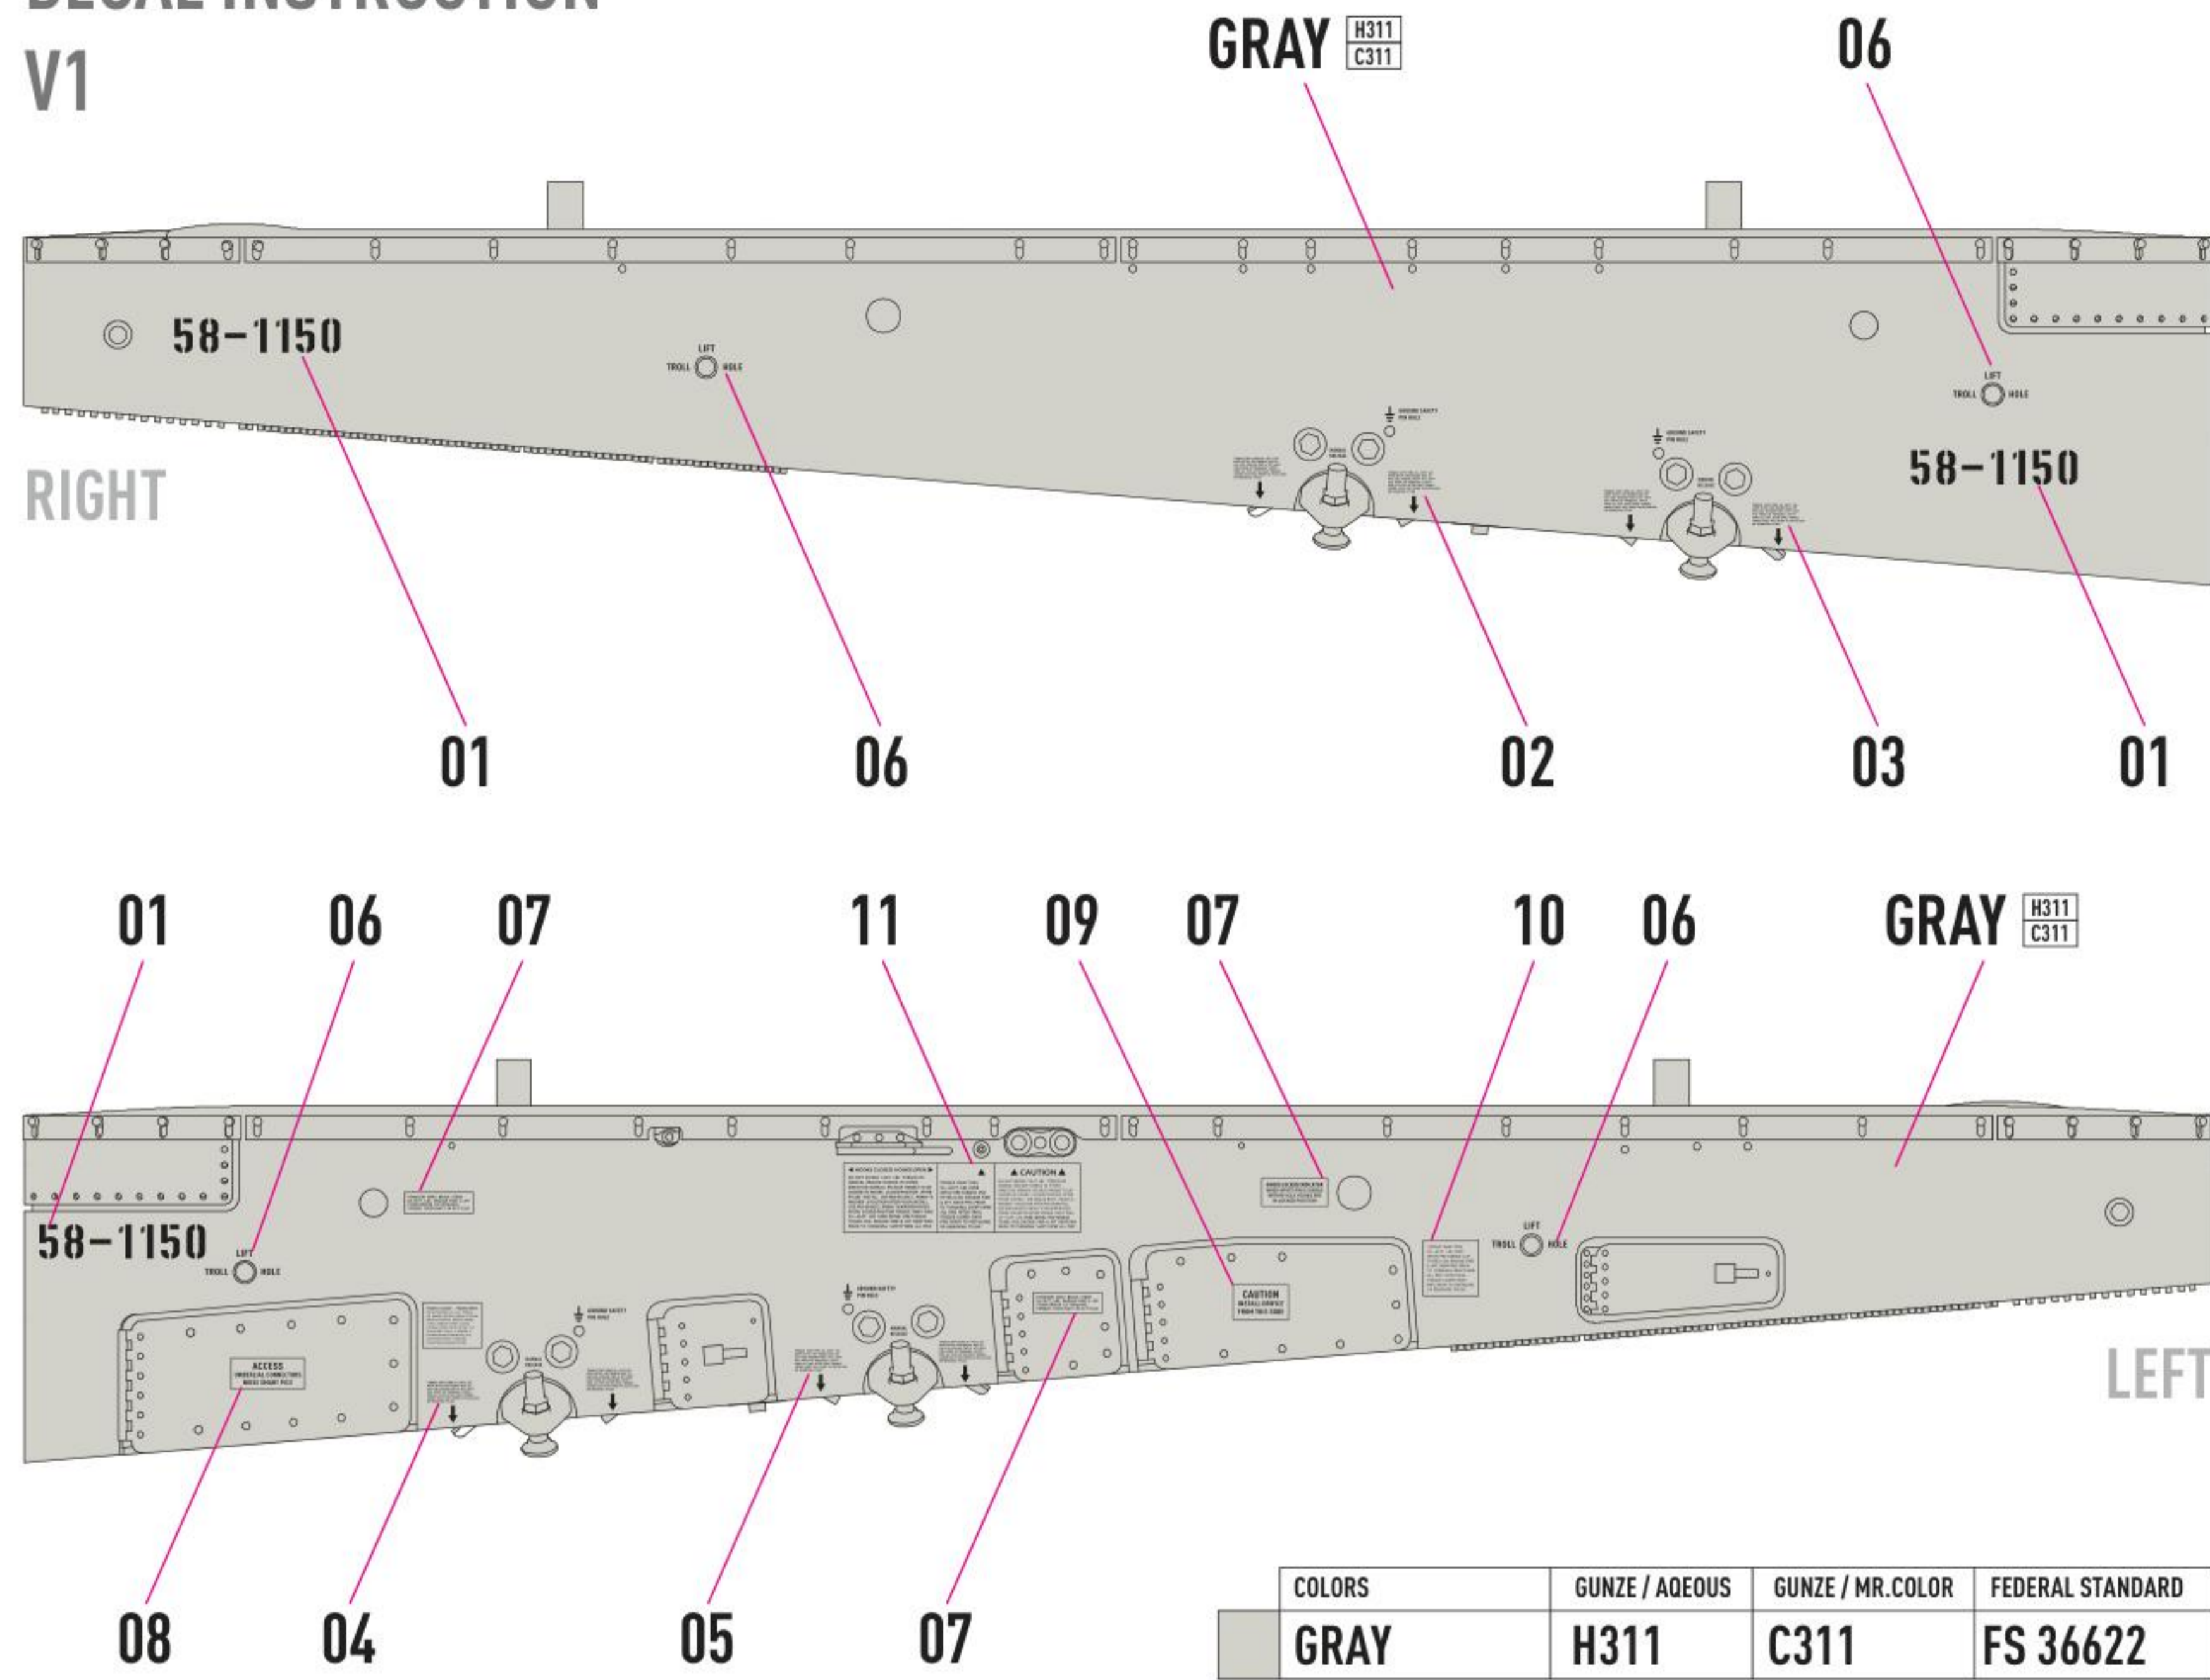


V2

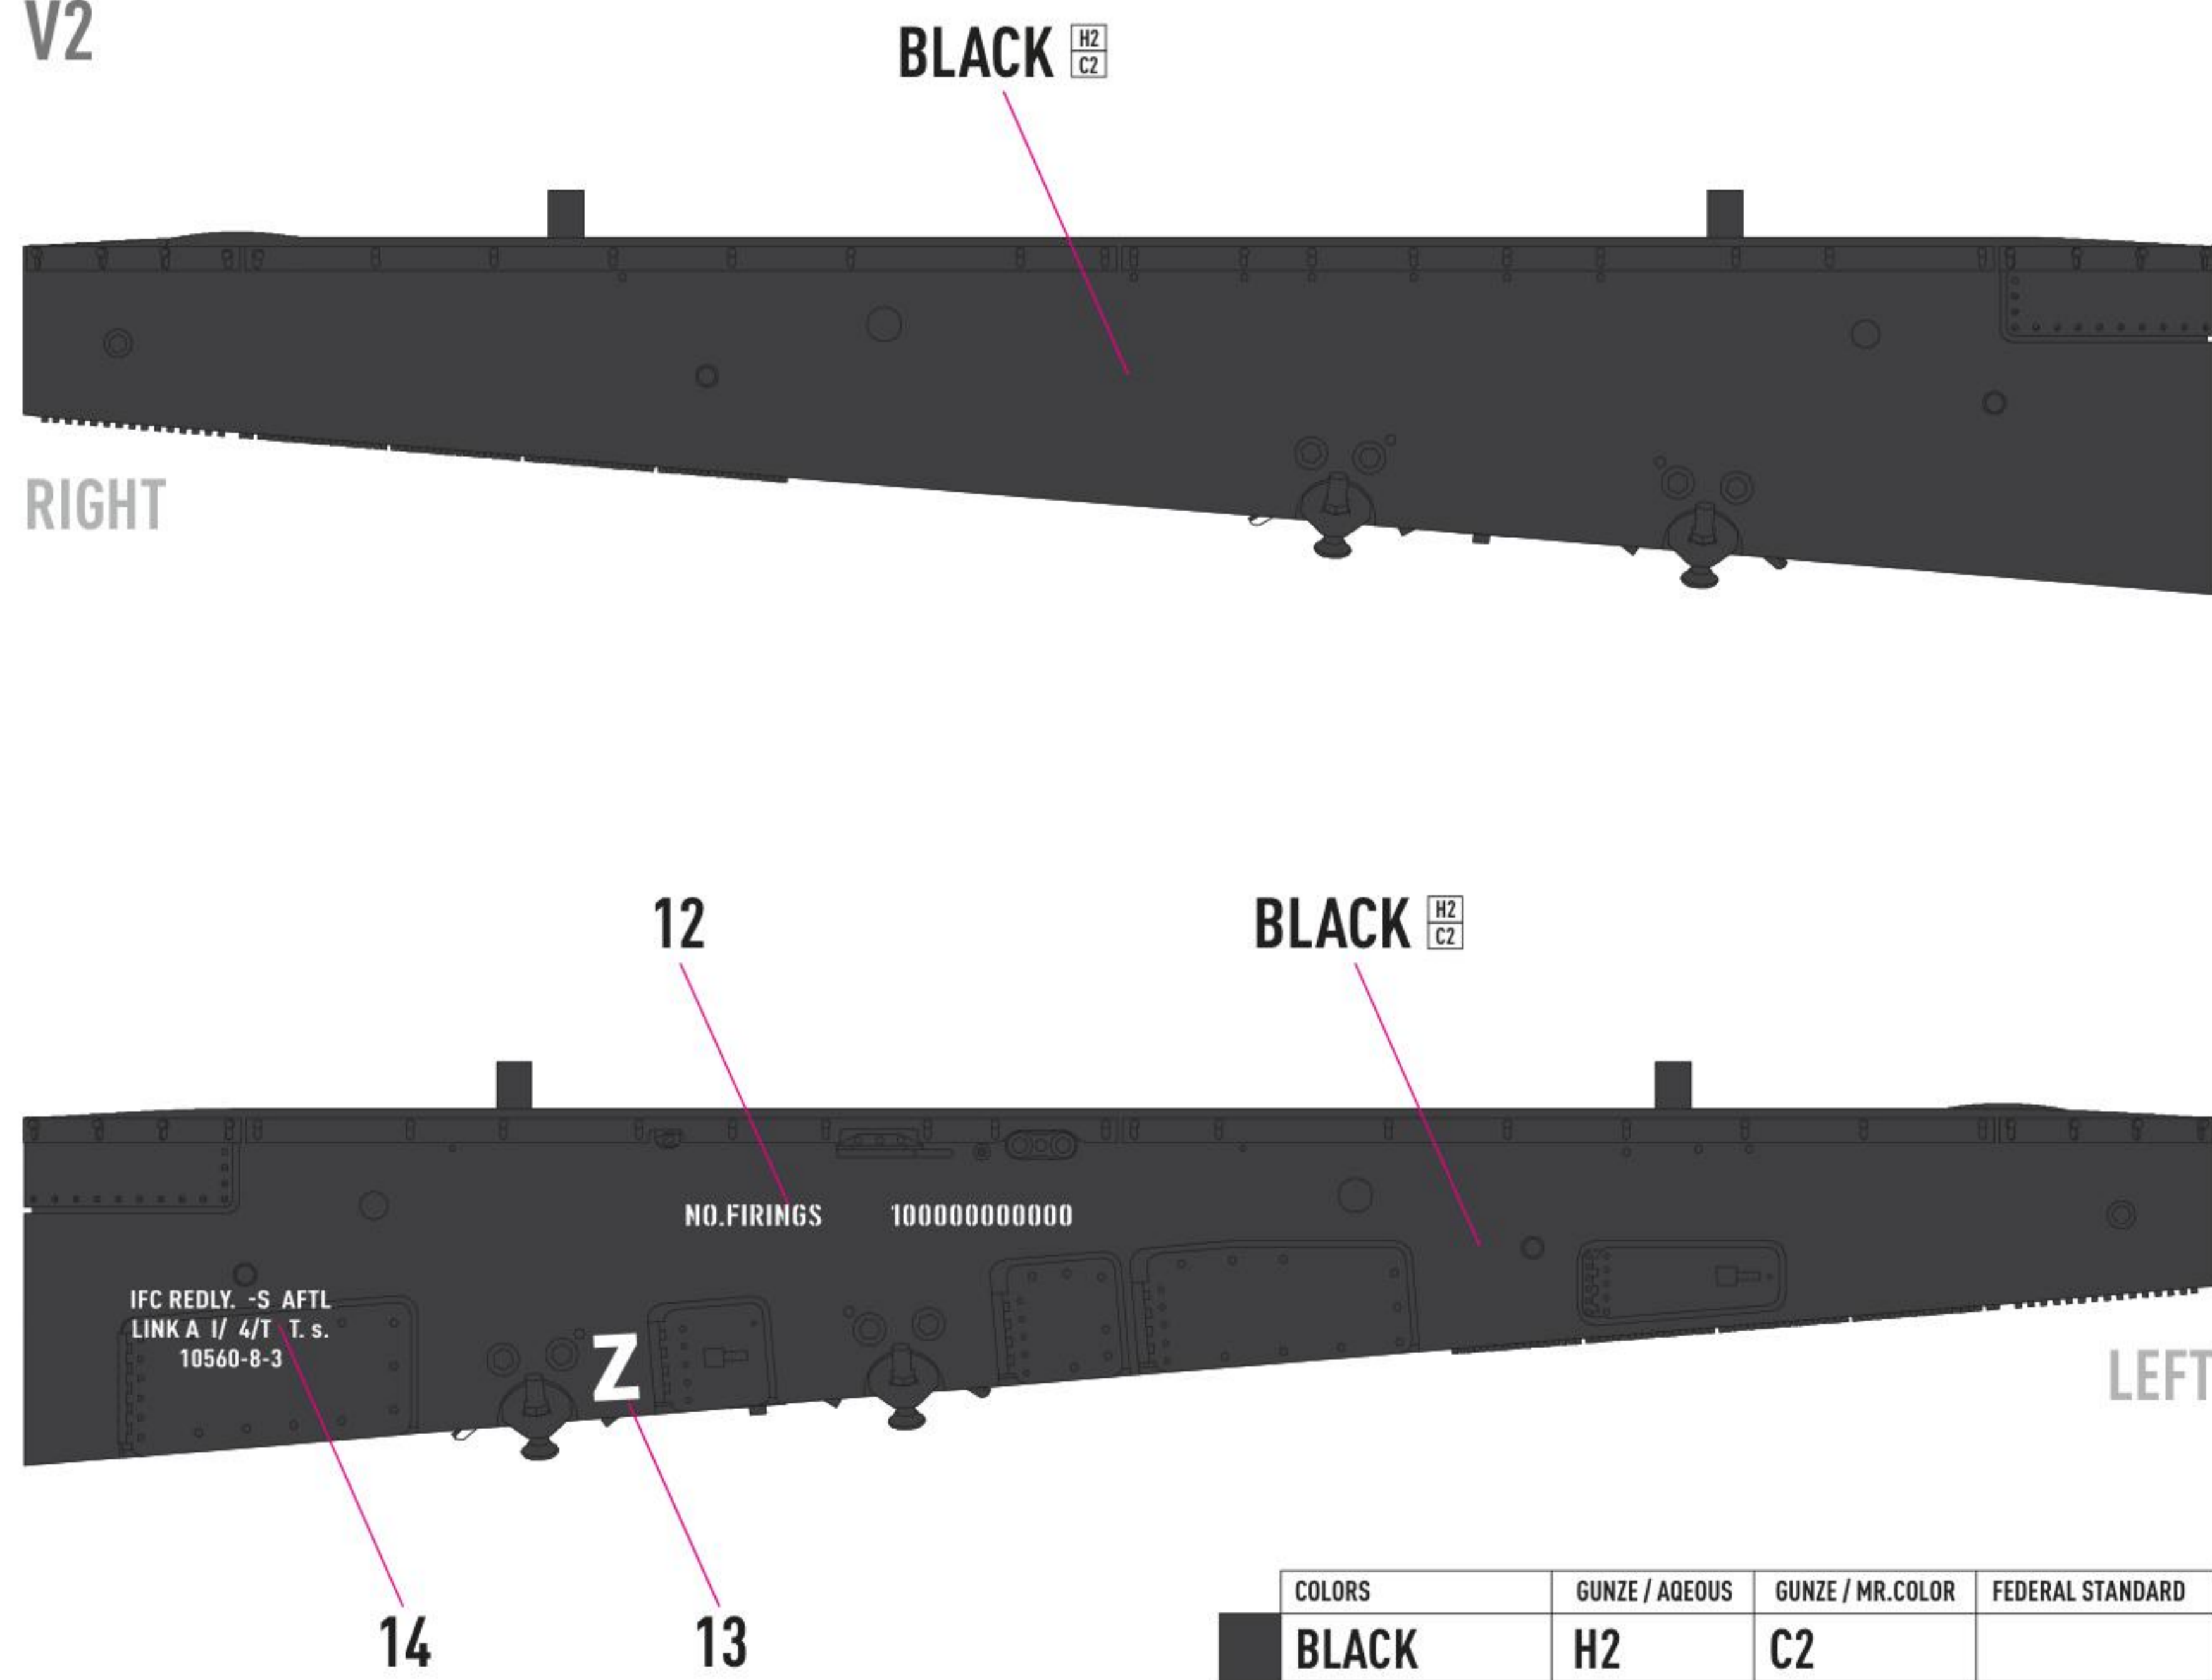

CUT

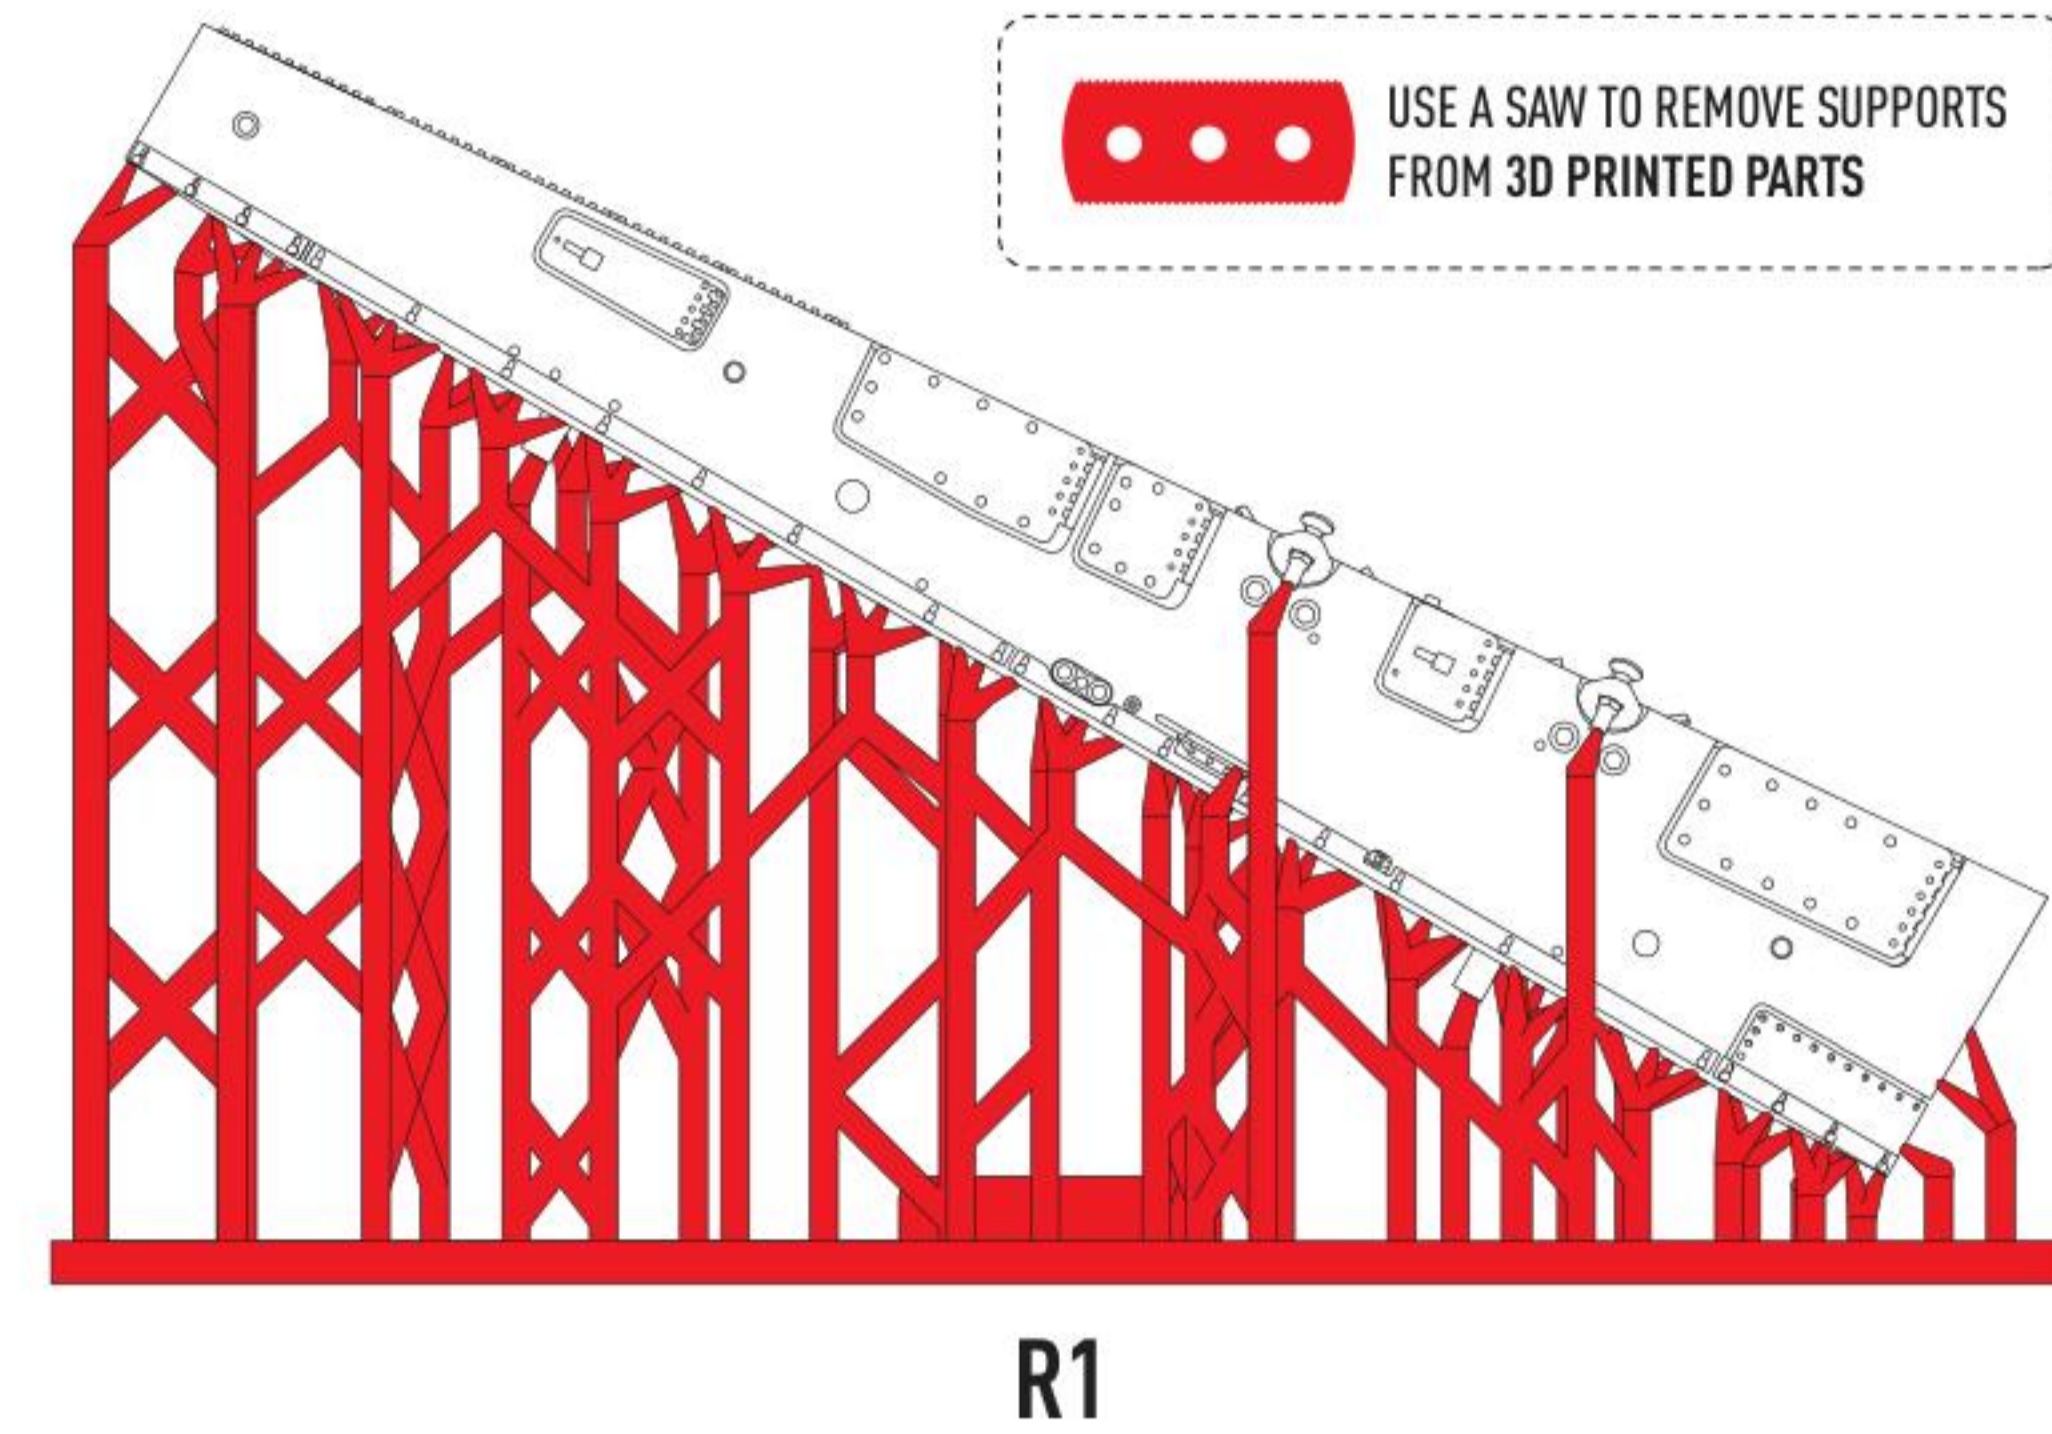


1

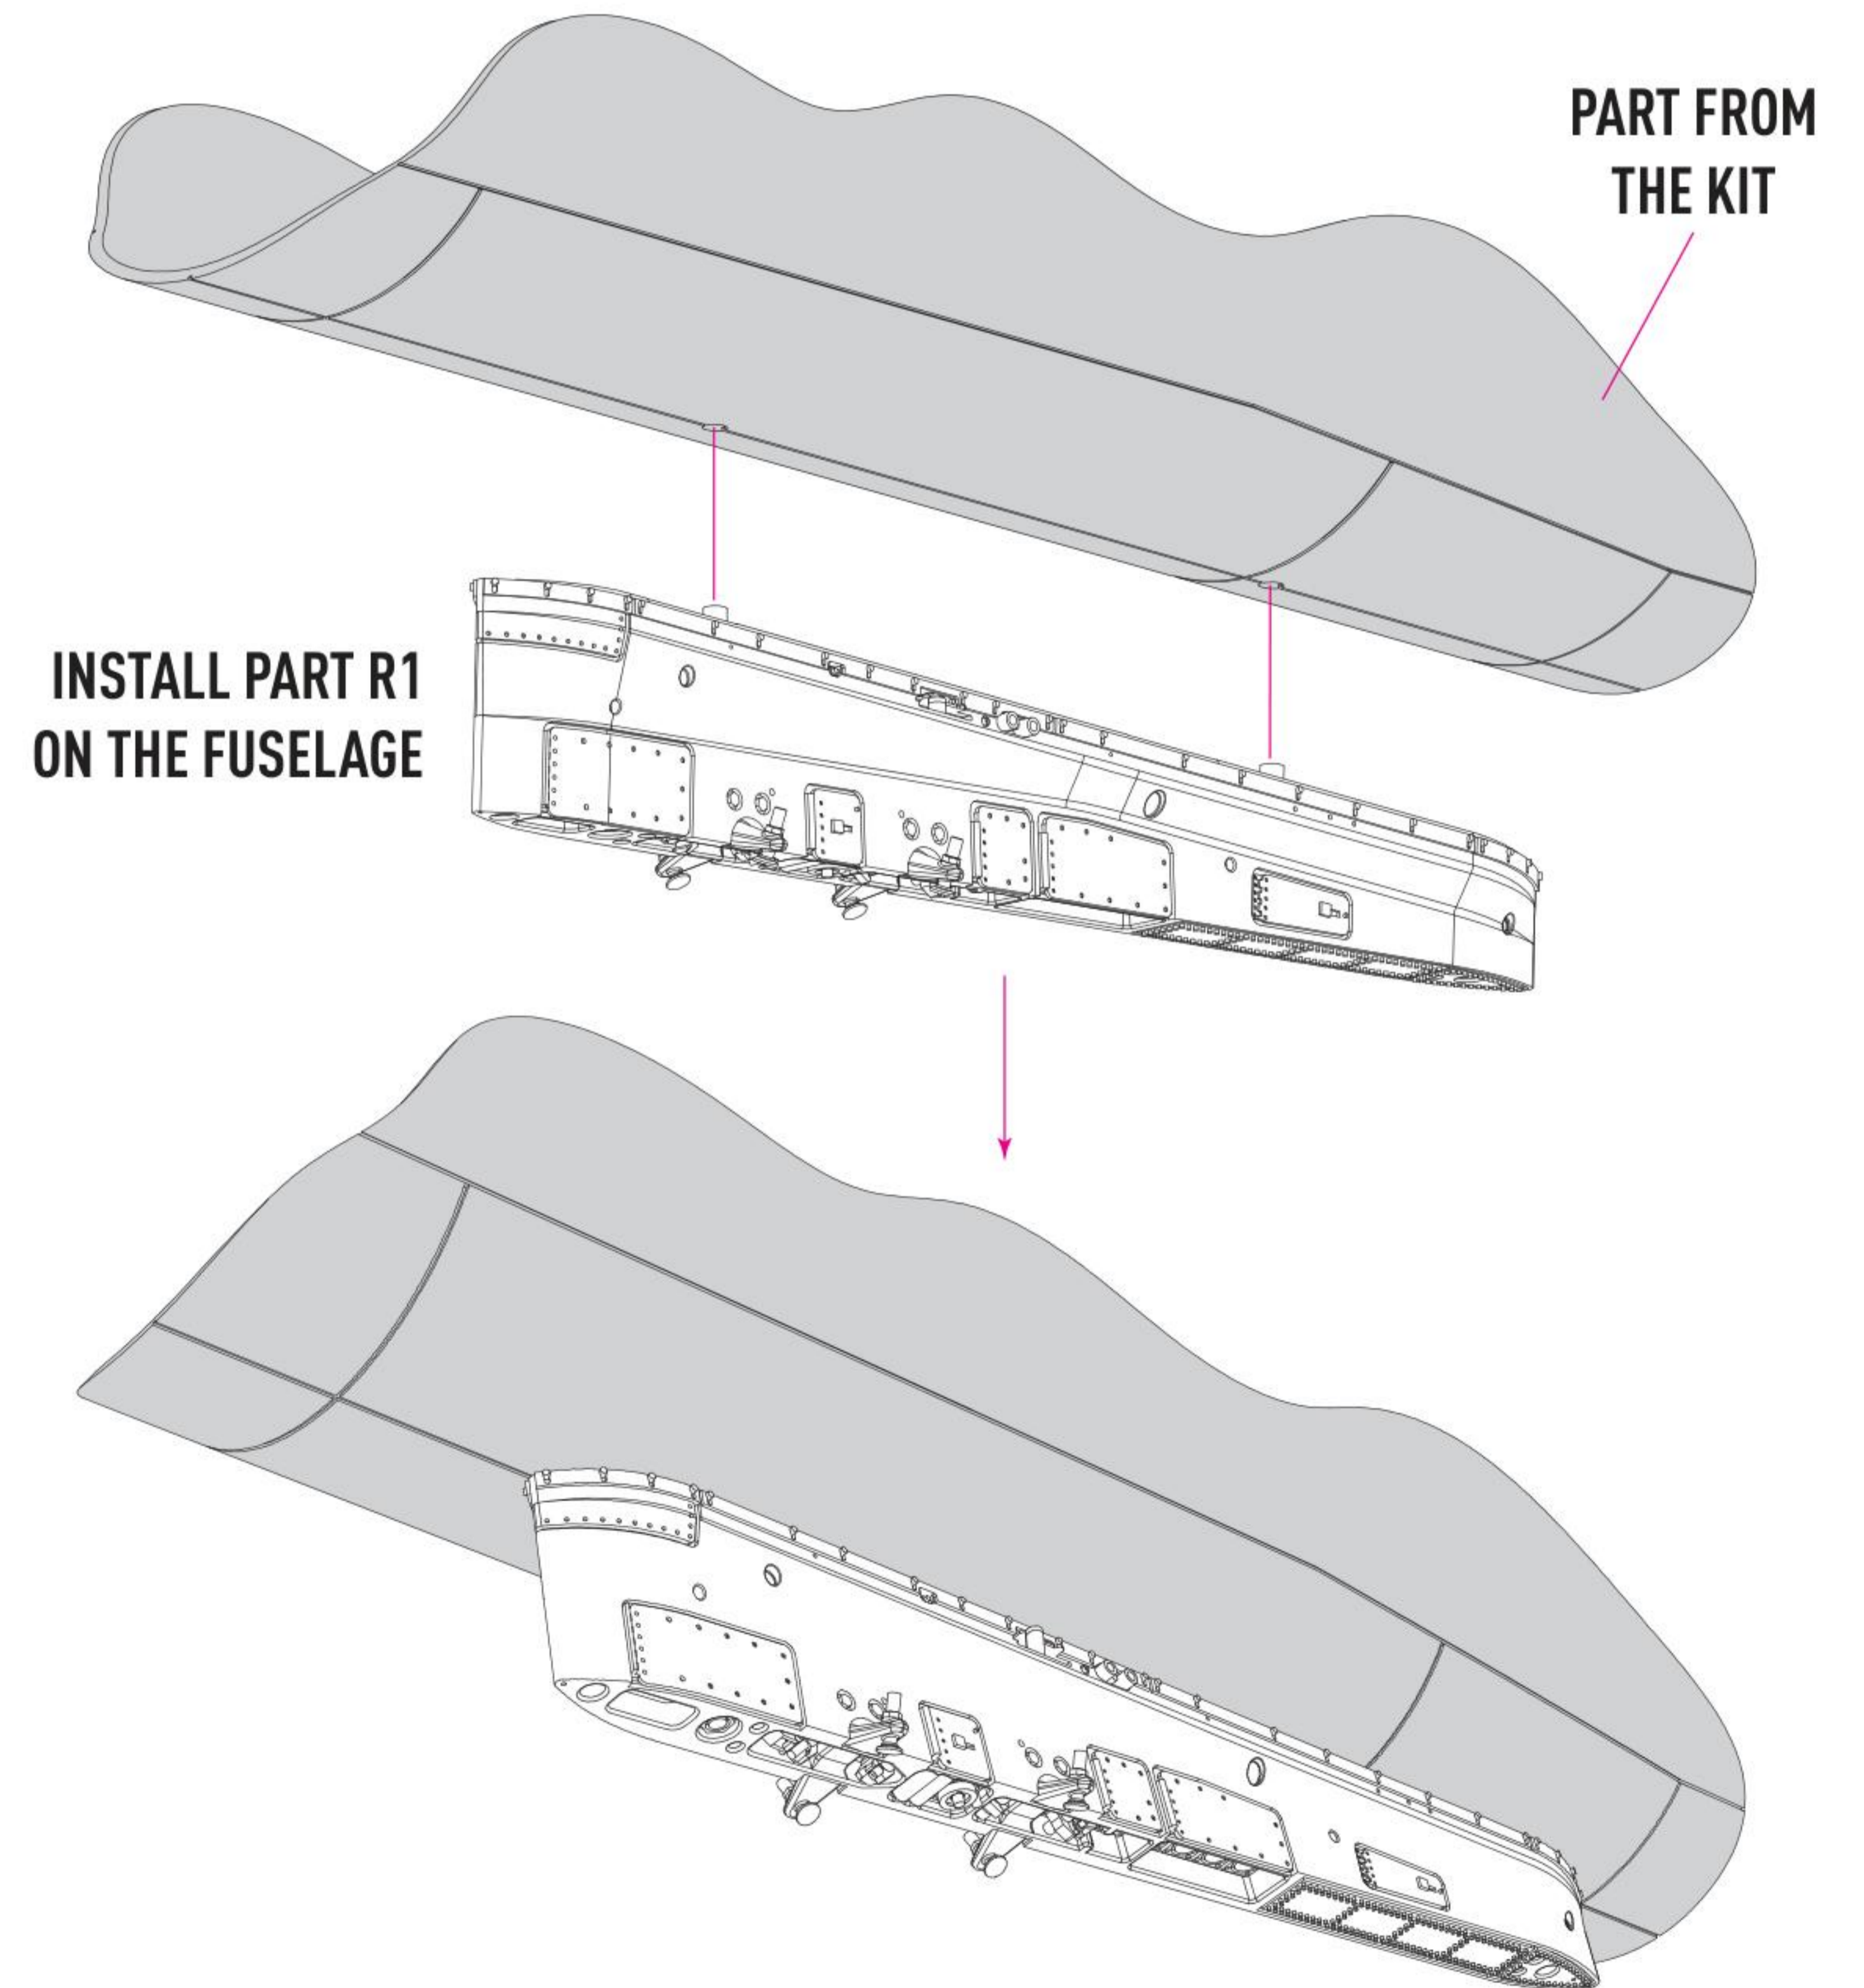


**2 FOR MODEL F105D**

FOR F105D, IT IS POSSIBLE TO INSTALL LININGS BETWEEN THE FUSELAGE AND THE PYLON THAT FIX THE BOMB BAY DOORS IN THE CLOSED POSITION

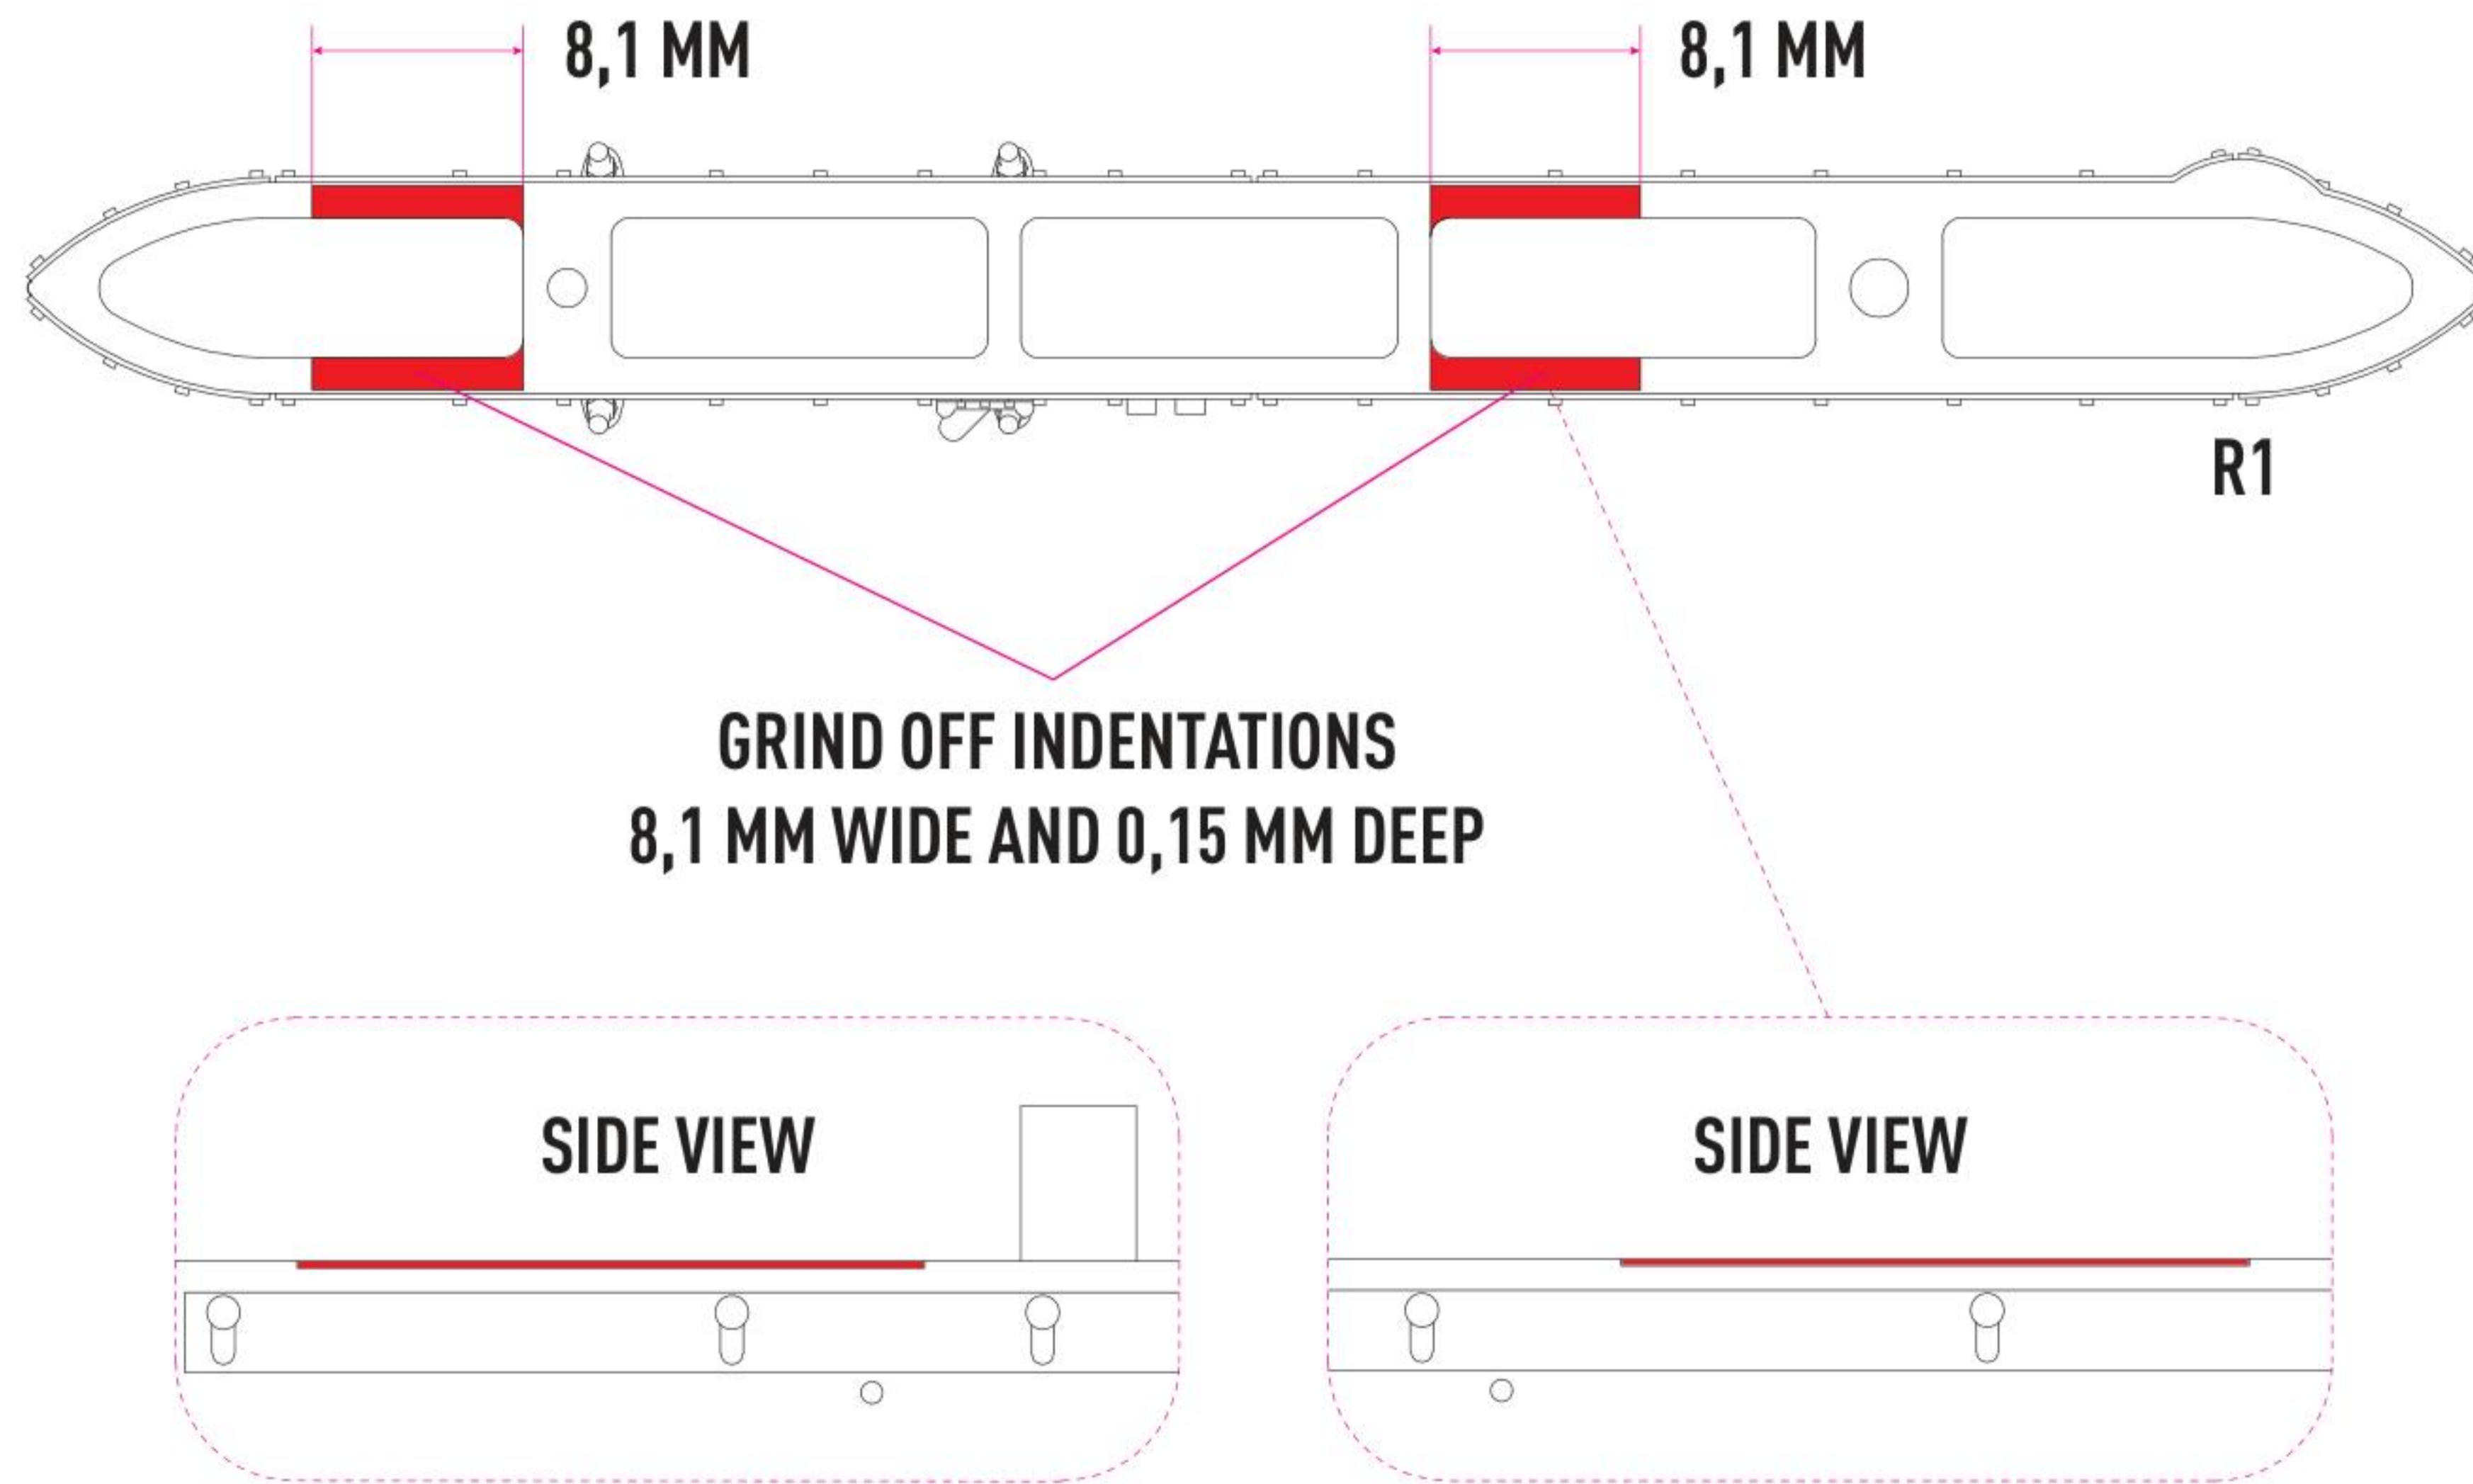

**3**

BEND PART P1 ACCORDING TO THE SHAPE OF THE FUSELAGE AND INSTALL IT IN THE RECESSES ON THE PYLON

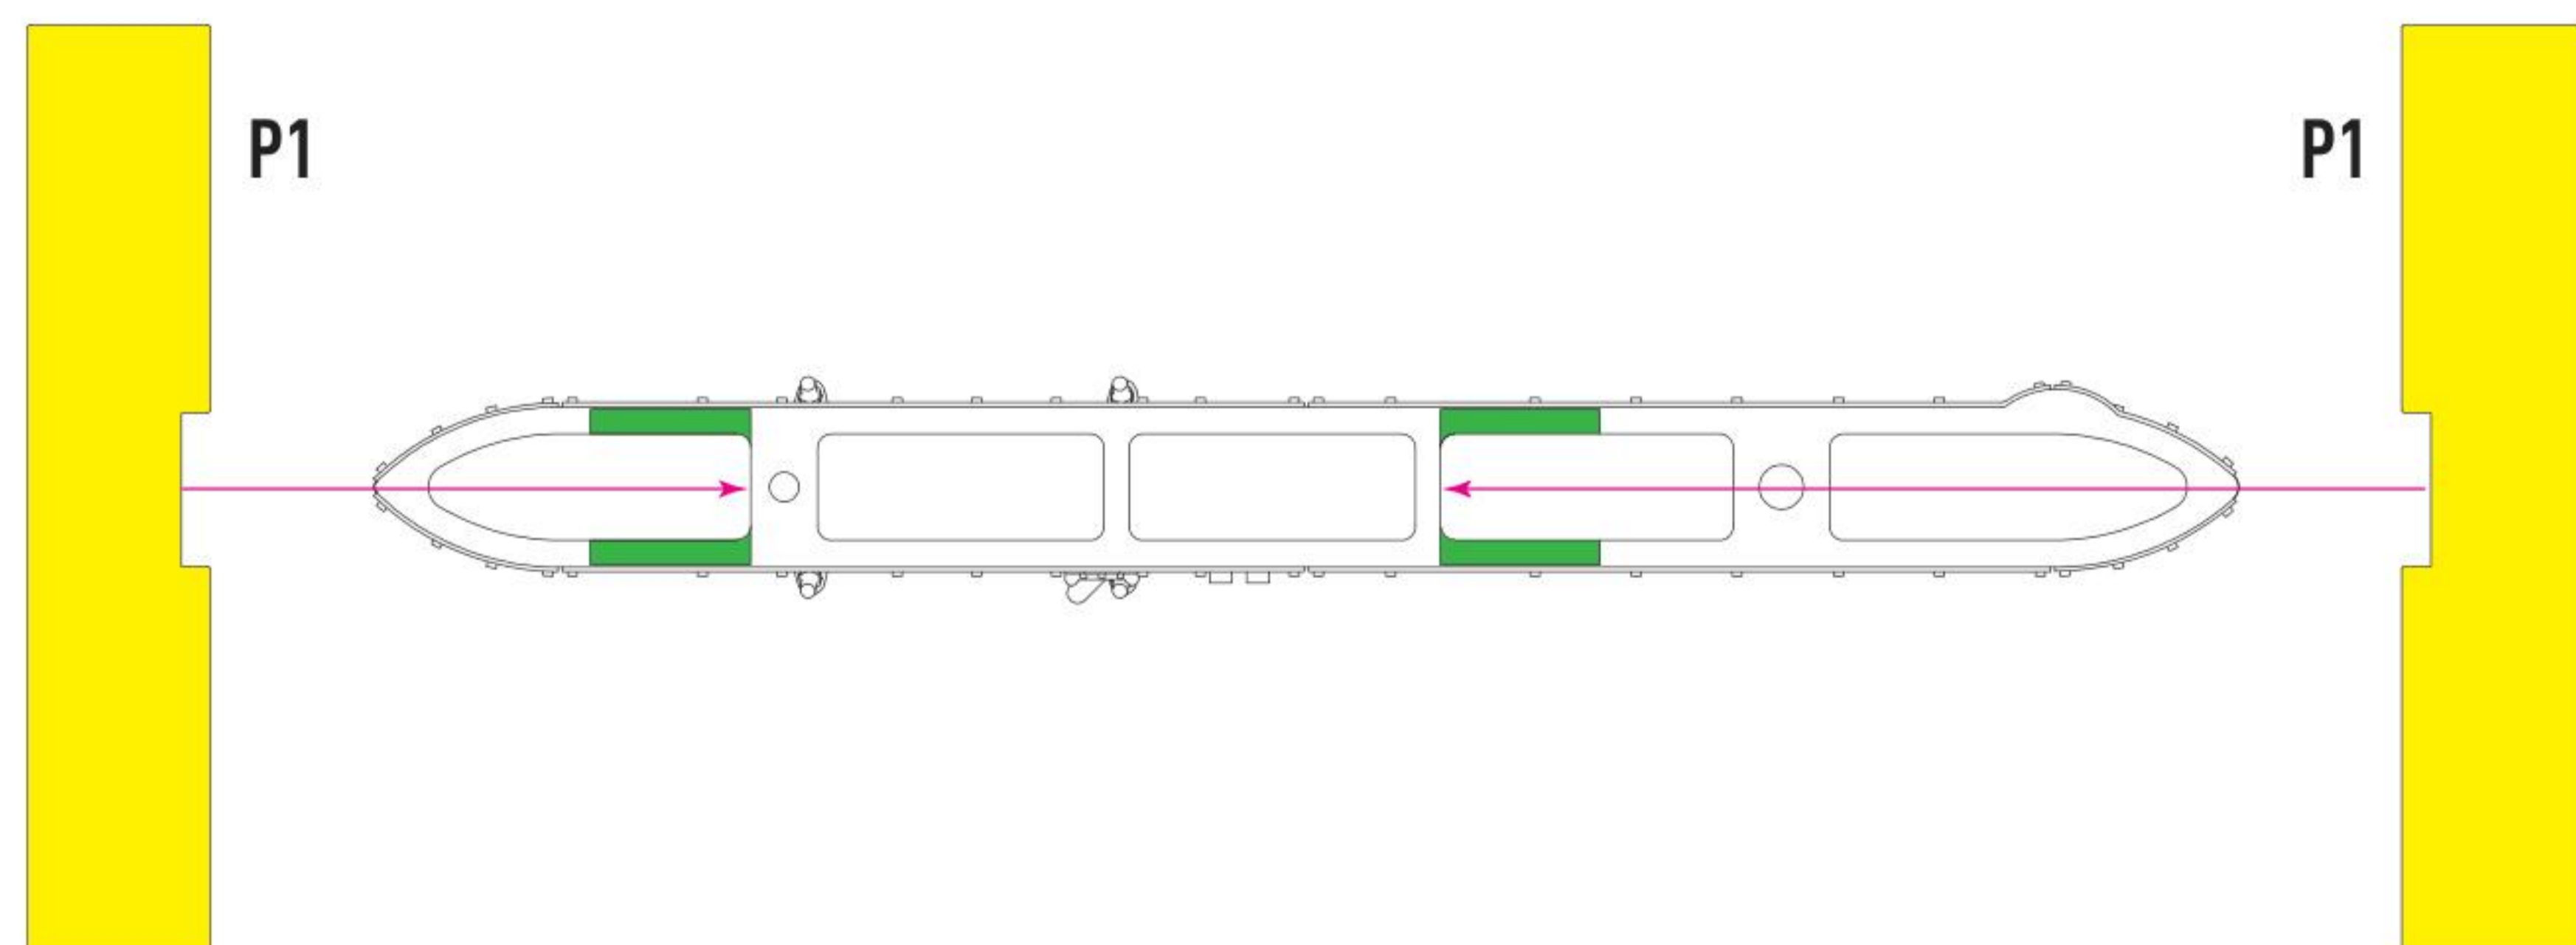

**4 INSTALL PYLON WITH OVERLAYS ON THE FUSELAGE**

