



CUT




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

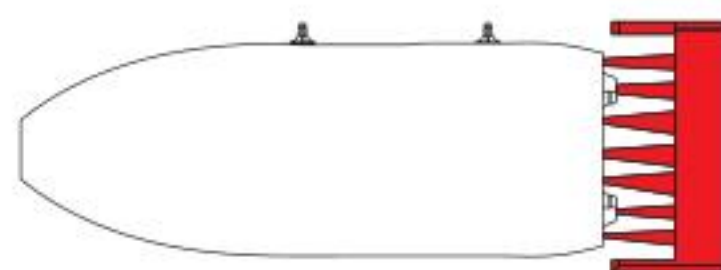

R1 x6

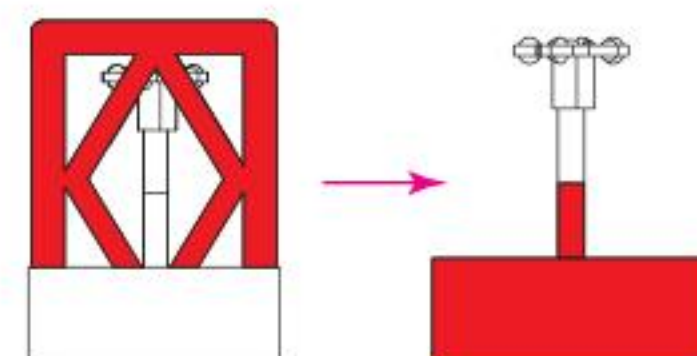


R6

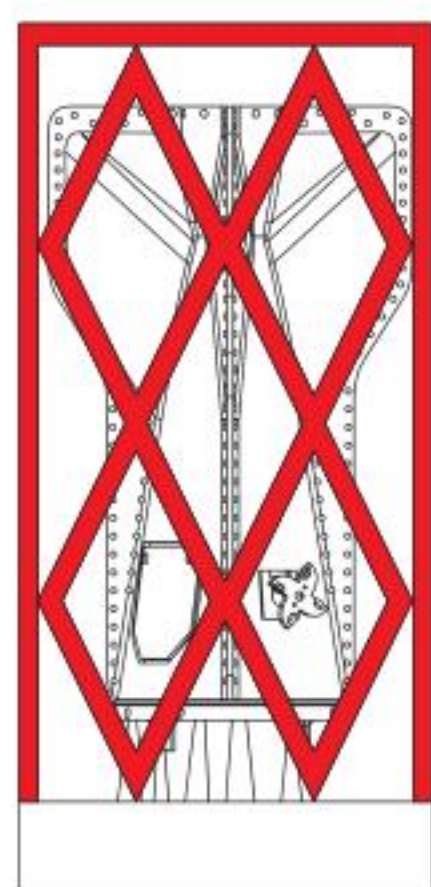


R2 x6


**REMOVE
PROTECTIVE COVER**

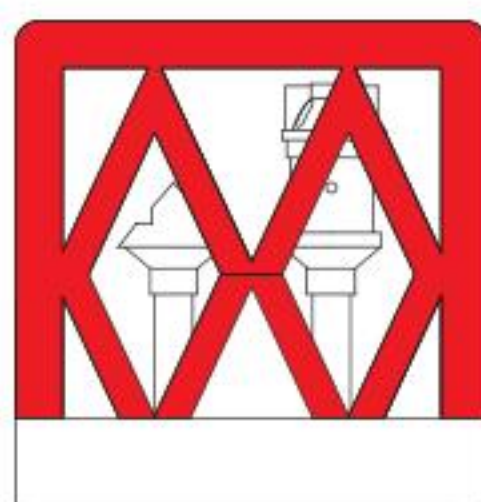


R3 R4

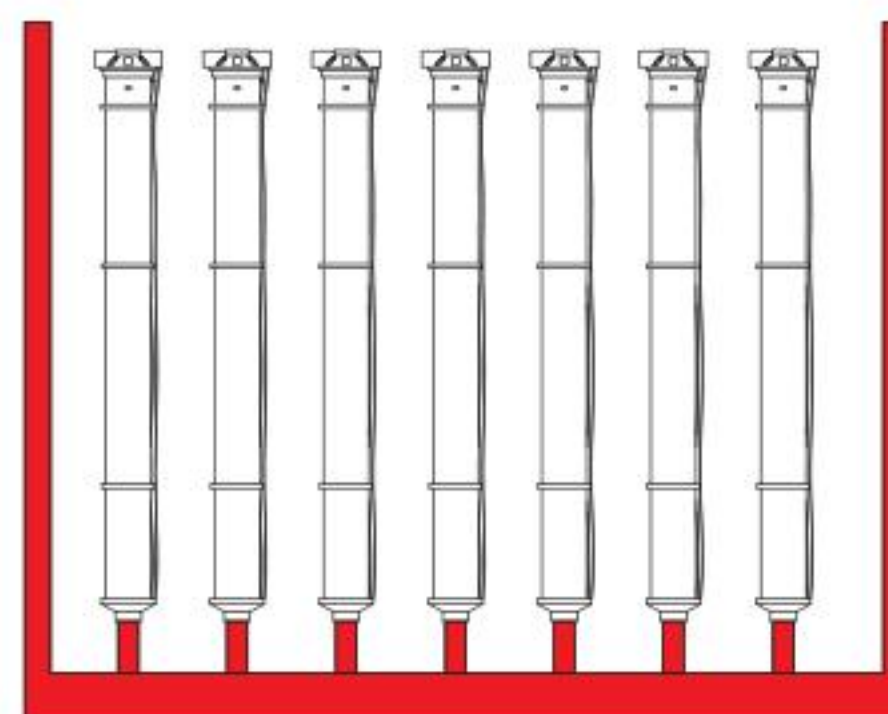


R5

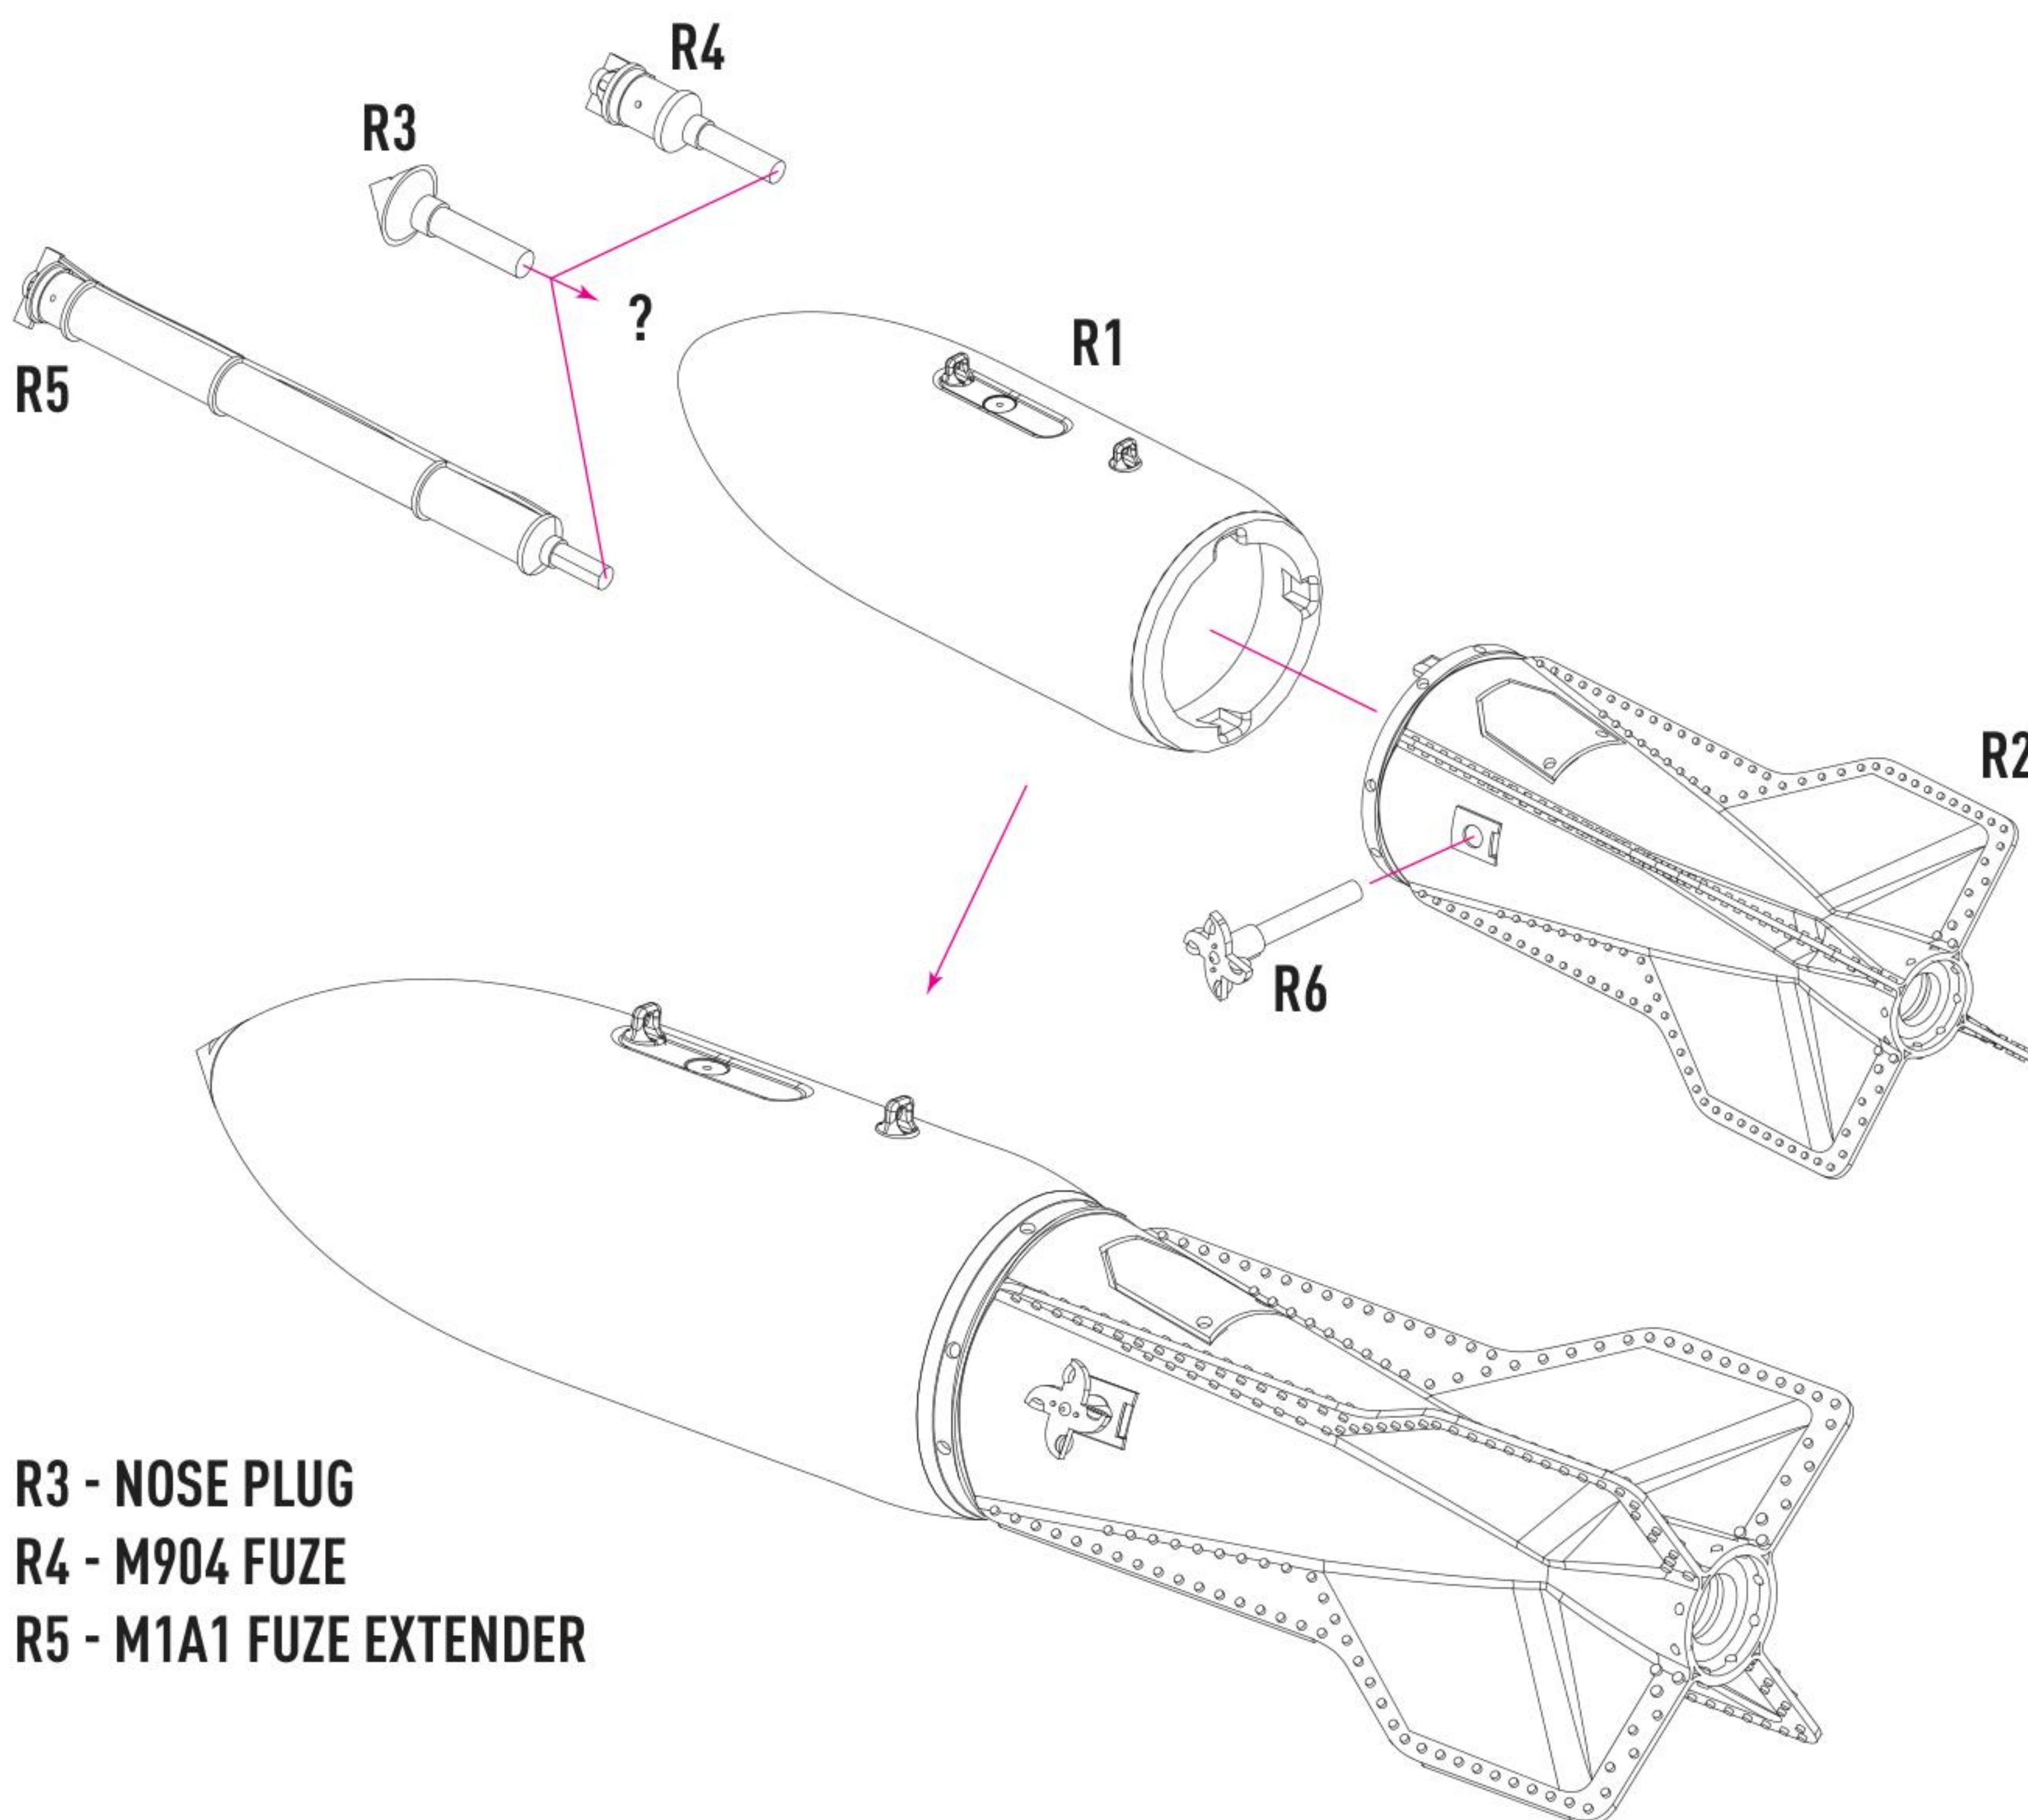

R3 - NOSE PLUG
R4 - M904 FUZE
R5 - M1A1 FUZE EXTENDER

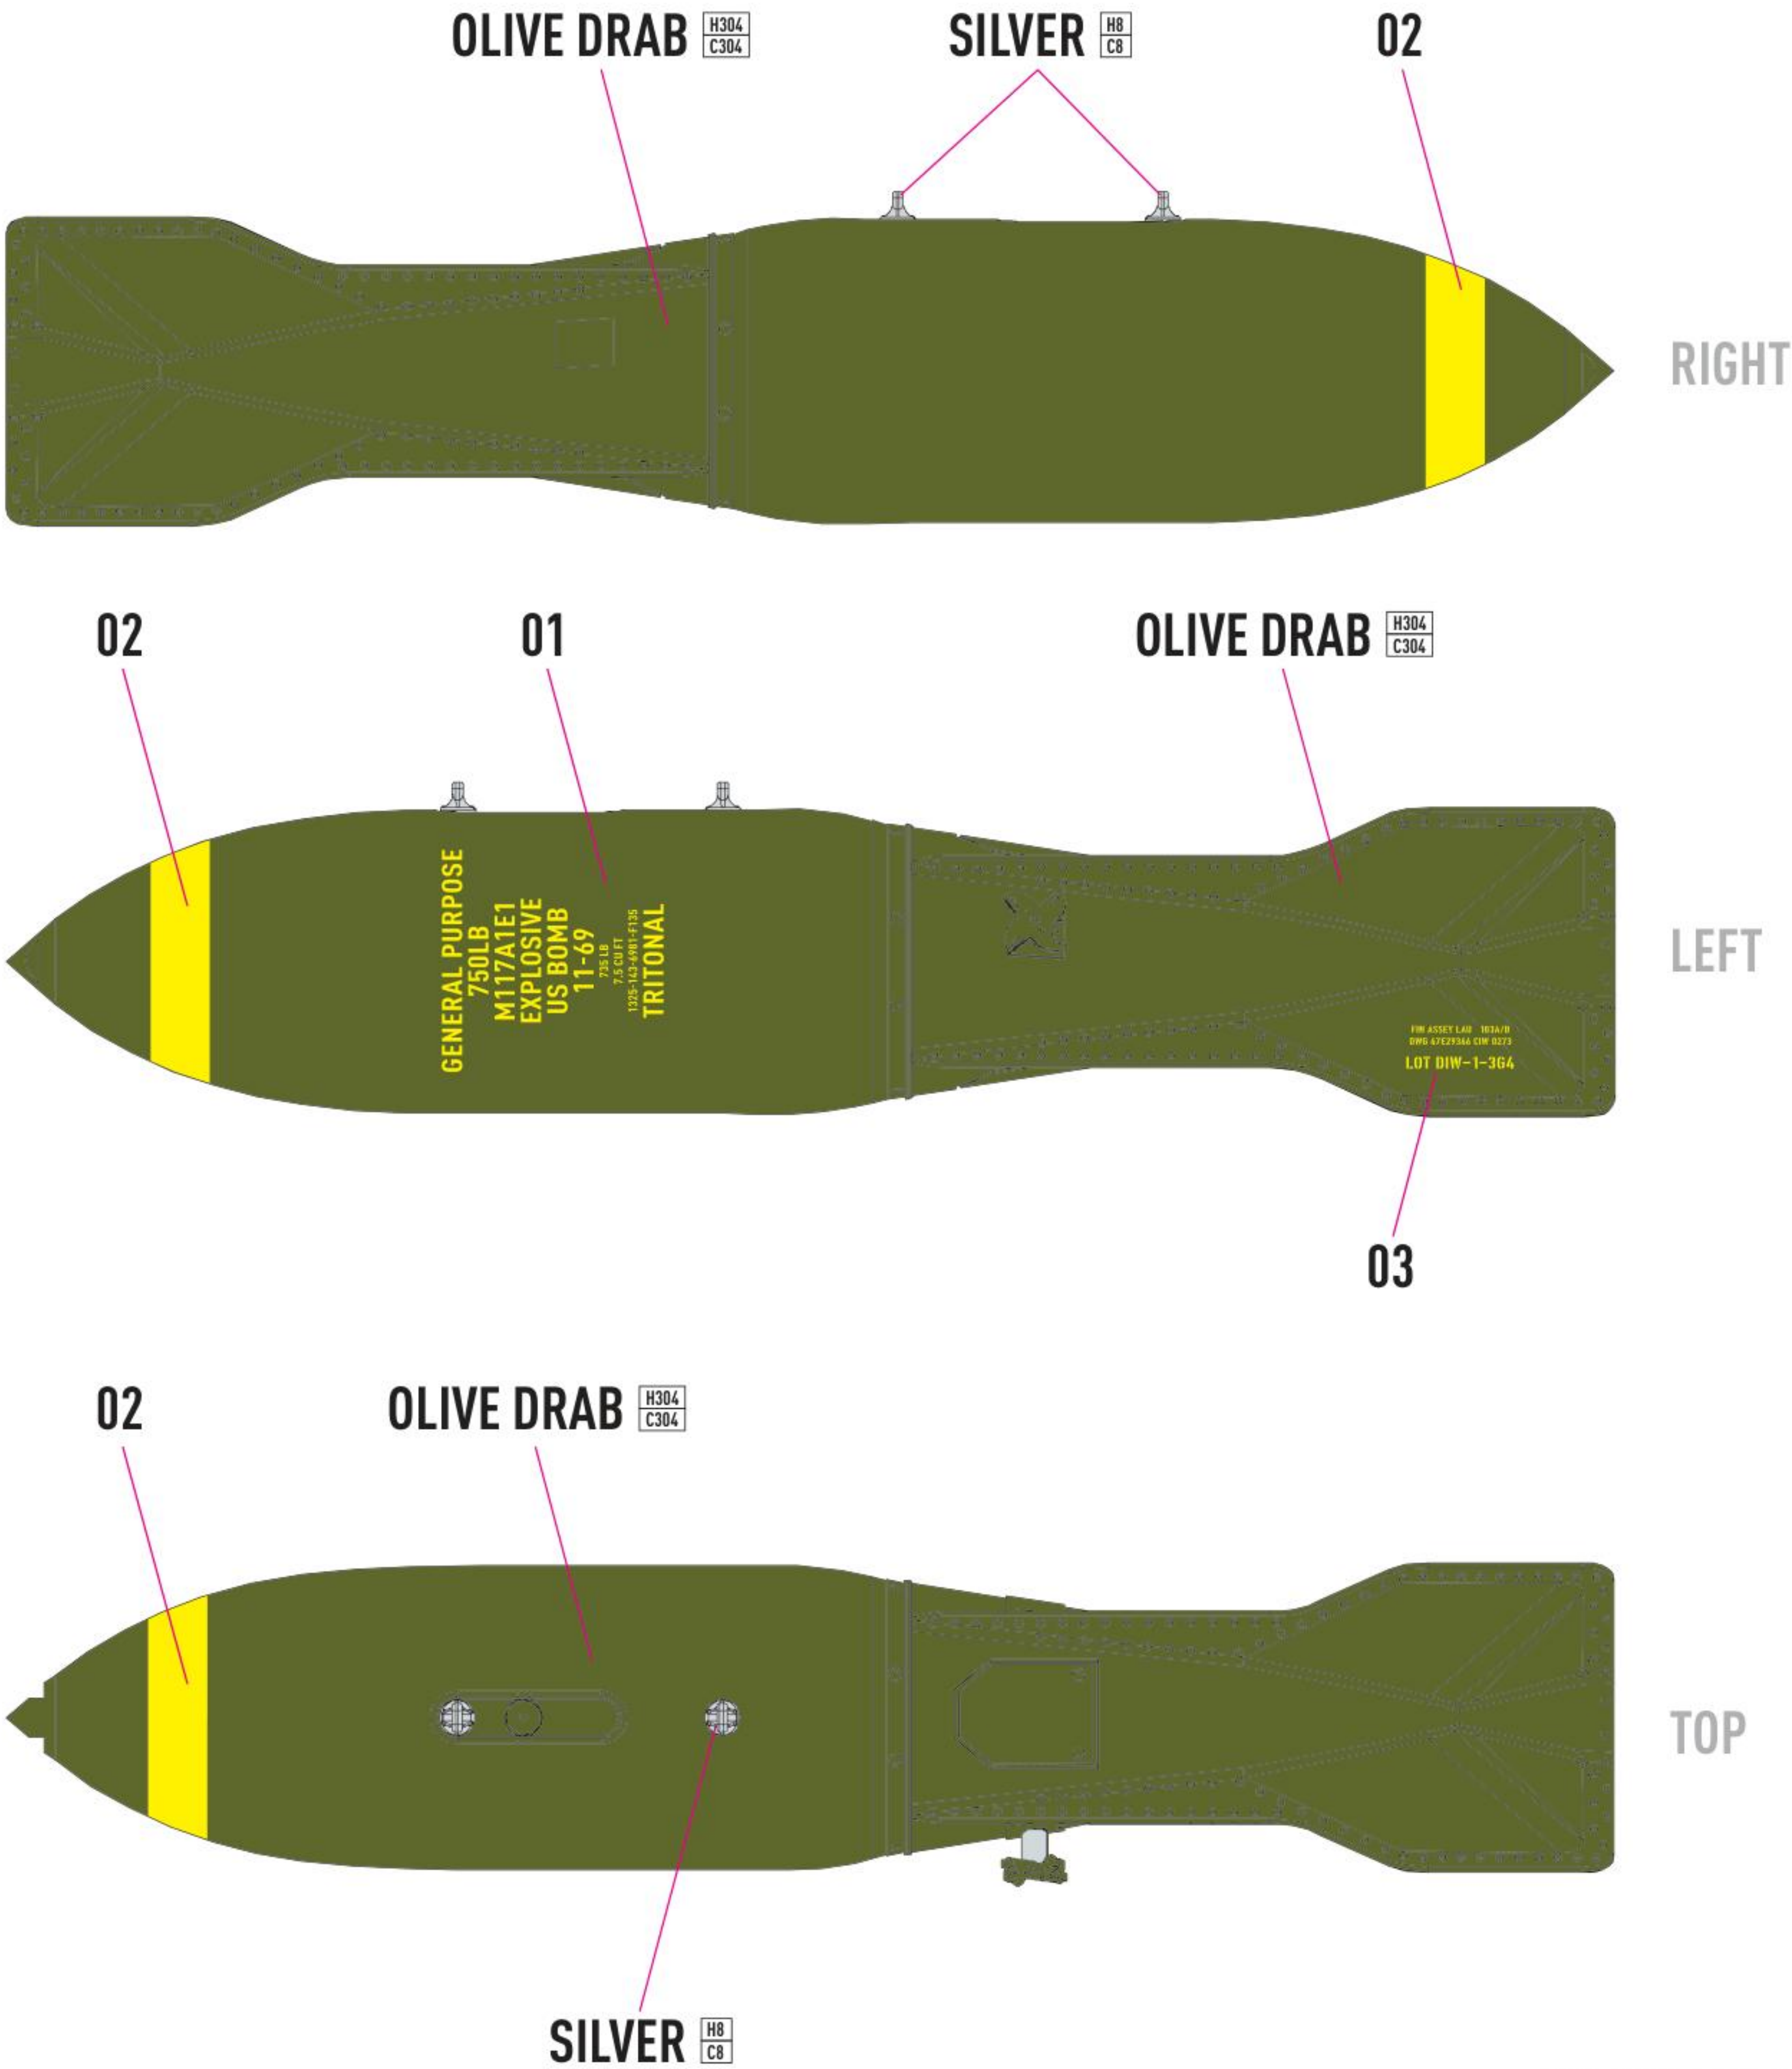

	COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
	OLIVE DRAB	H304	C304
	SILVER	H8	C8

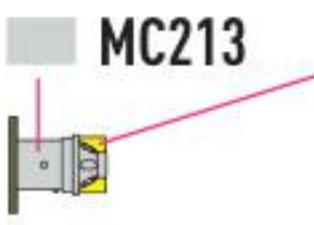FUZING OPTIONS	
M1A1	 H304/C304 MC213 H3/C4
M904	 MC213 H3/C4
NOSE PLUG	 H304/C304