



**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

 USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

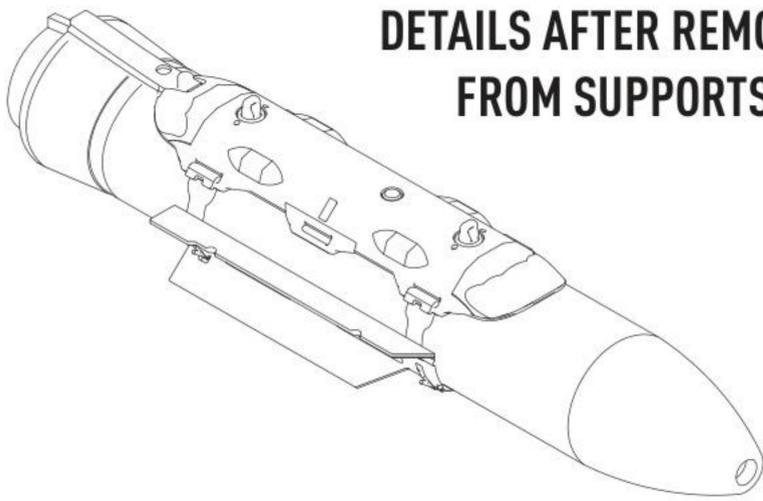


R1 X2

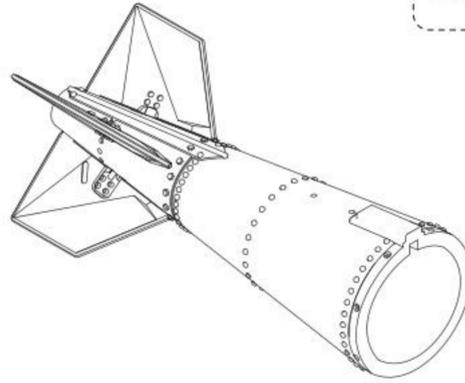


R2 X2



R3 X2




R4 X2

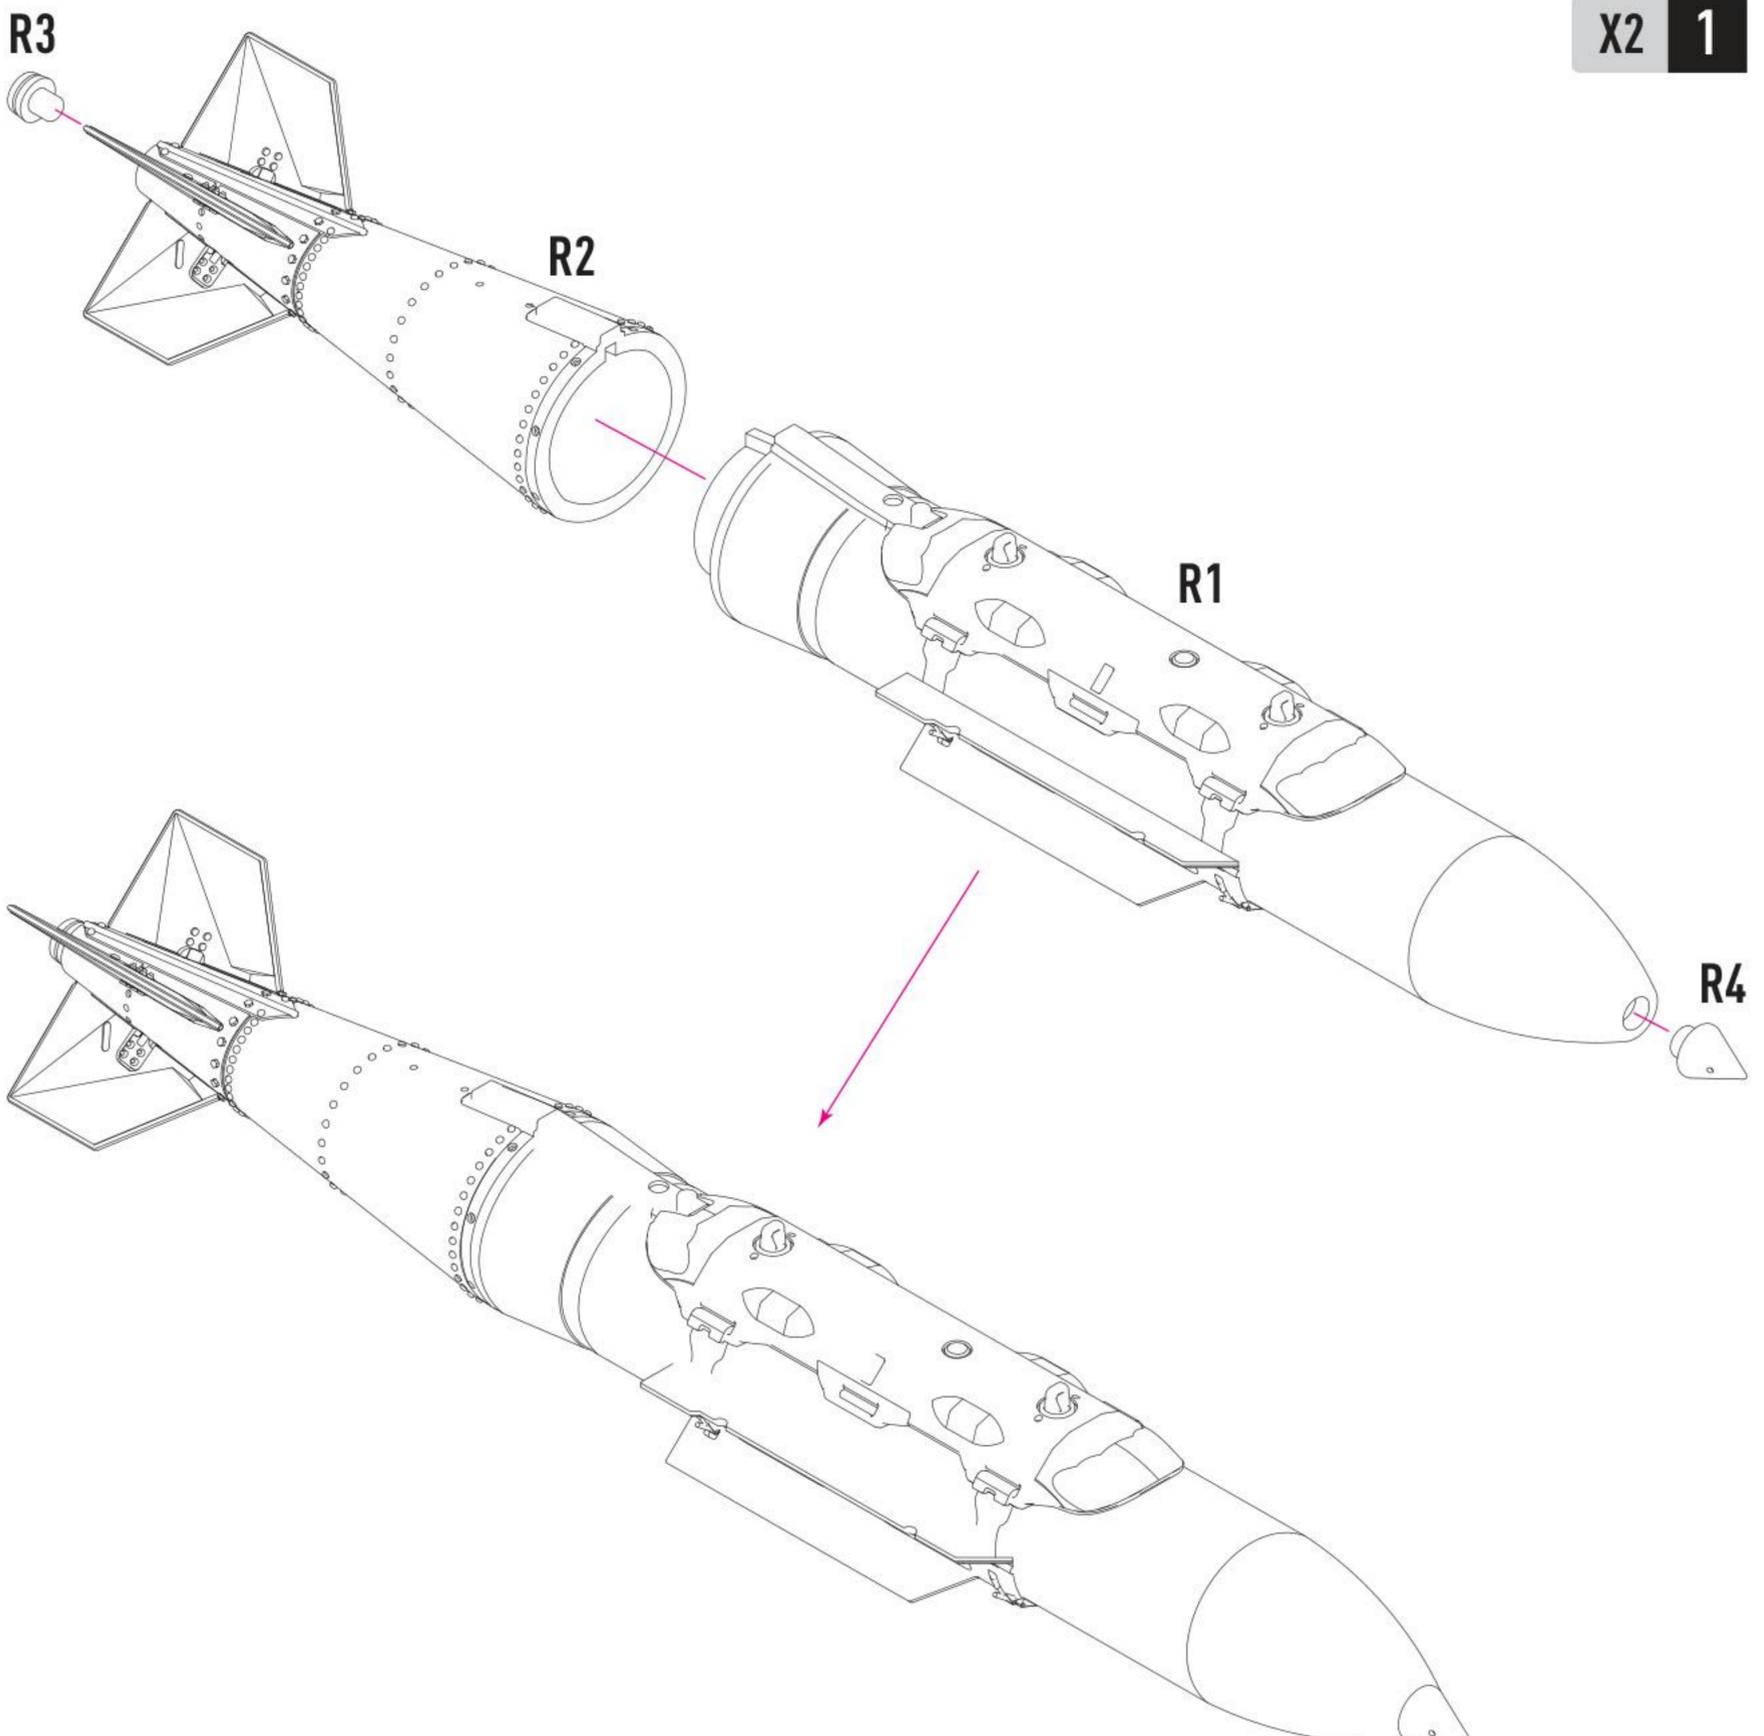

X2 1

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304
STEEL	H18	C28

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
FLAT BLACK	H18	C28

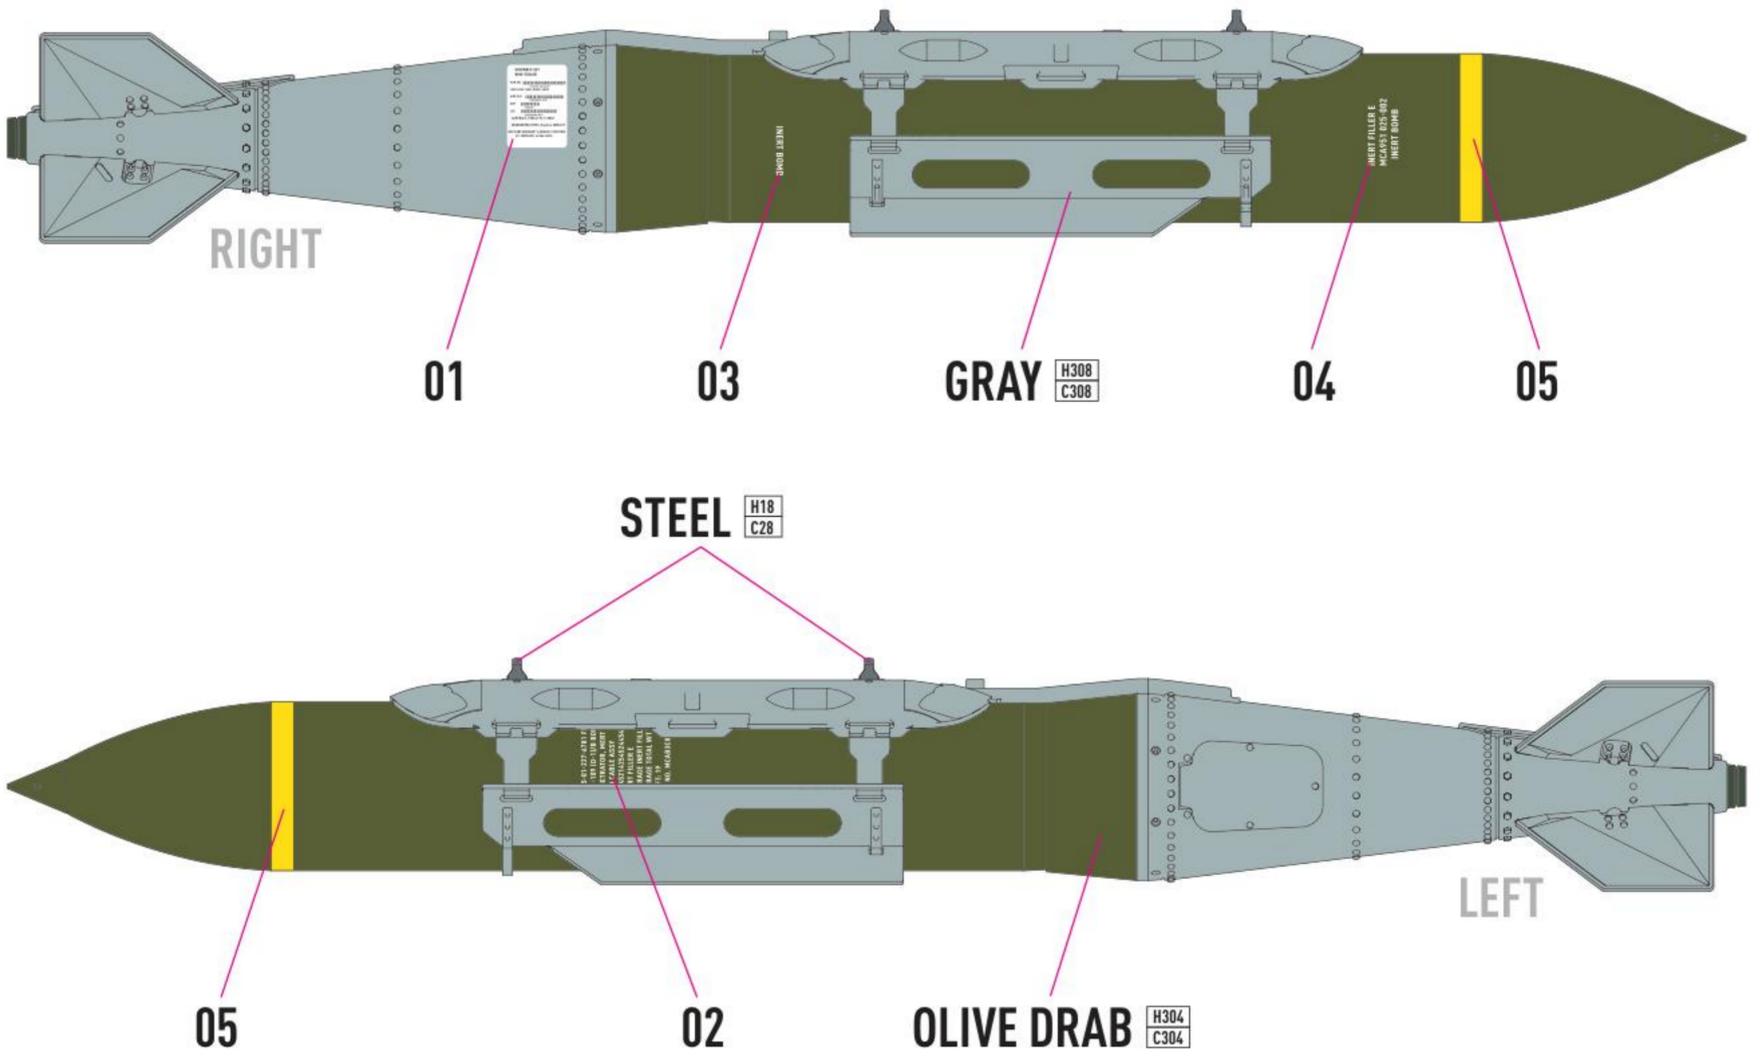

APPLYING MASKS

