



DETAILS AFTER REMOVAL FROM SUPPORTS




USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

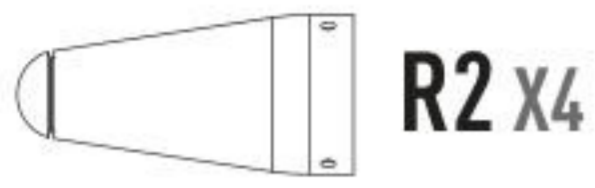


1 X4

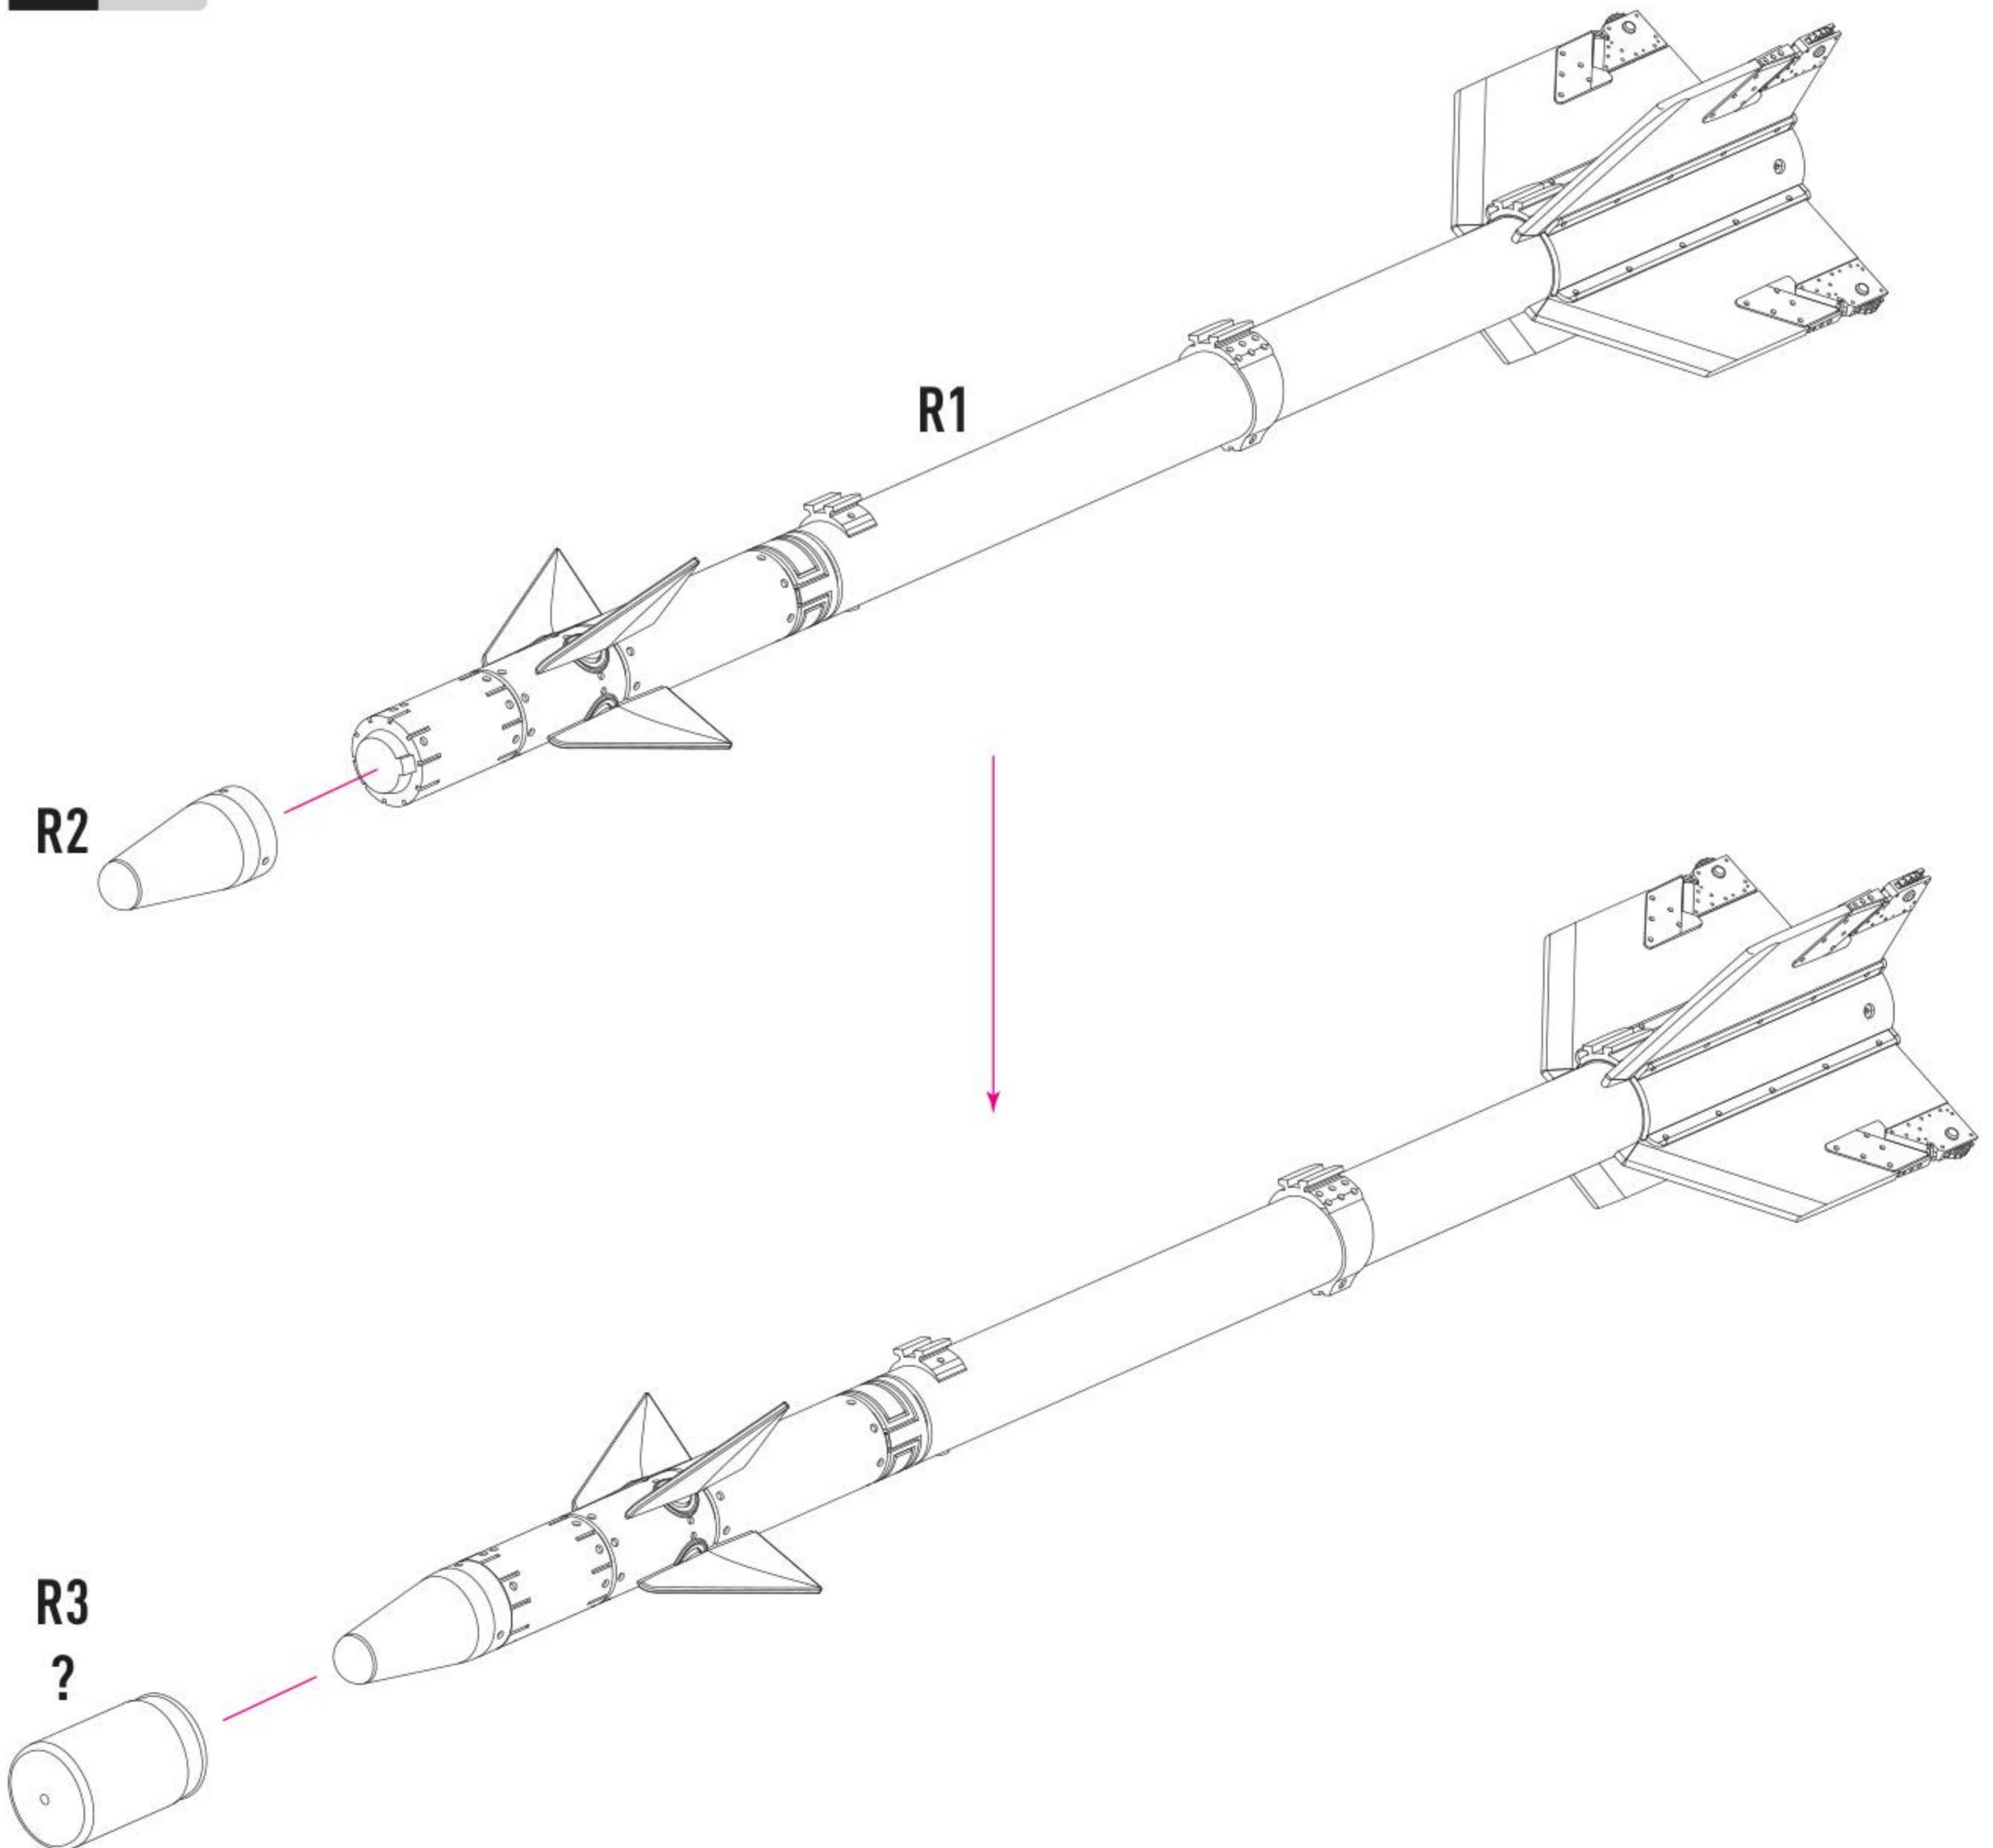

V1

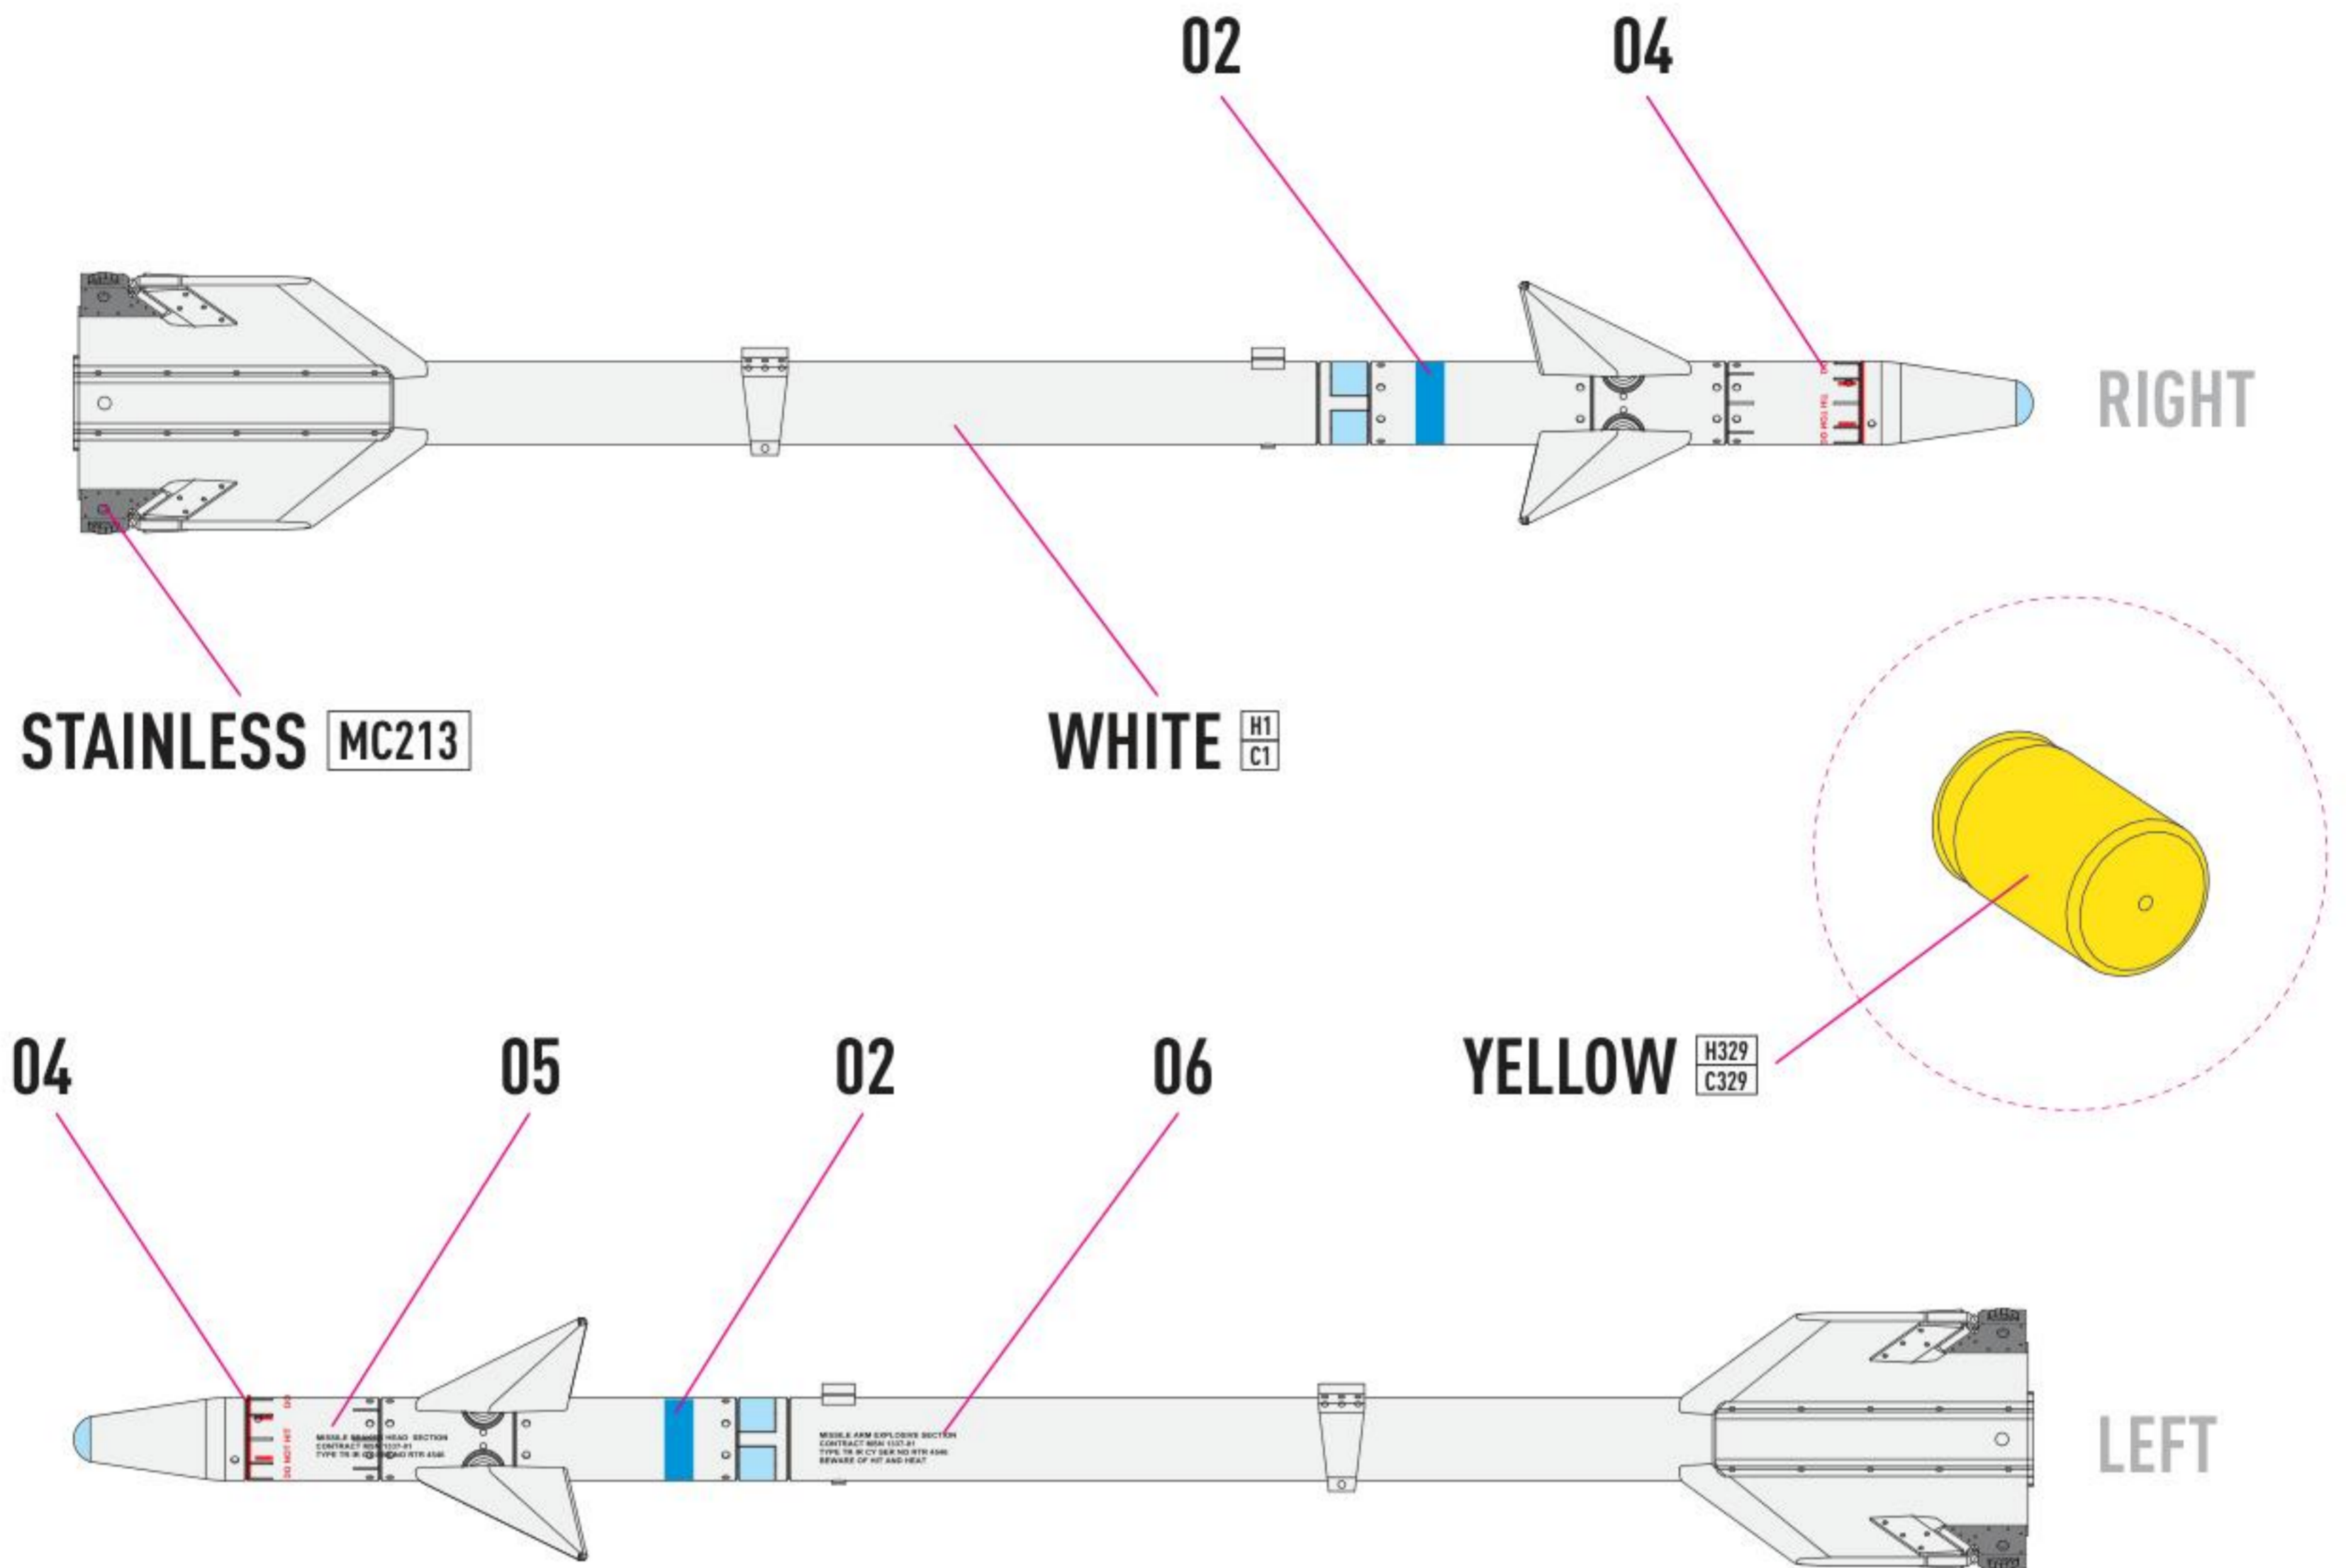

V2

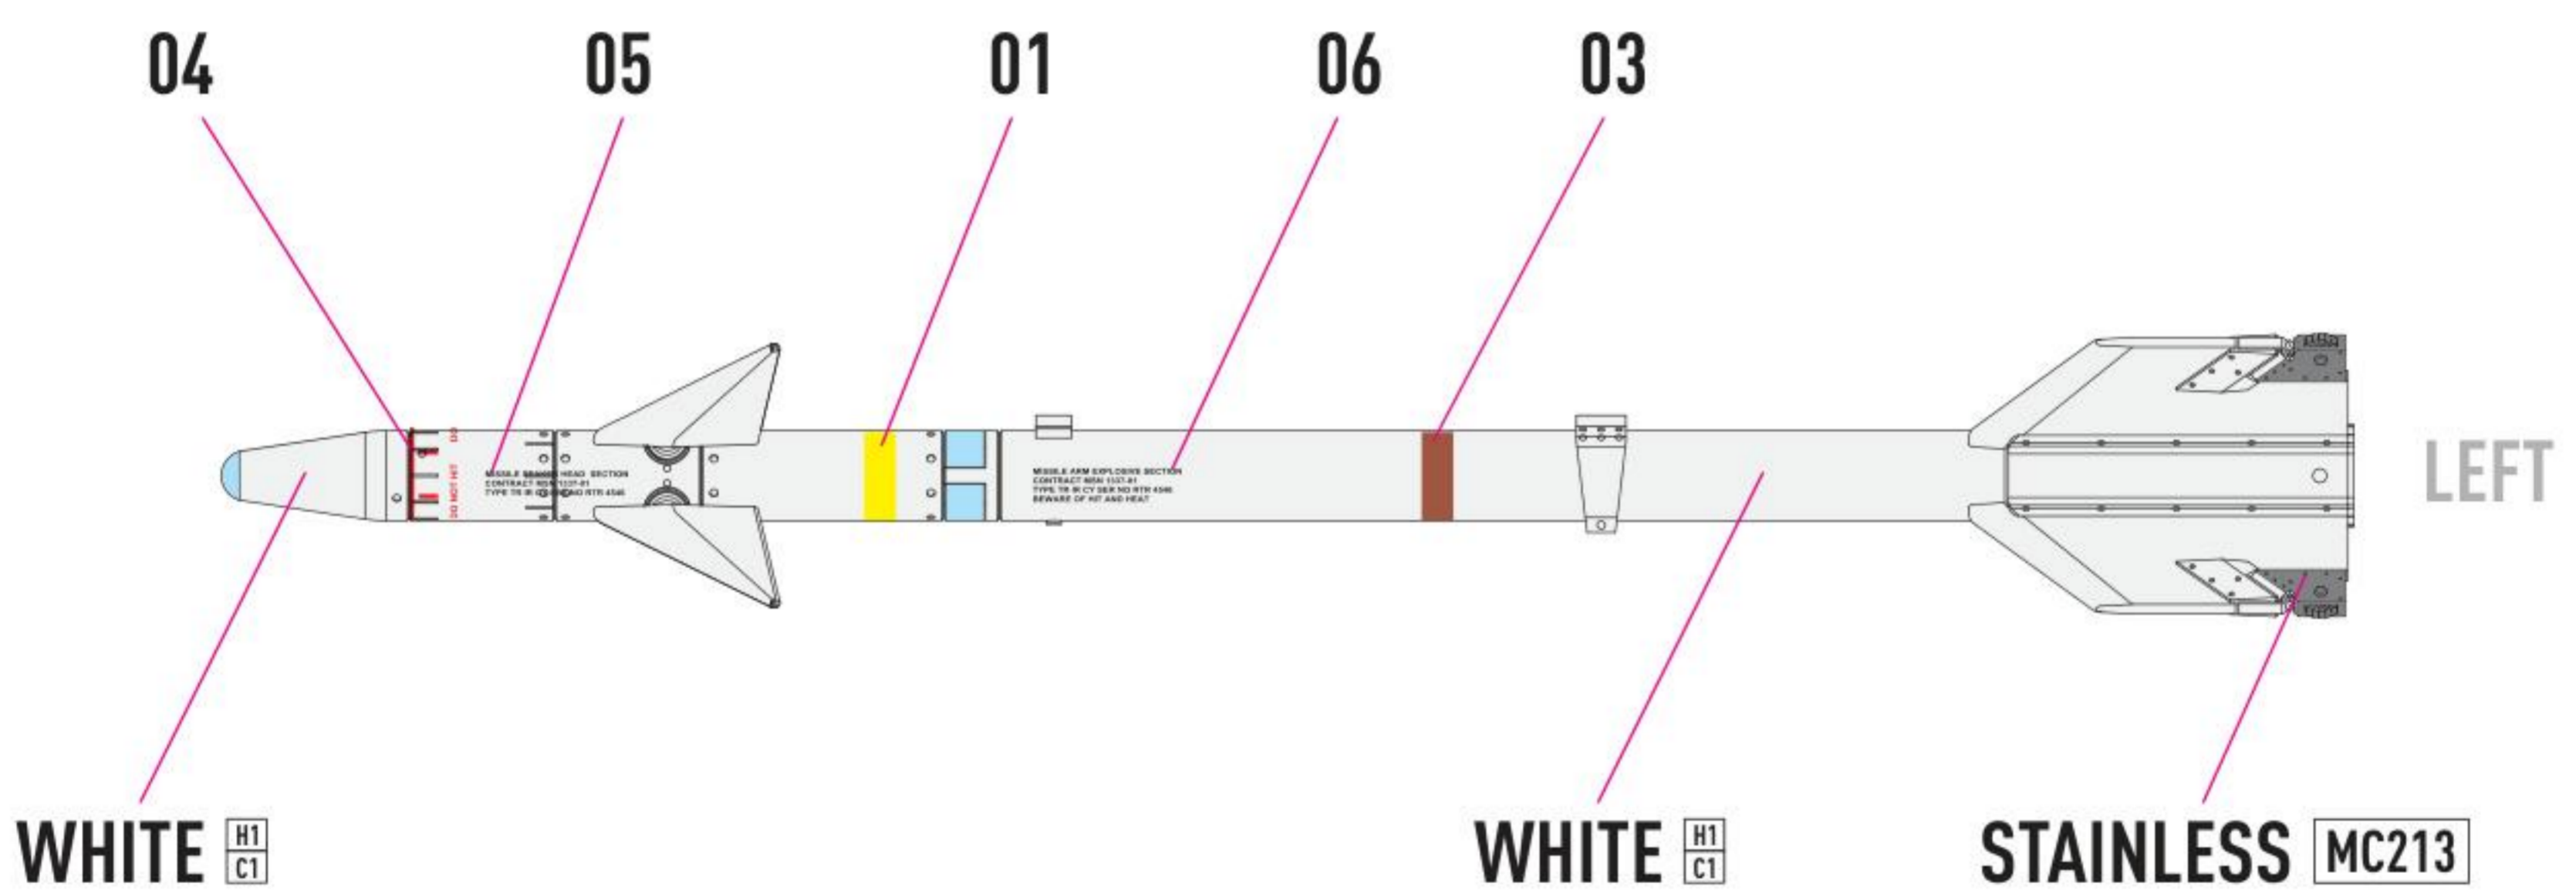

COLOR	SGUNZE / AQUEOUS	GUNZE / MR.COLOR	GUNZE / MR.METAL COLOR	FEDERAL STANDARD
WHITE	H1	C1		
STAINLESS			MC213	
YELLOW	H329	C329		FS 13538