



## DETAILS AFTER REMOVAL FROM SUPPORTS


 USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

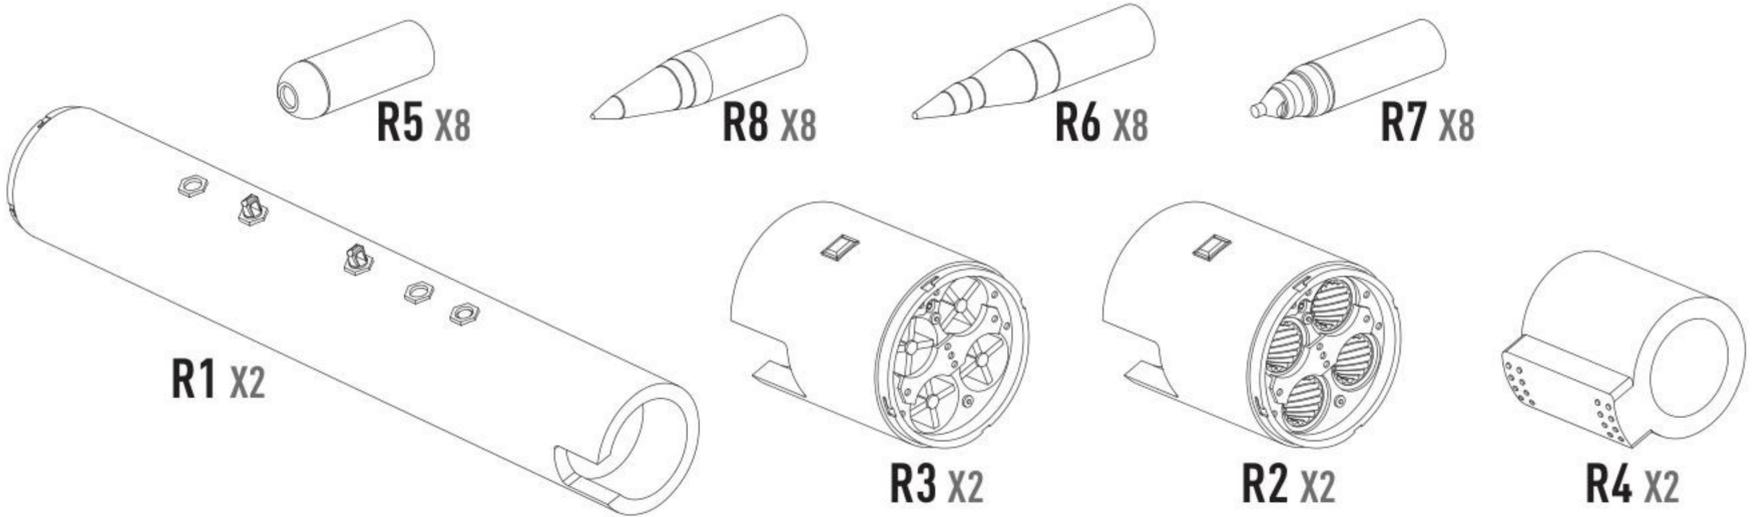






### 1 X2

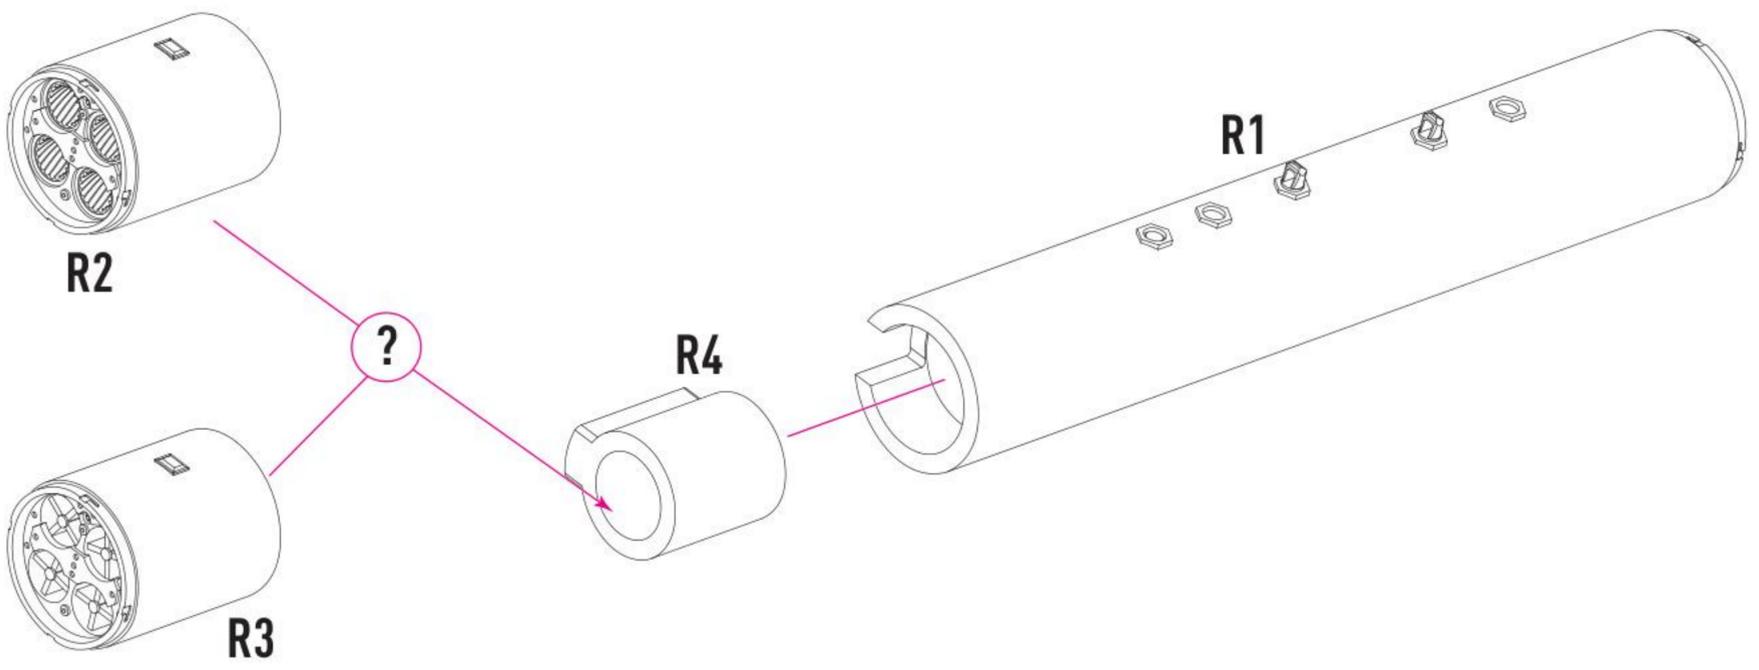

### 2 X2

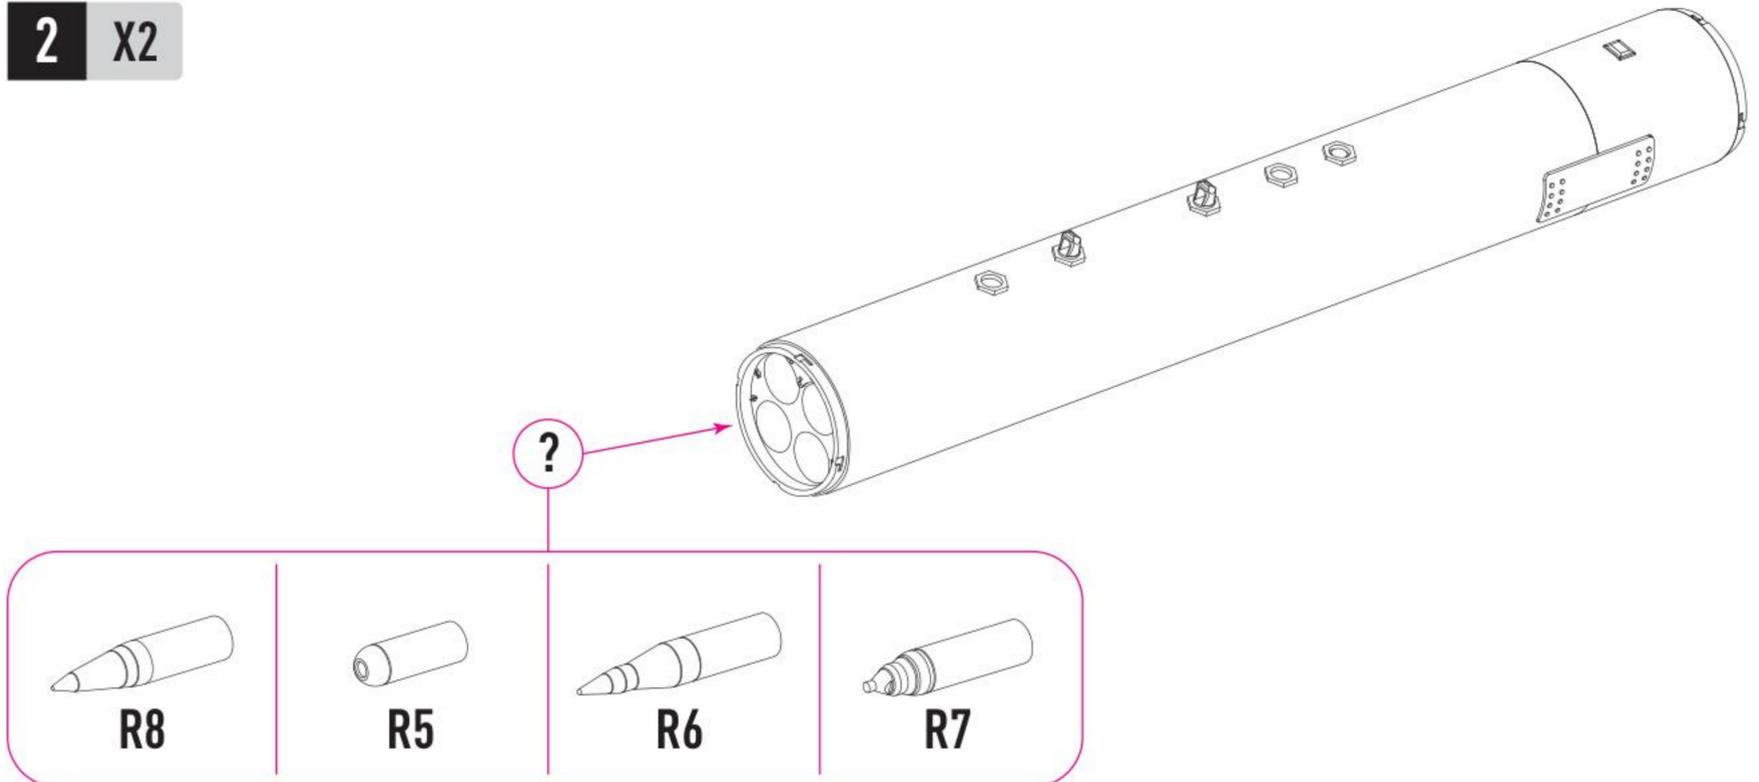

# DECAL INSTRUCTION

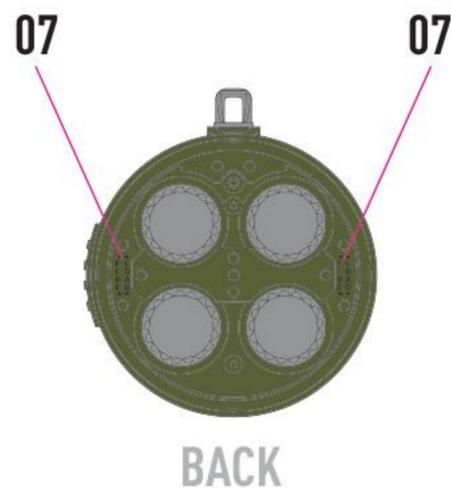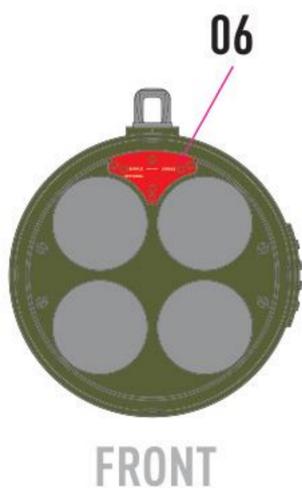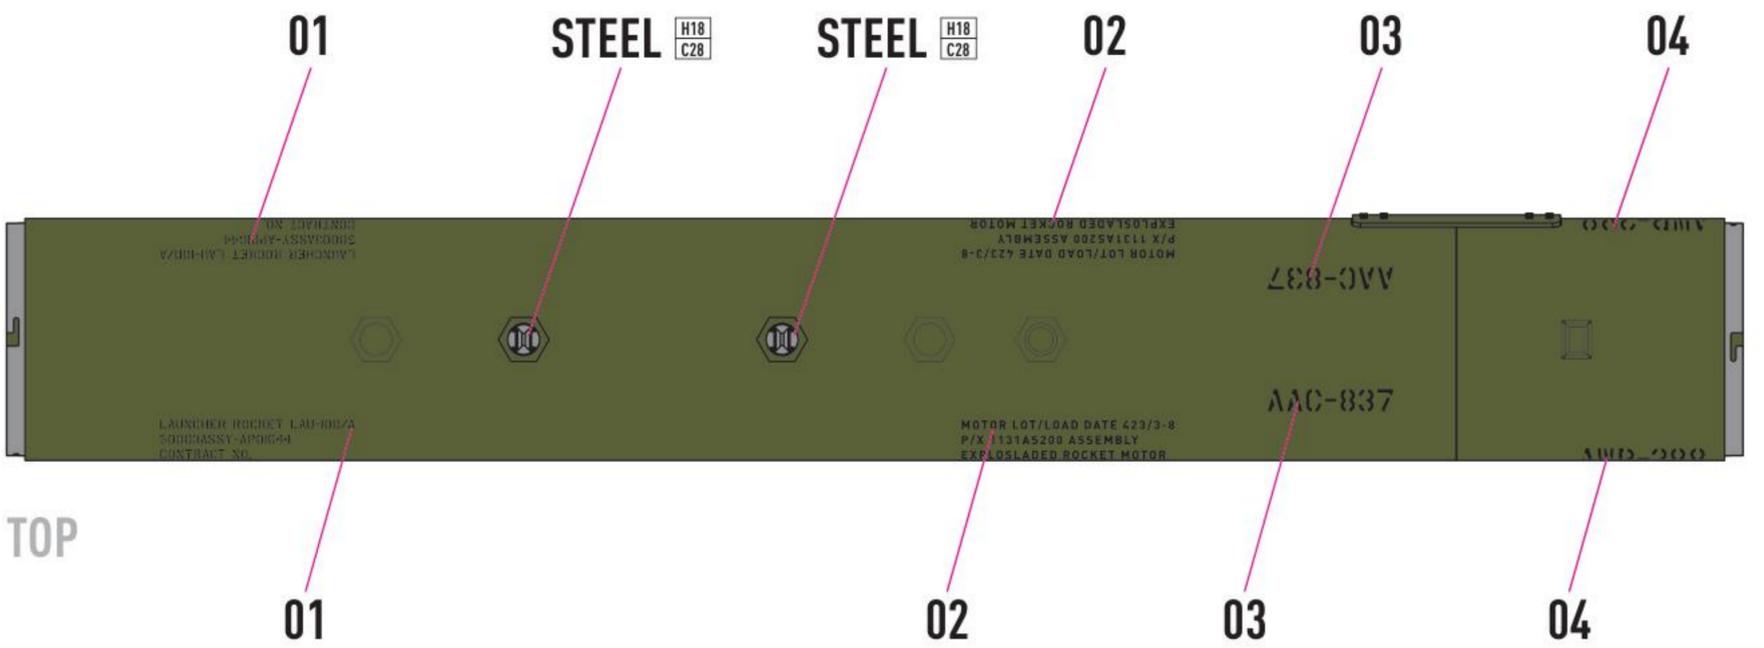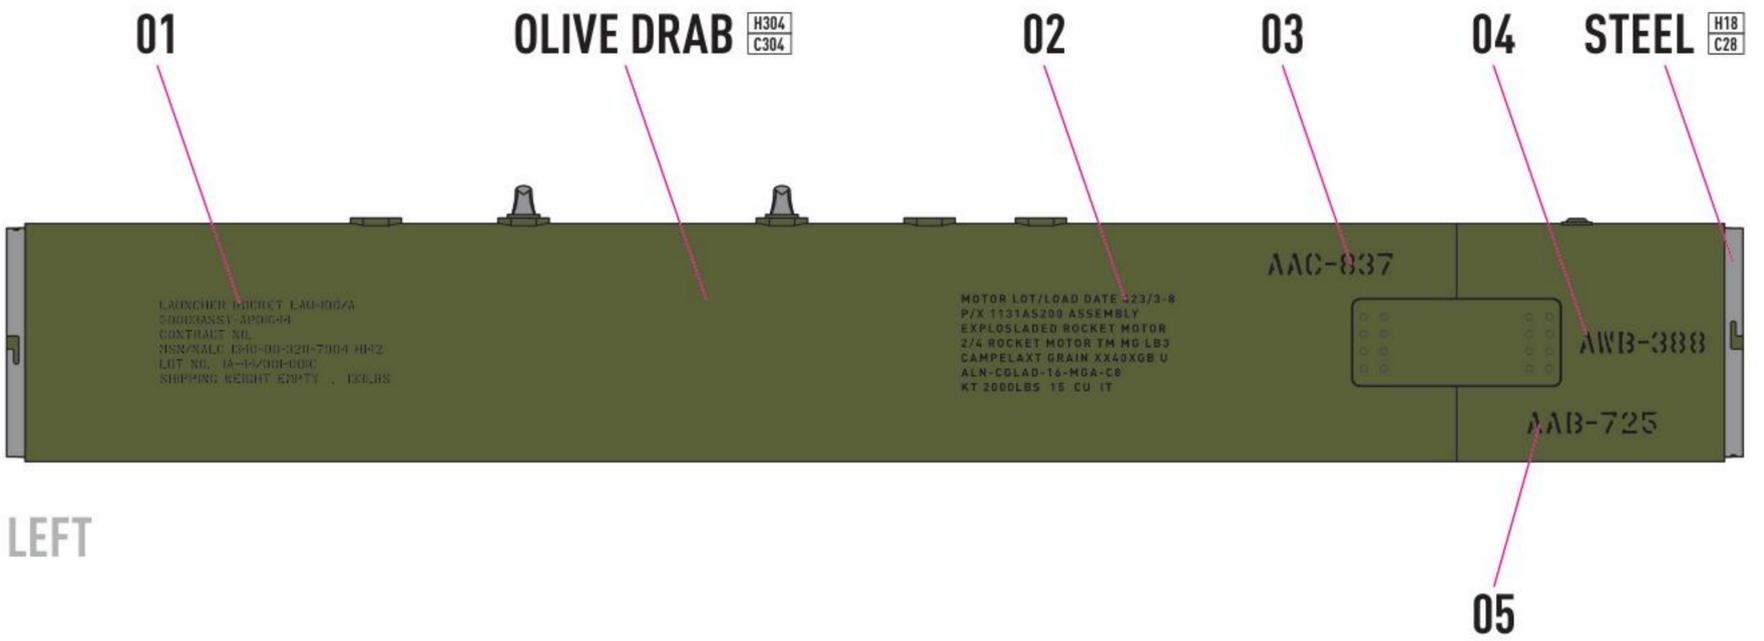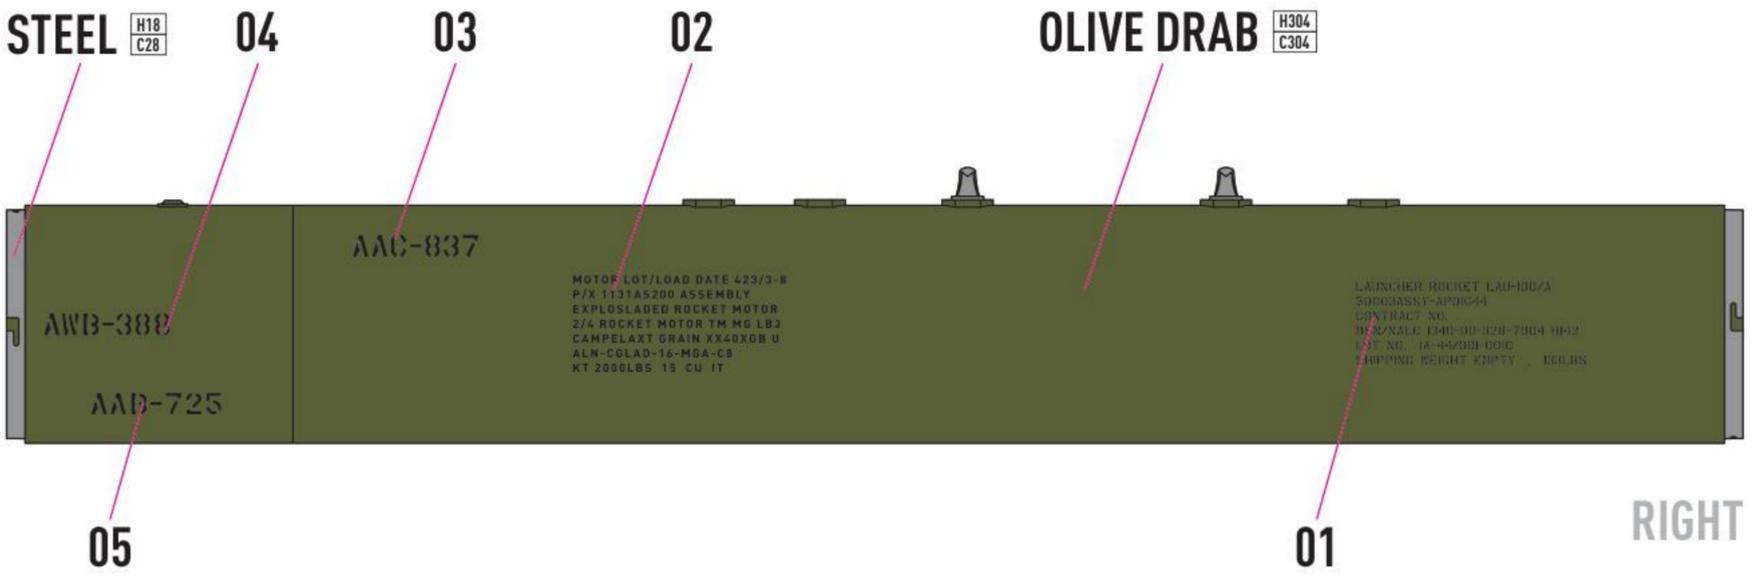

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
STEEL	H18	C28