
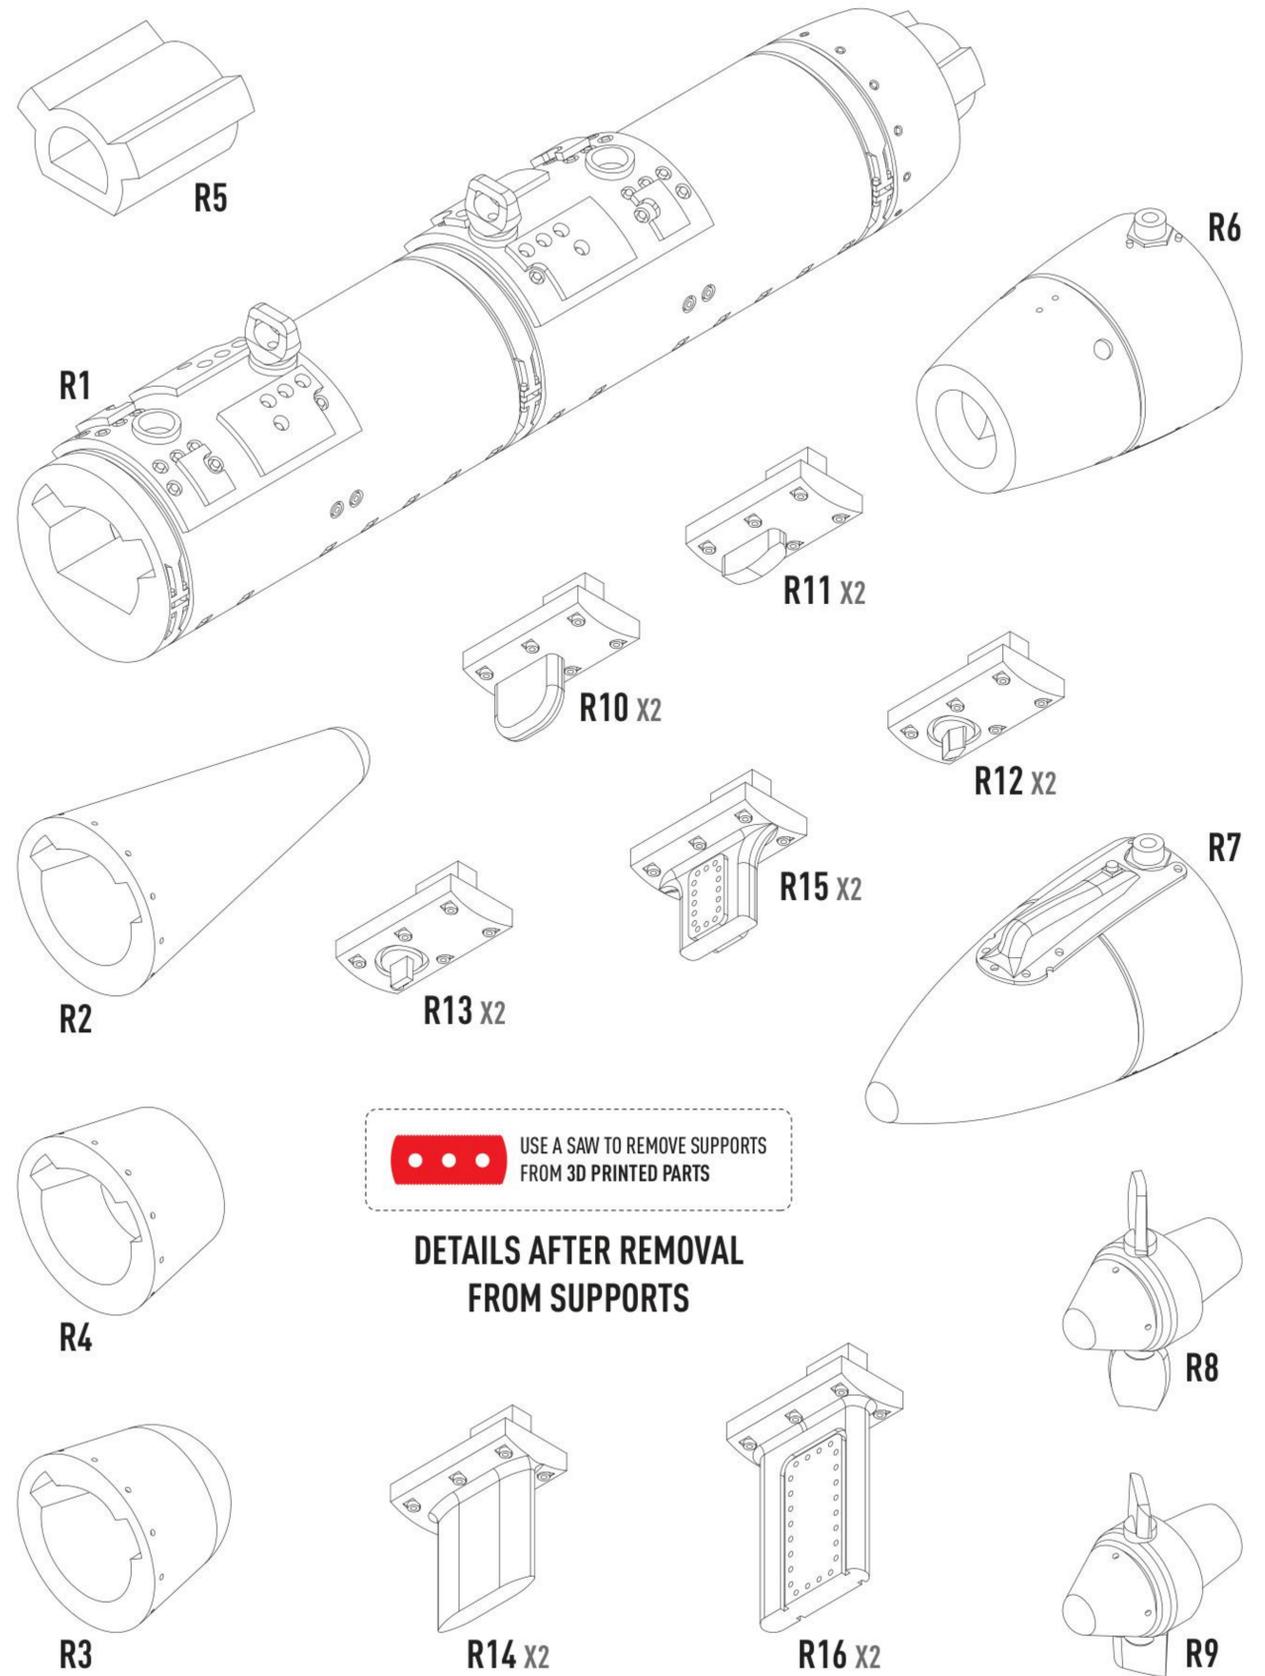
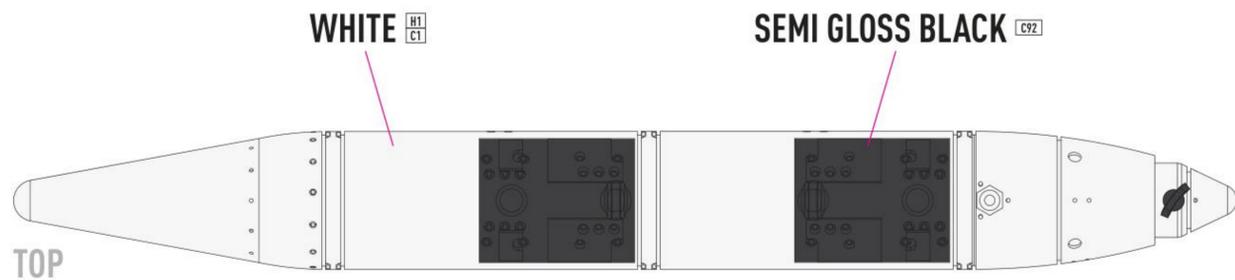
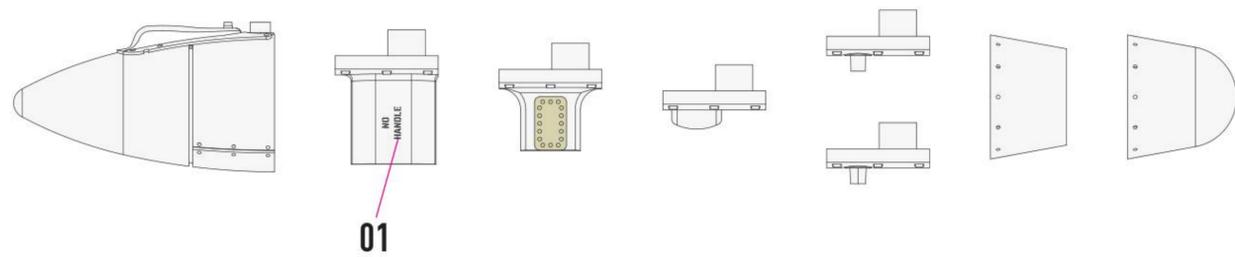
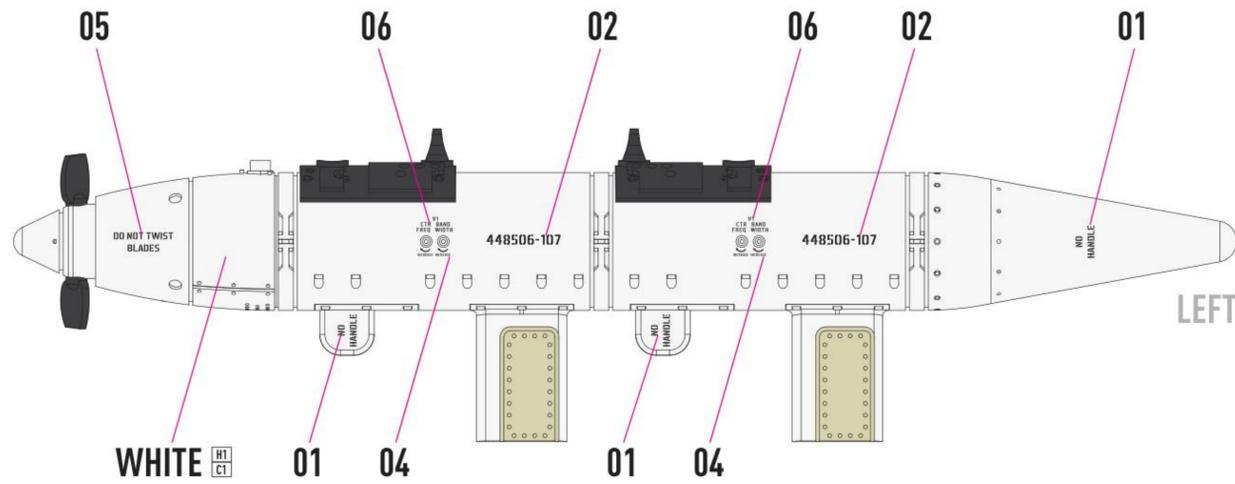


DECAL INSTRUCTION

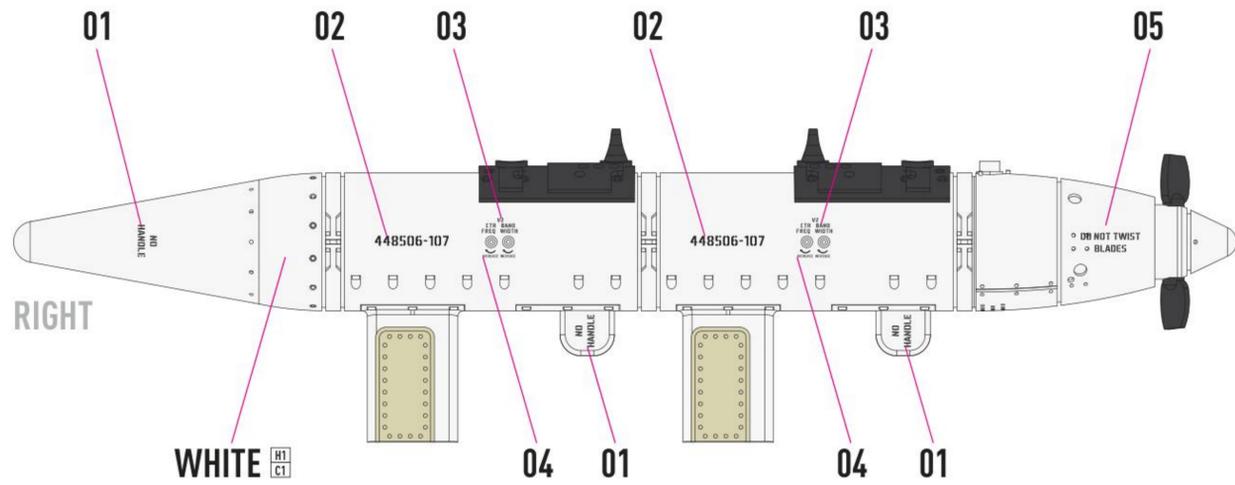

USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

DETAILS AFTER REMOVAL FROM SUPPORTS

COLORS	GUNZE / MR.COLOR
SEMI GLOSS BLACK	C92

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
WHITE	H1	C1

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua


RESKIT-MODELS.COM

[fb.com/reskit.official](https://www.facebook.com/reskit.official)


[instagram.com/reskit_official](https://www.instagram.com/reskit_official)

[youtube.com/@reskit-usmd](https://www.youtube.com/@reskit-usmd)

1

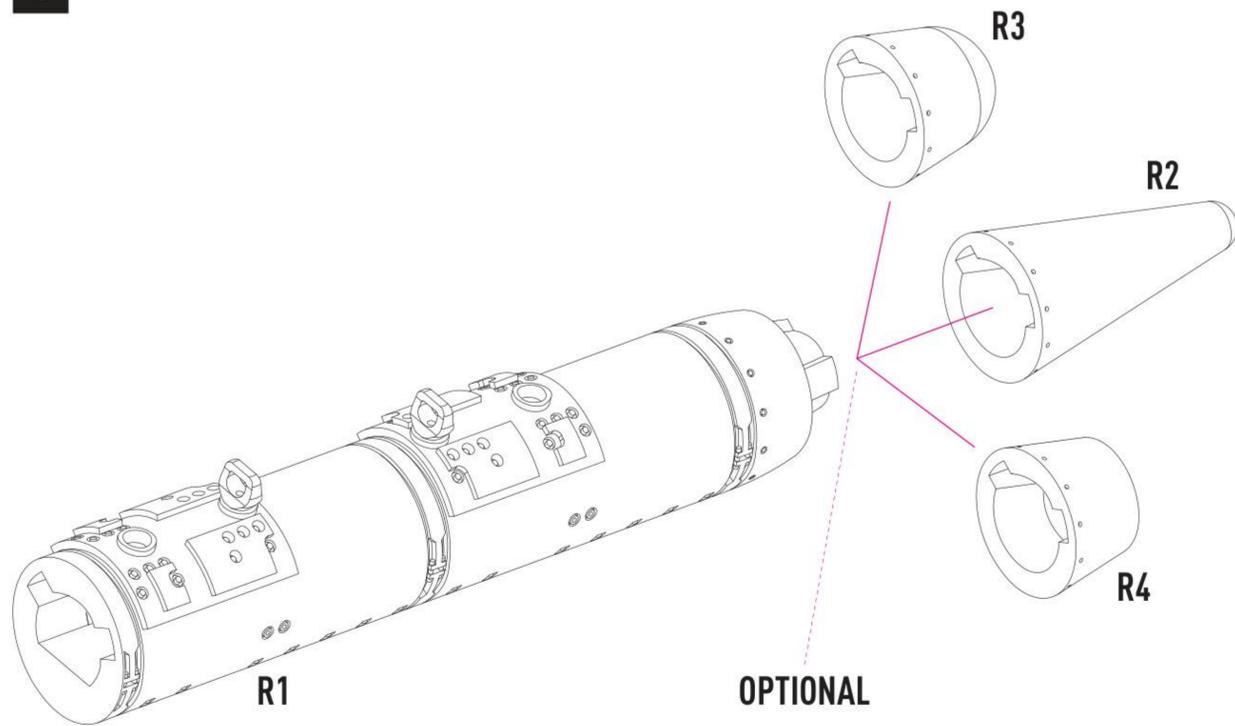

2

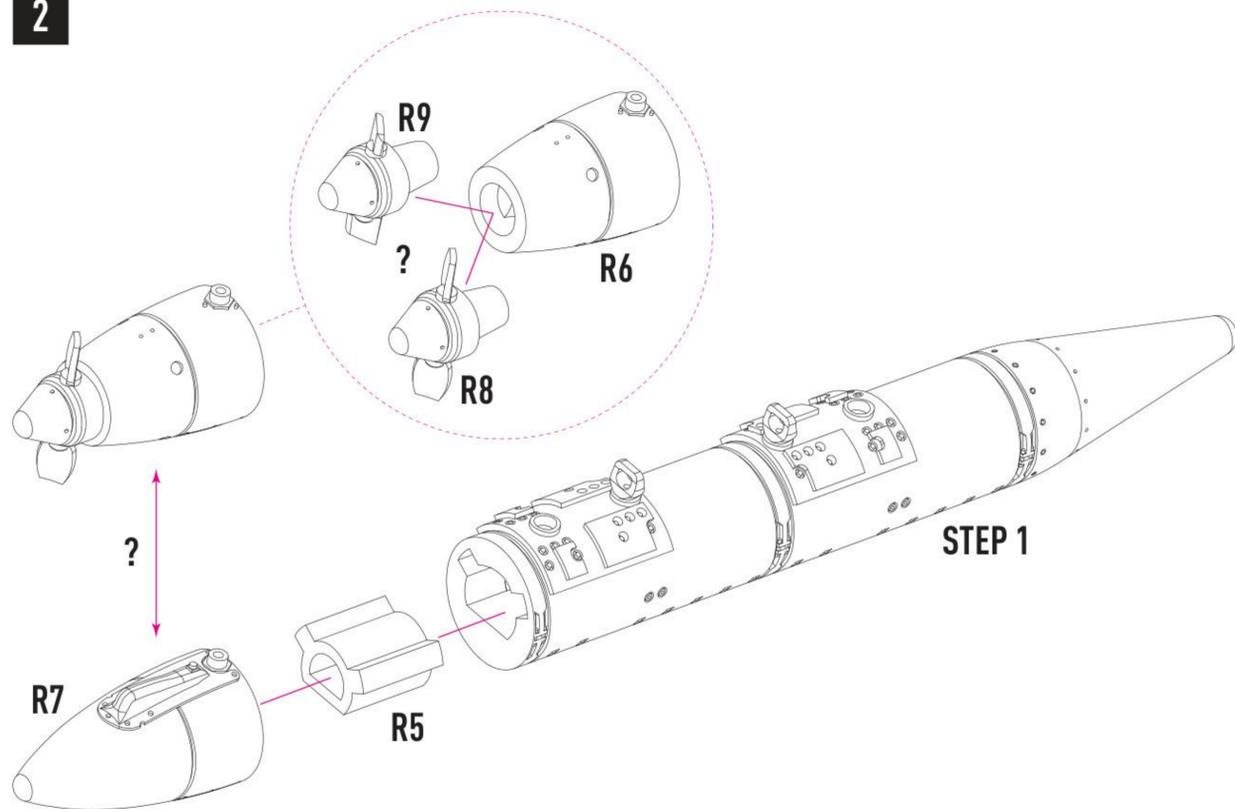

3

**FOR PROPER ANTENNA INSTALLATION
CHECK YOUR REFERENCES**

