



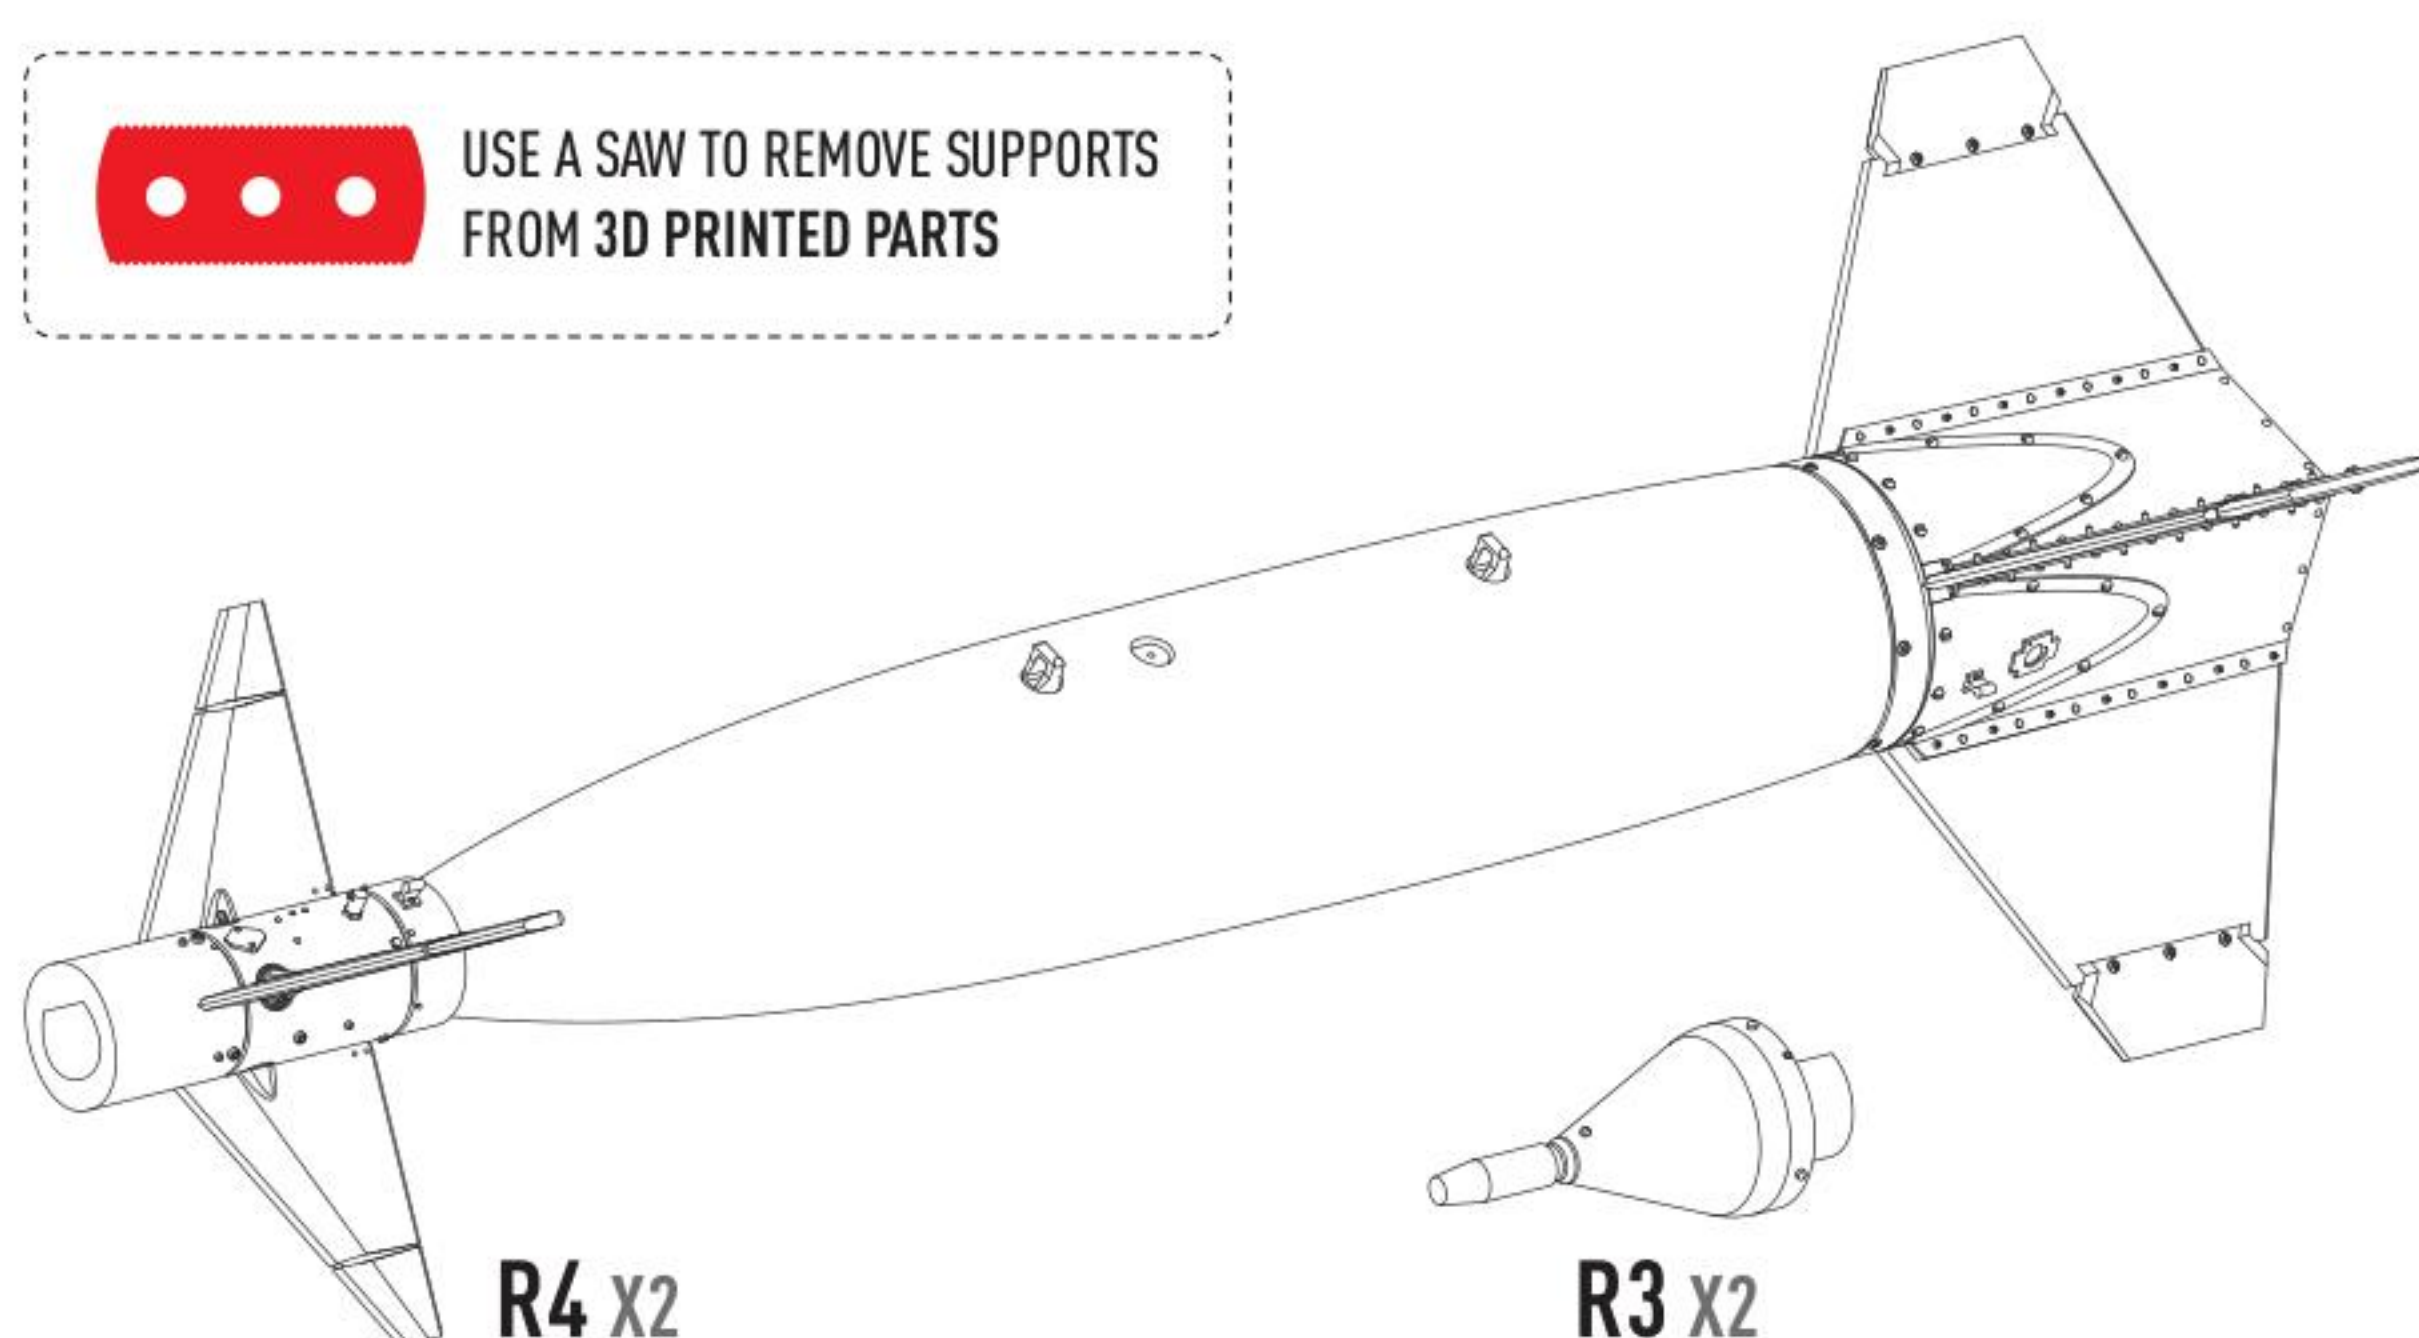

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS



**DETAILS AFTER REMOVAL
FROM SUPPORTS**

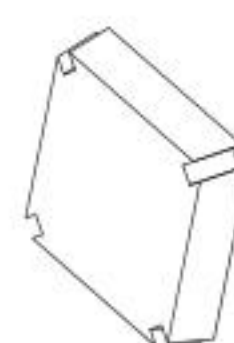

R5 X2



R6 X2




R1 X2







R2 X2

1 X2

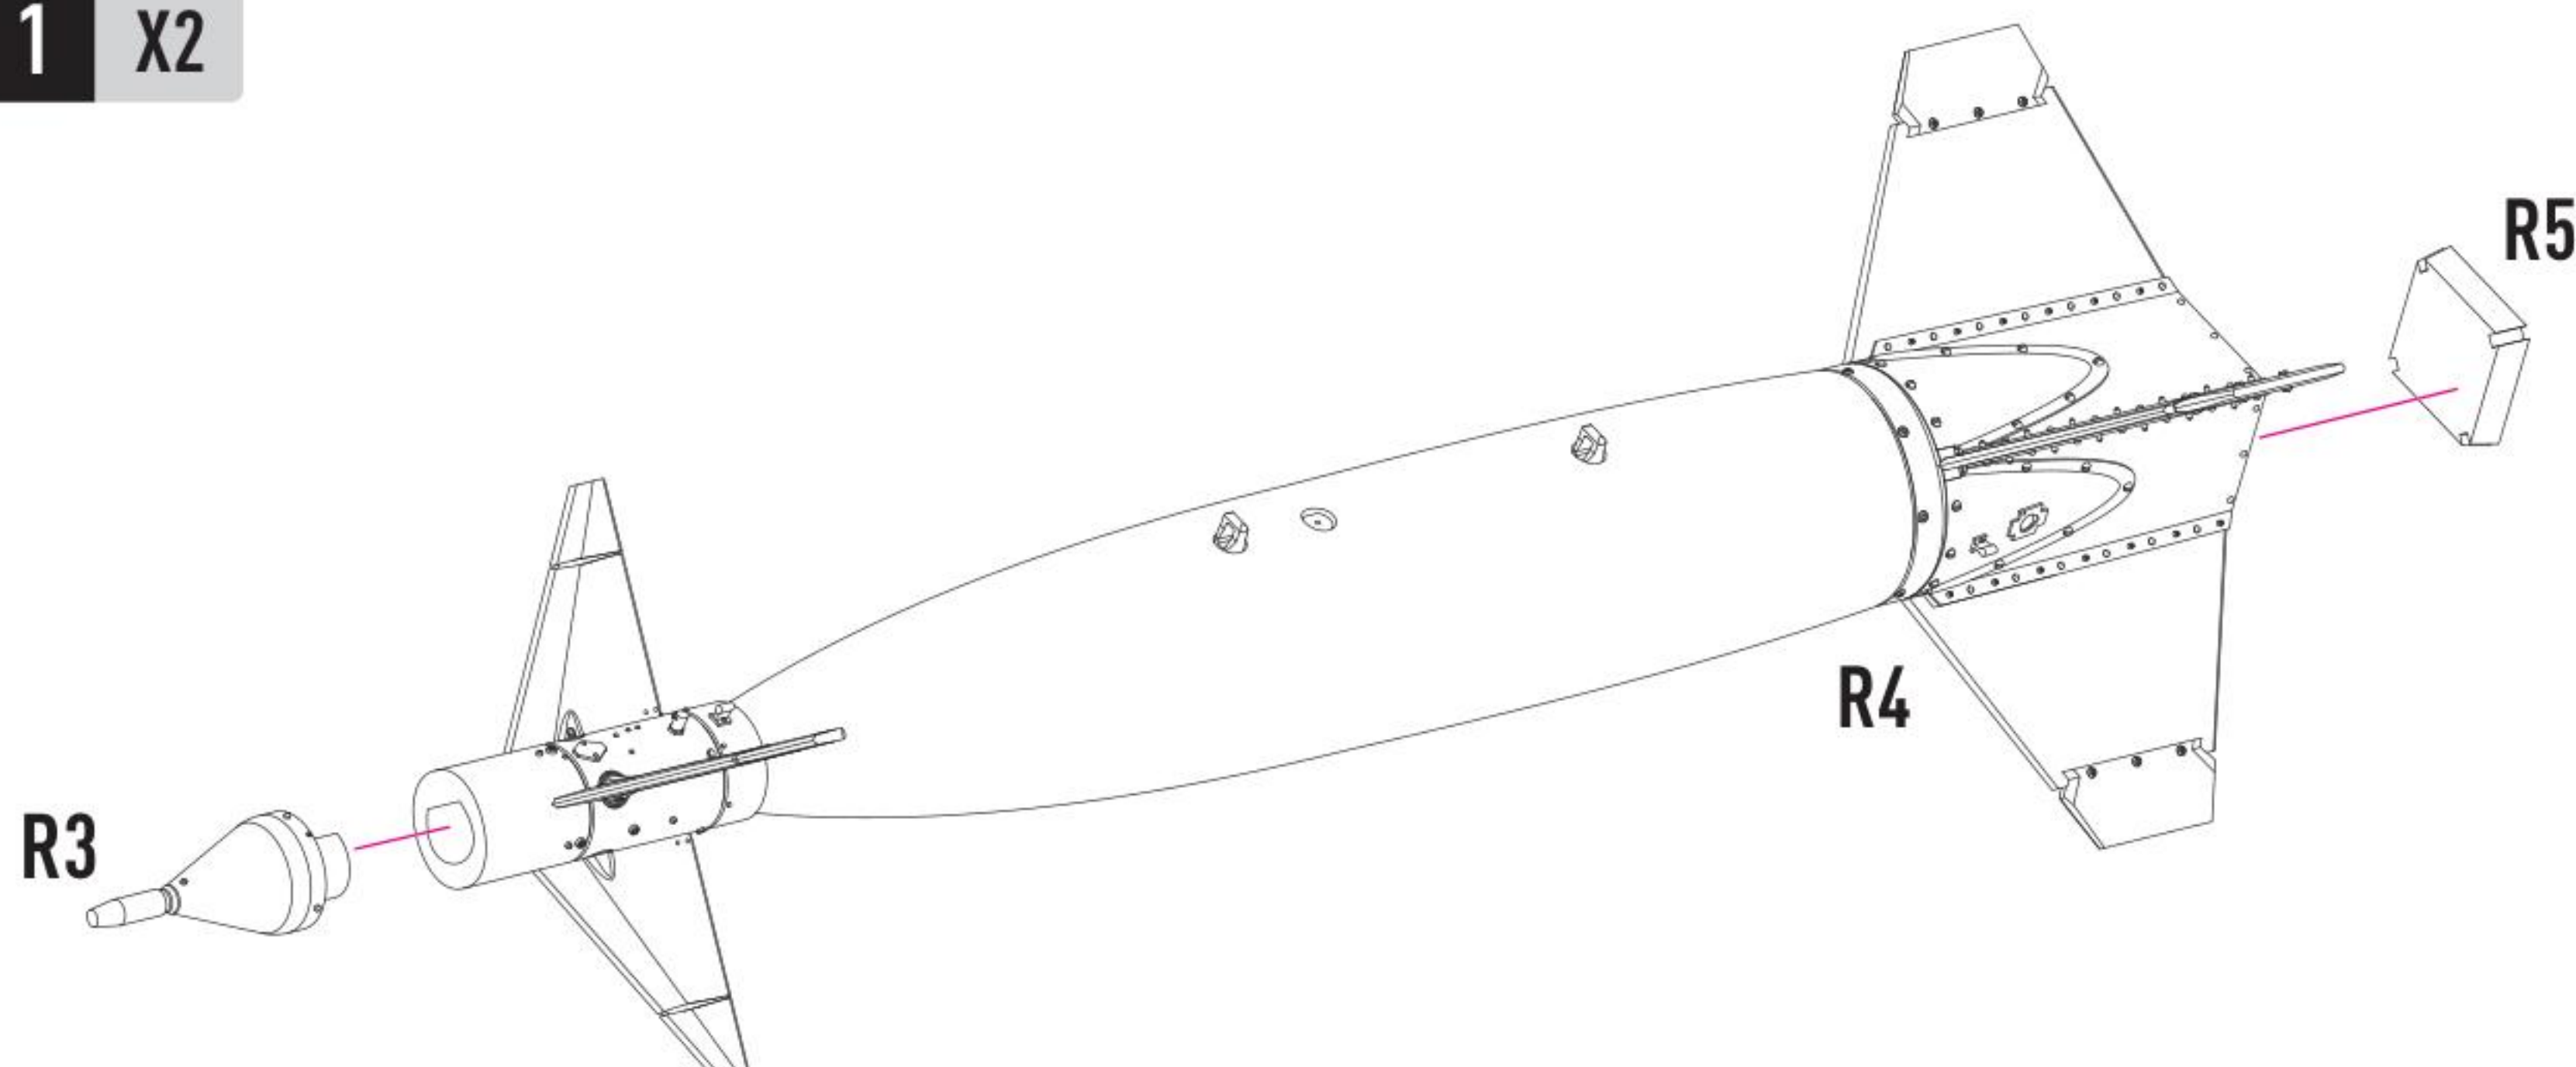

2 X2

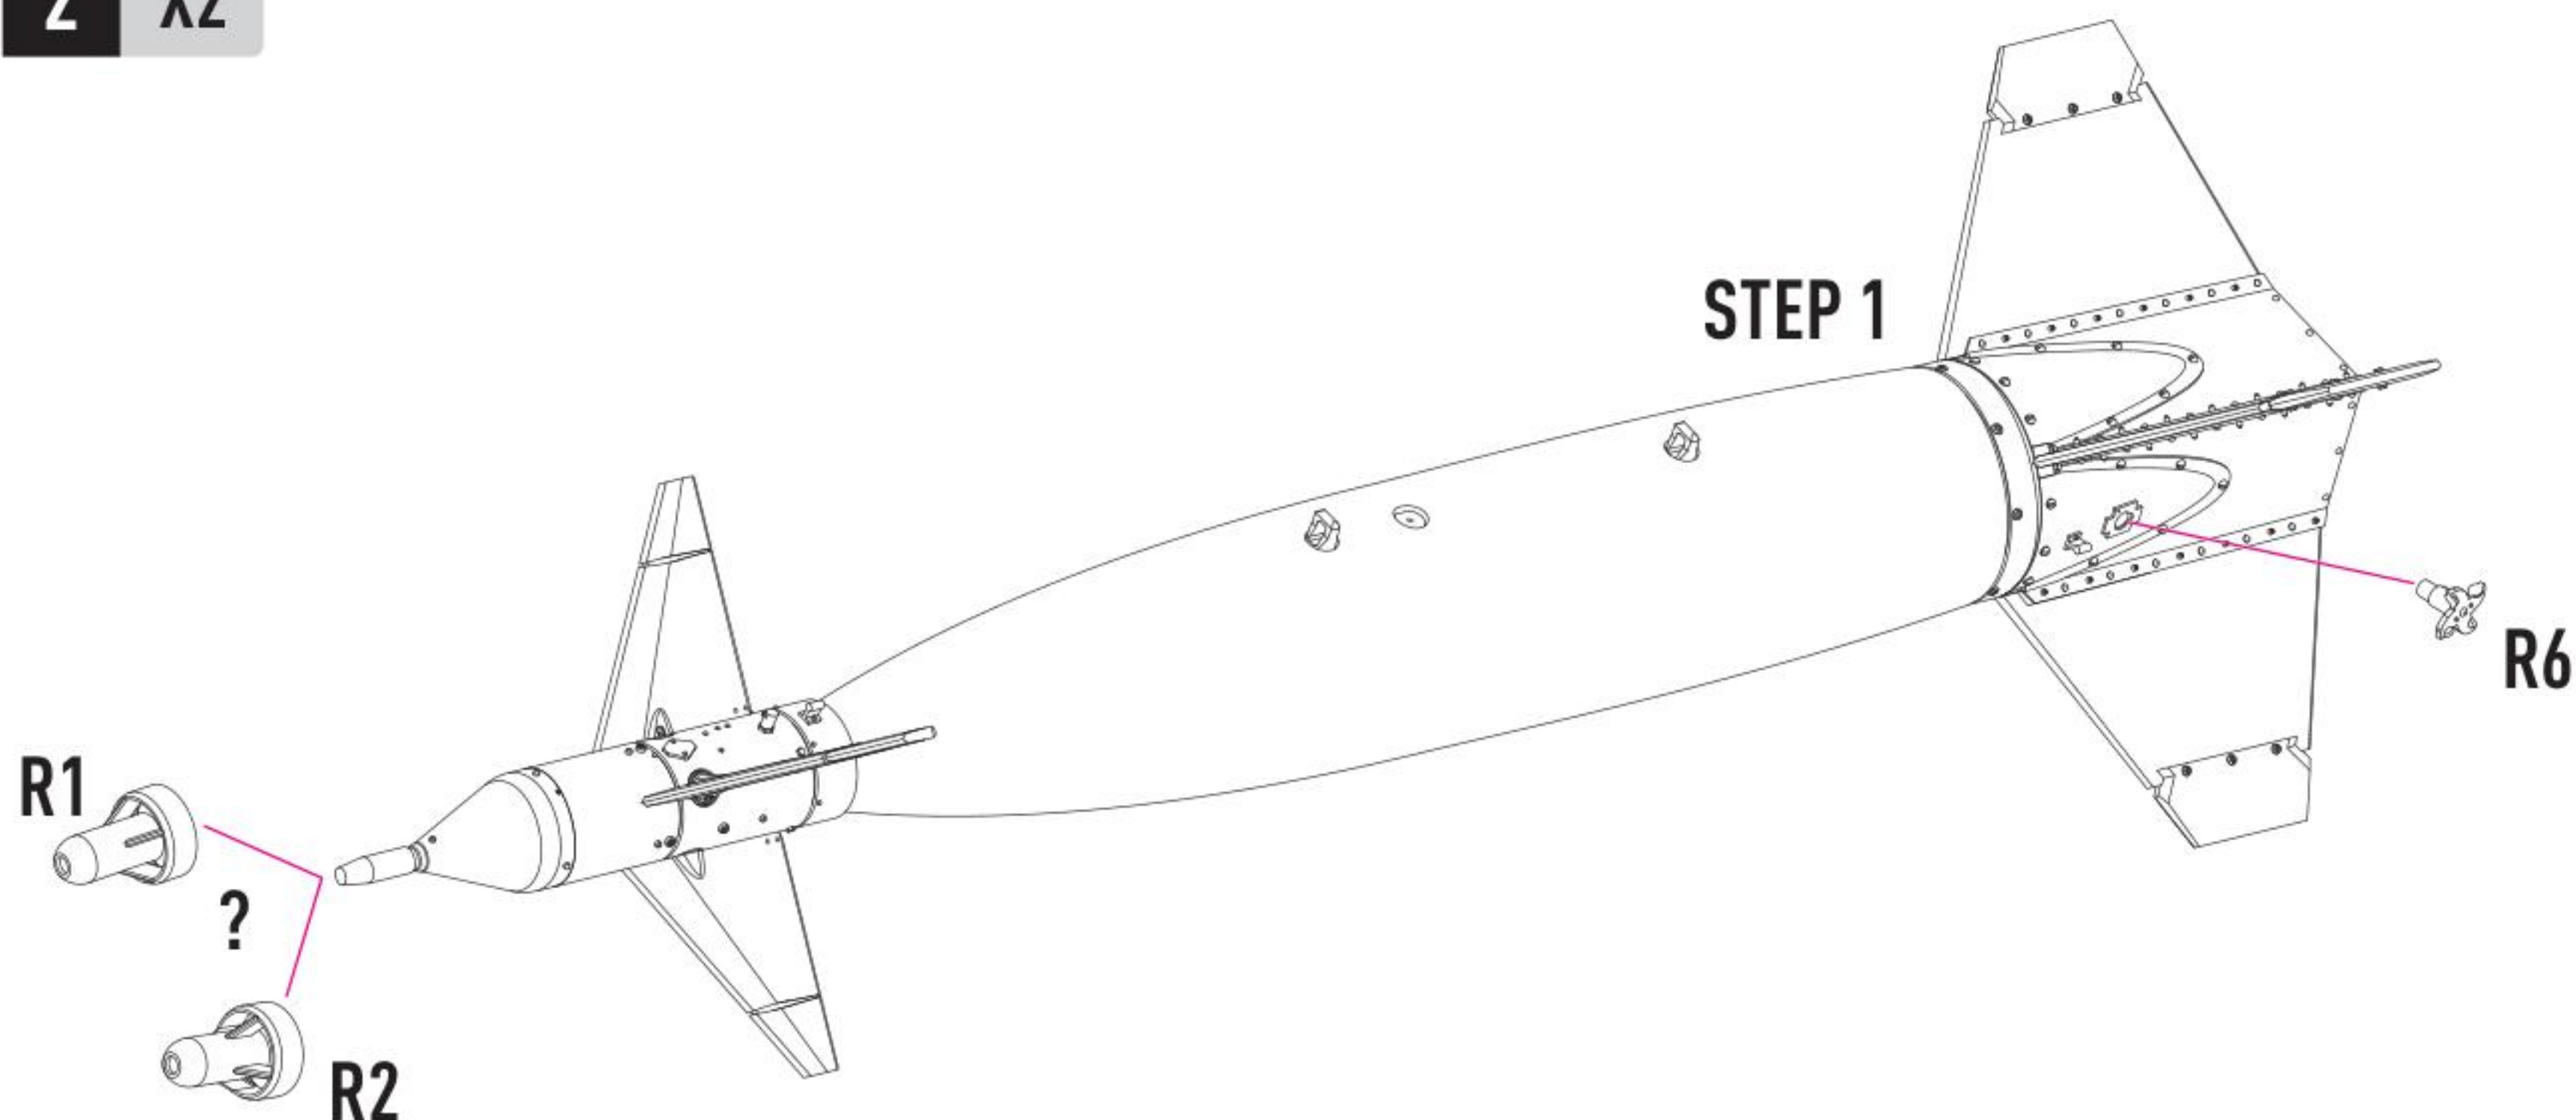

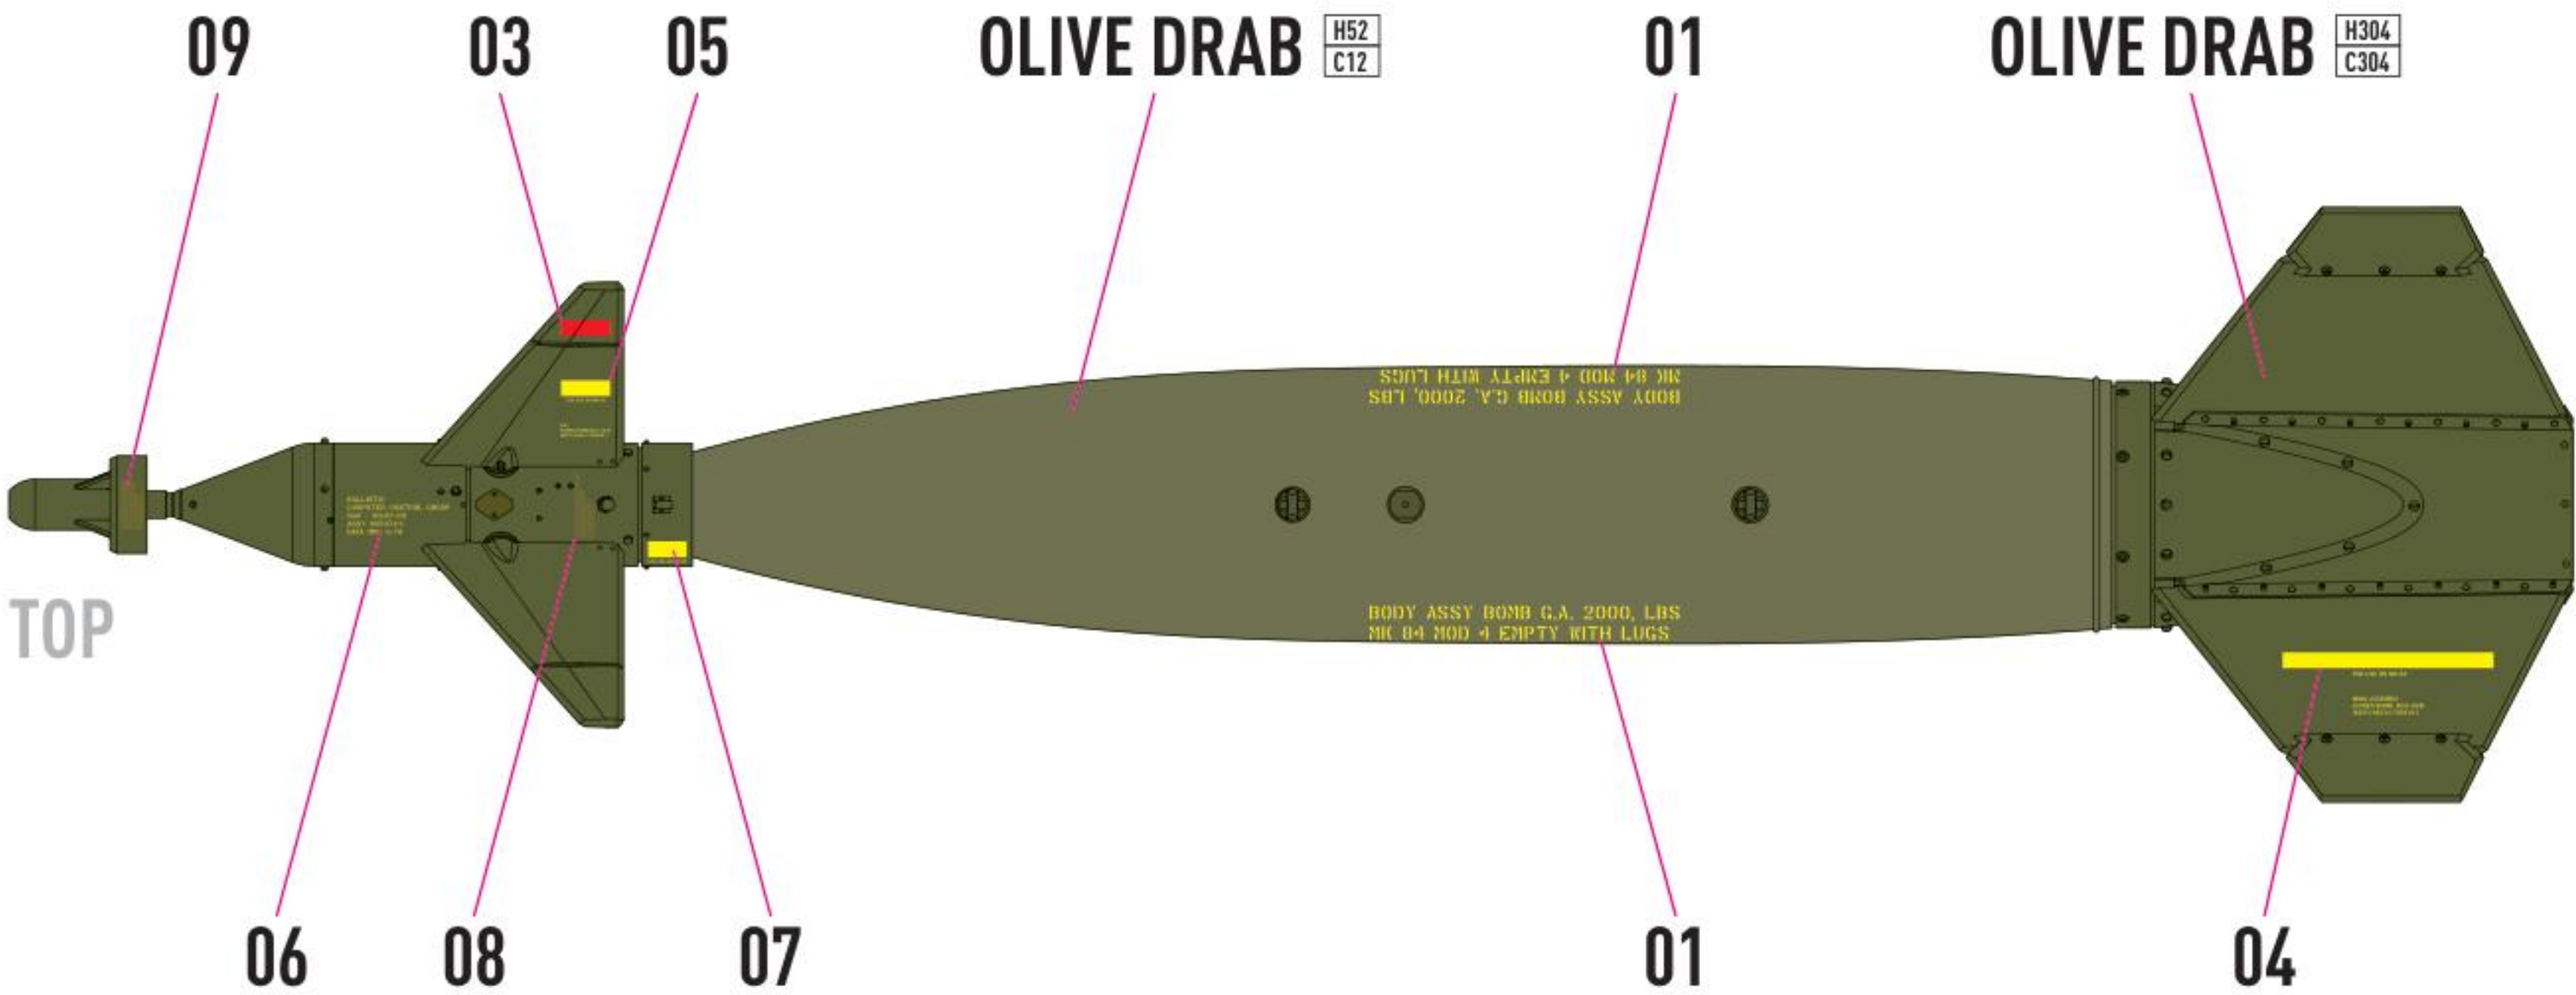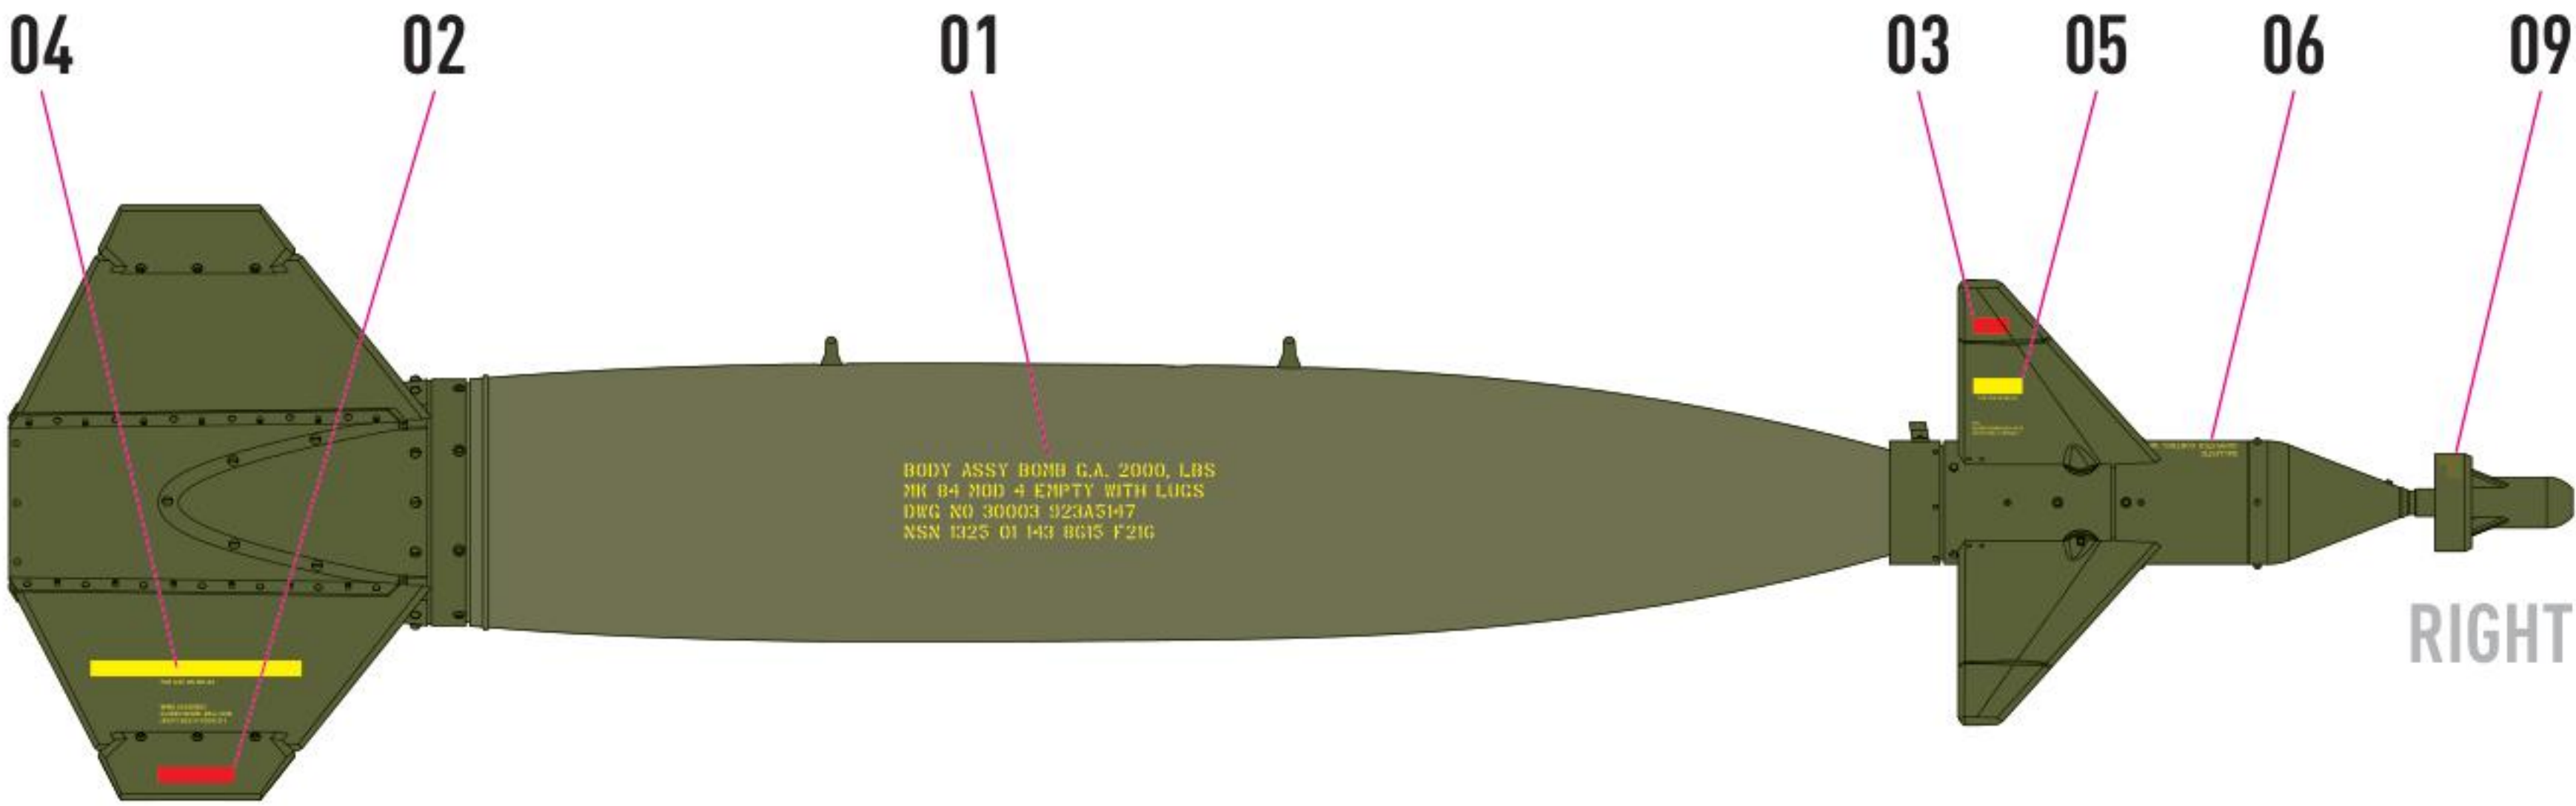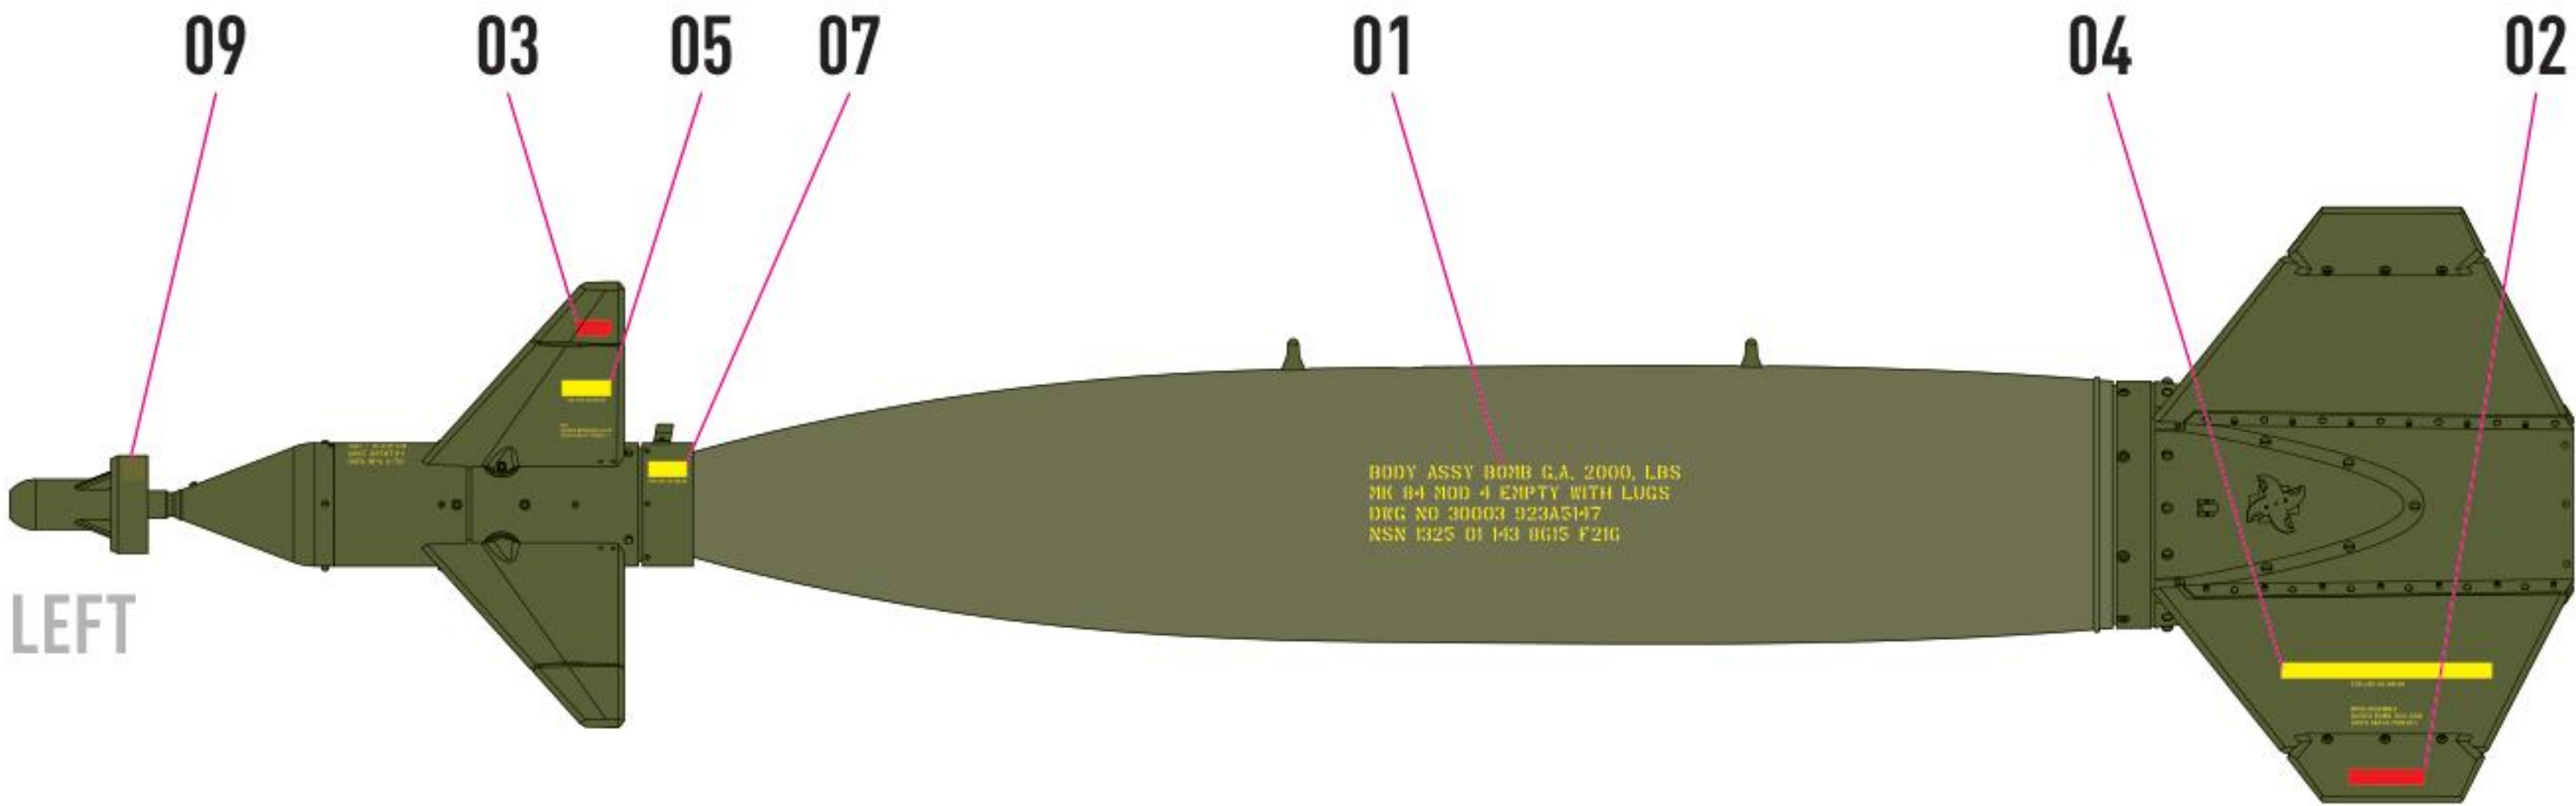

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12