



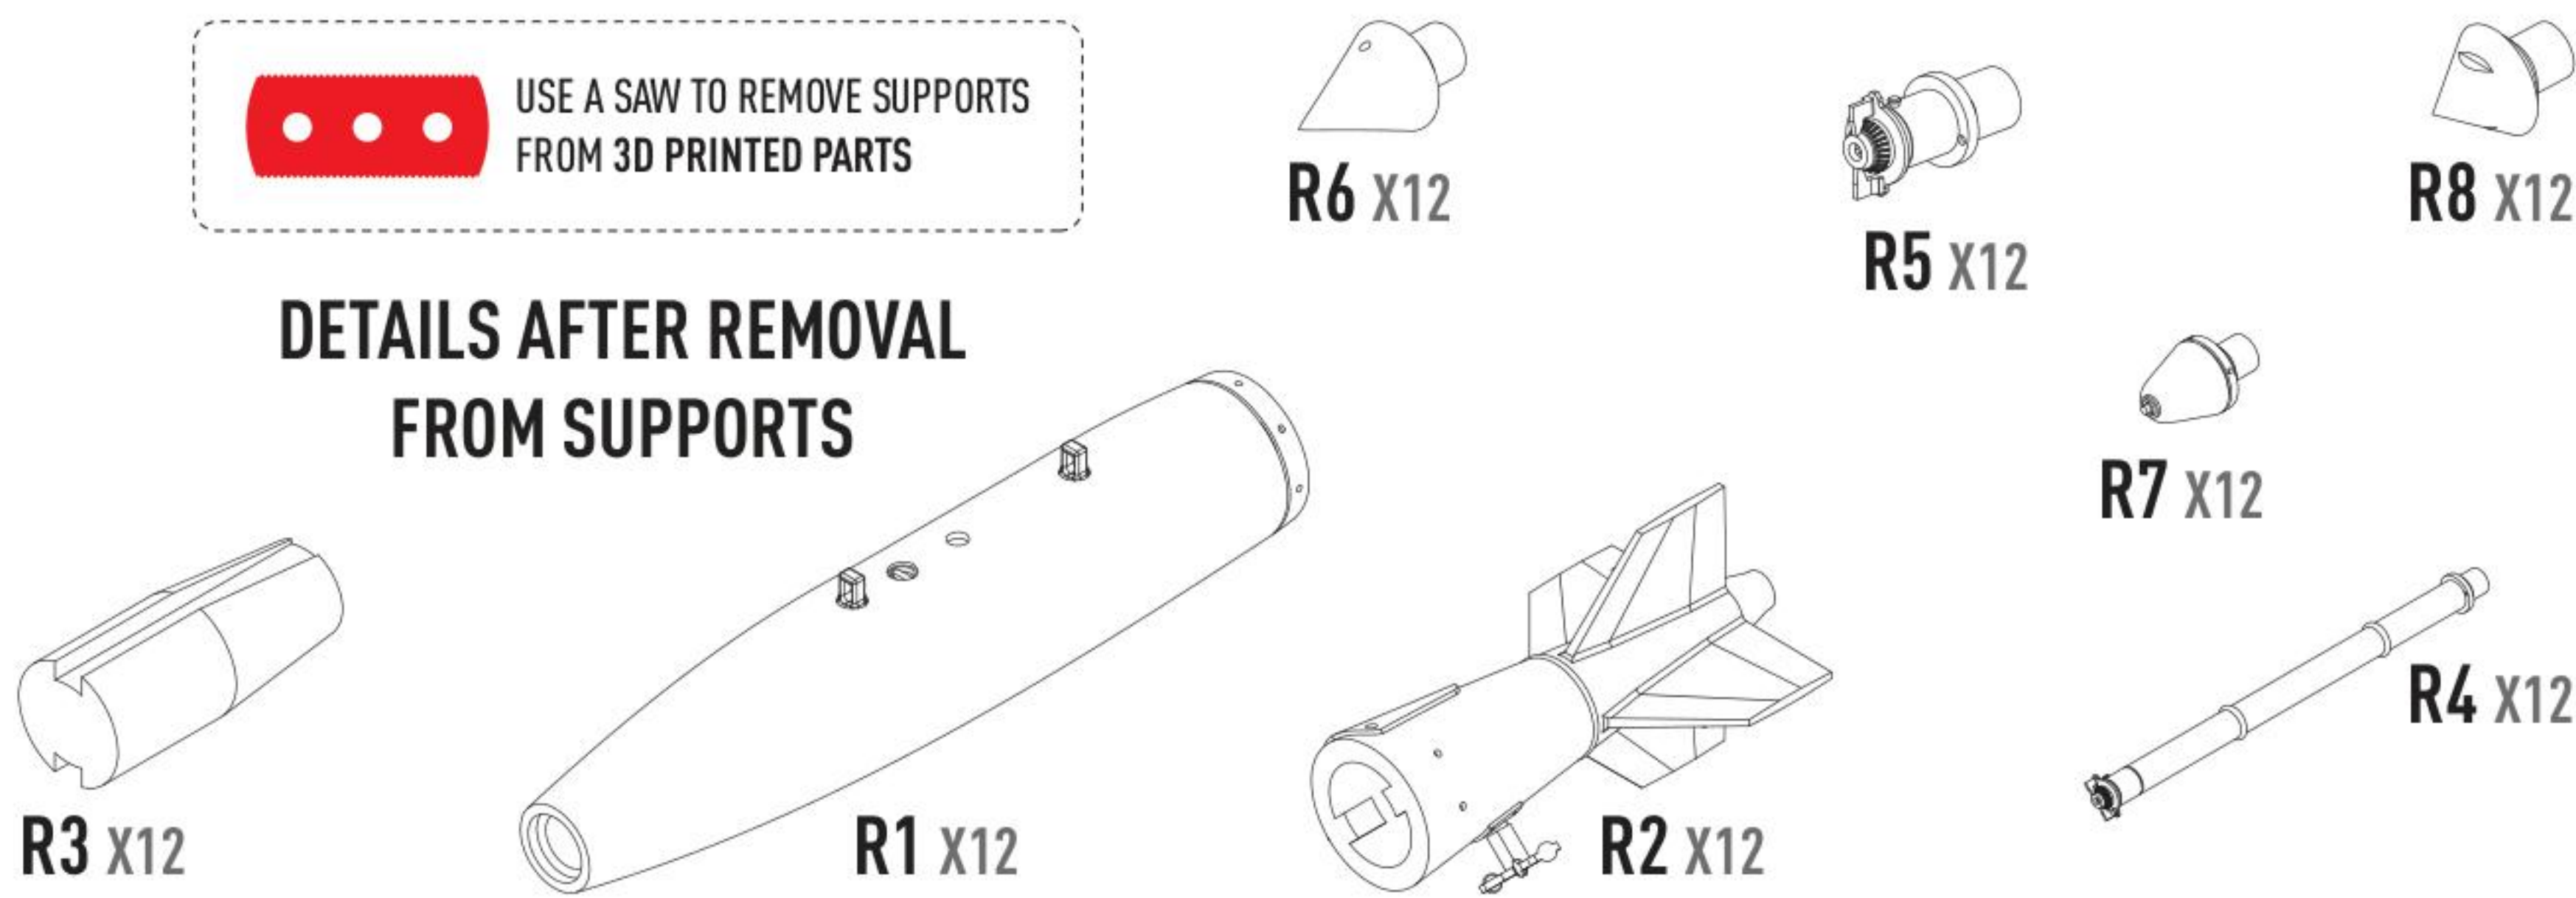

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS



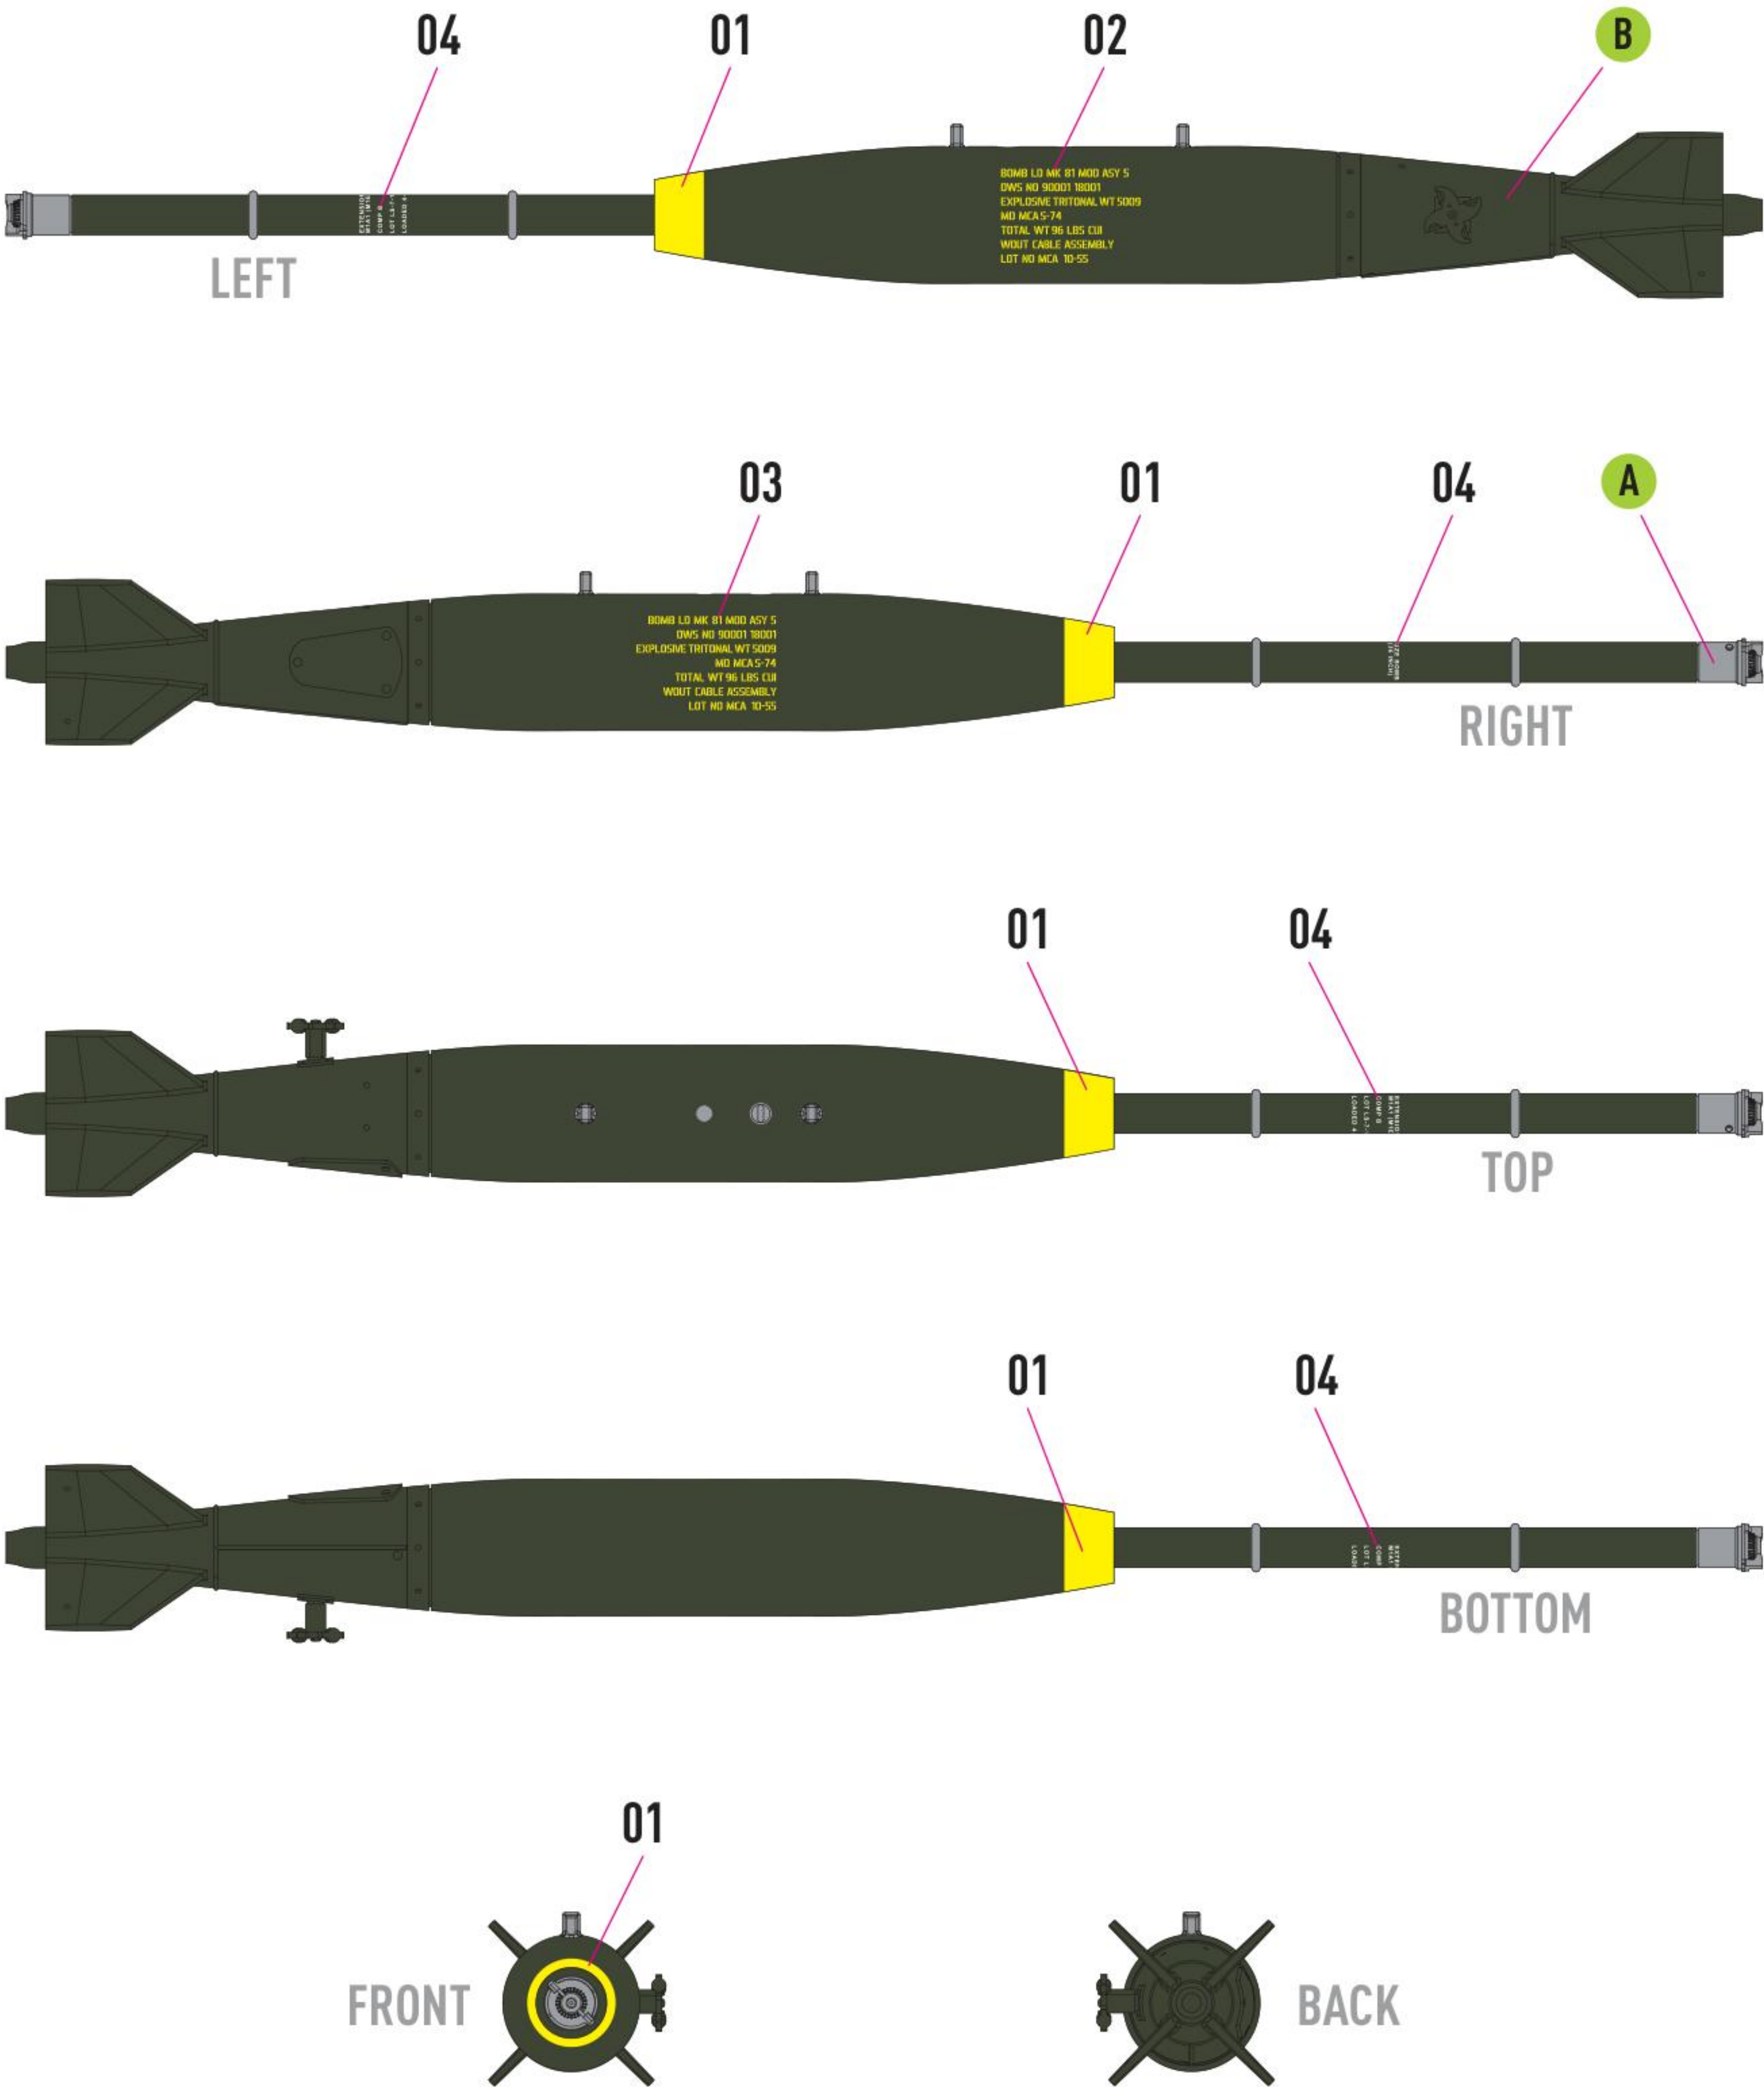

DECALS AND PAINT INSTRUCTION

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
A	SILVER	H8	C8

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
B	OLIVE DRAB	H304	C304