


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

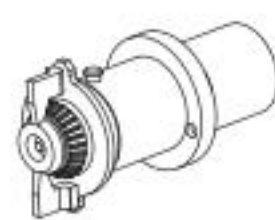

R4 X12




R5 X12




R6 X12


DETAILS AFTER REMOVAL FROM SUPPORTS

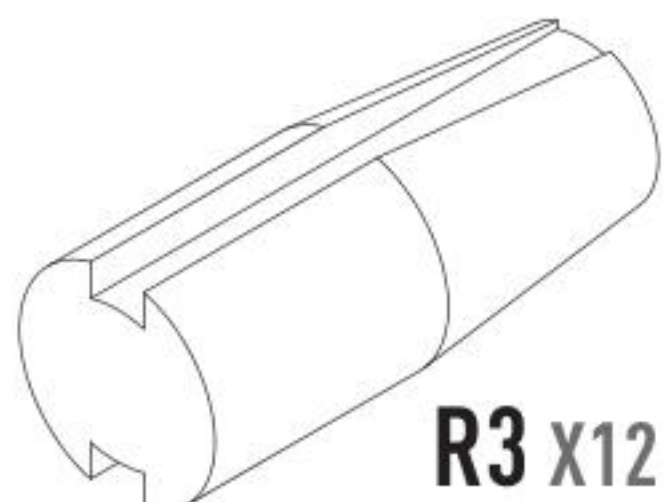

R3 X12

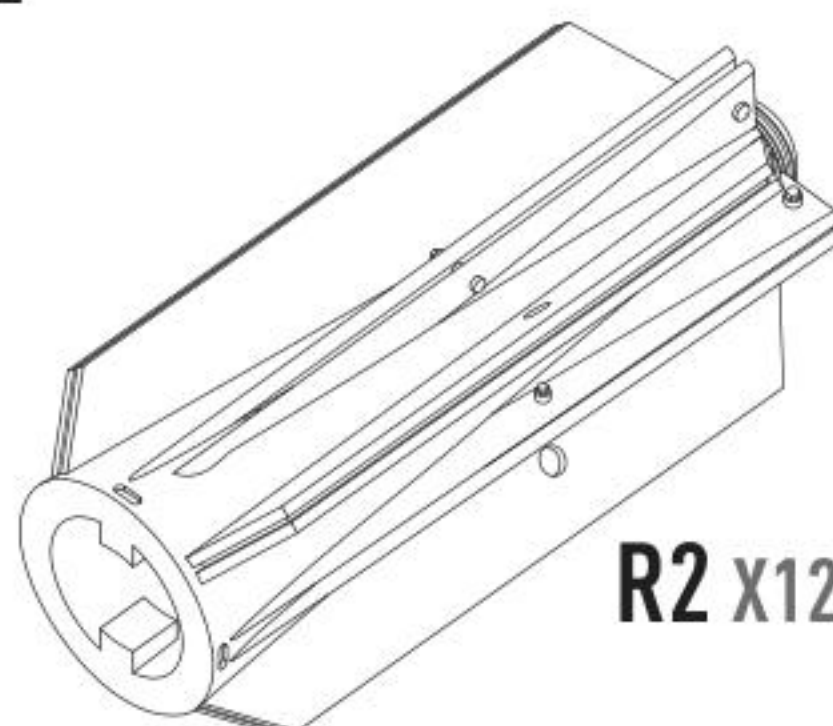


R2 X12

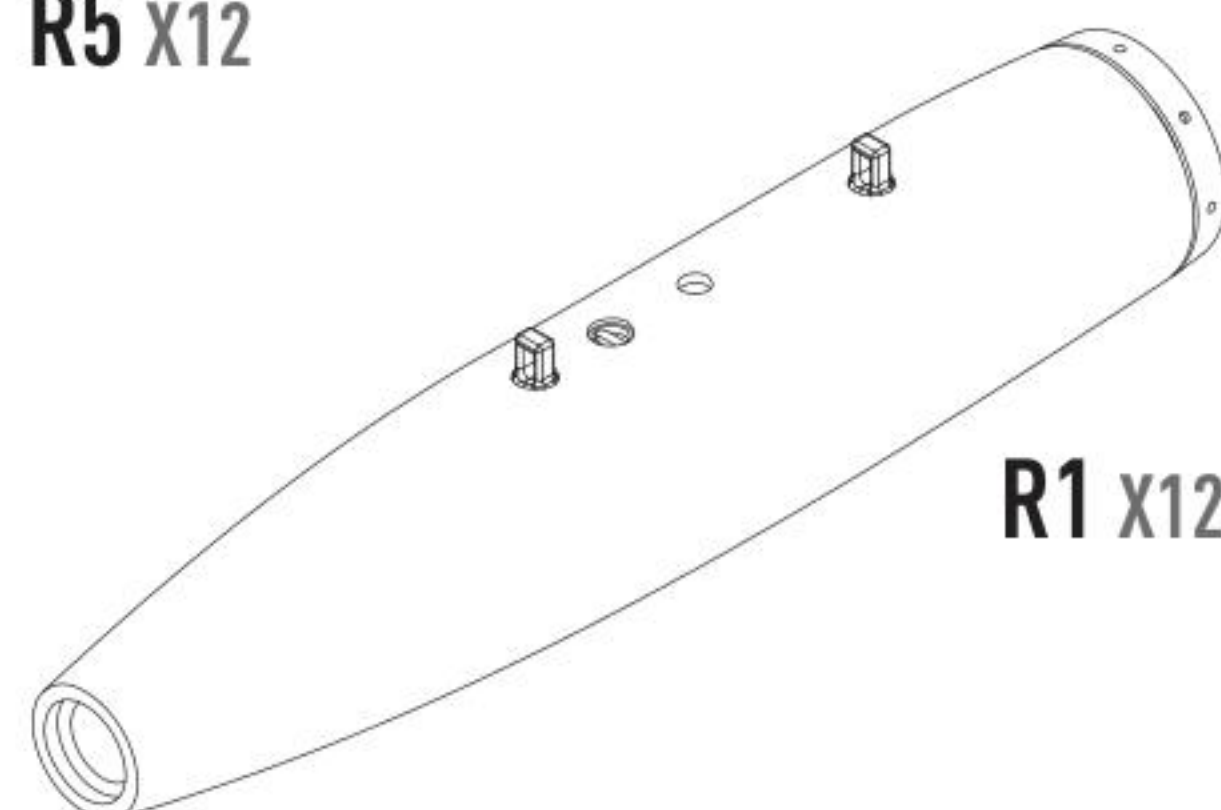






R1 X12

1 X12

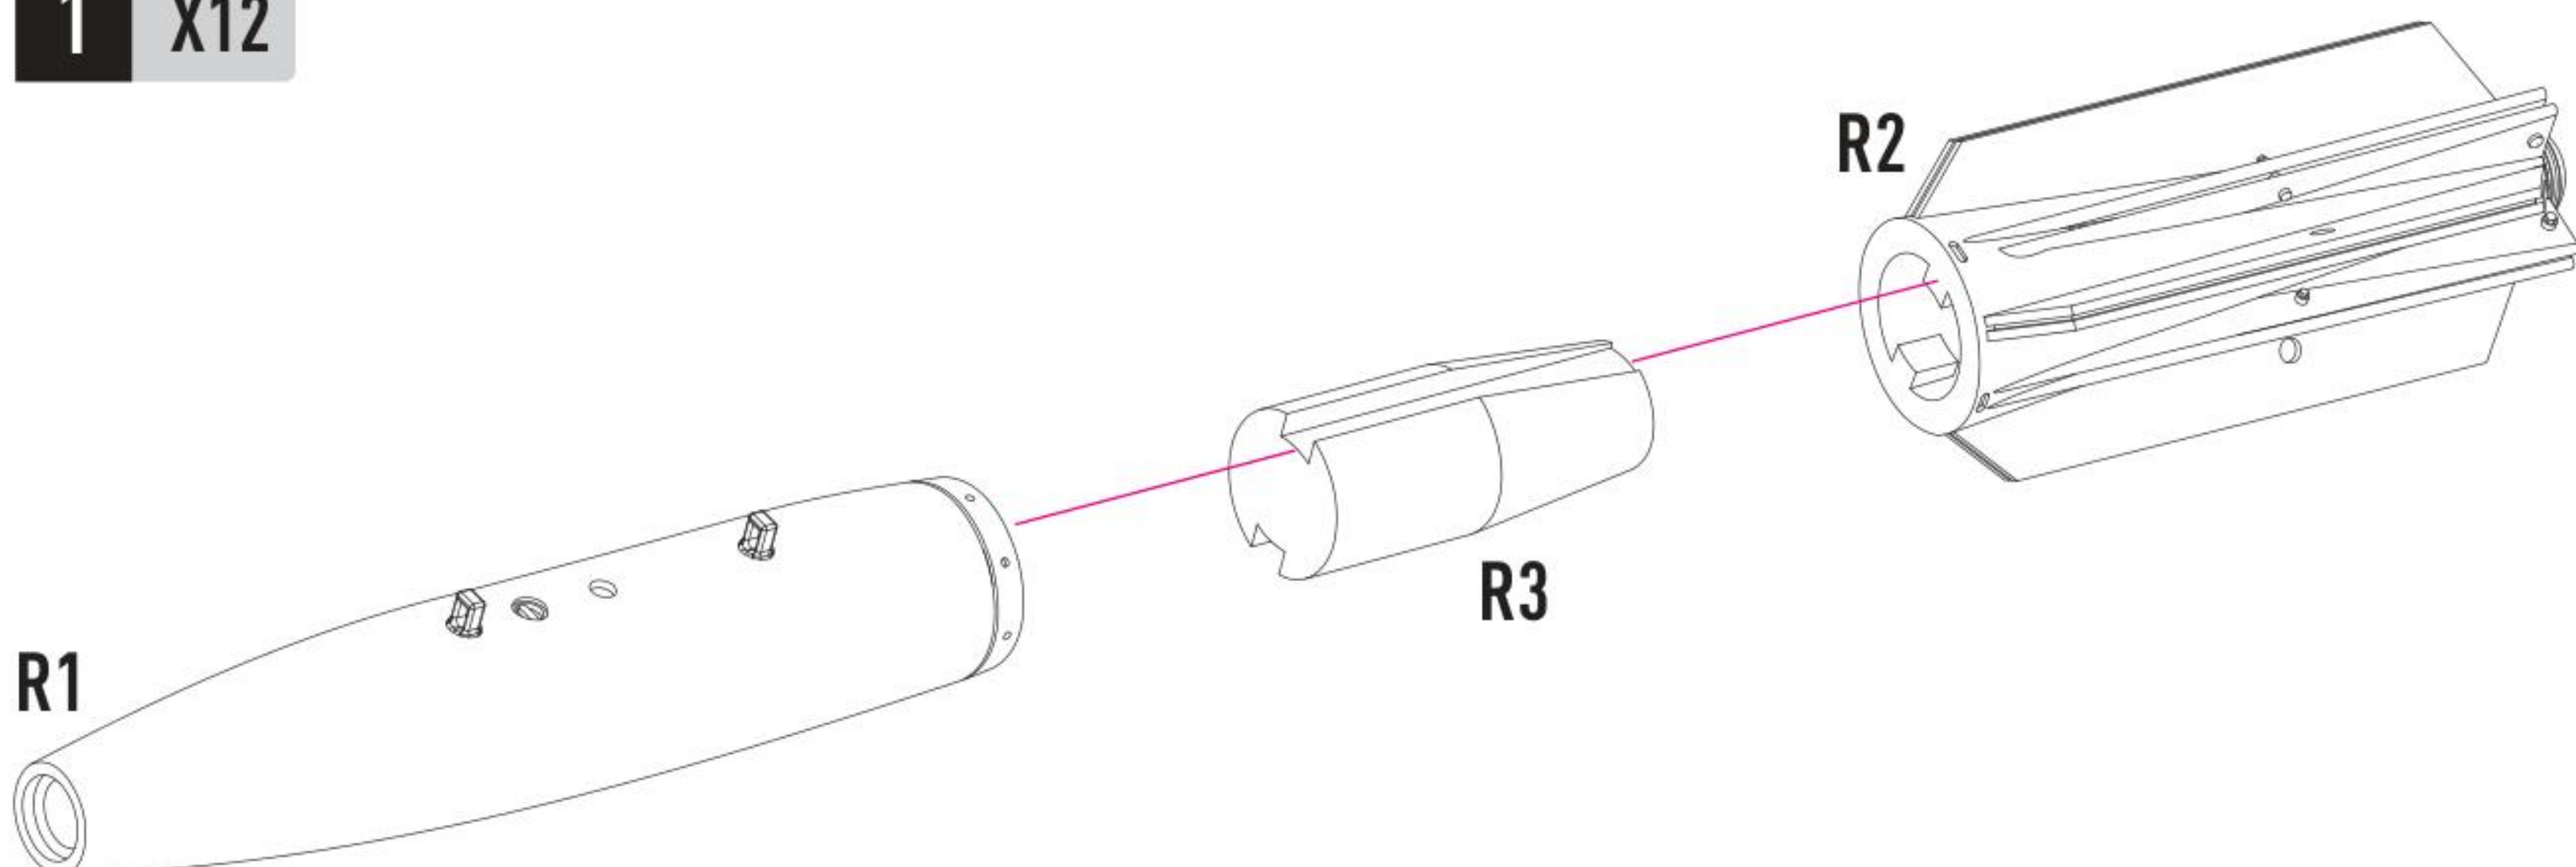

2 X12

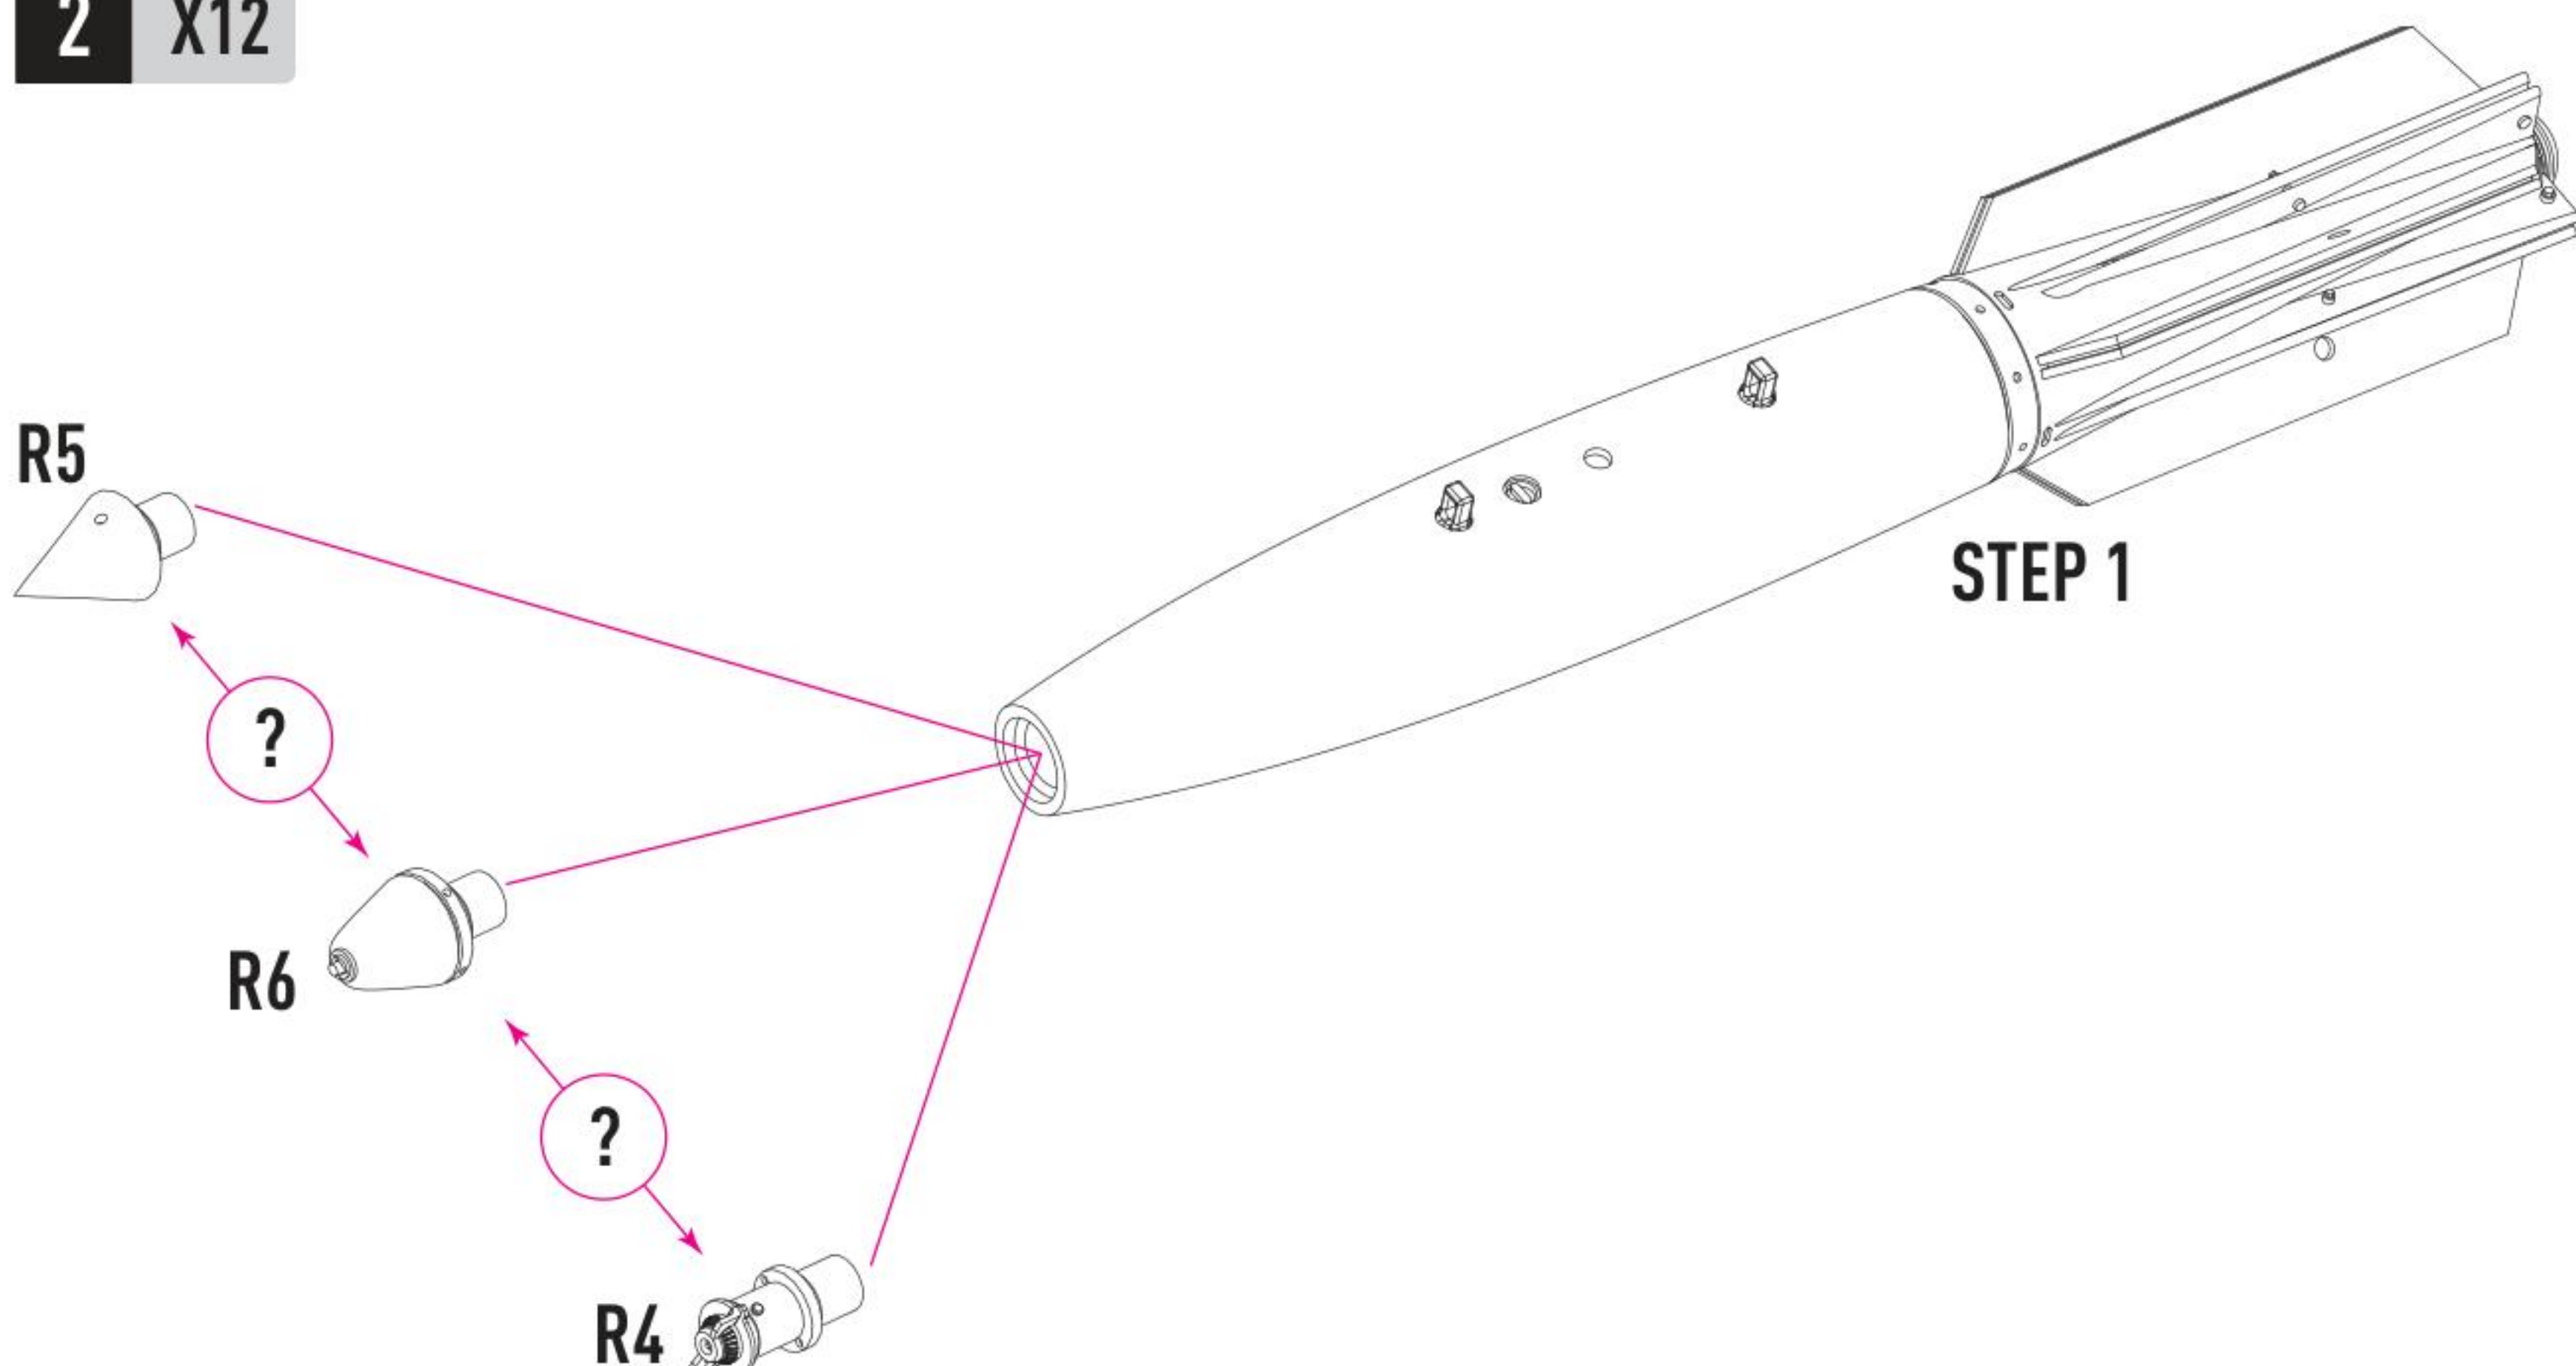

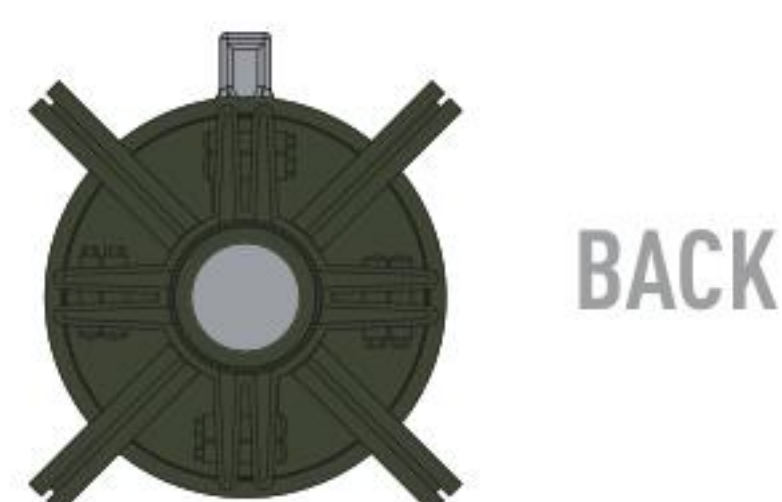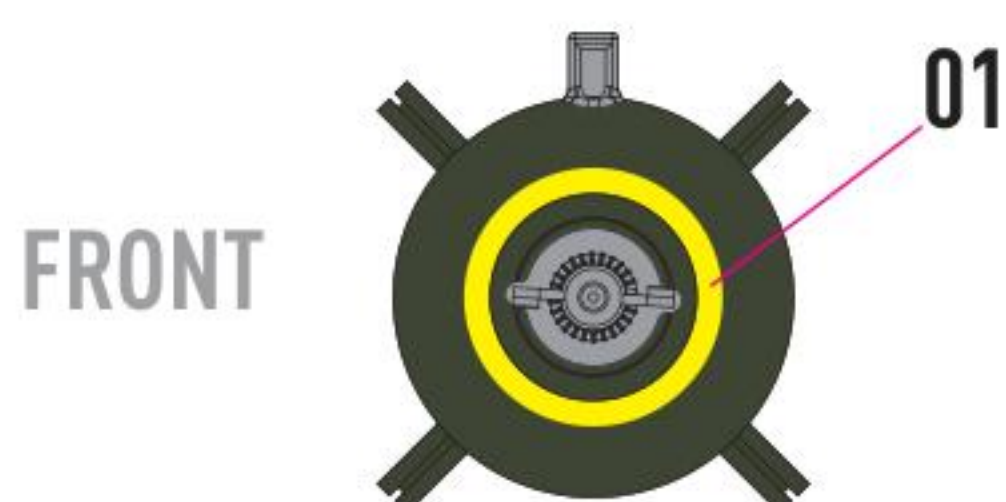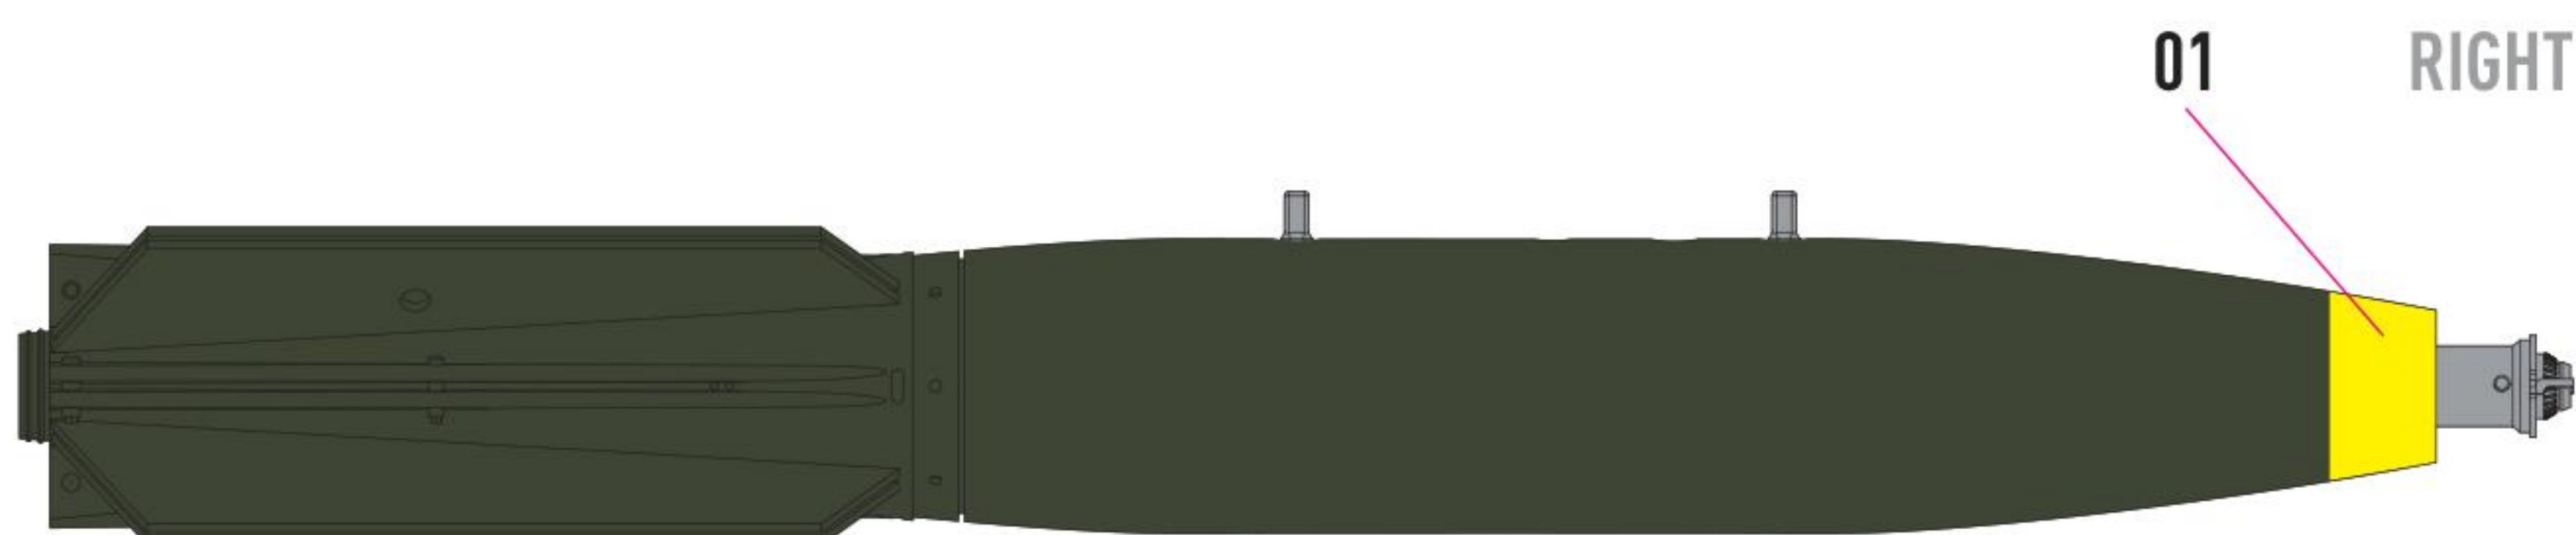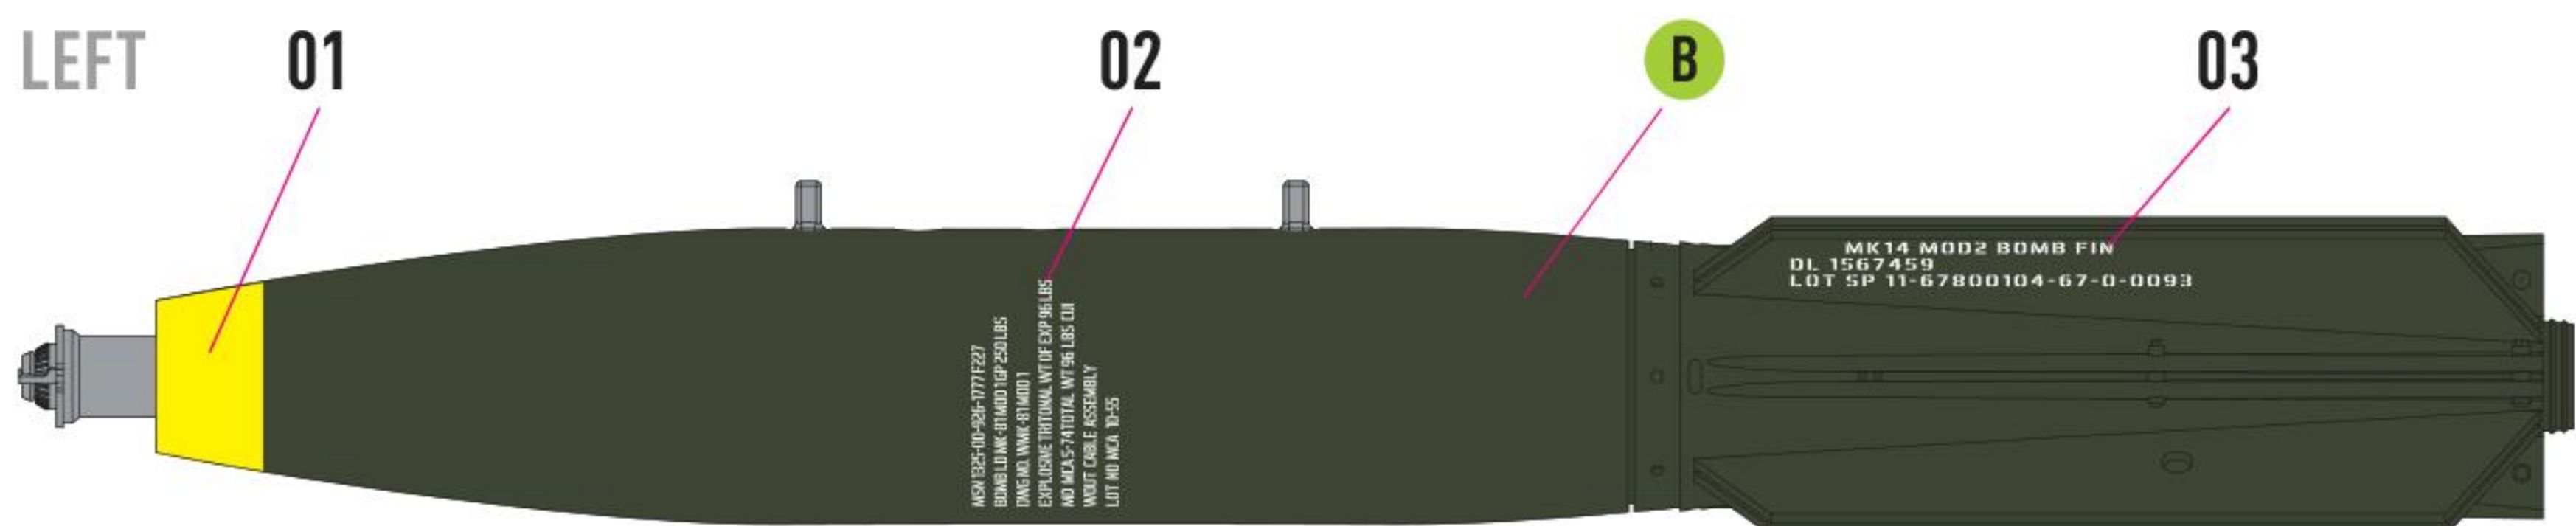

DECALS AND PAINT INSTRUCTION

#	COLOR	GUNZE / AQUEOUS	GUNZE / MR.COLOR
A	SILVER	H8	C8

#	COLOR	GUNZE / AQUEOUS	GUNZE / MR.COLOR
B	OLIVE DRAB	H304	C304

general issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official

 [instagram.com/reskit_official](https://www.instagram.com/reskit_official)

 youtube.com/@reskit-usmd