


**DETAILS AFTER REMOVAL
 FROM SUPPORTS**


USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS

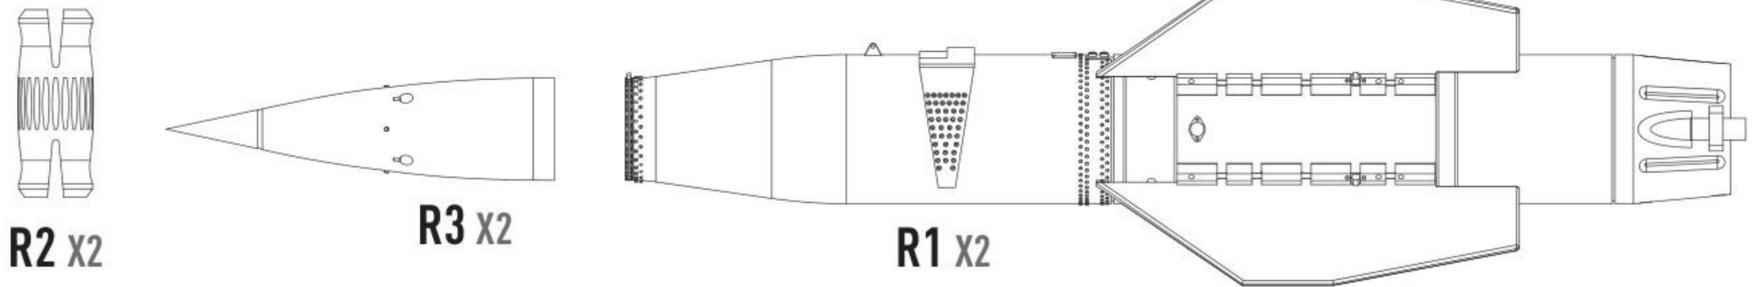


R4 X8






1 X2

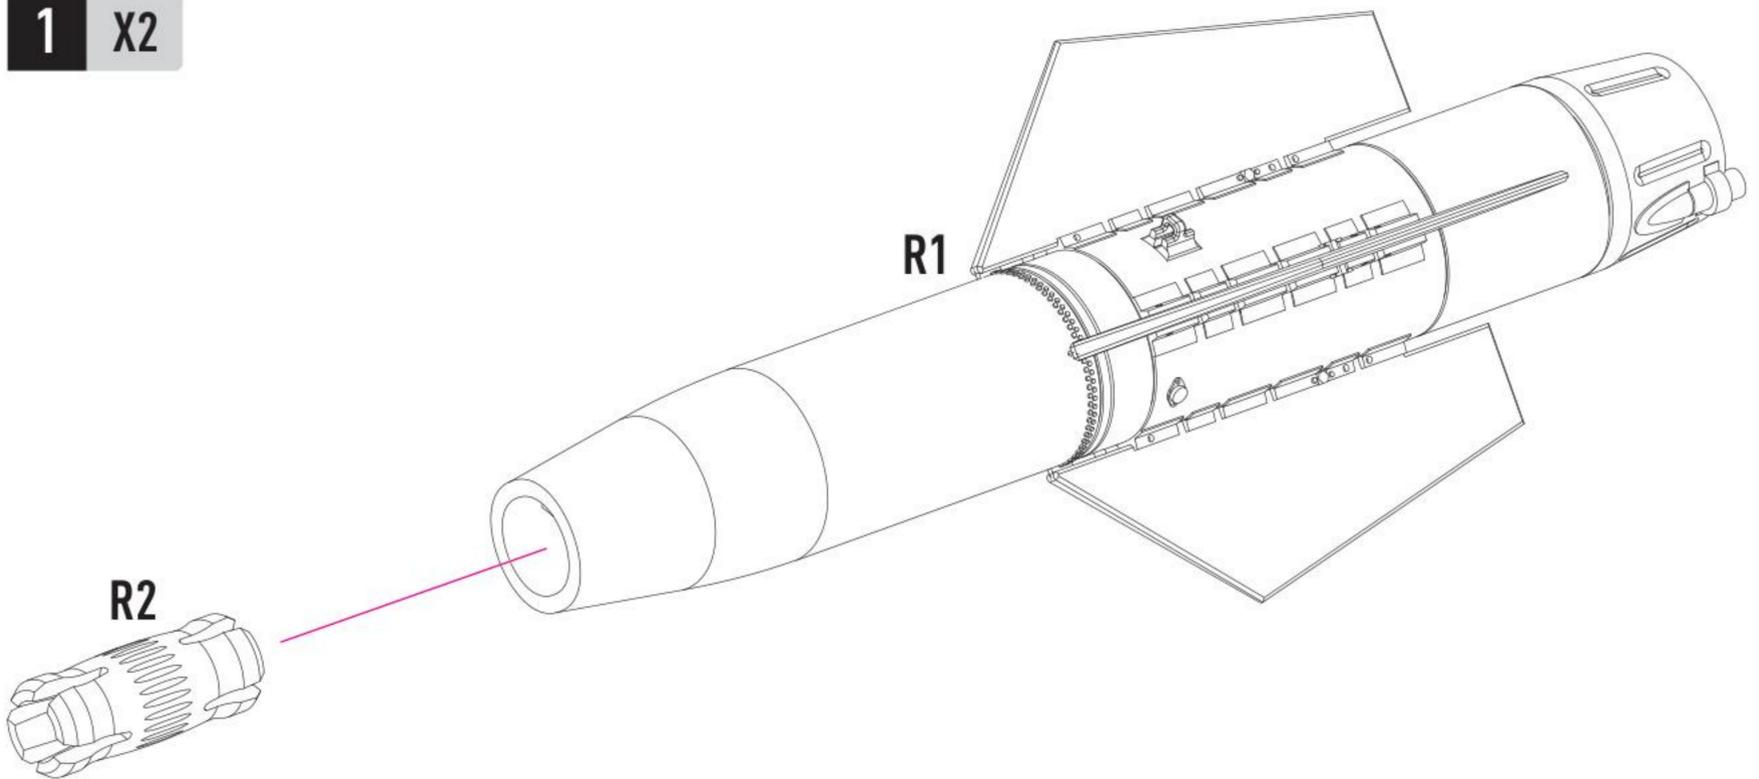

2 X2

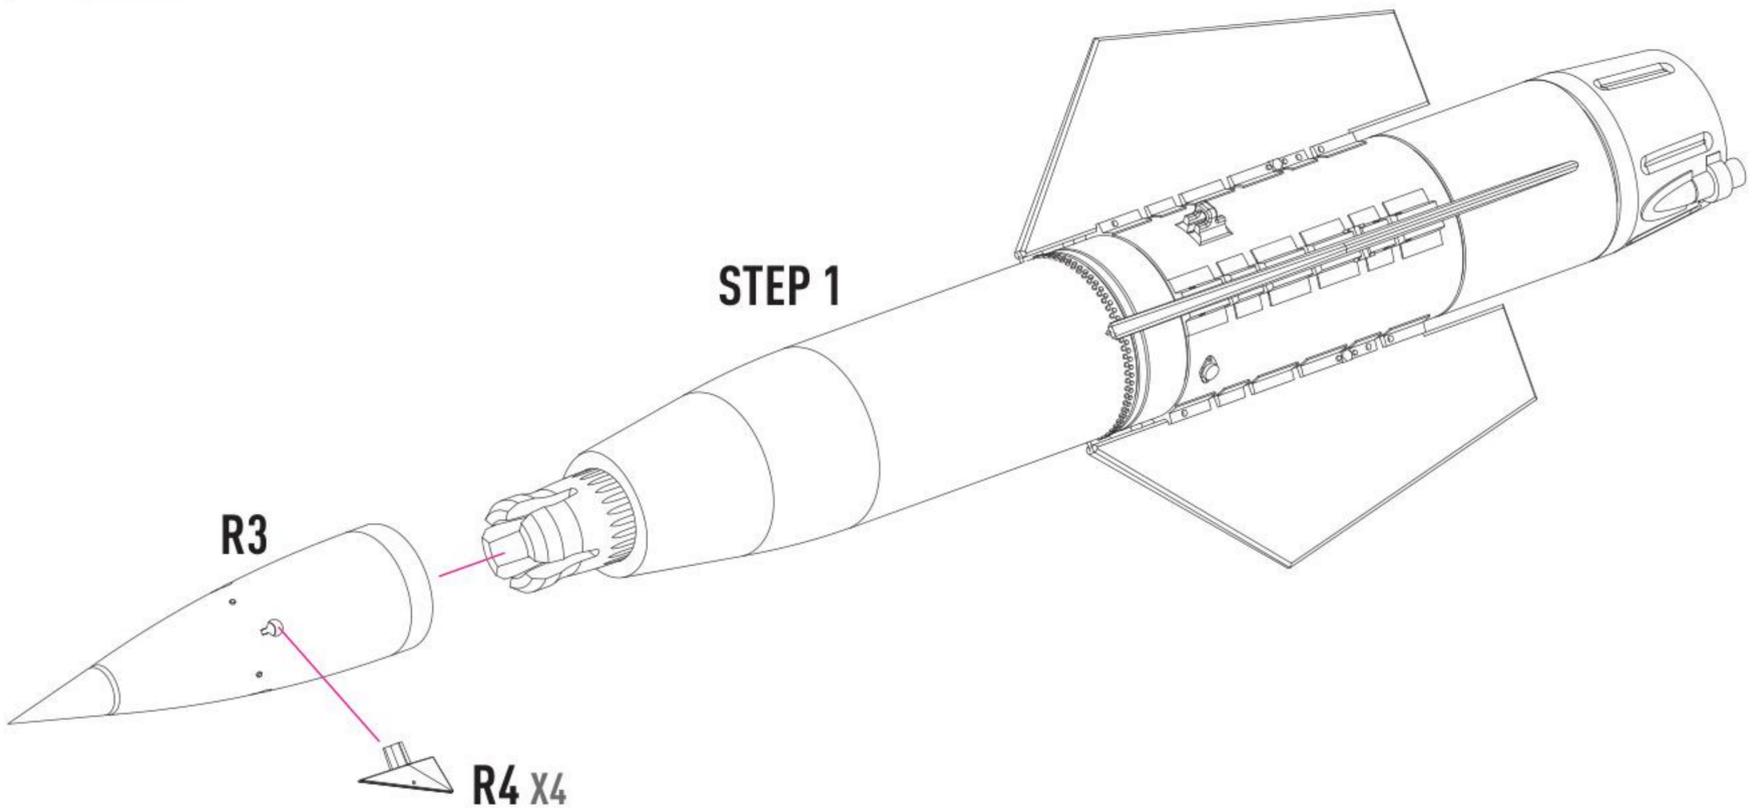

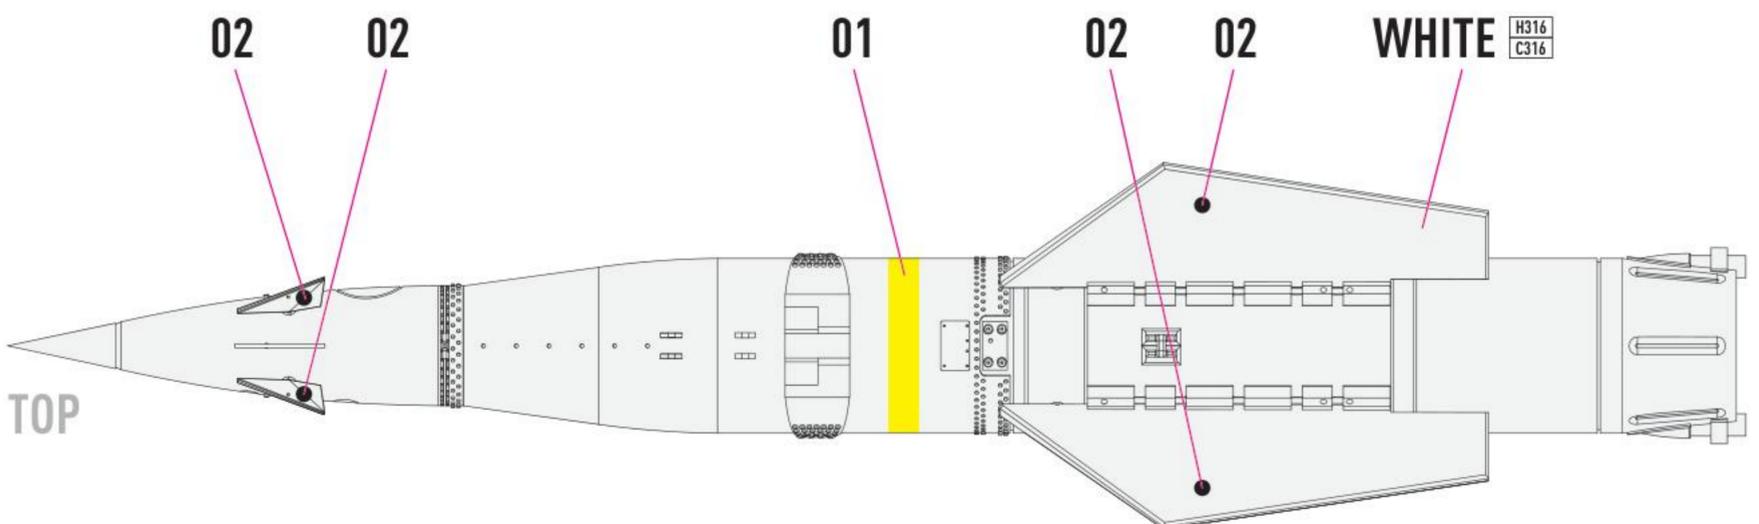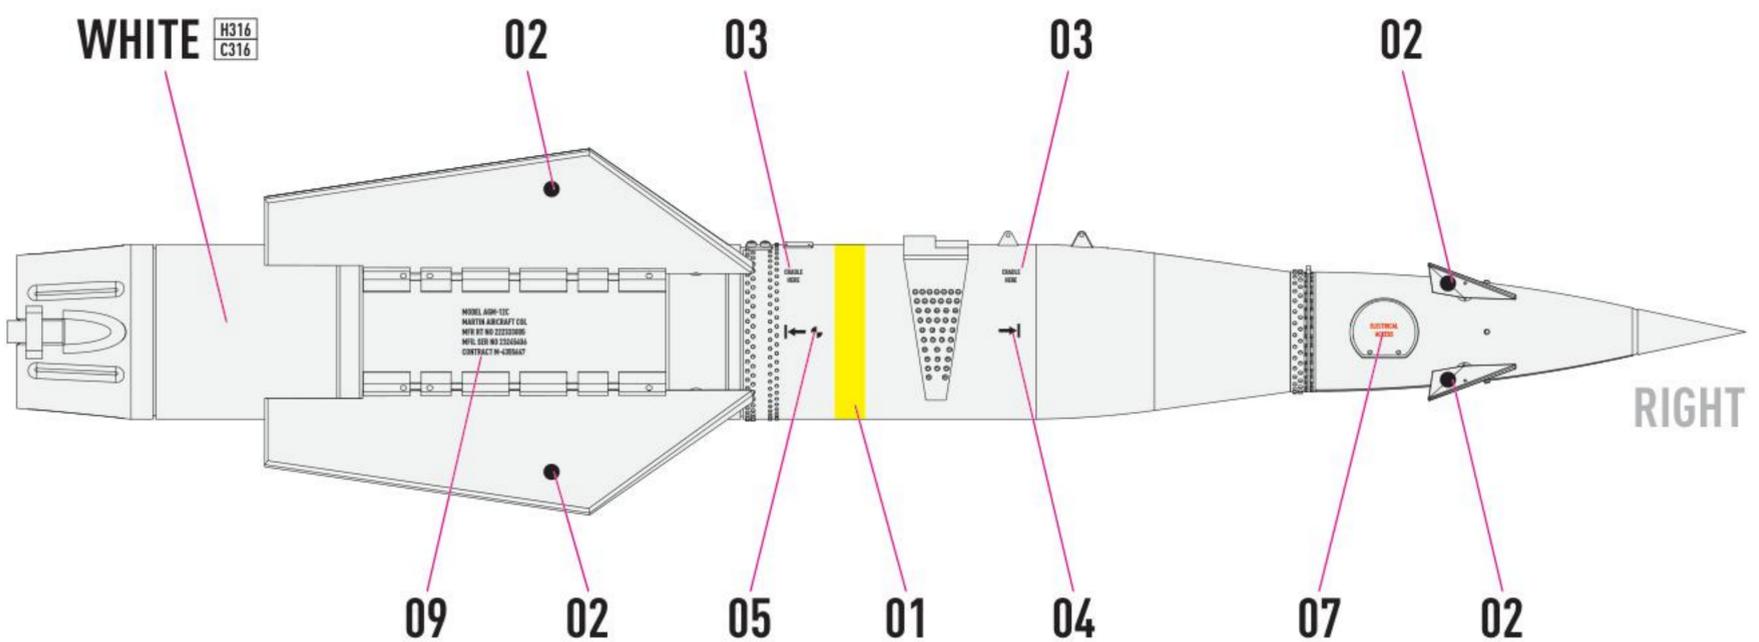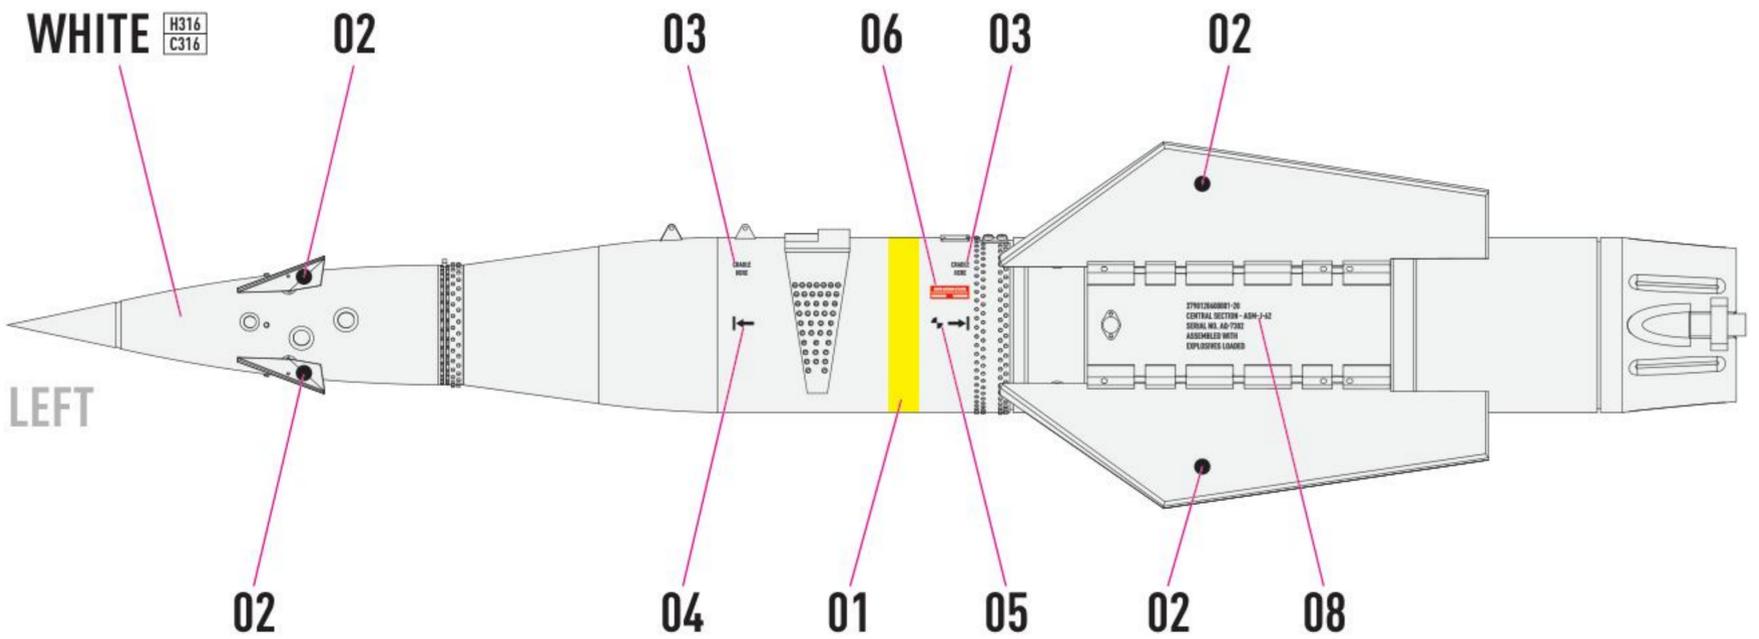

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
WHITE	H316	C316