



## CUT

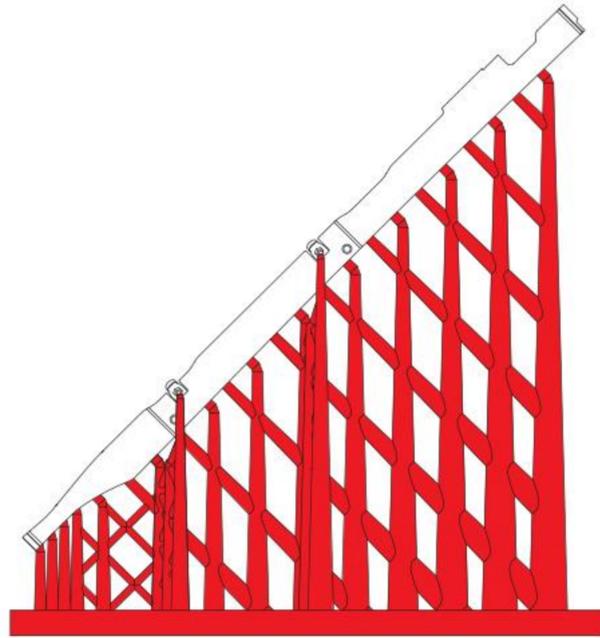


R1



USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

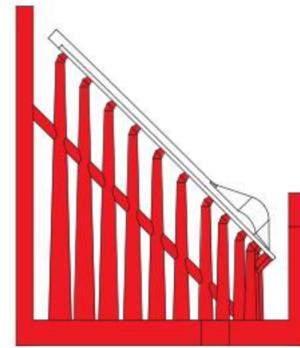


R2

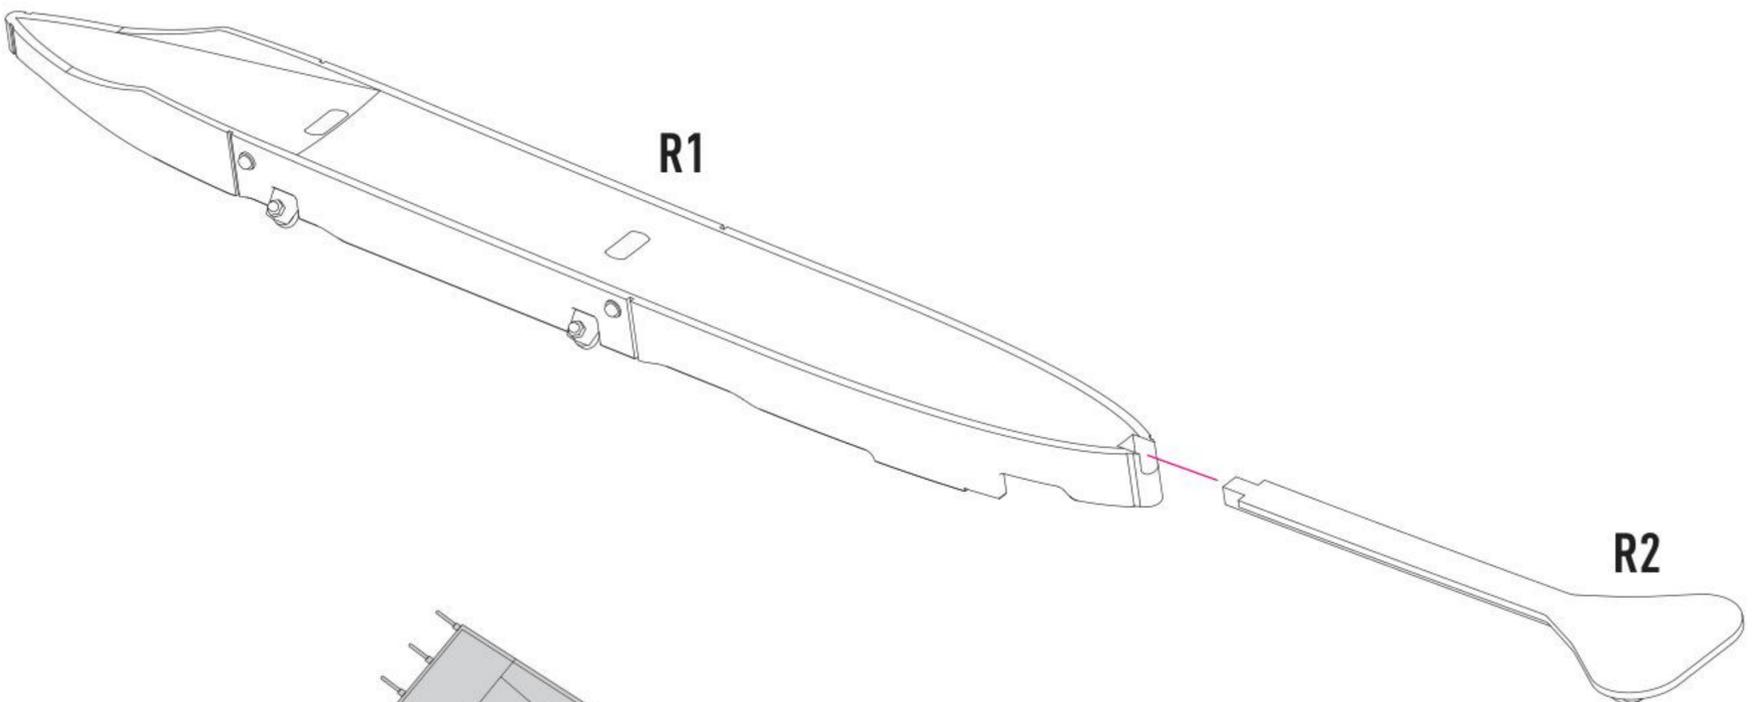

R1

R2

## BOTTOM VIEW PYLON LOCATION

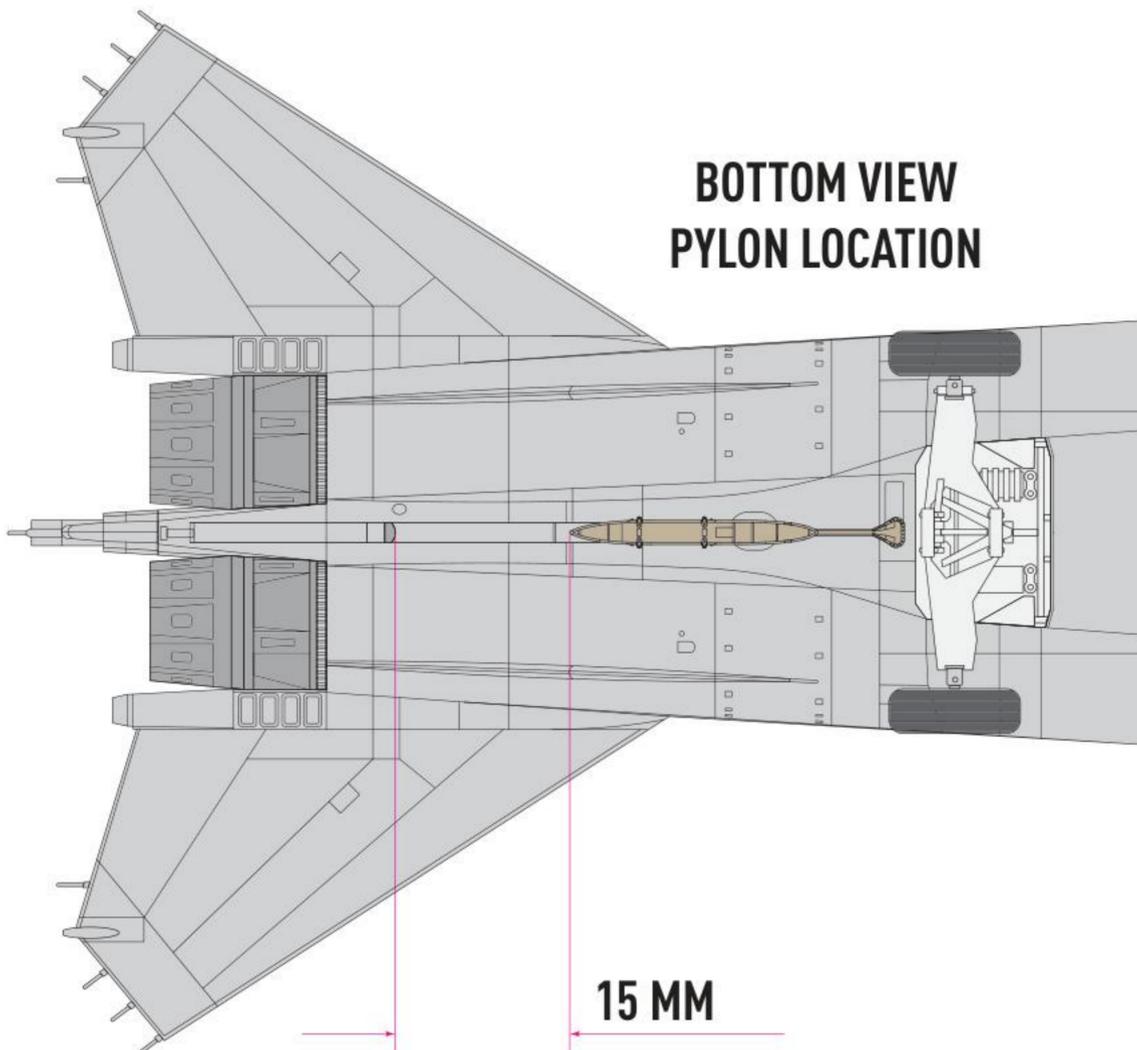

15 MM