

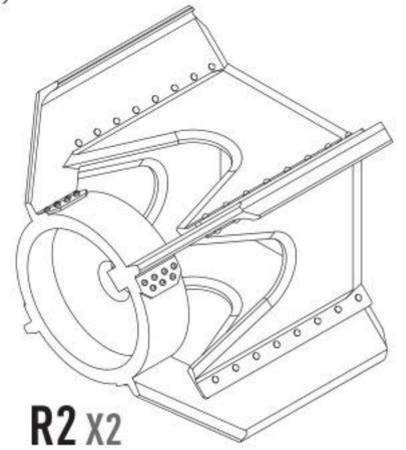


USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
 FROM SUPPORTS**

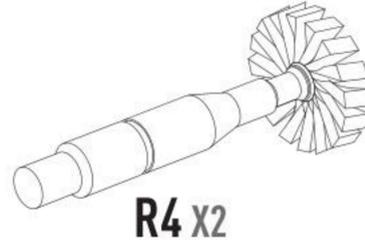


**CUT THE ELEMENT
 FOR A DIFFERENT ANGLE**



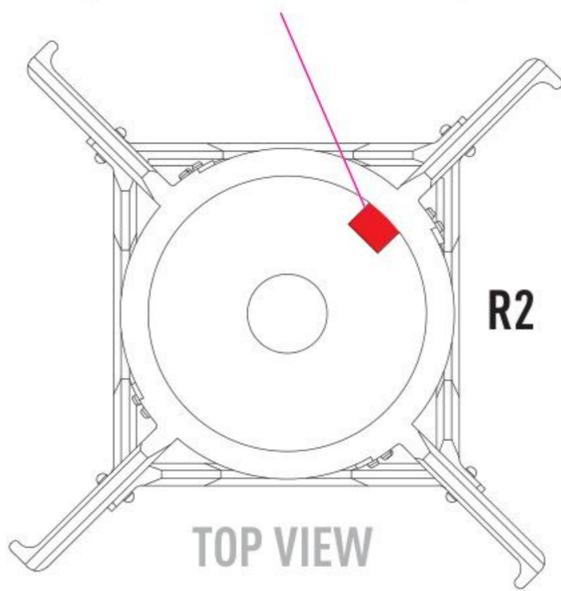


1 X2

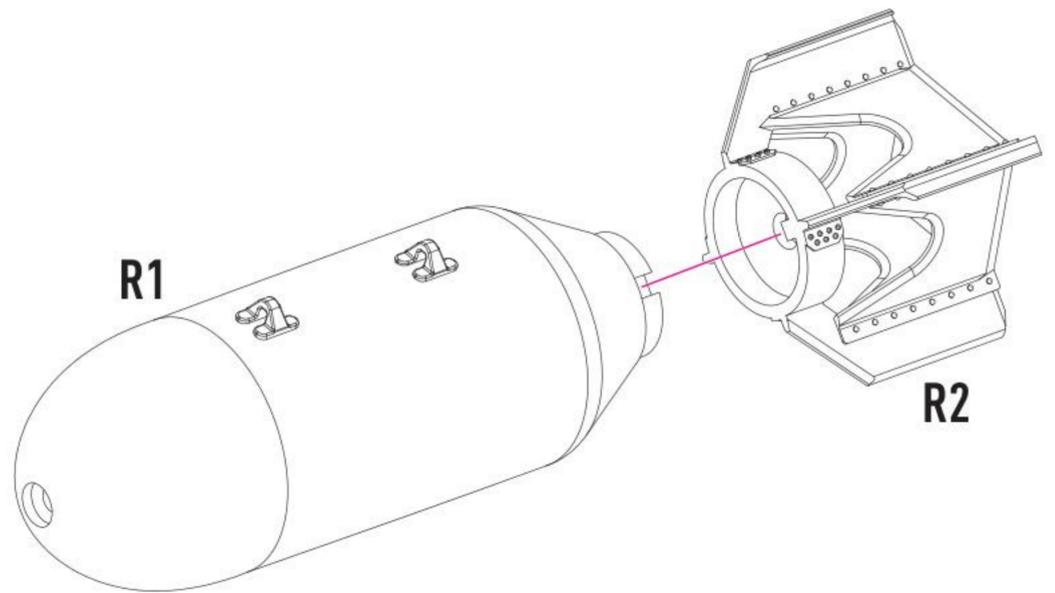

2 X2

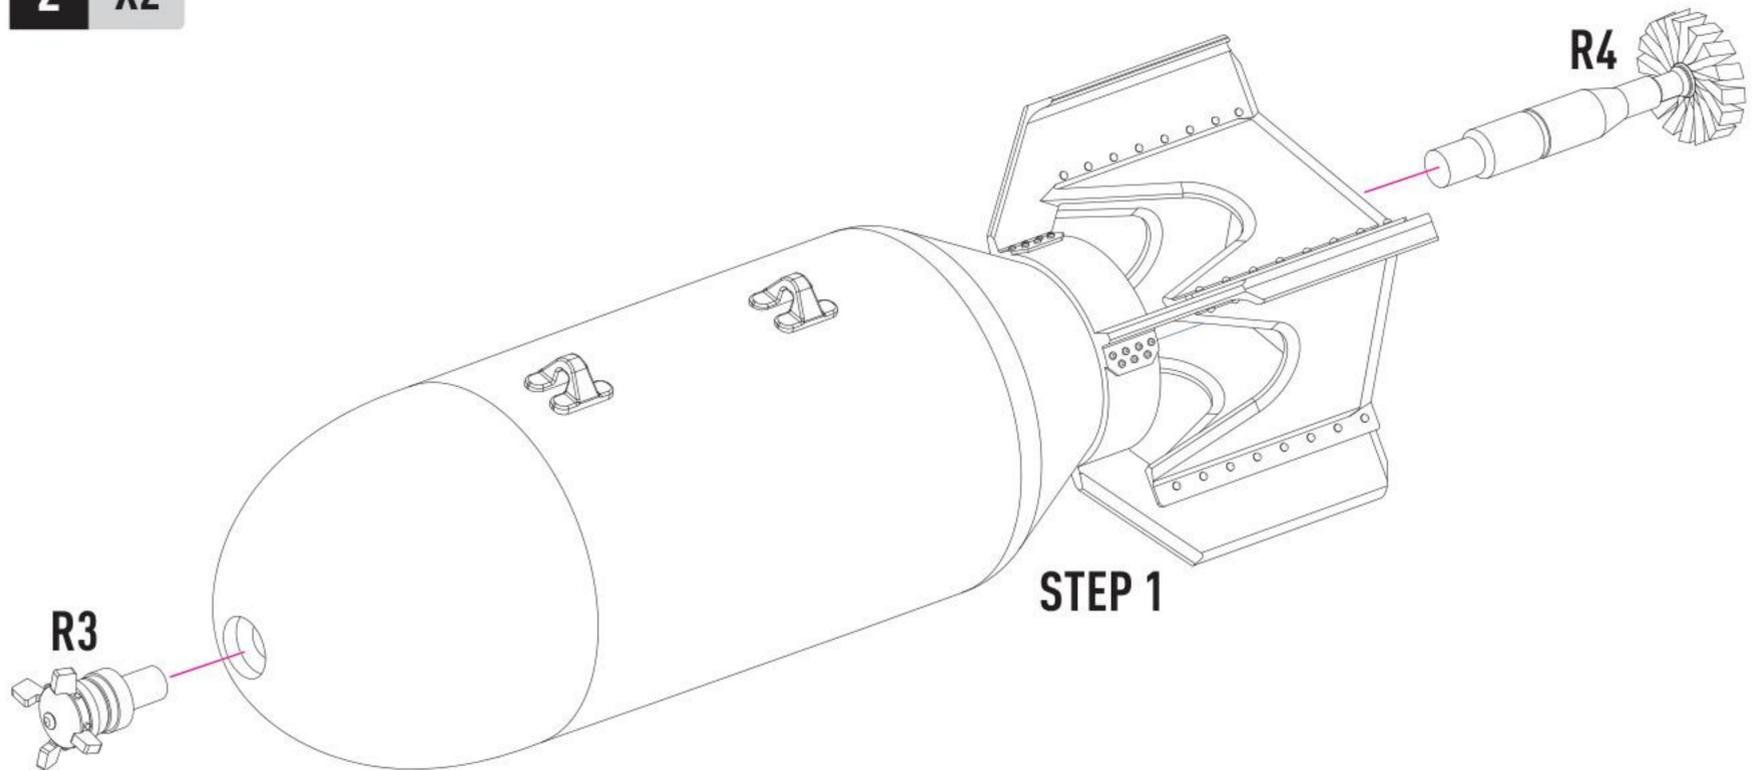

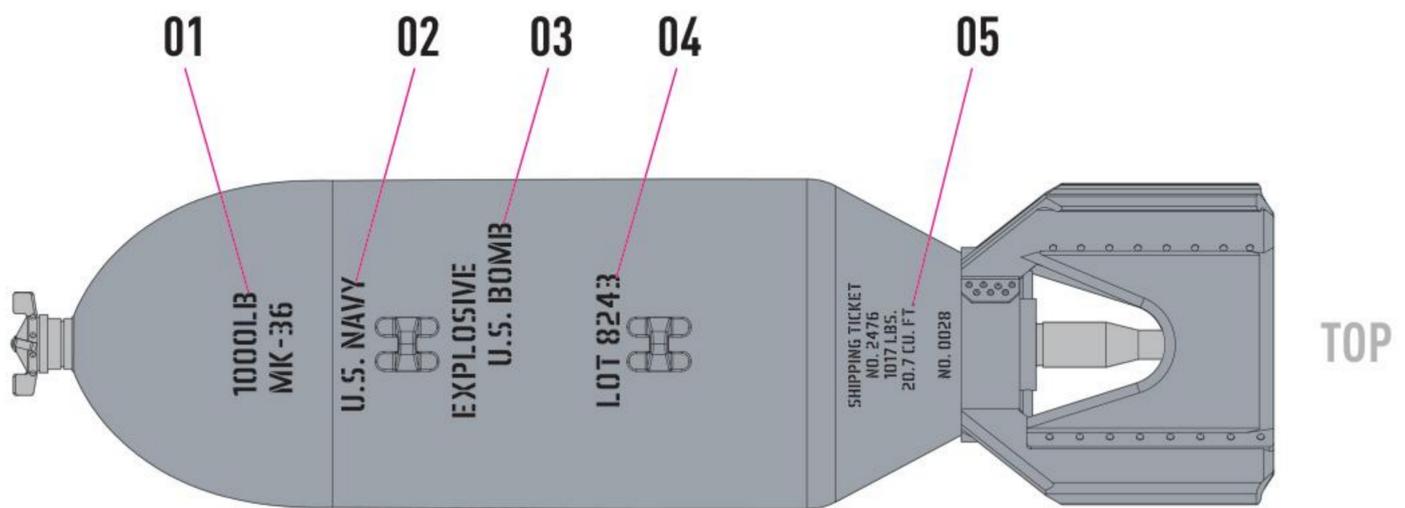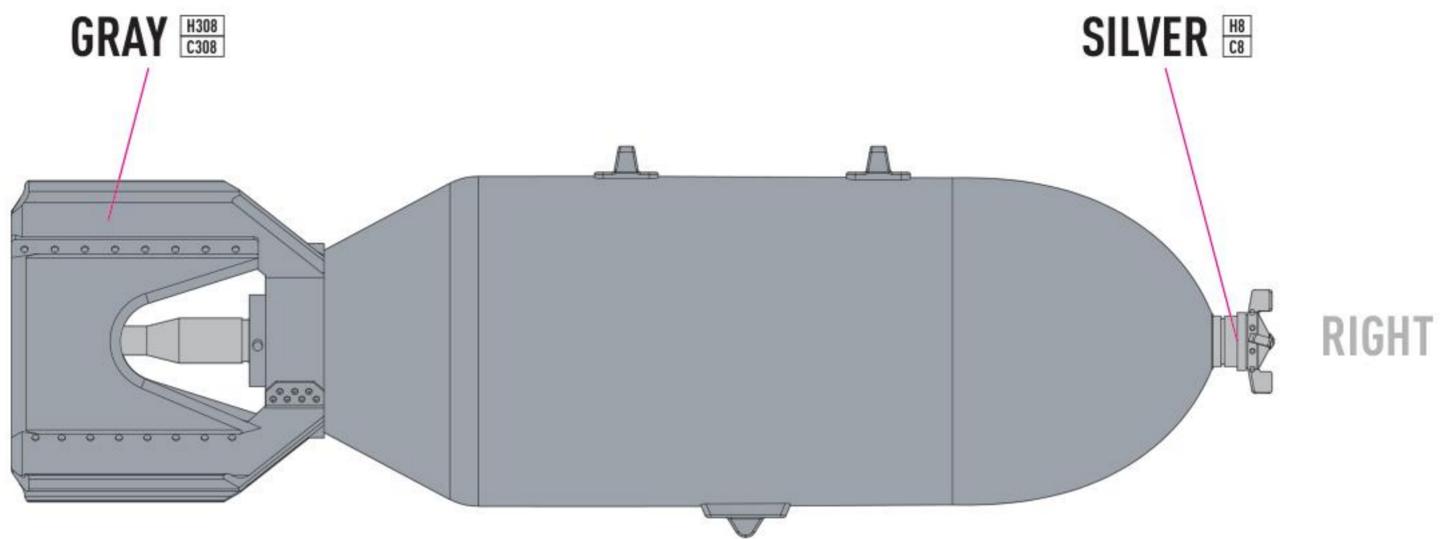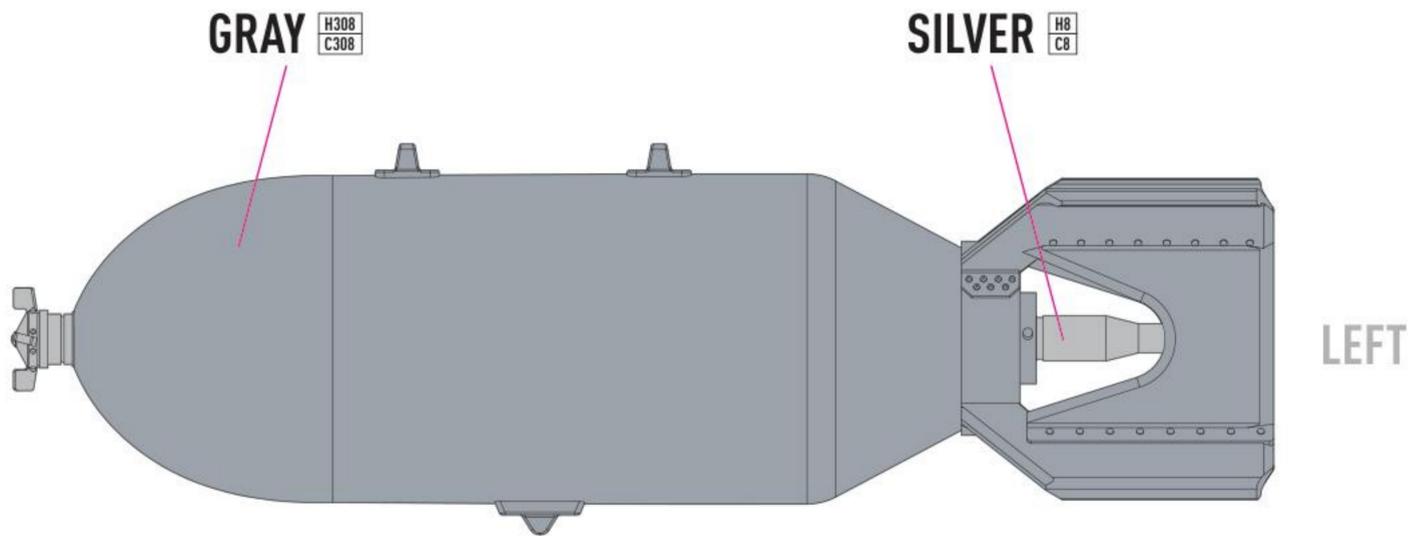

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SILVER	H8	C8