





USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL  
FROM SUPPORTS**

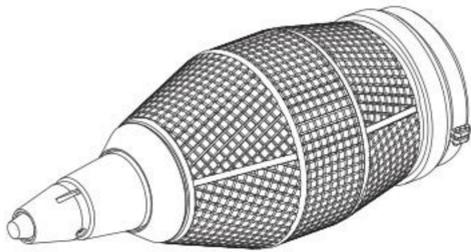

**R4 X2**

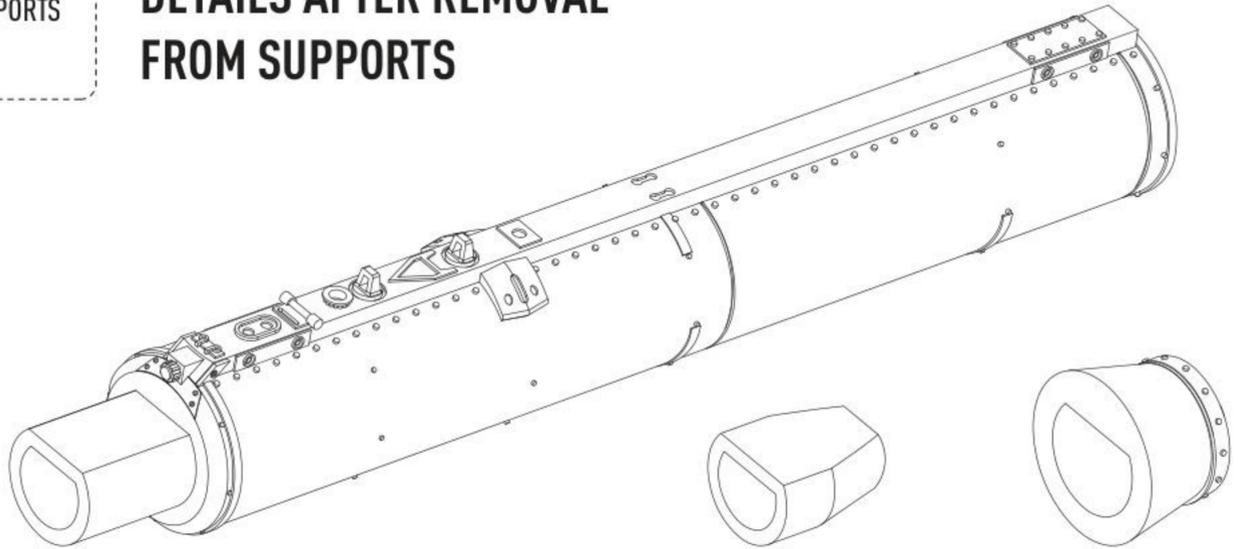

**R1 X2**

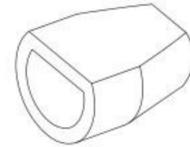


**R2 X2**







**R3 X2**

**1 X2**

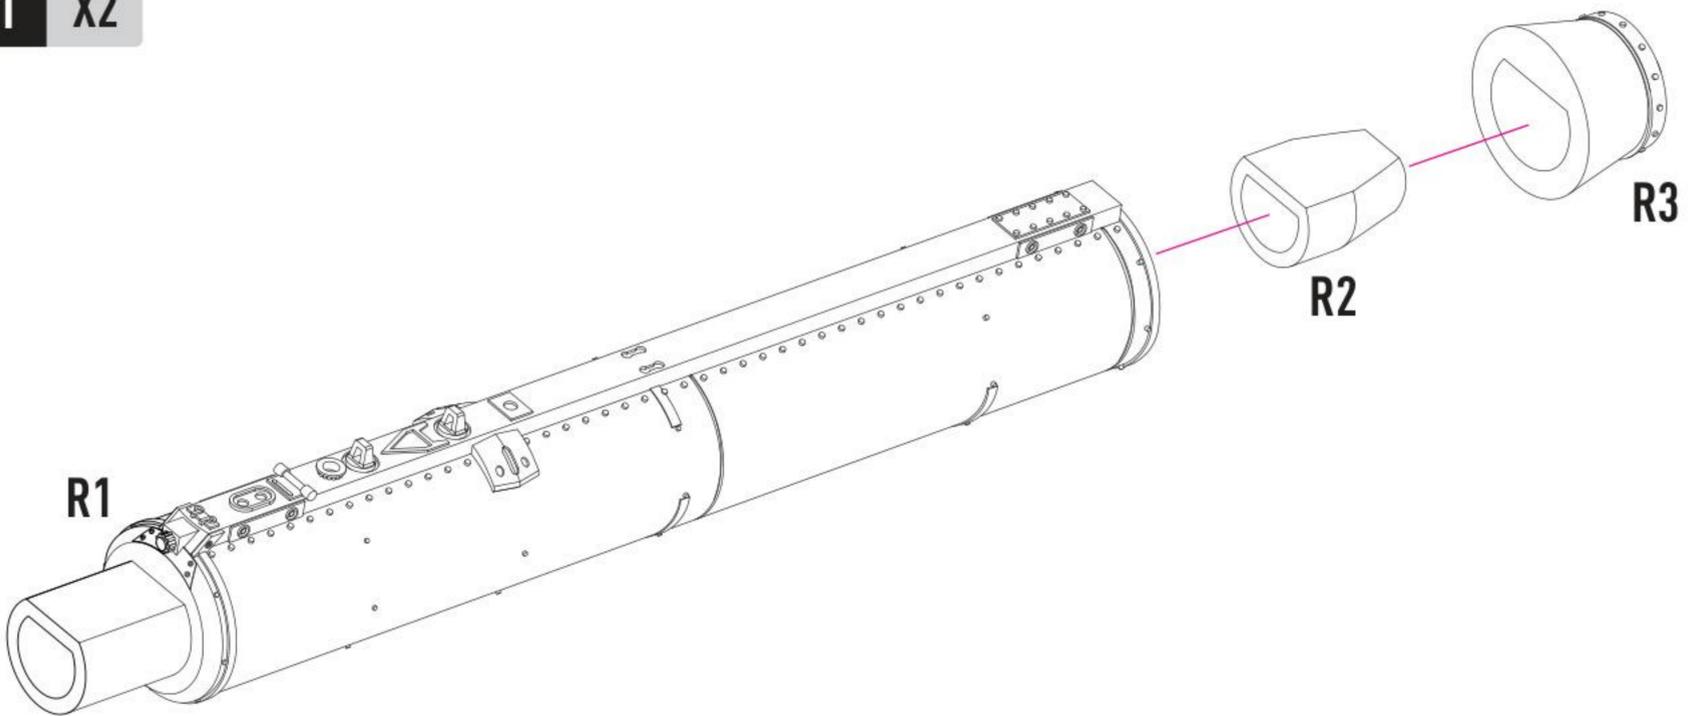

**2 X2**

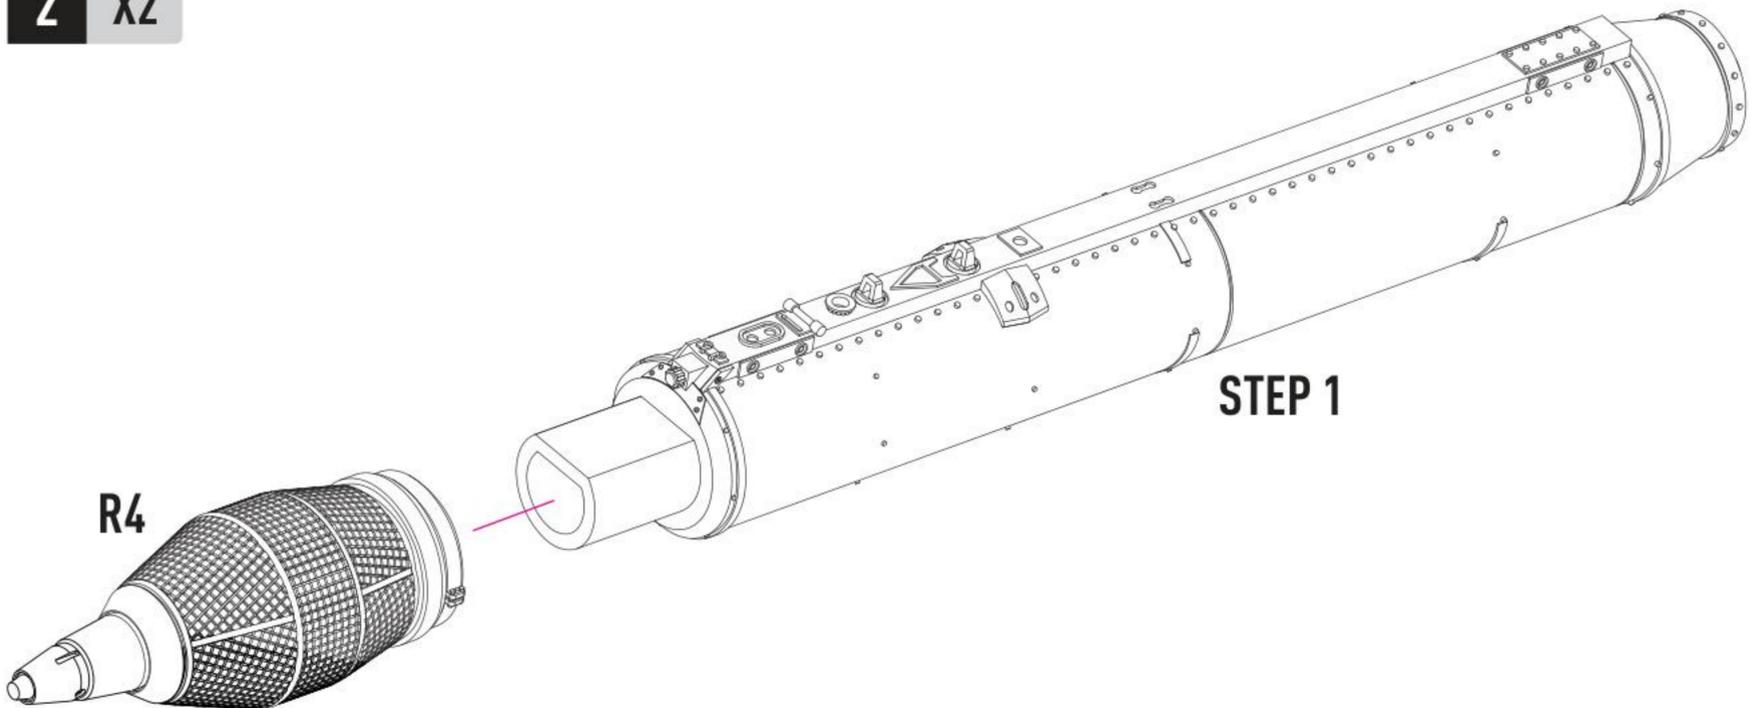

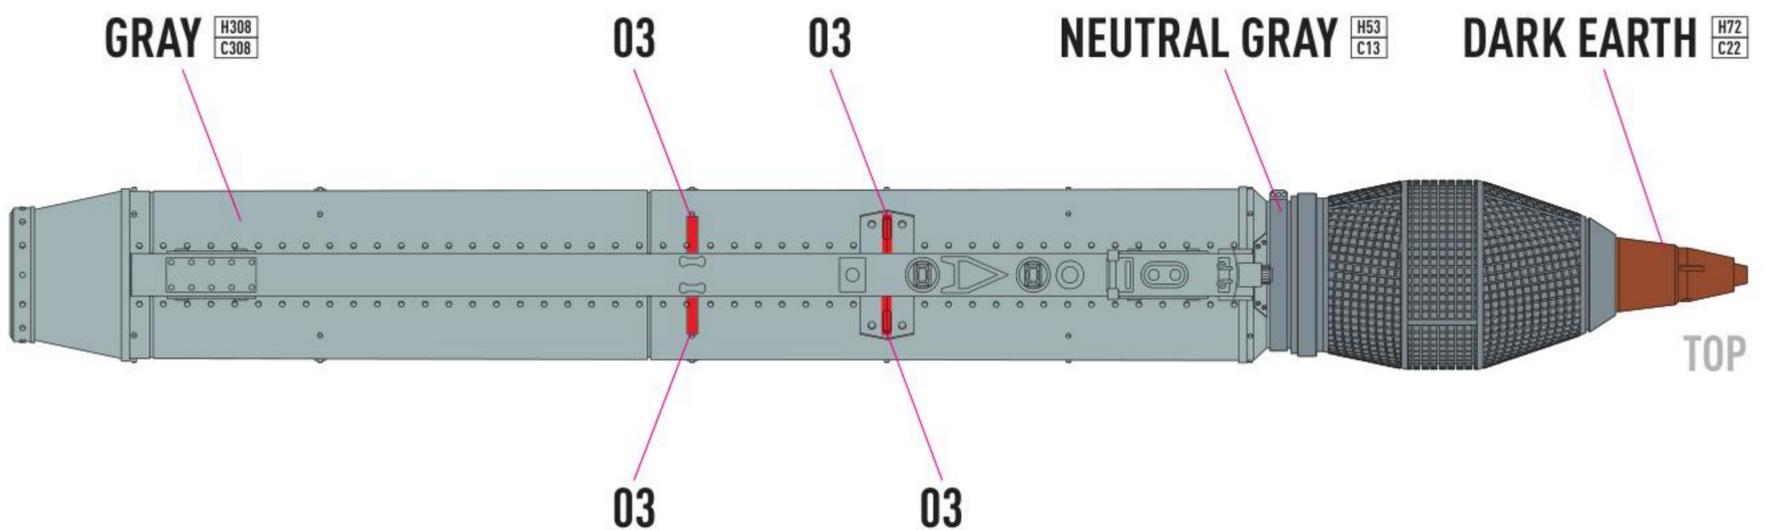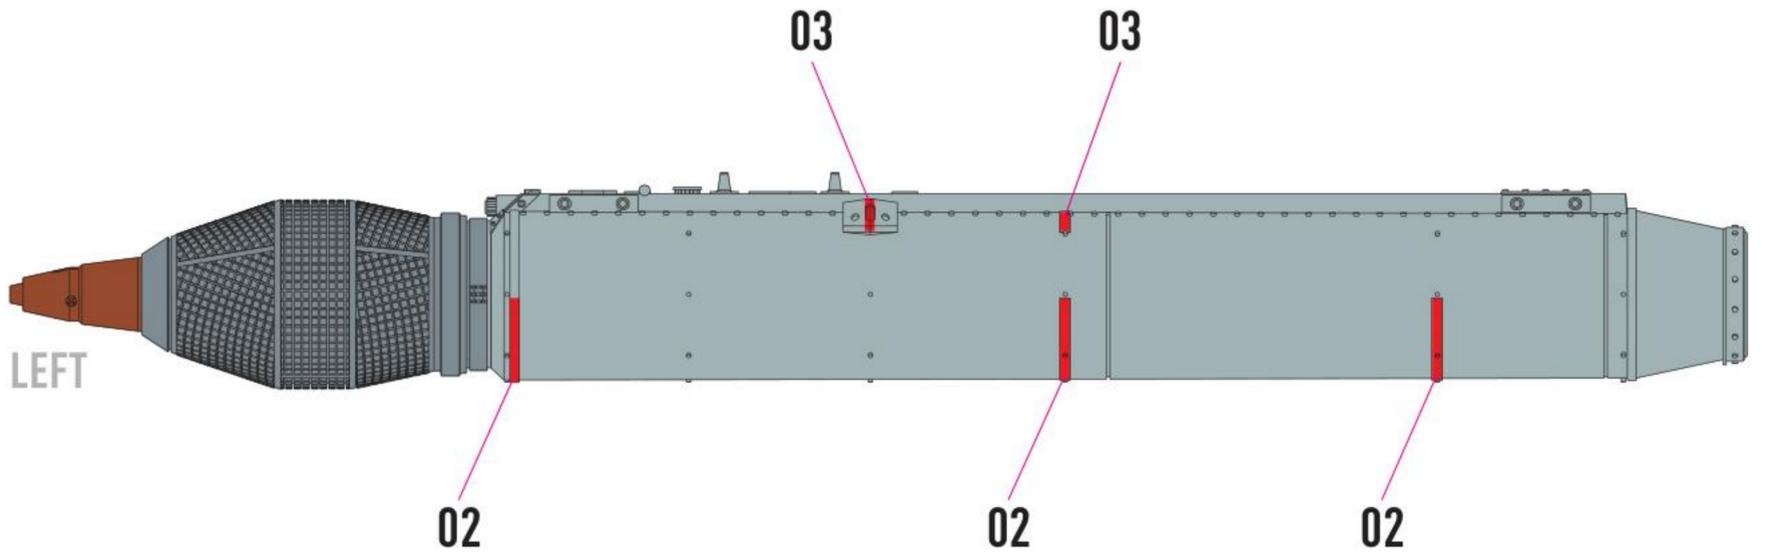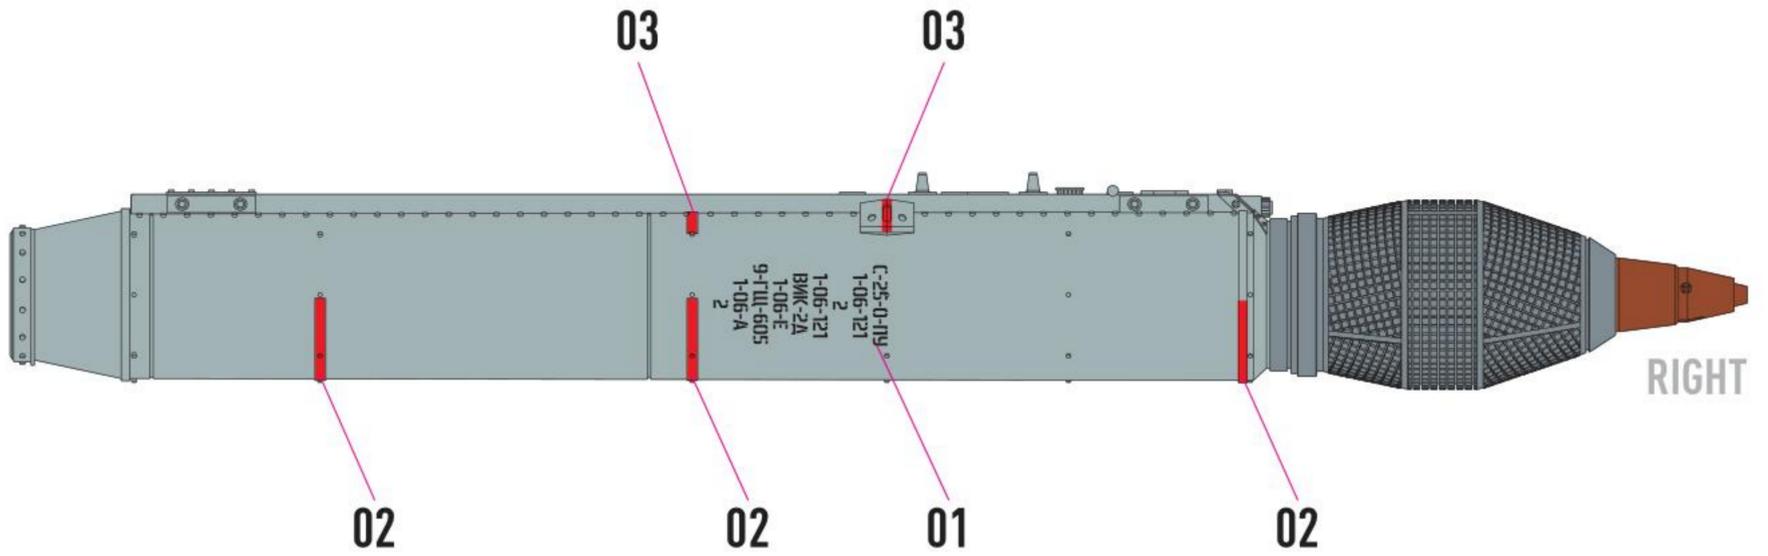

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
DARK EARTH	H72	C22
NEUTRAL GRAY	H53	C13