



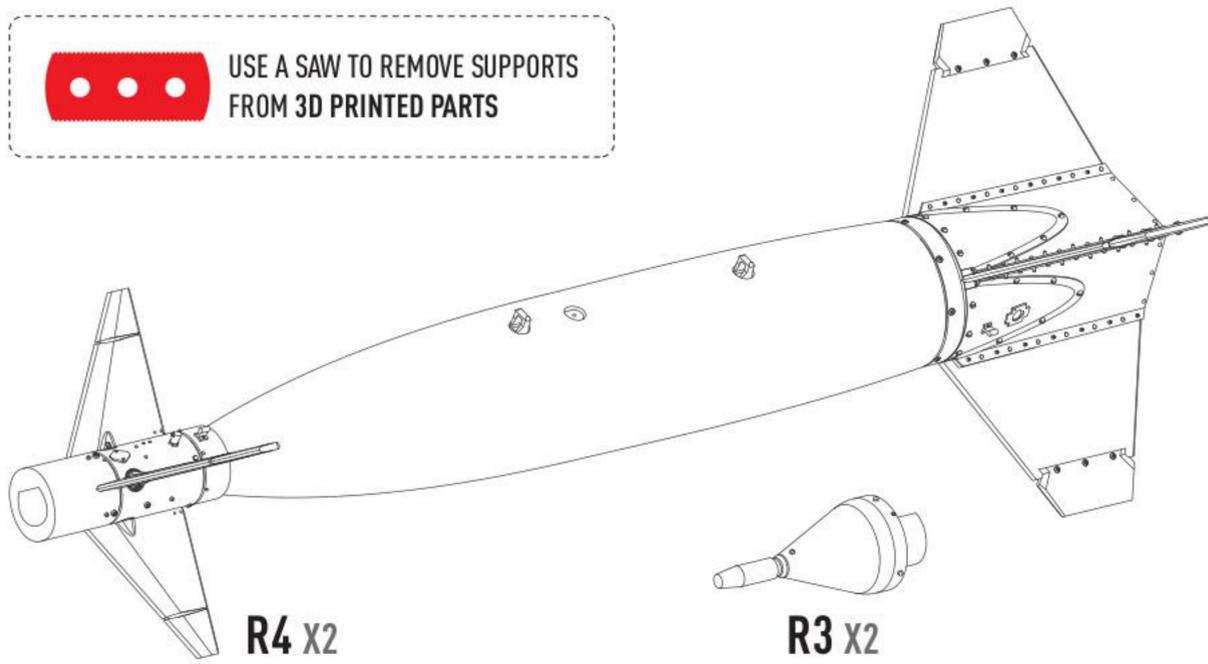


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




DETAILS AFTER REMOVAL FROM SUPPORTS



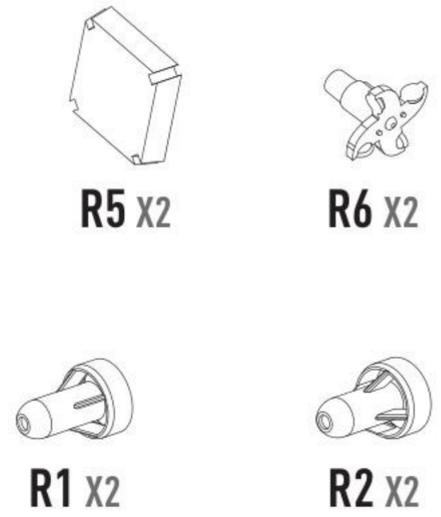


1 X2

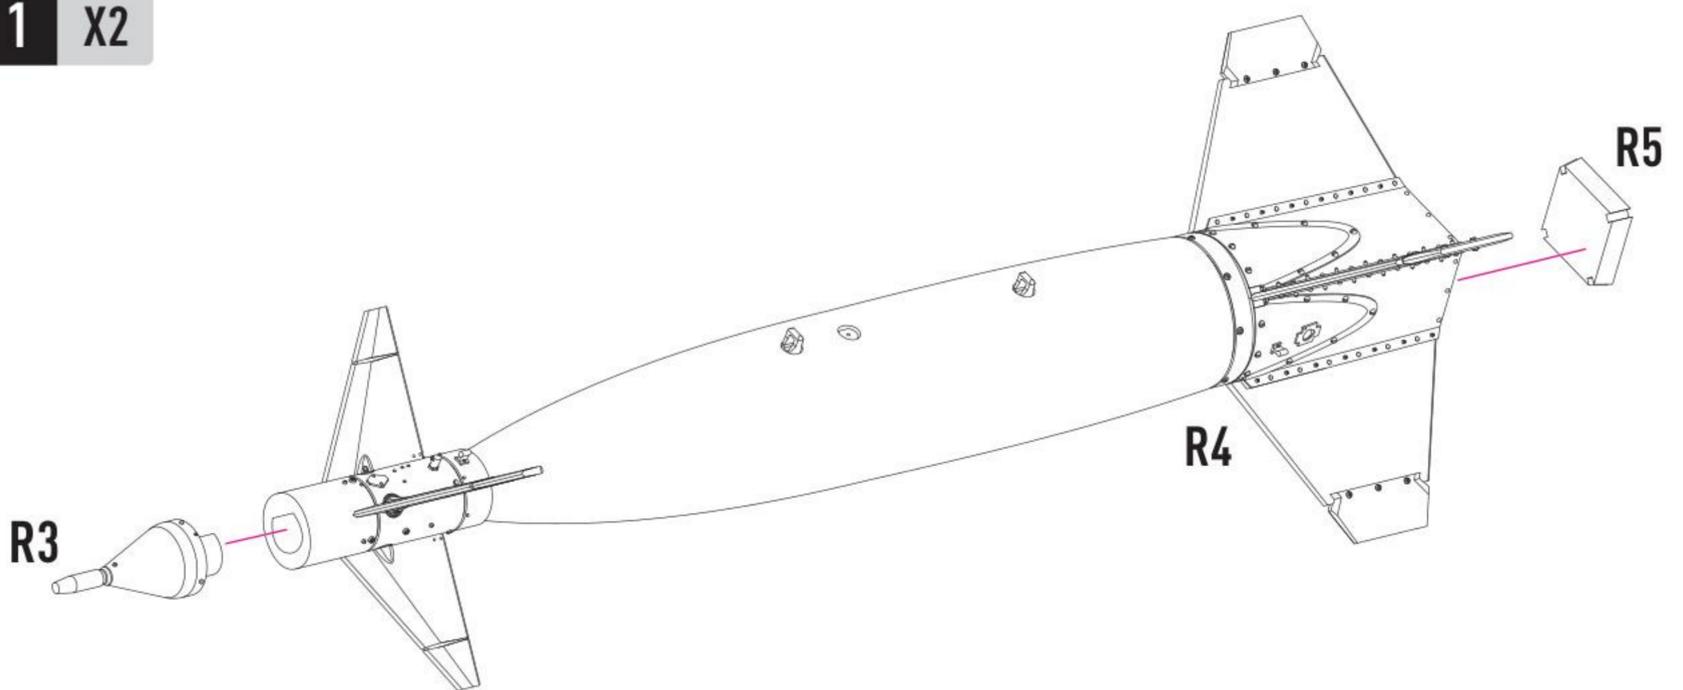

2 X2

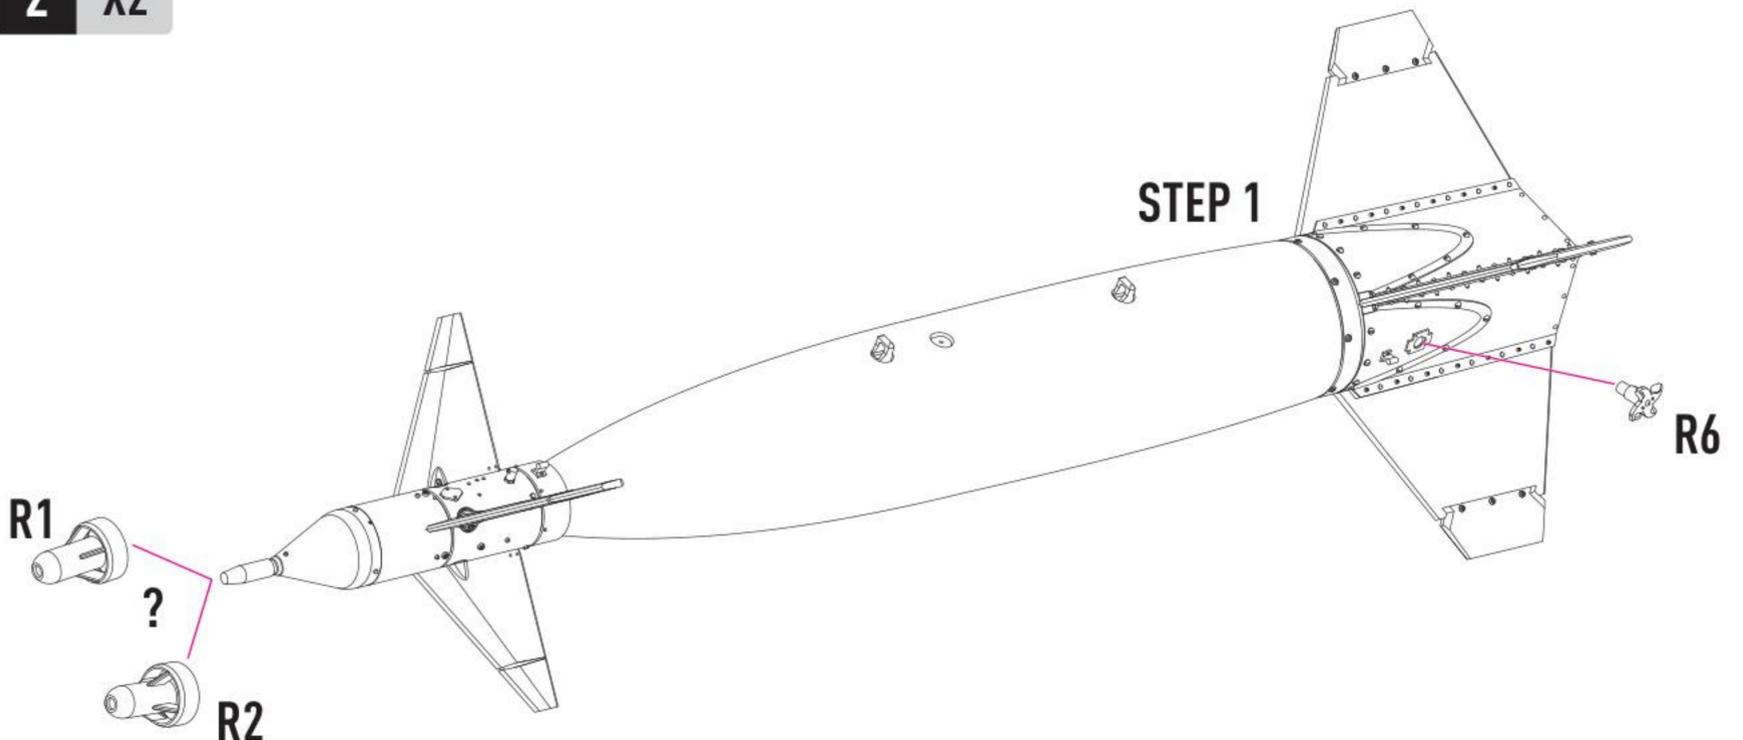

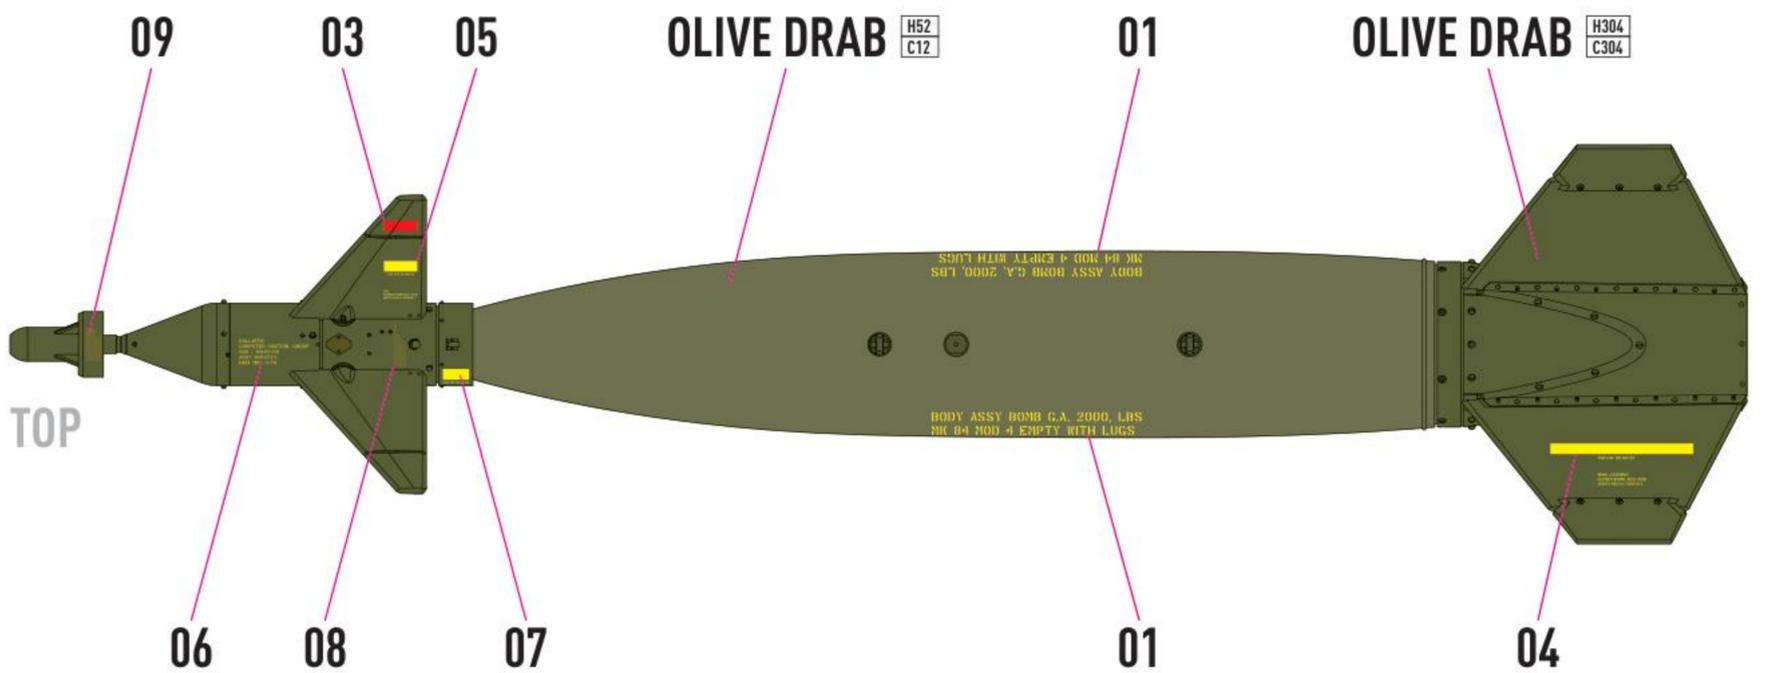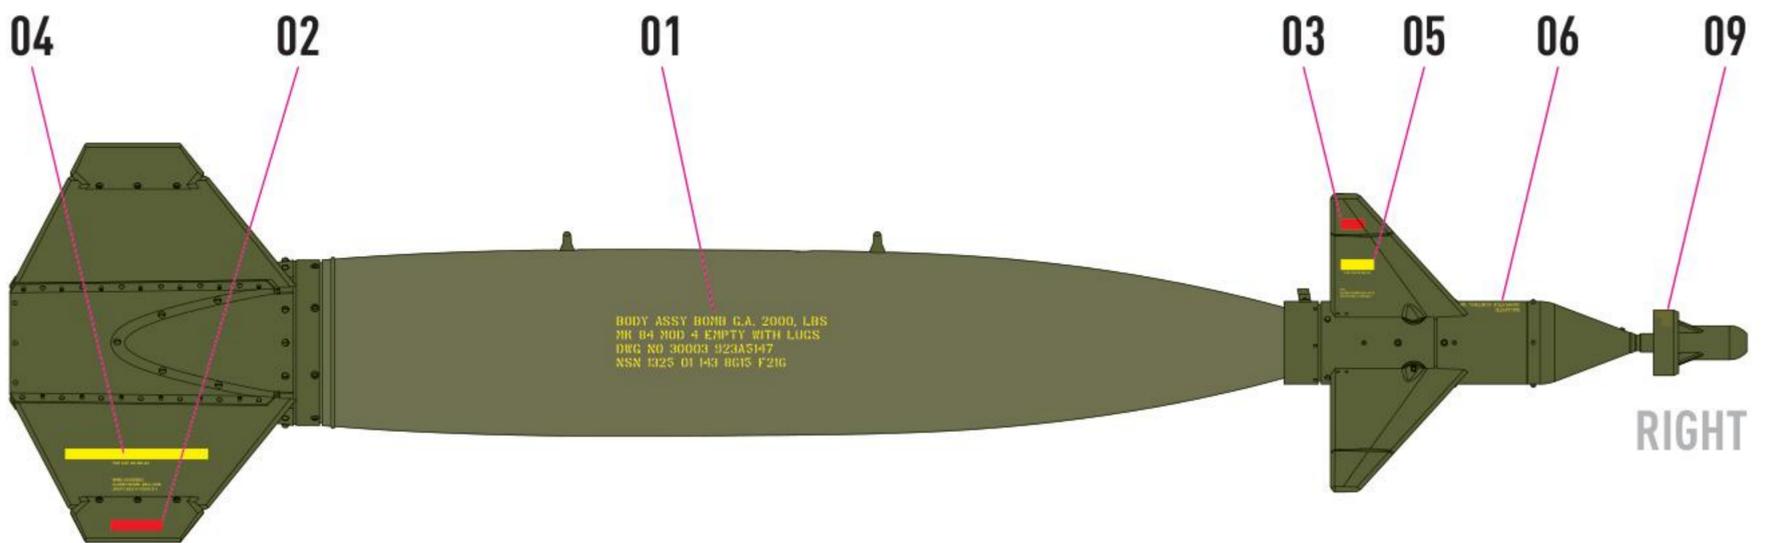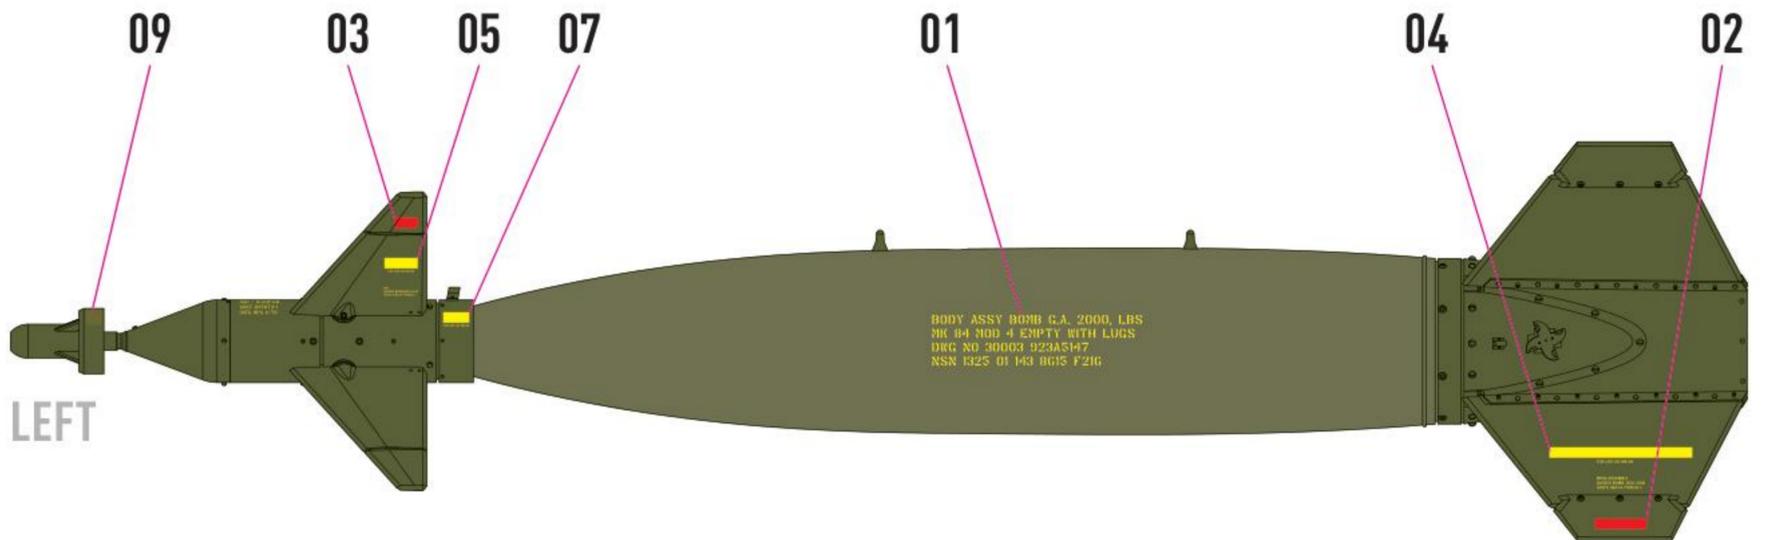

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12