




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**

R7 X2

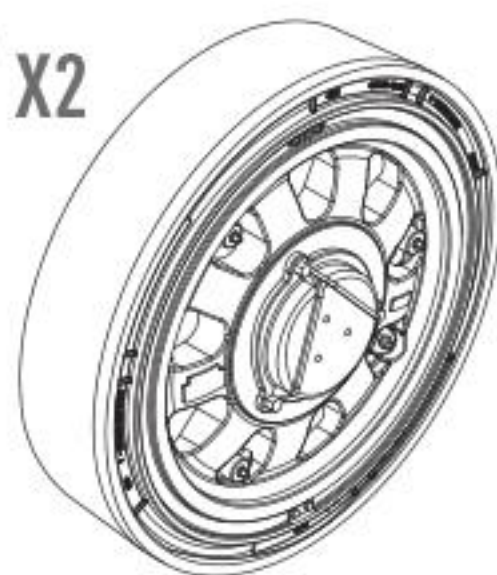

R8 X2



R9 X2




R4




R5




R2

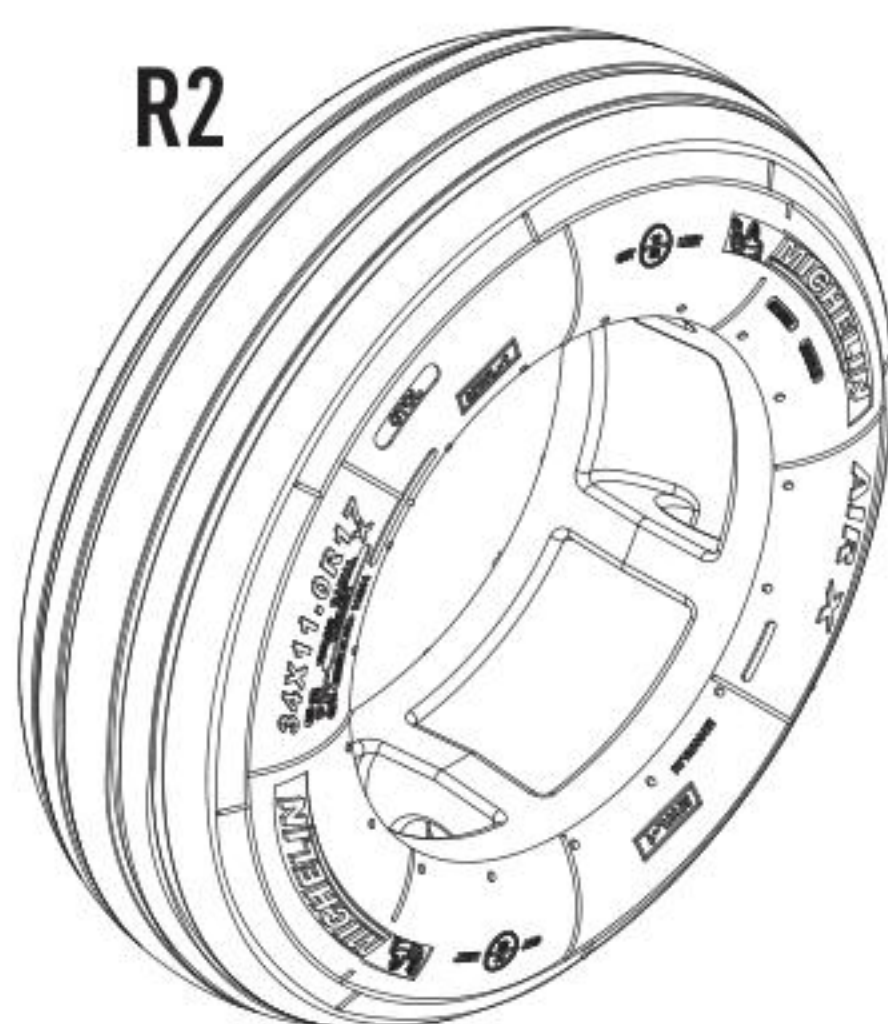


R1

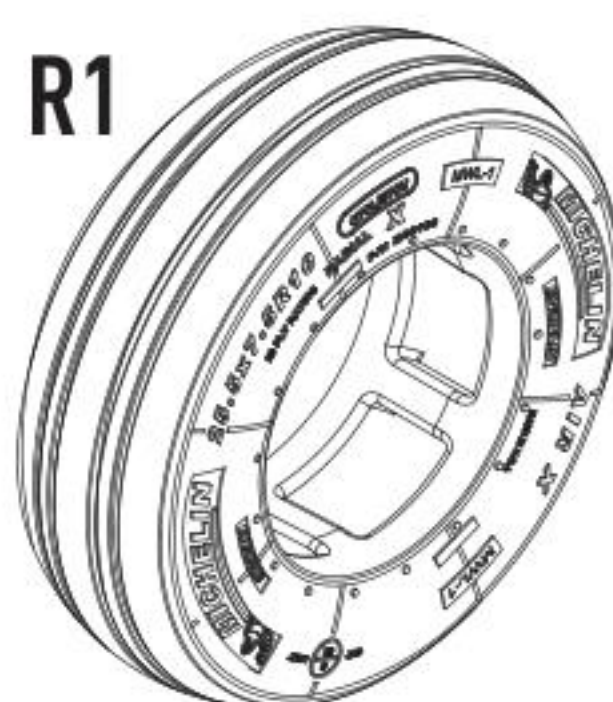

R3

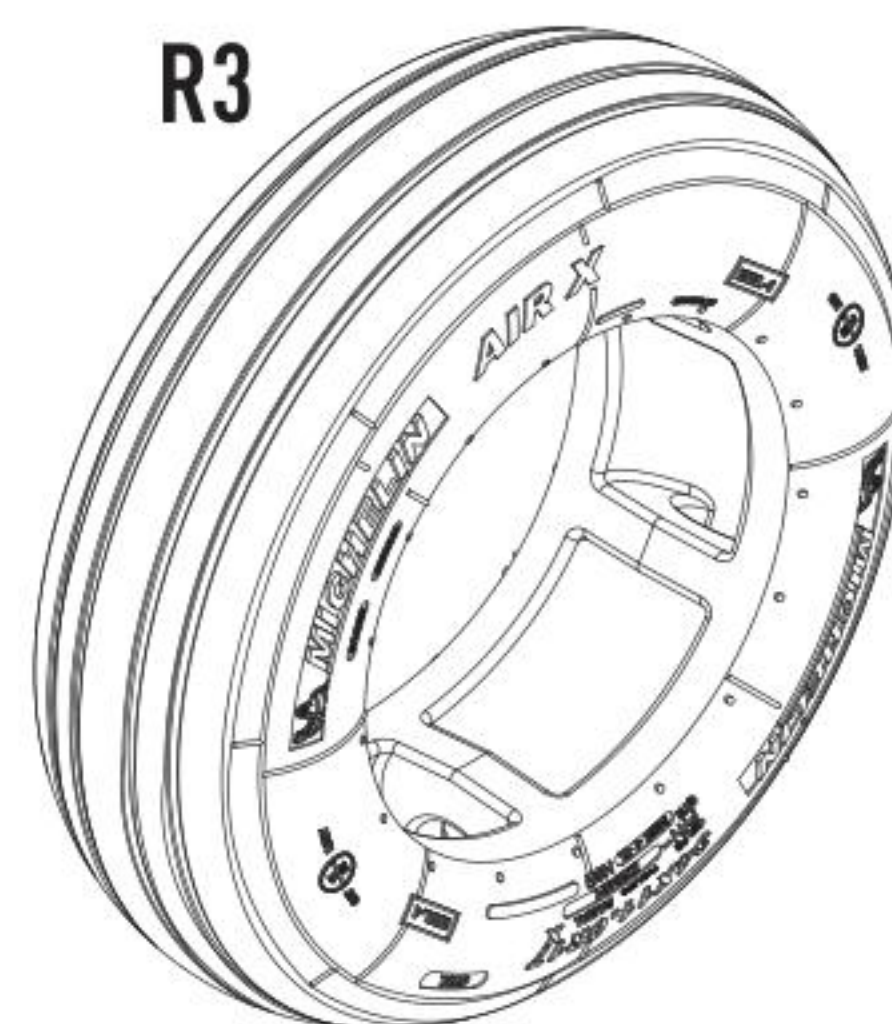


1

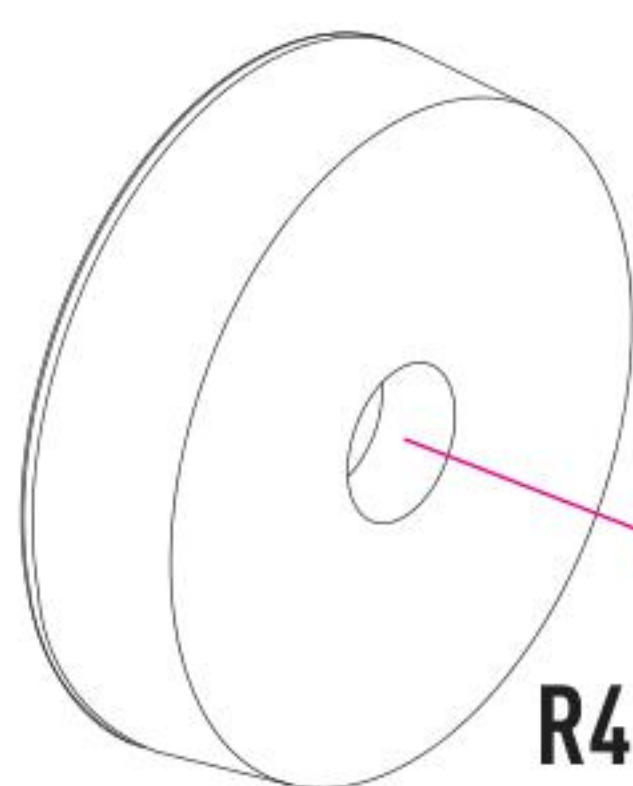


R4


R1

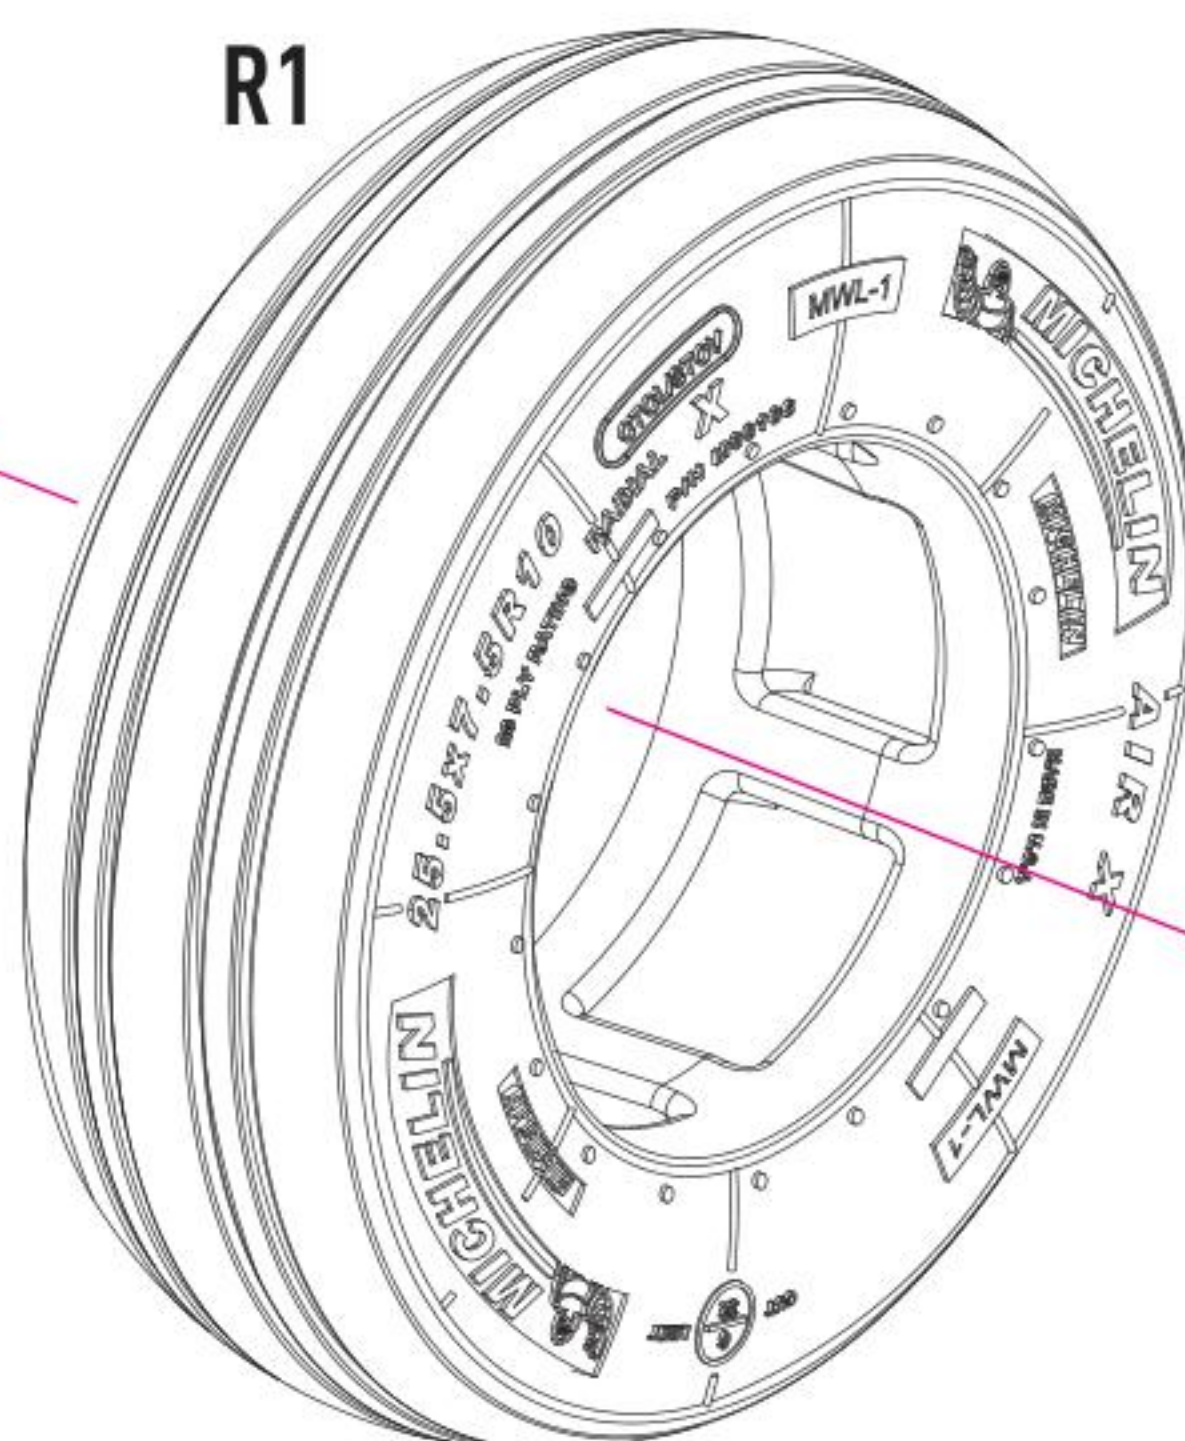

R5

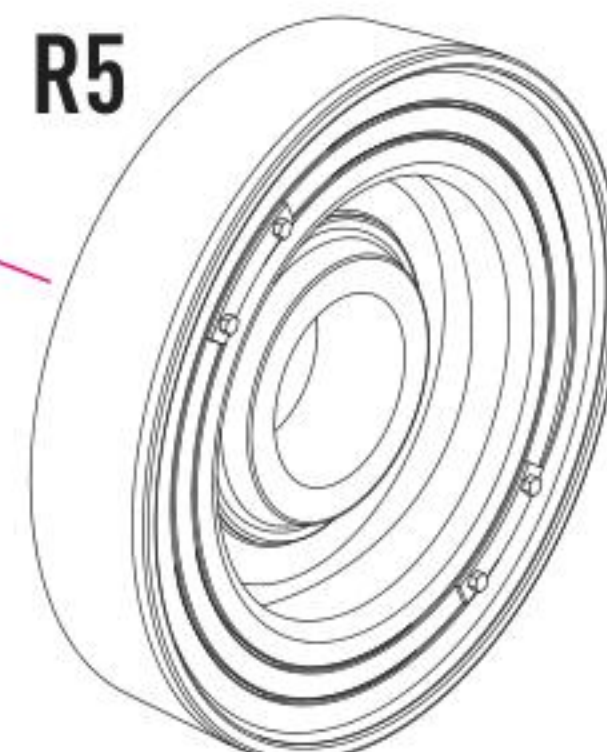

X2 2

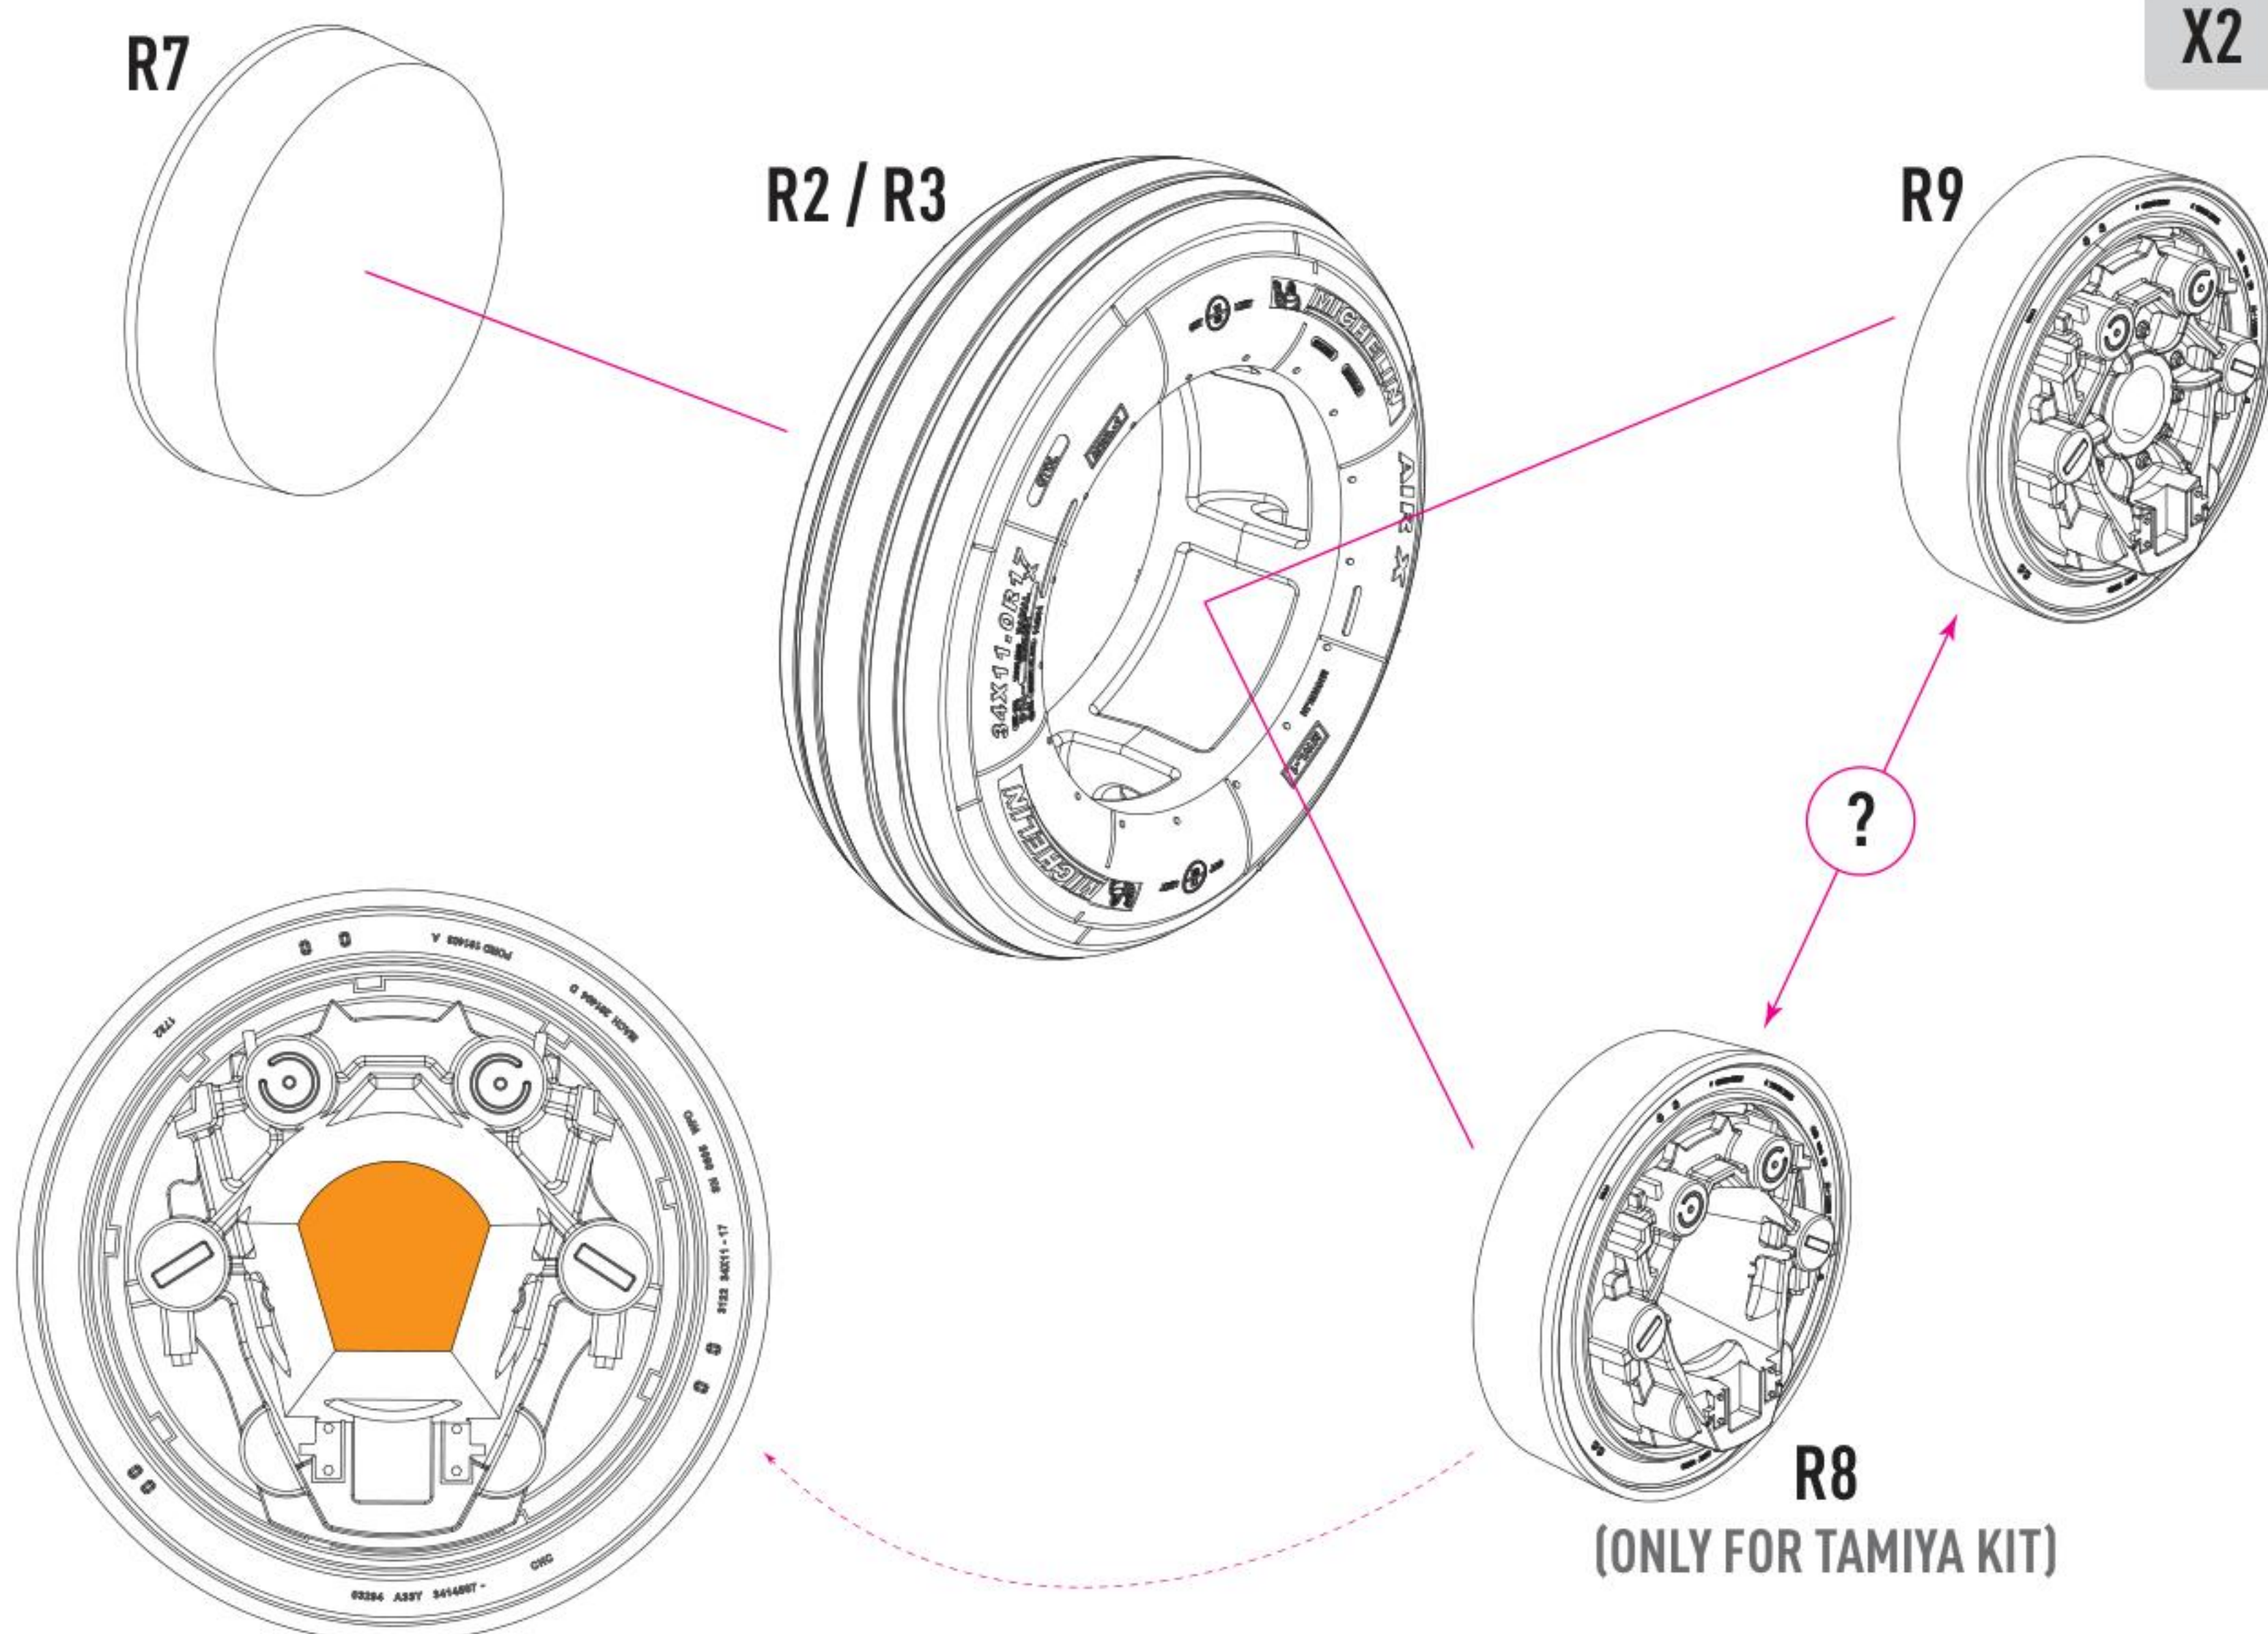

**FOR TAMIYA KIT ASSEMBLY (R8) PAY ATTENTION
TO THE STRUT KEY WHEN INSTALLING THE WEIGHTED TIRE**

