


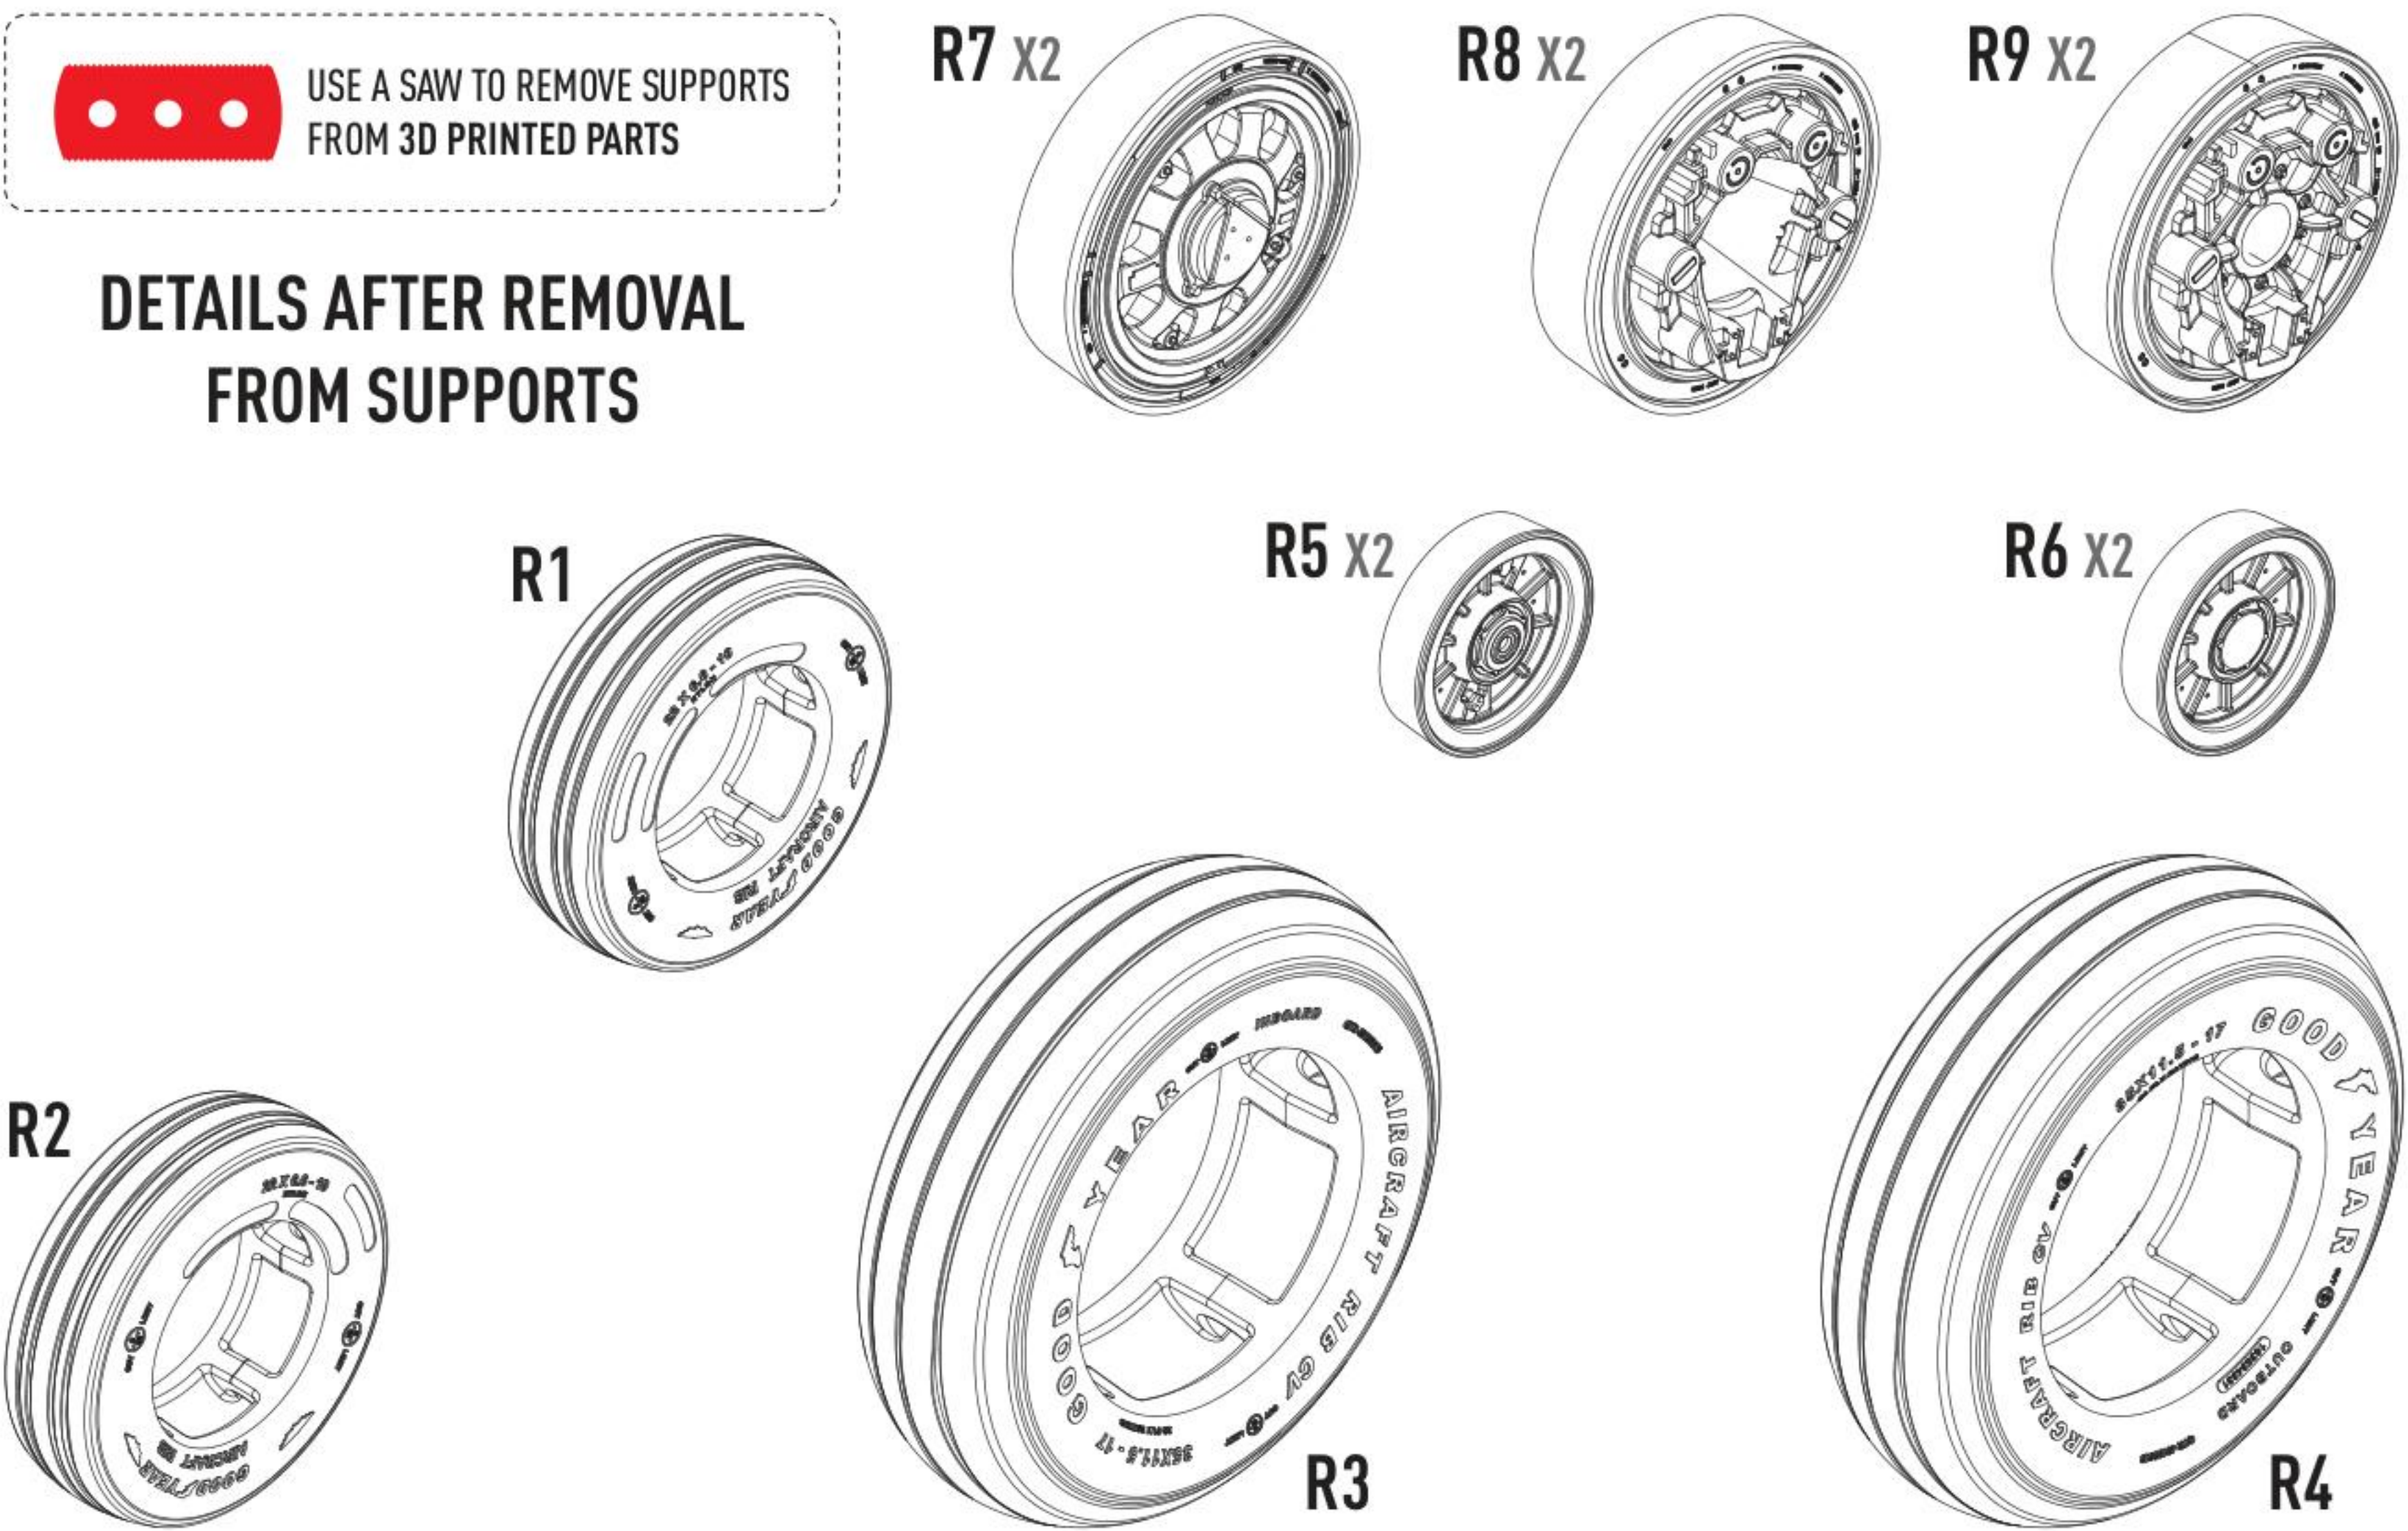


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL
FROM SUPPORTS



1

X2

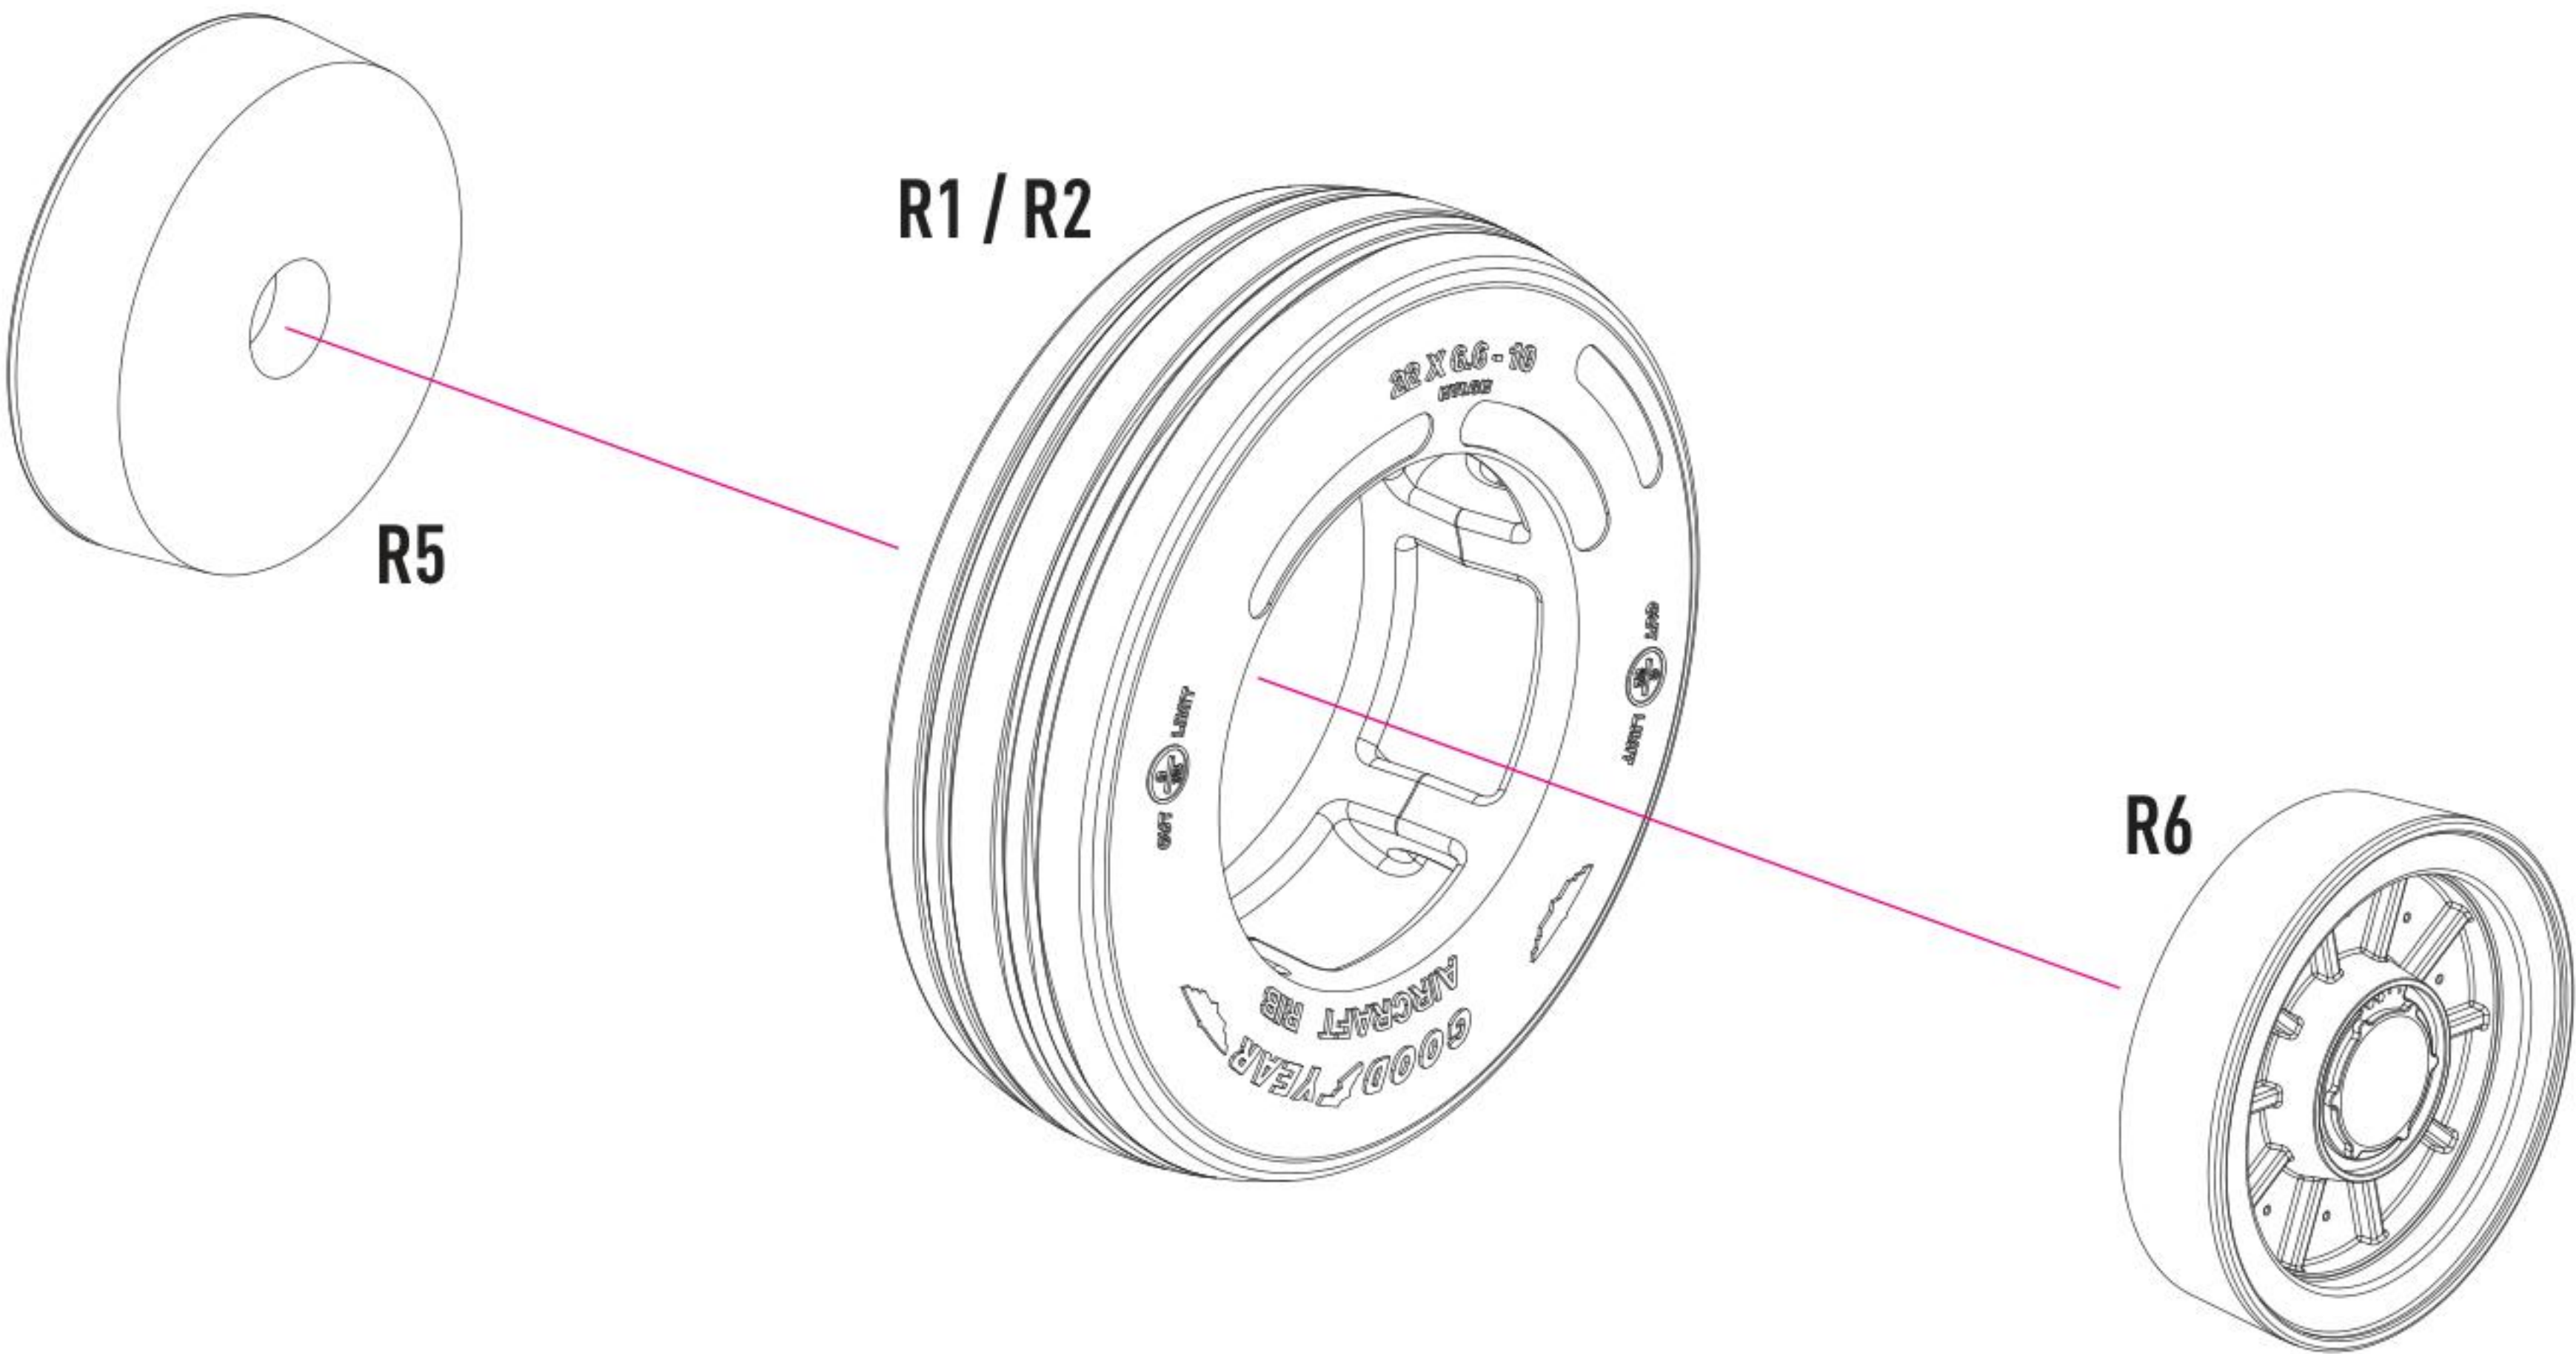

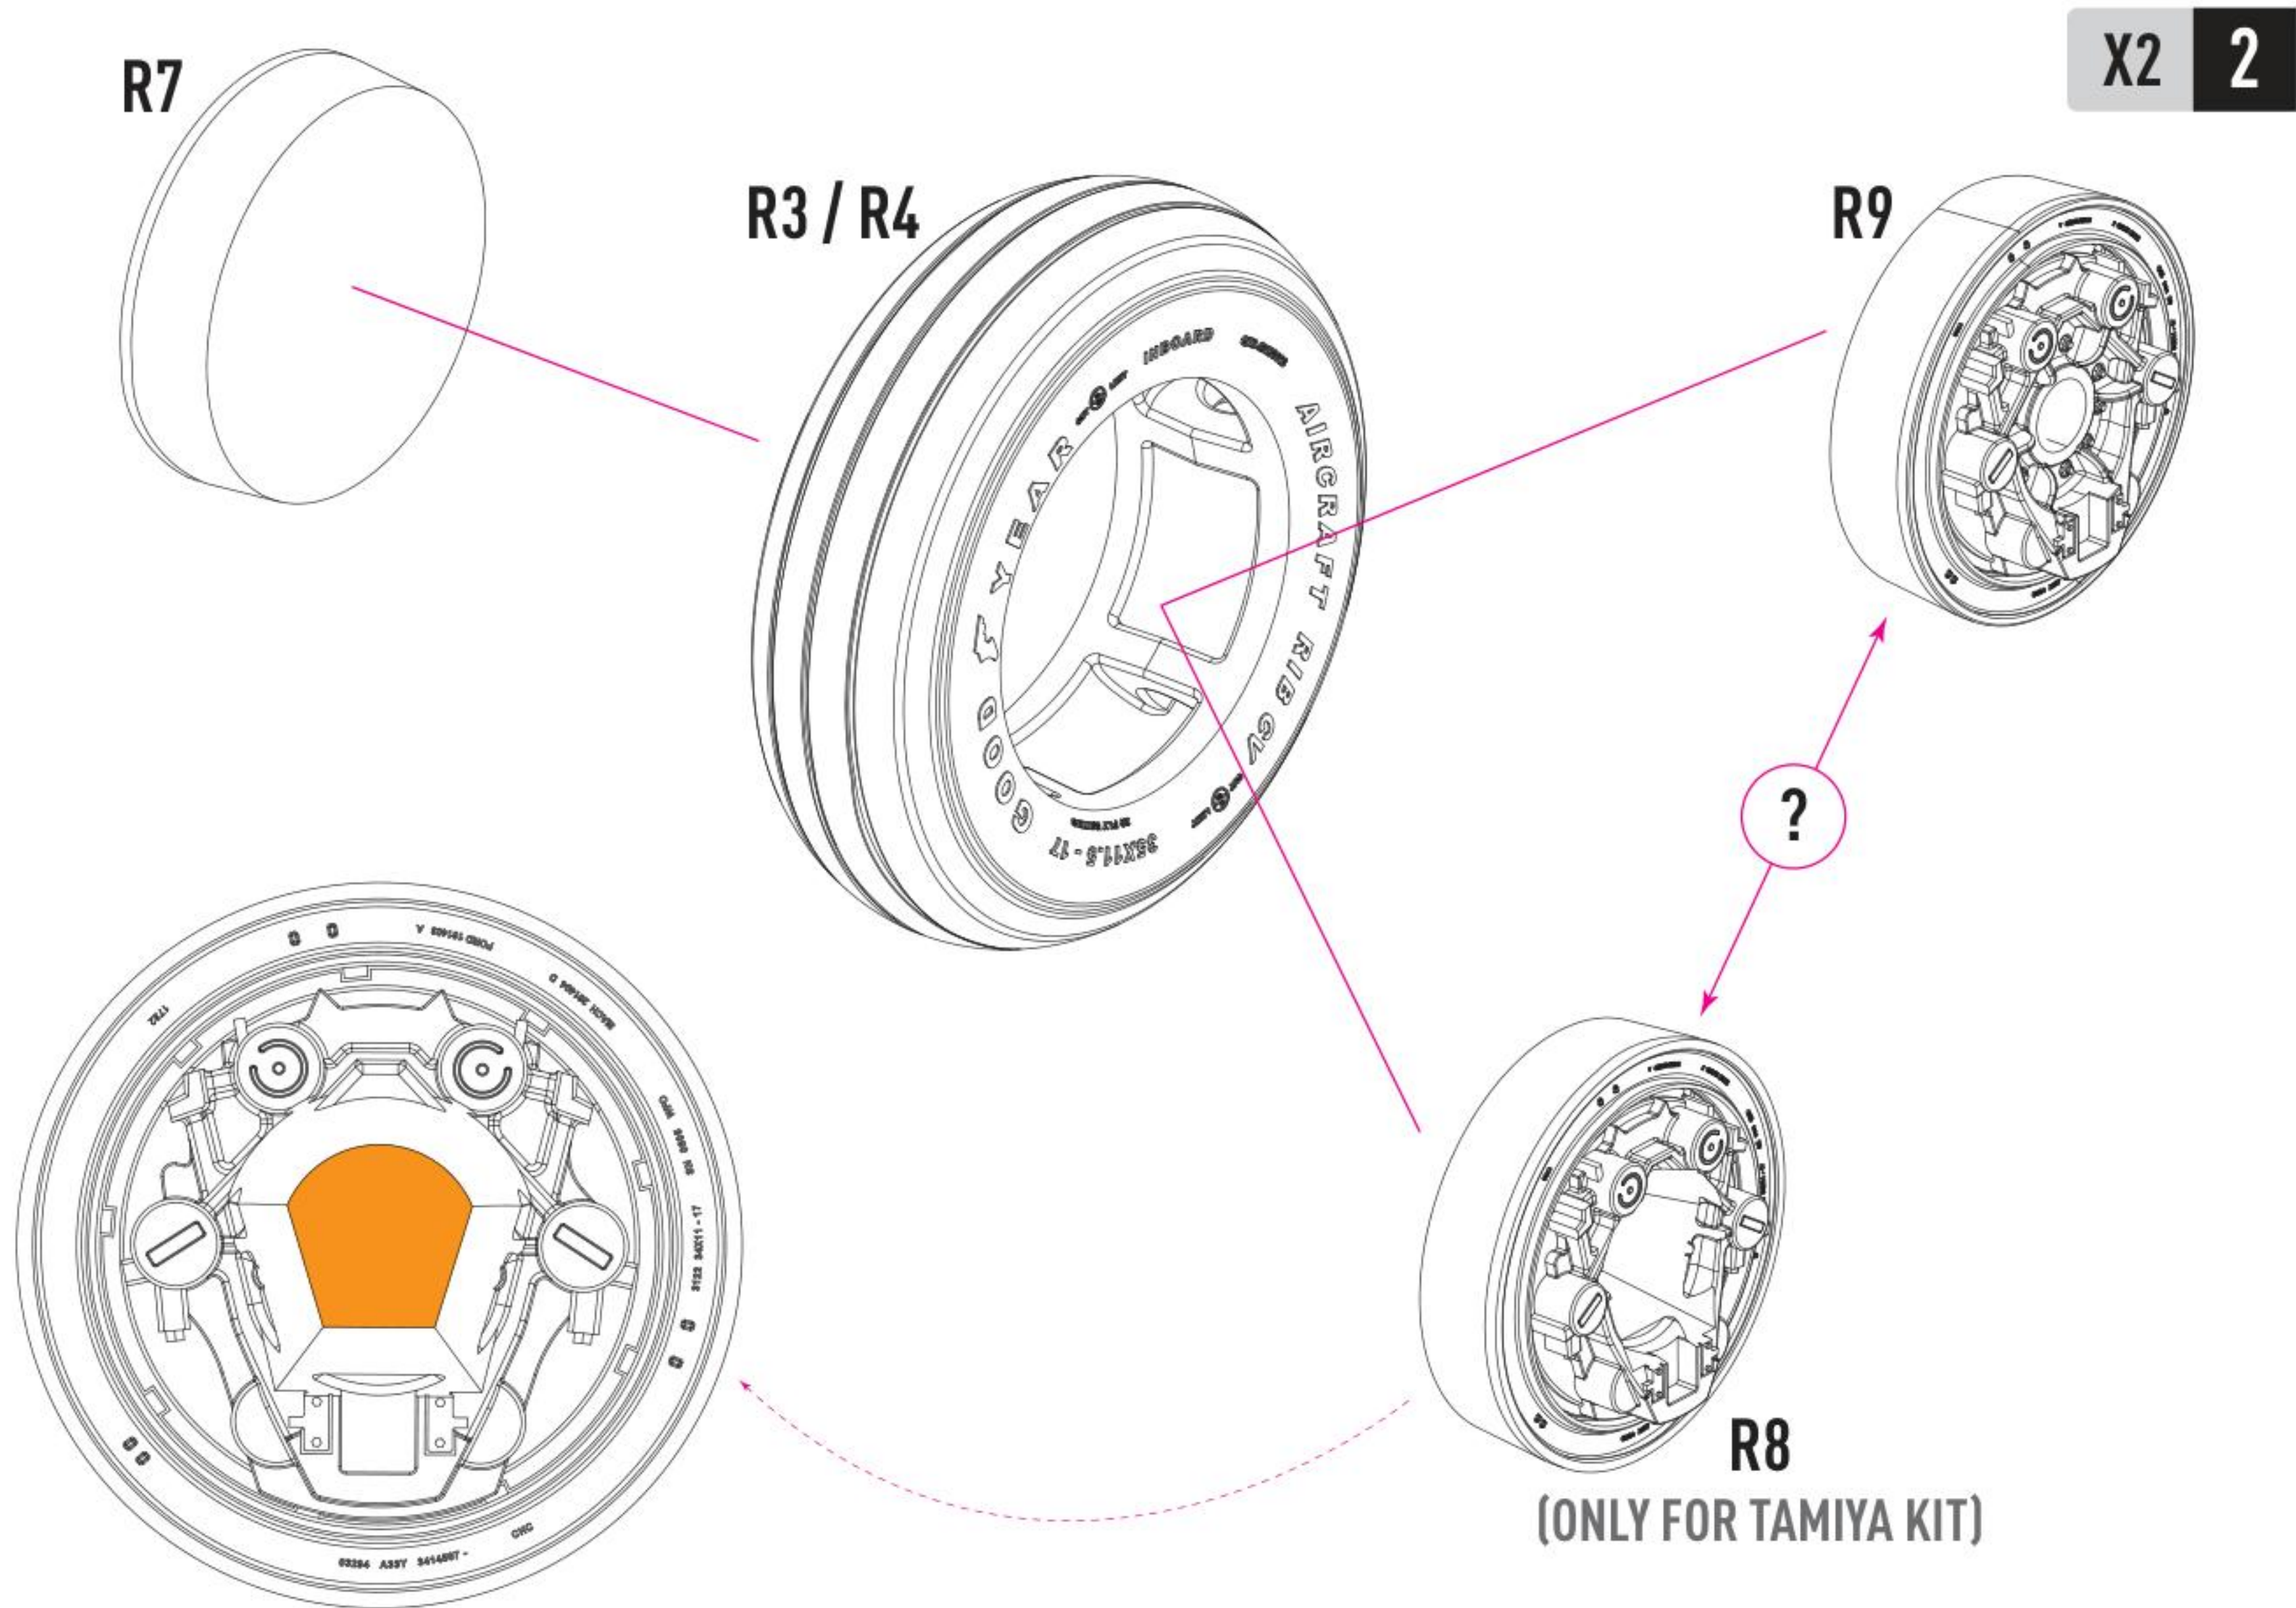

FOR TAMIYA KIT ASSEMBLY (R8) PAY ATTENTION
TO THE STRUT KEY WHEN INSTALLING THE WEIGHTED TIRE

