


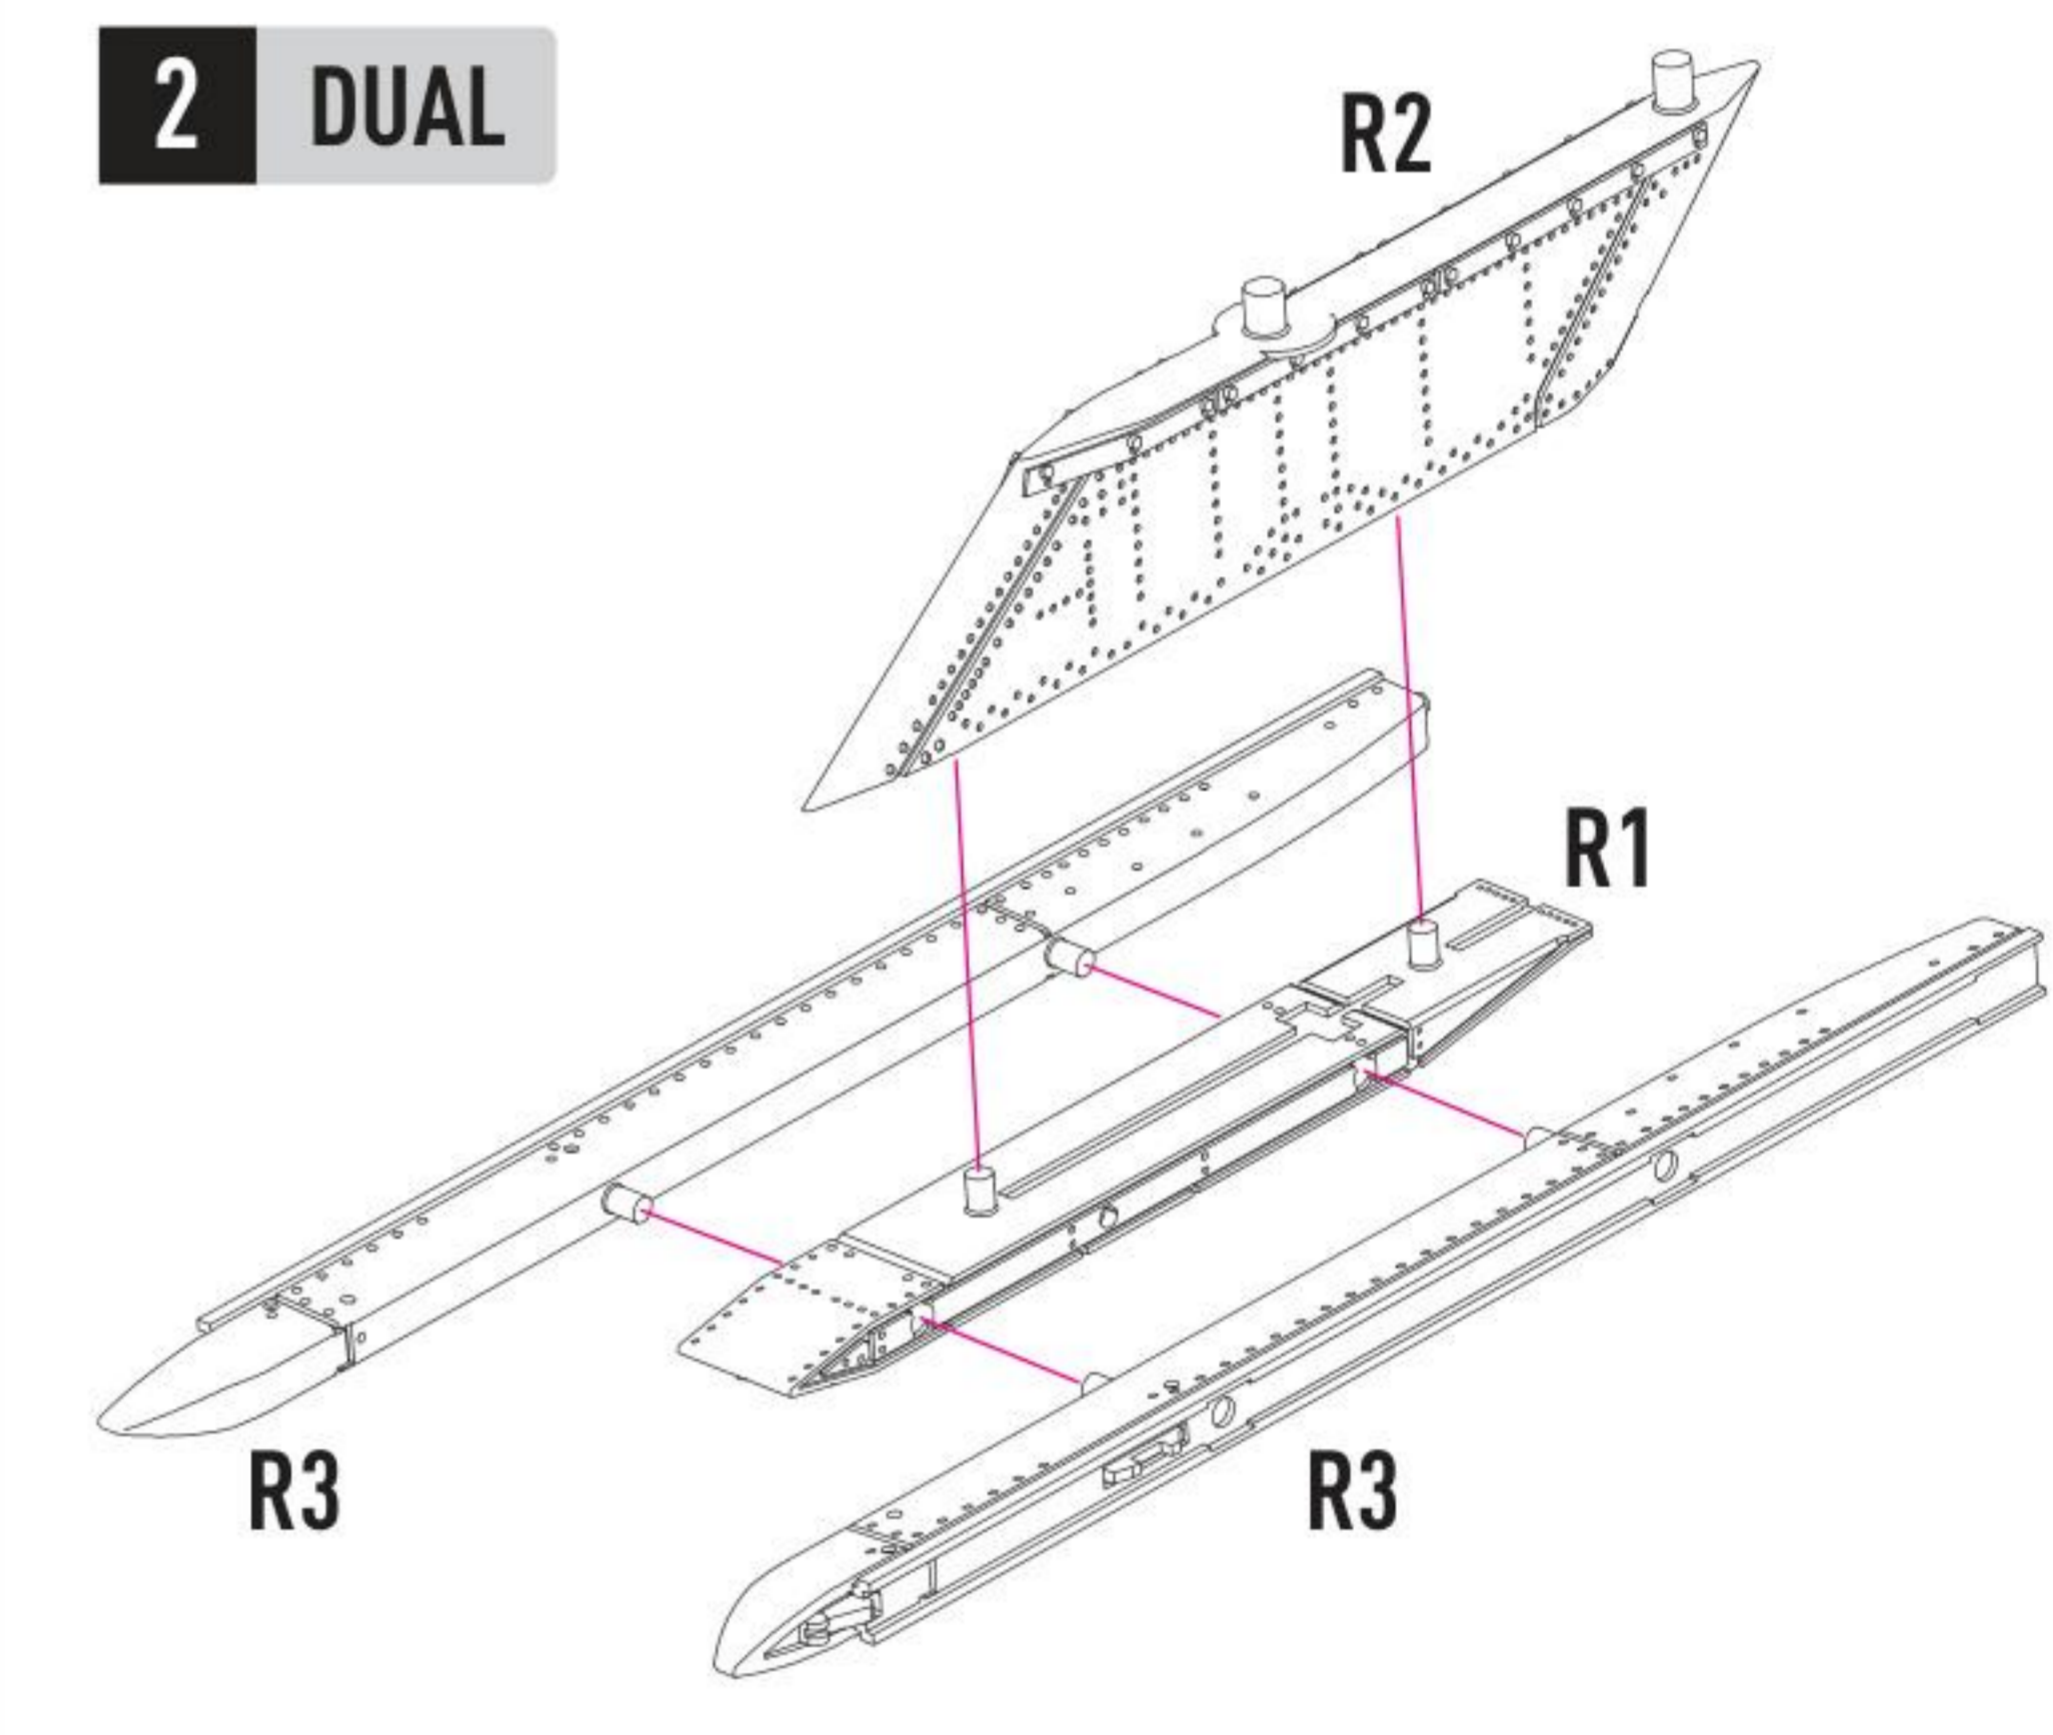
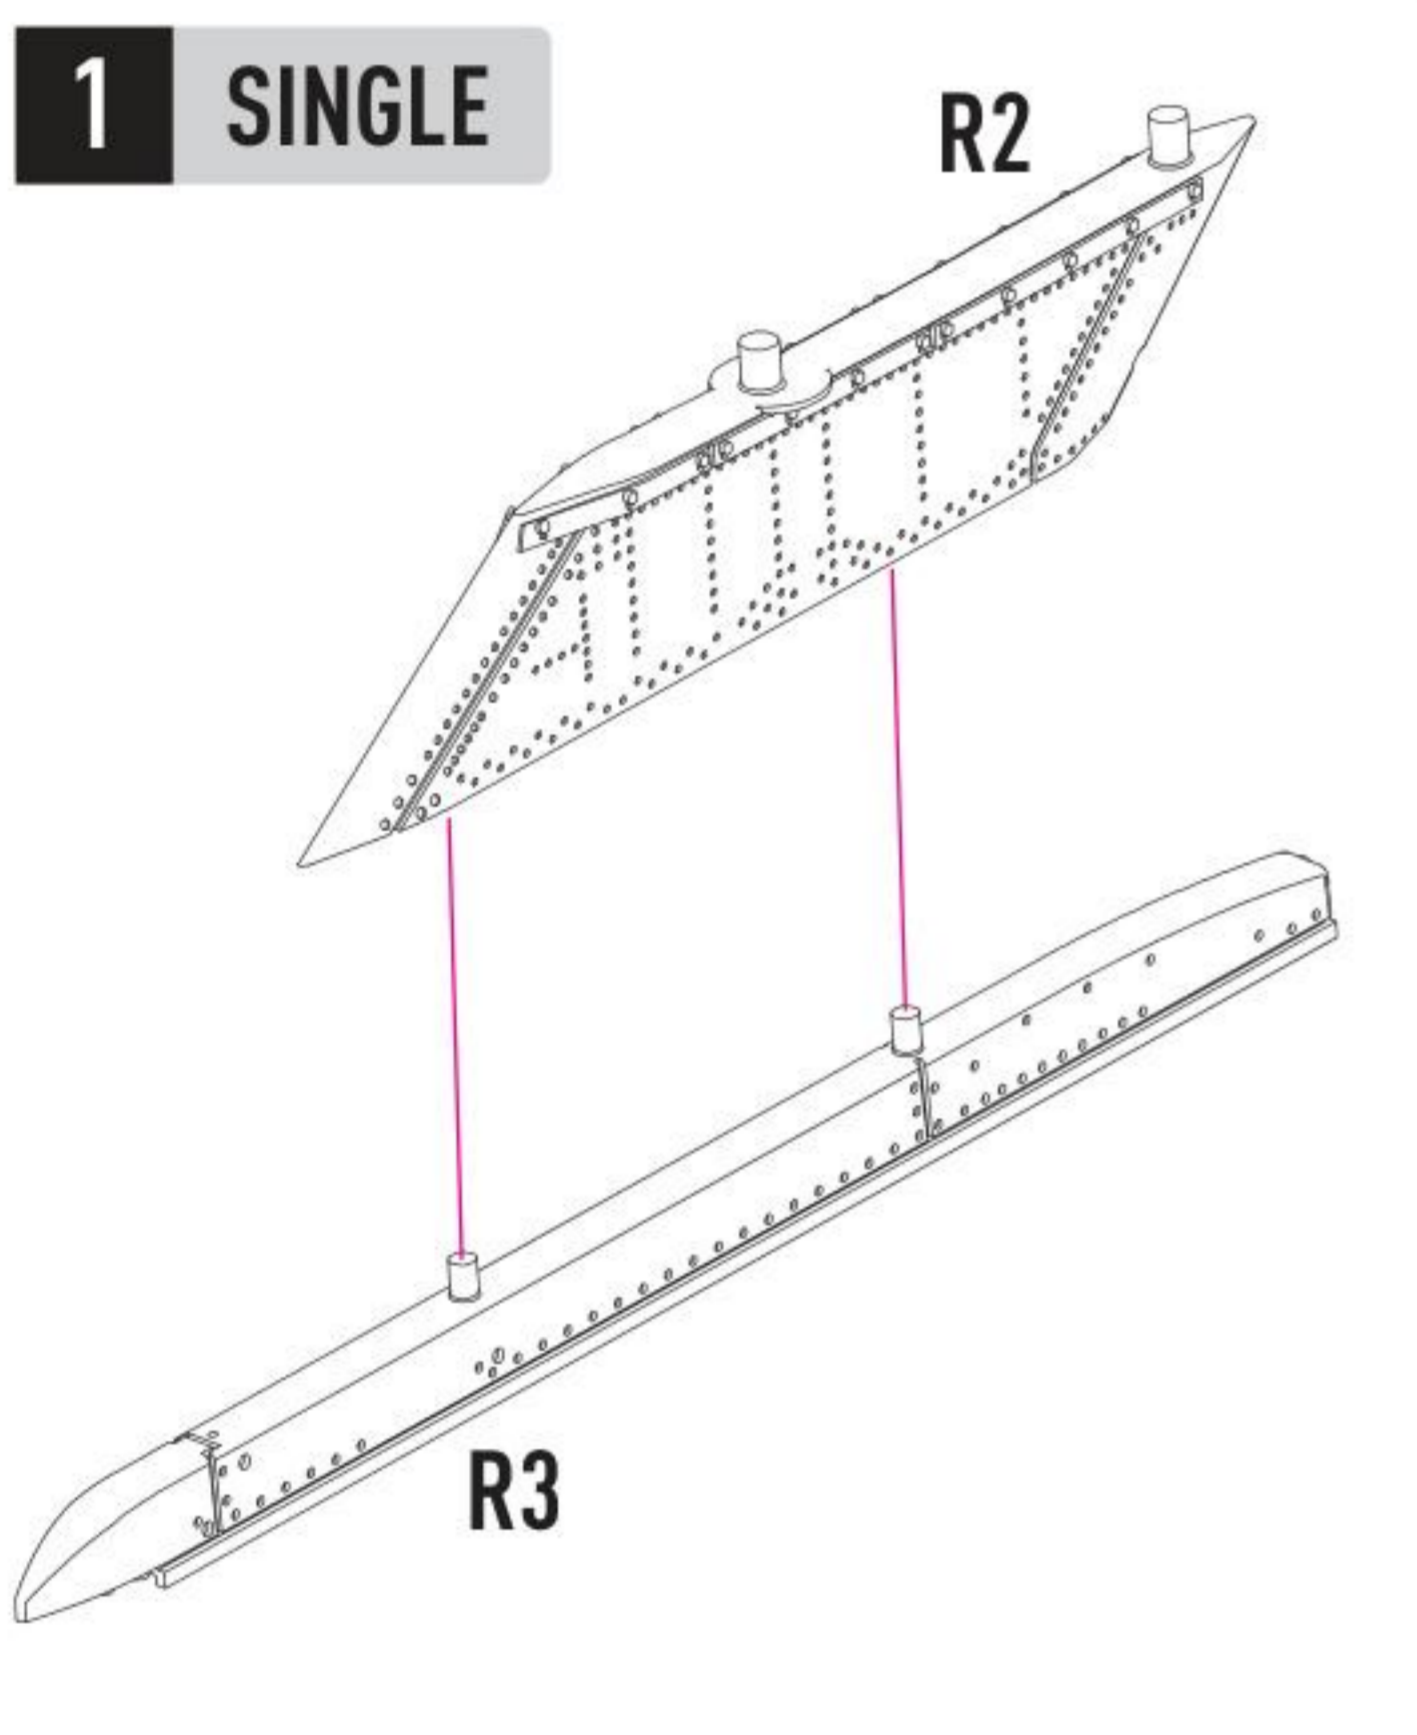
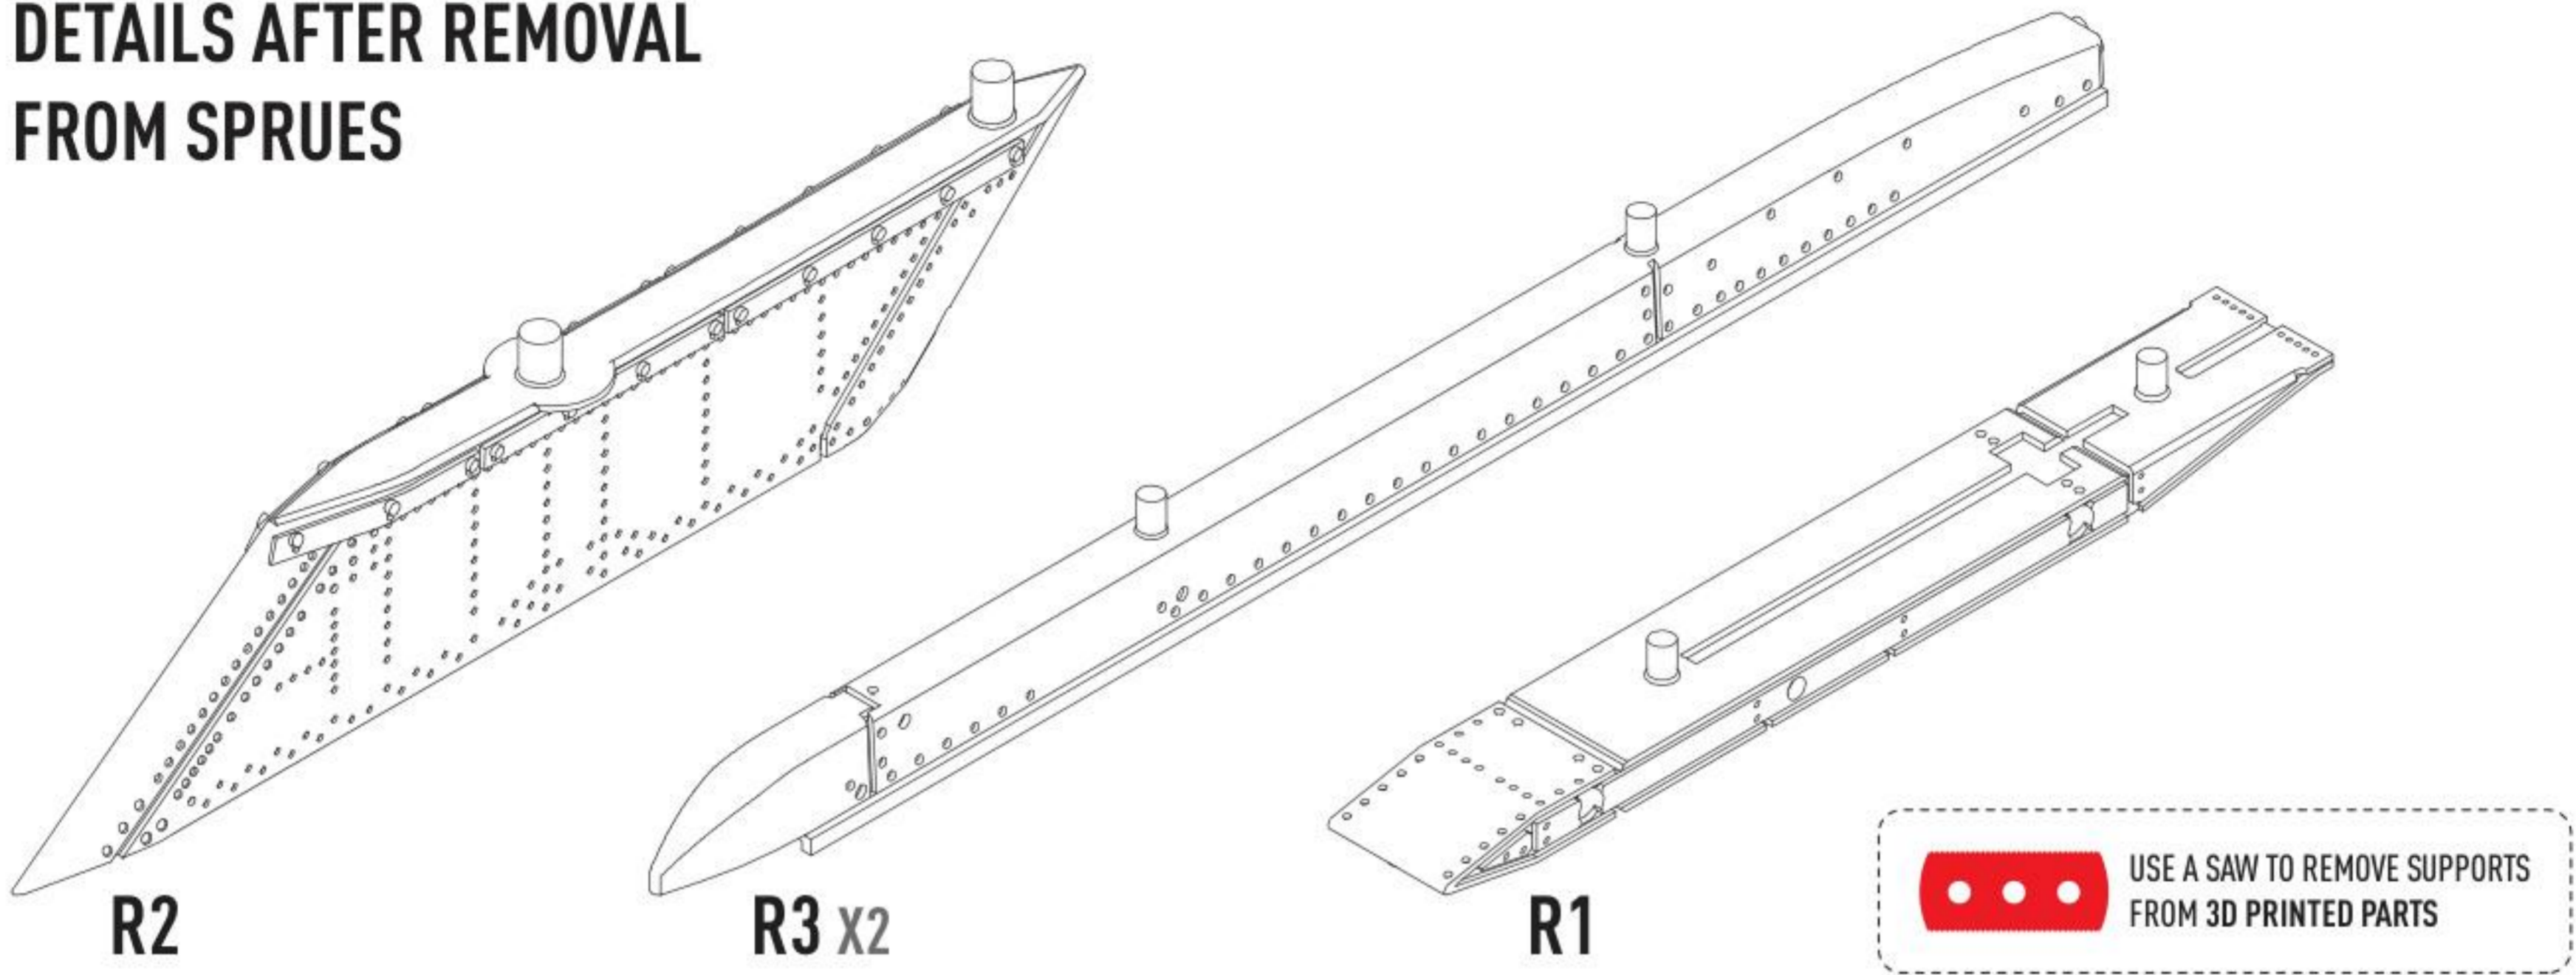


DETAILS AFTER REMOVAL FROM SPRUES

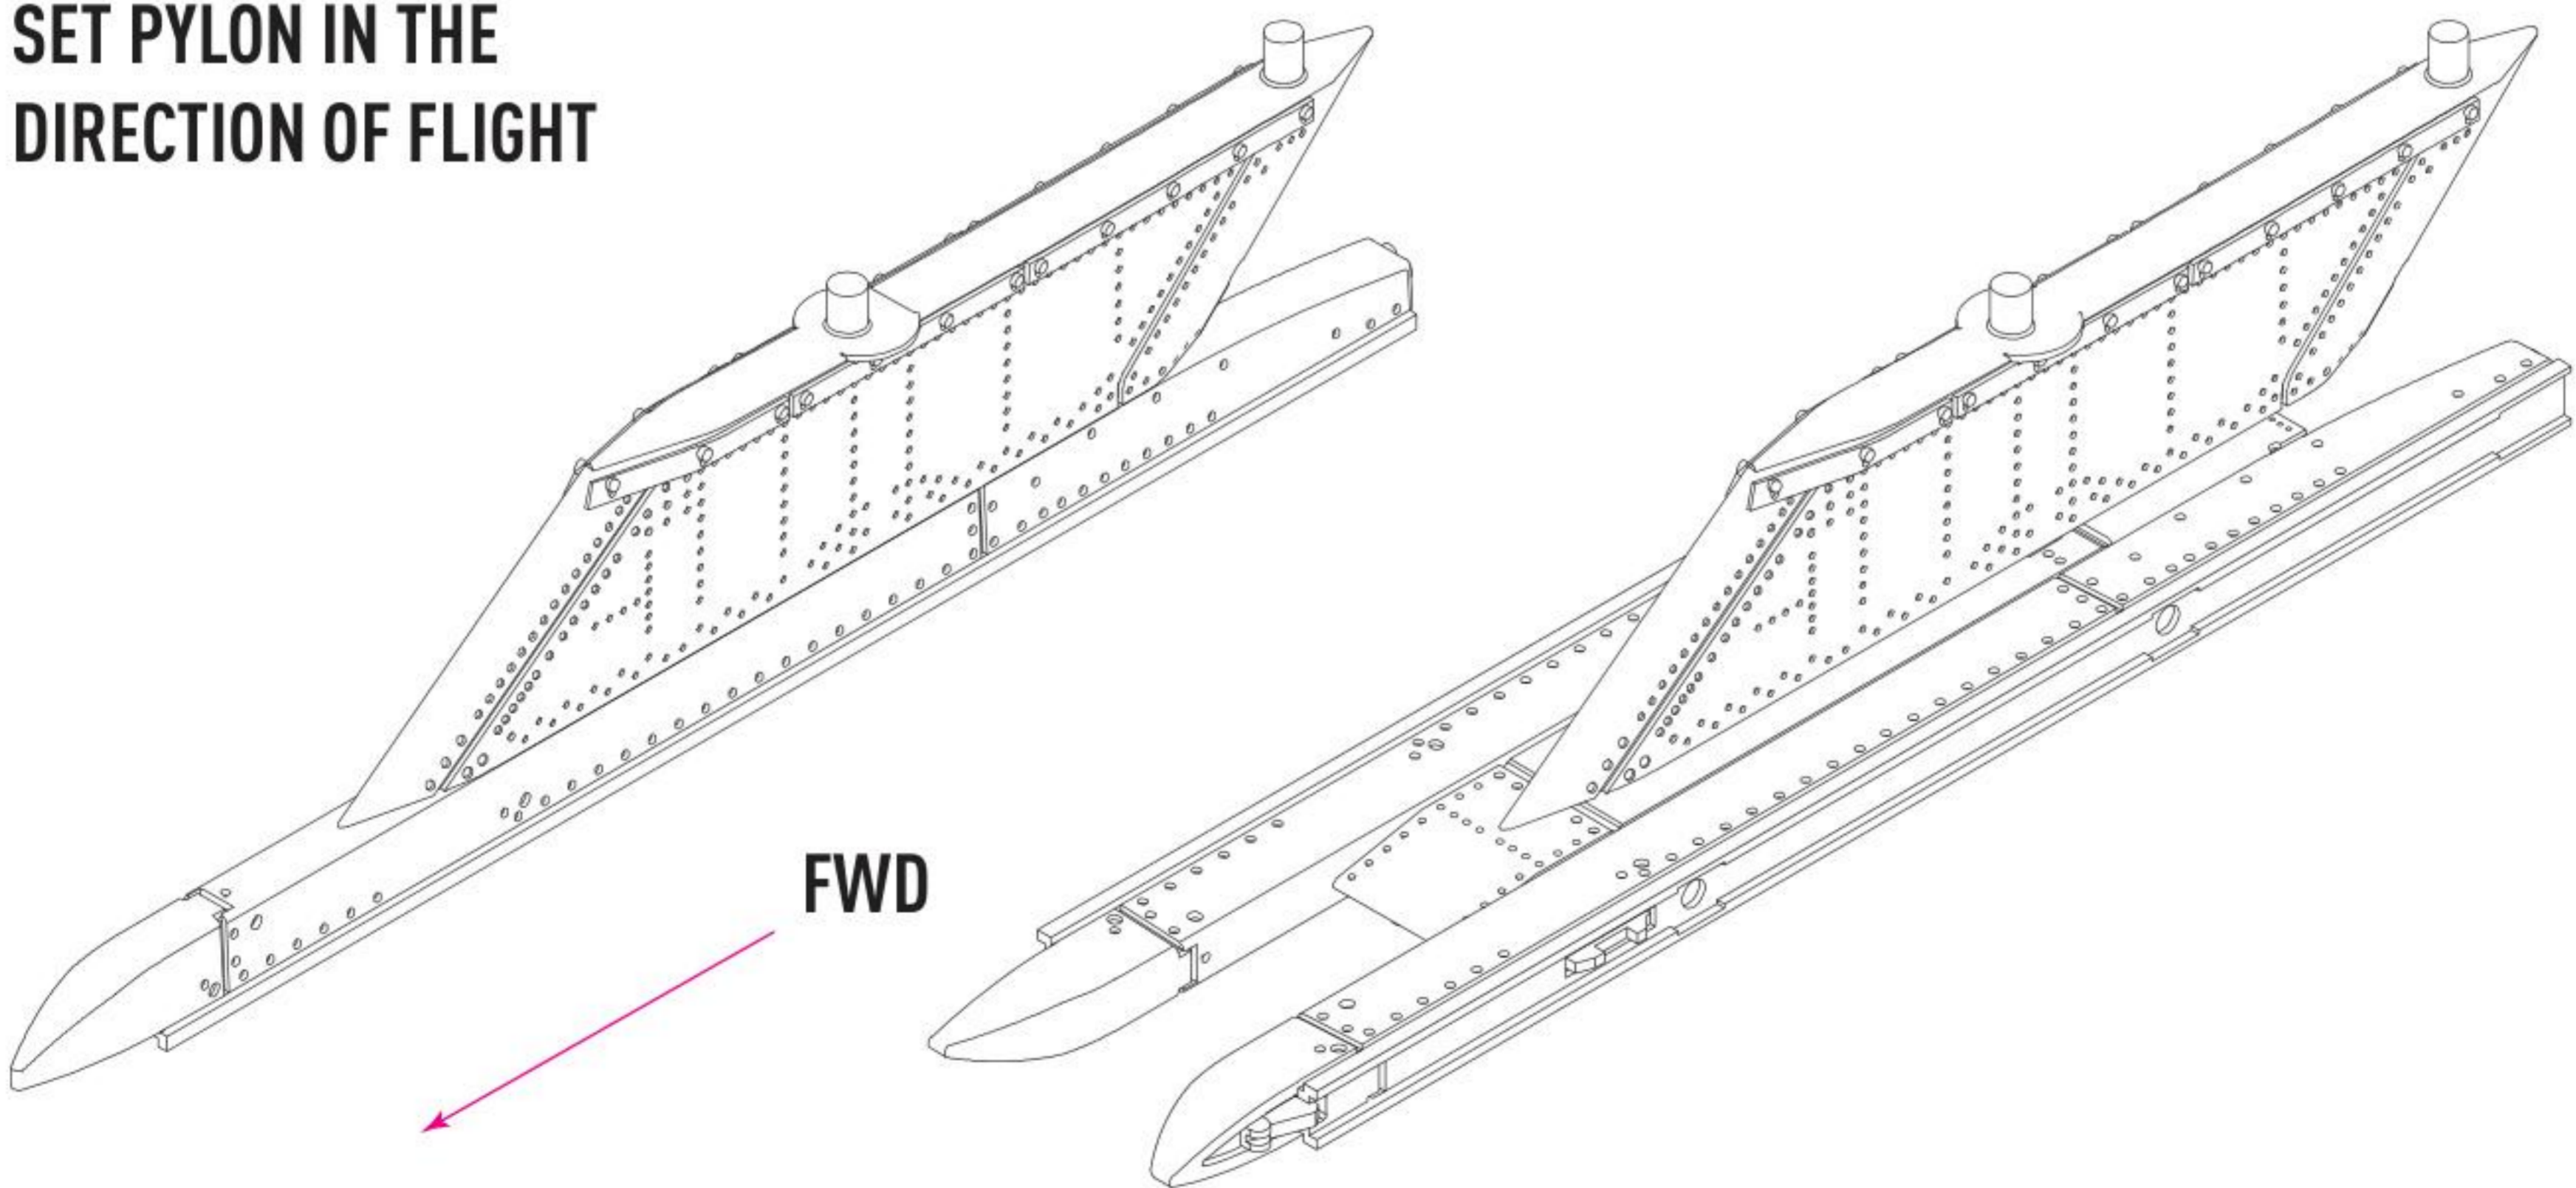

SET PYLON IN THE DIRECTION OF FLIGHT

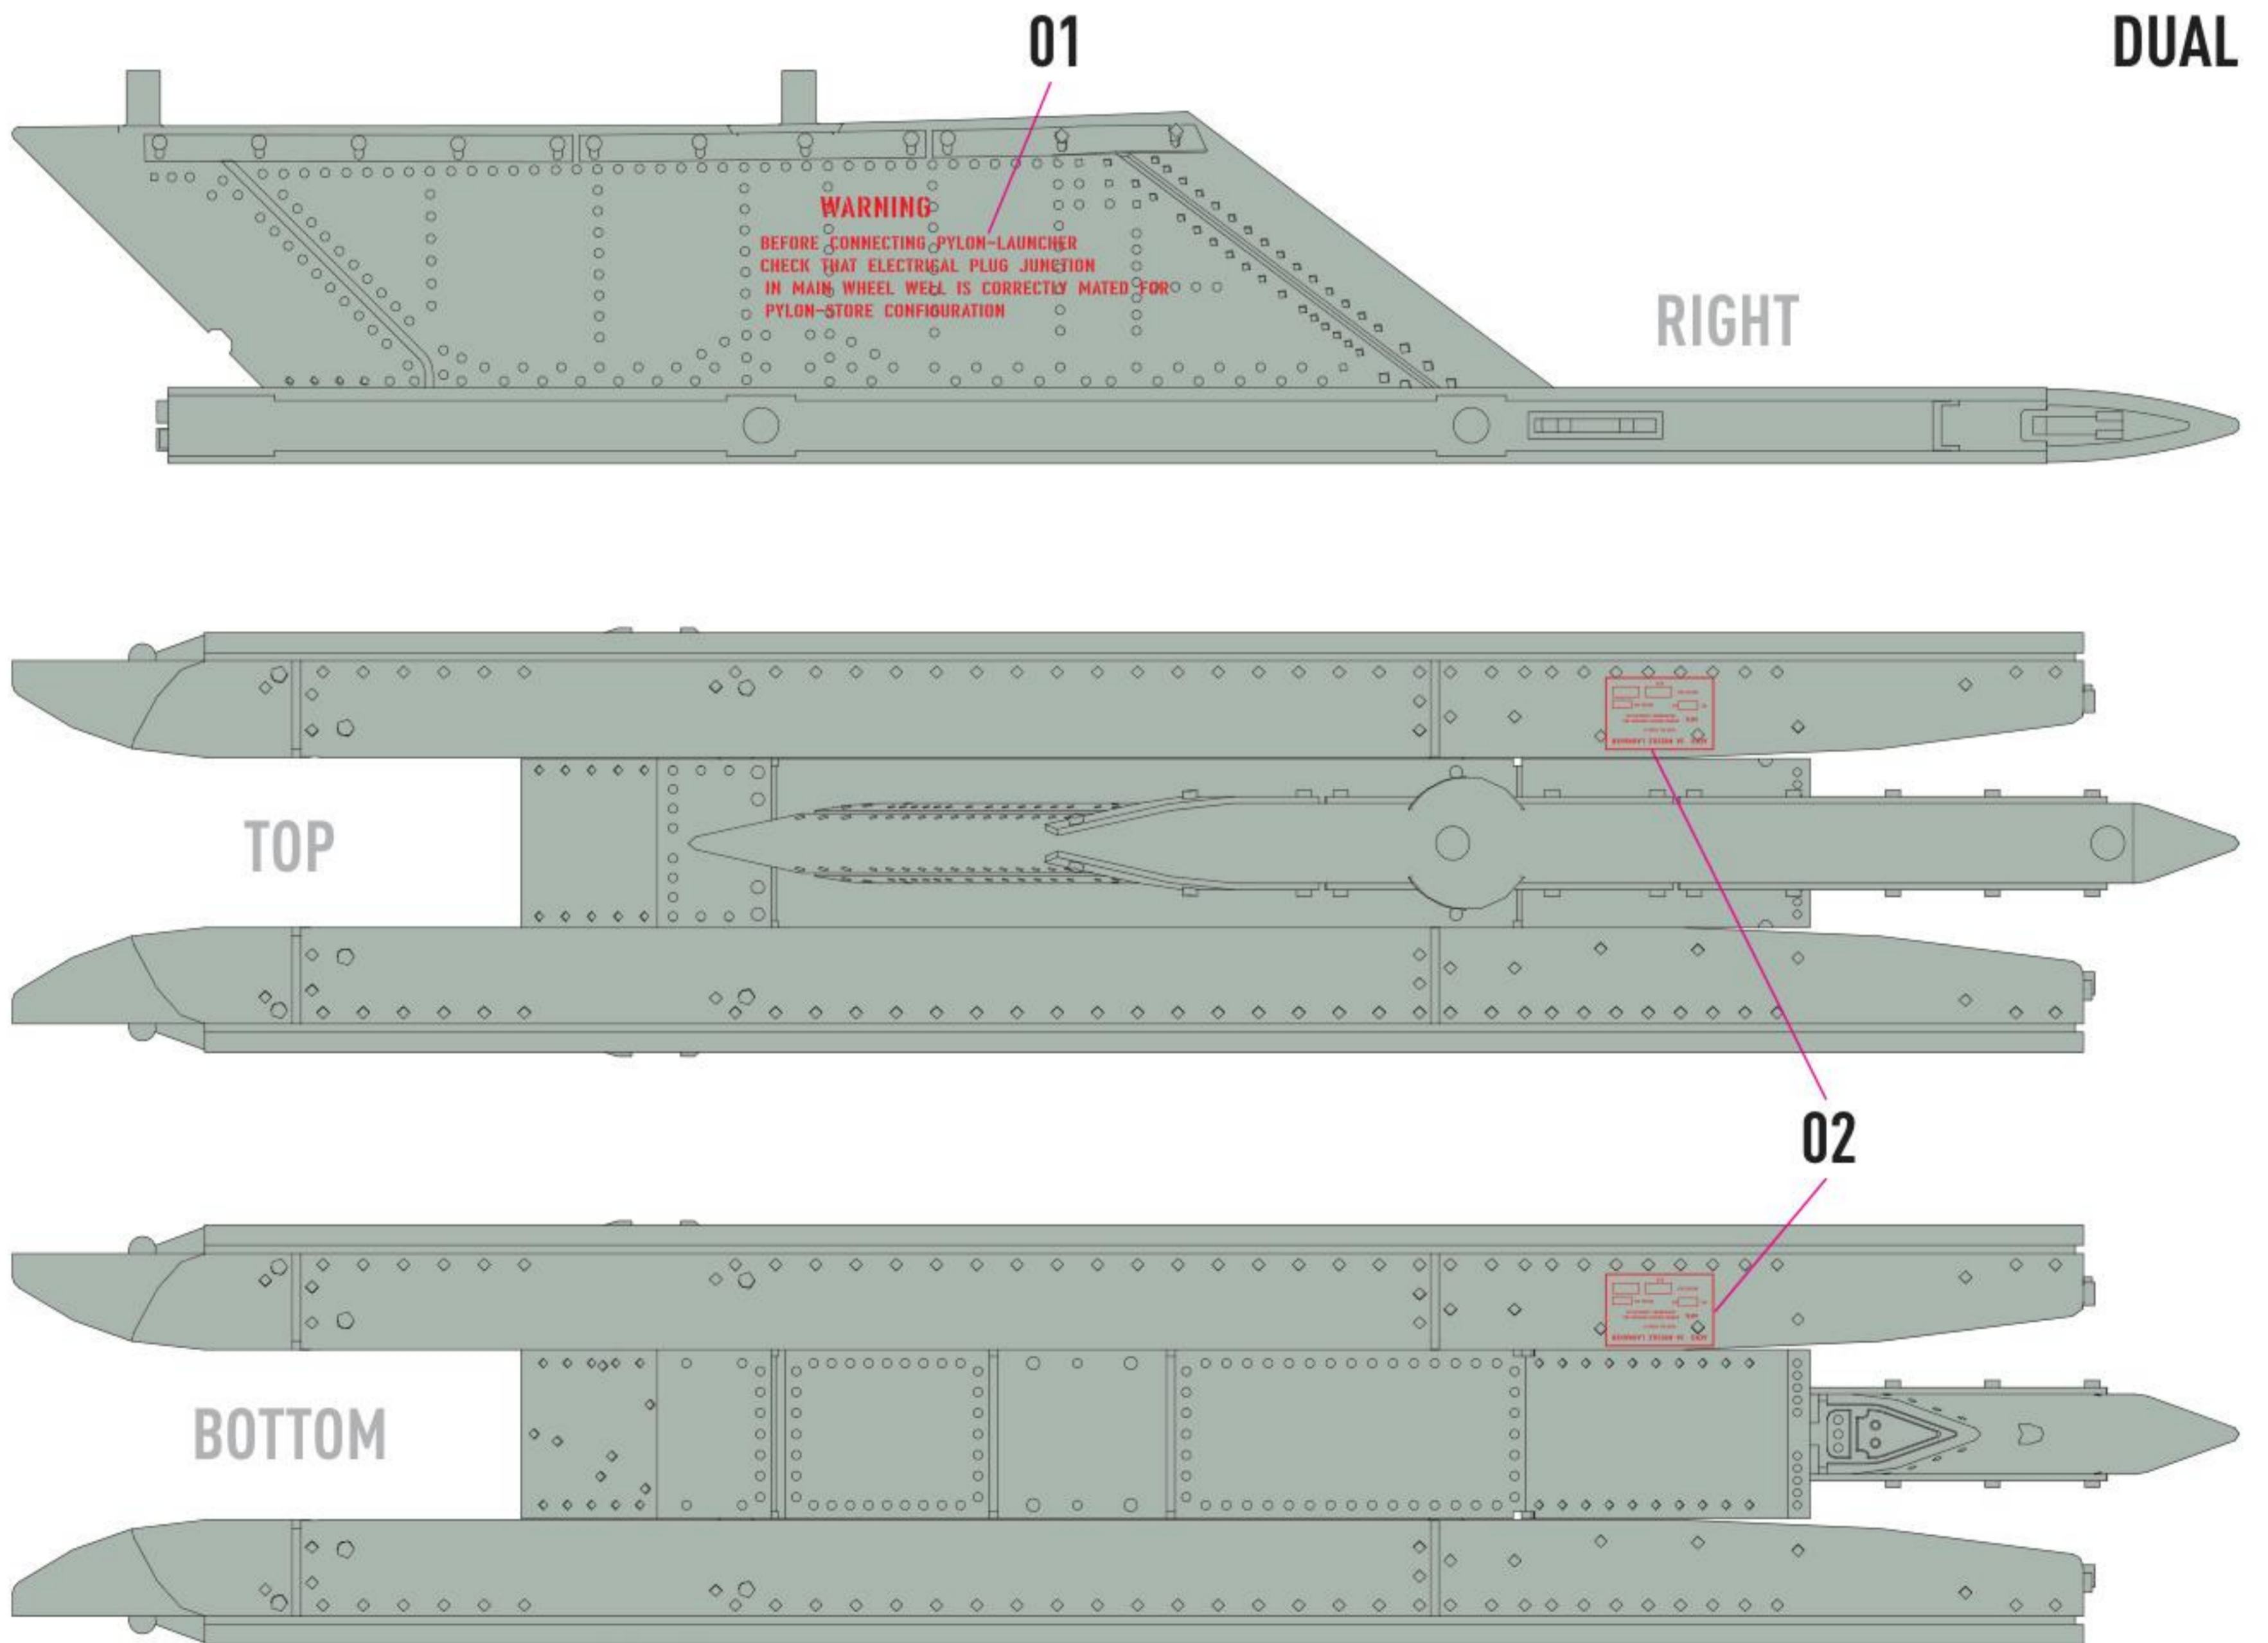

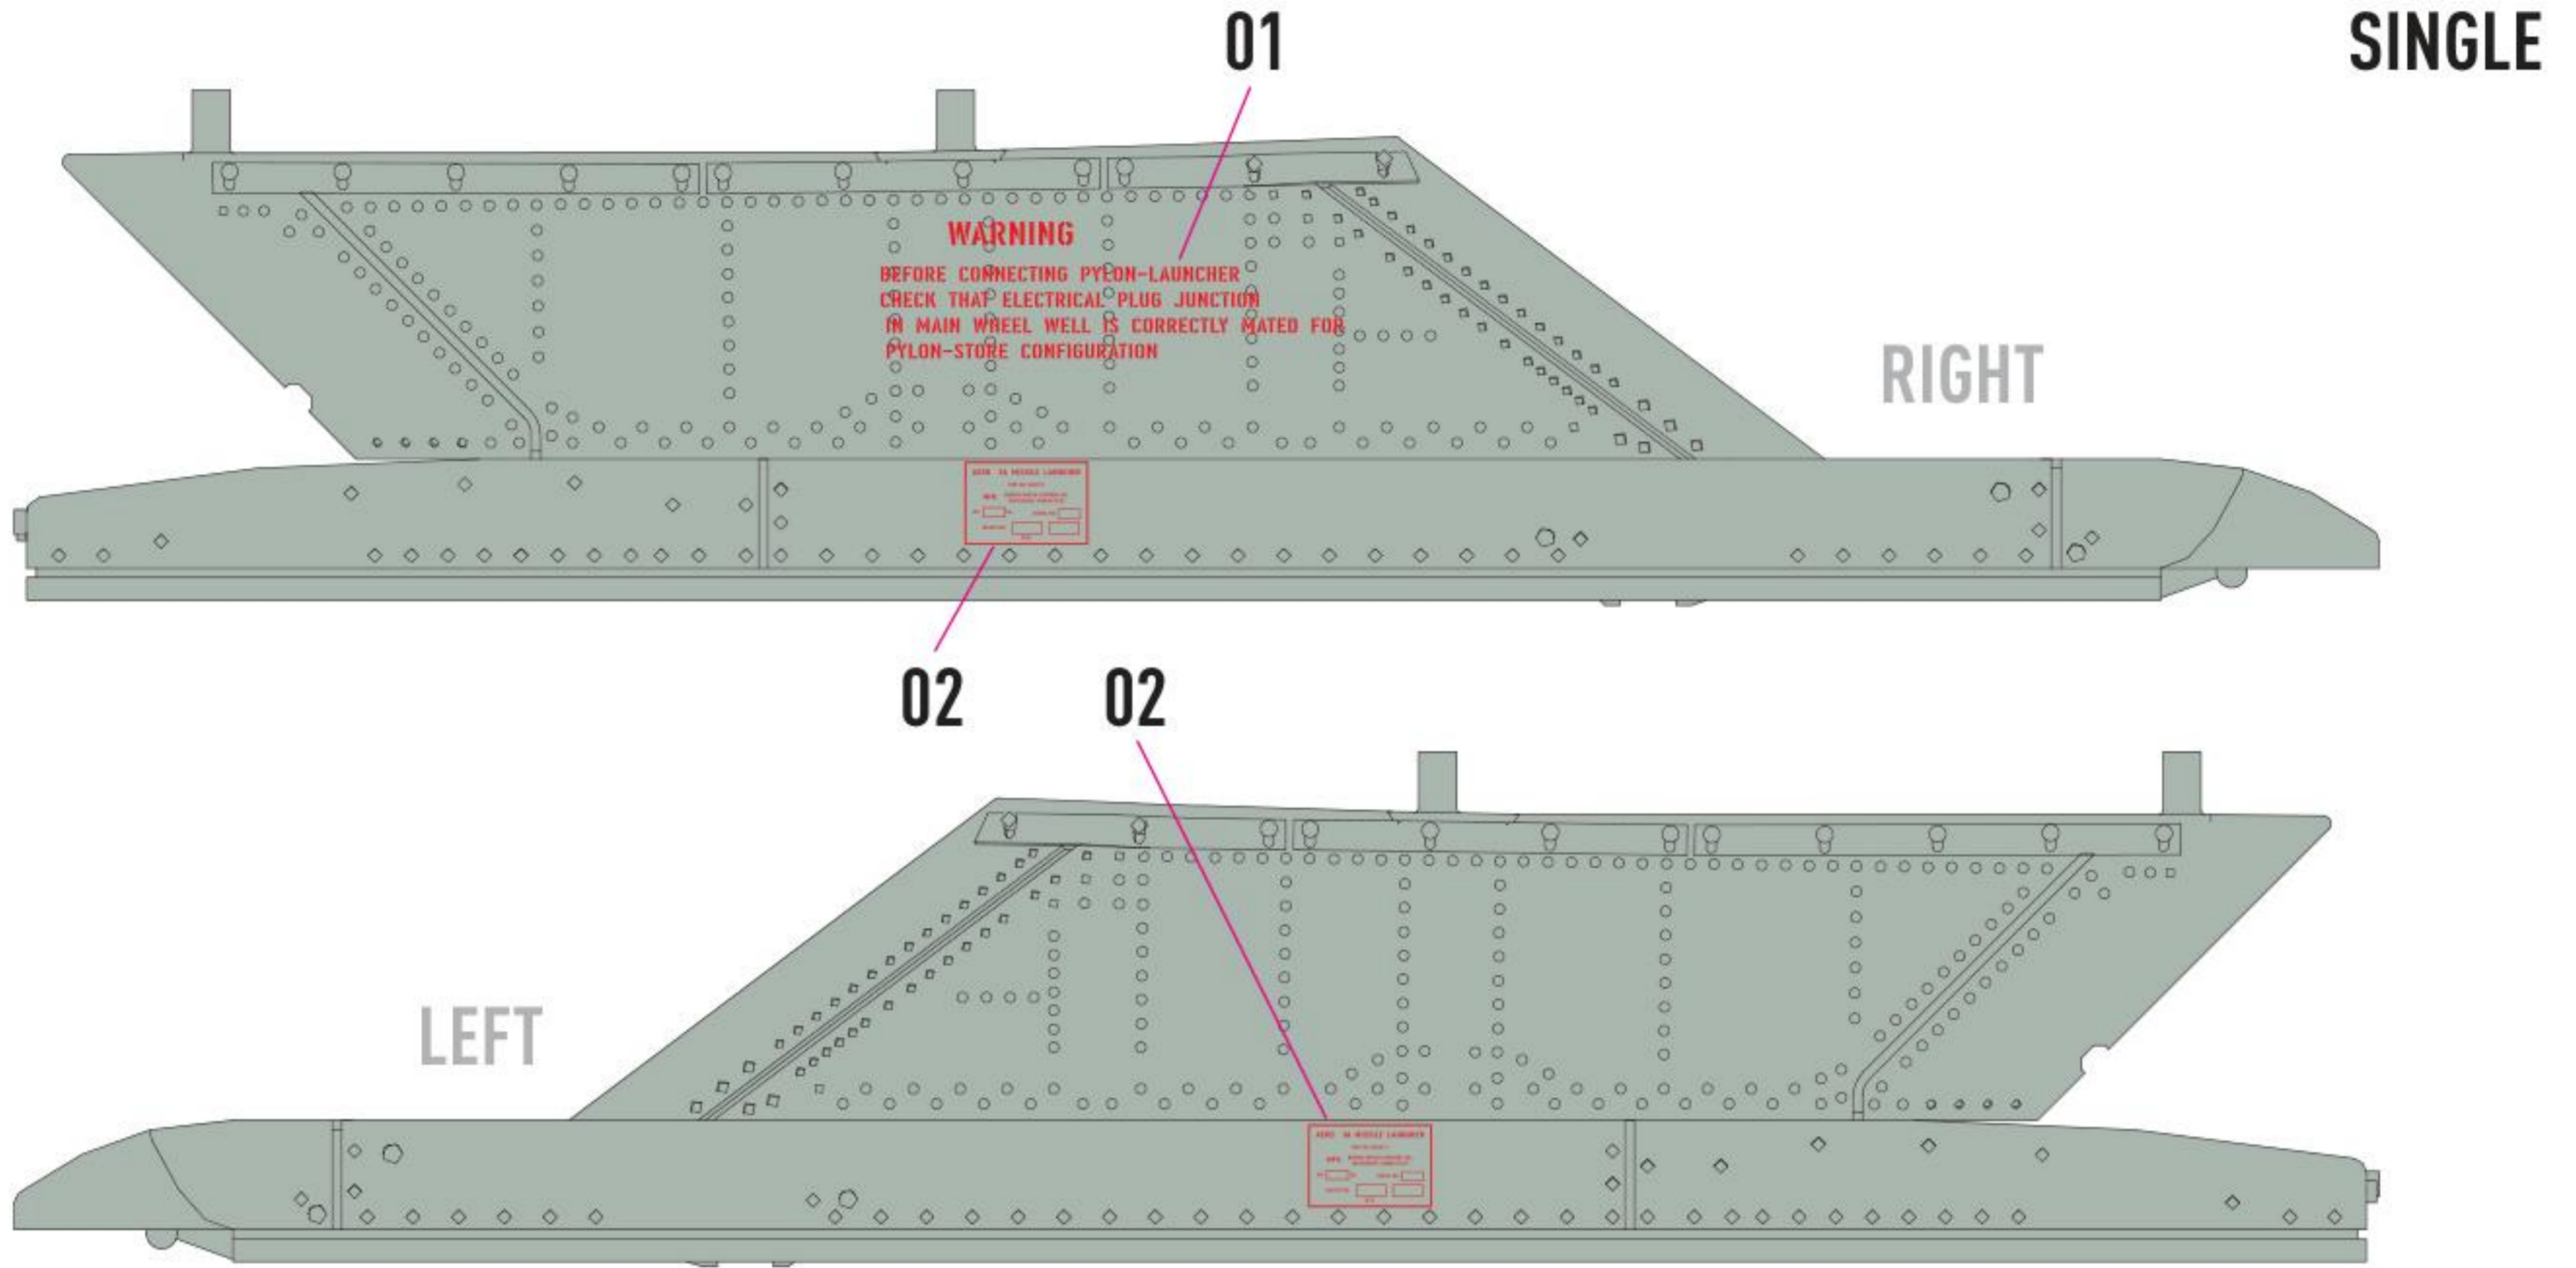

PAINT PYLON IN THE COLOR OF THE AIRCRAFT