

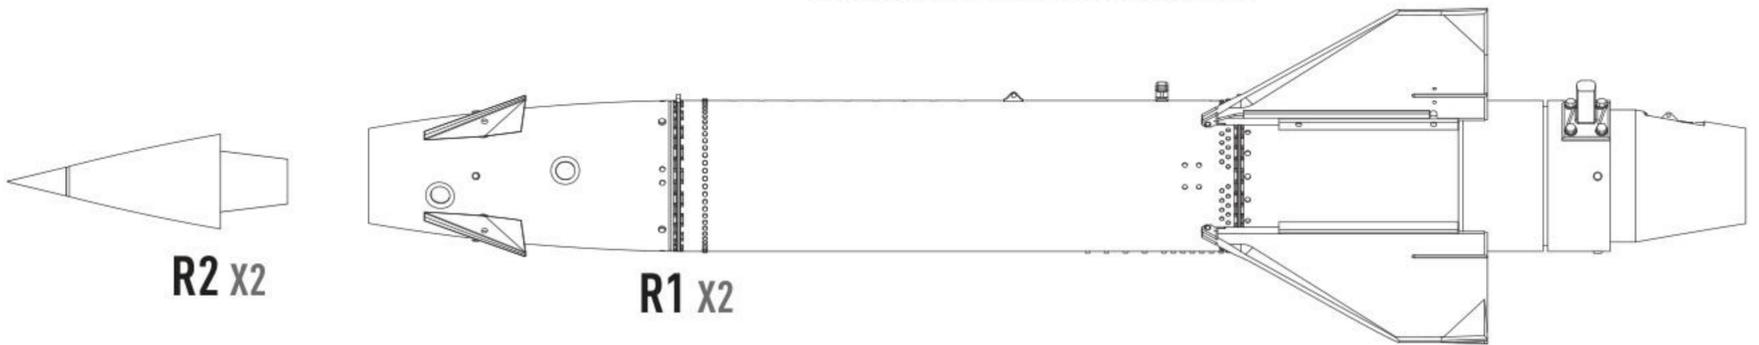





**DETAILS AFTER REMOVAL
FROM SUPPORTS**

 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

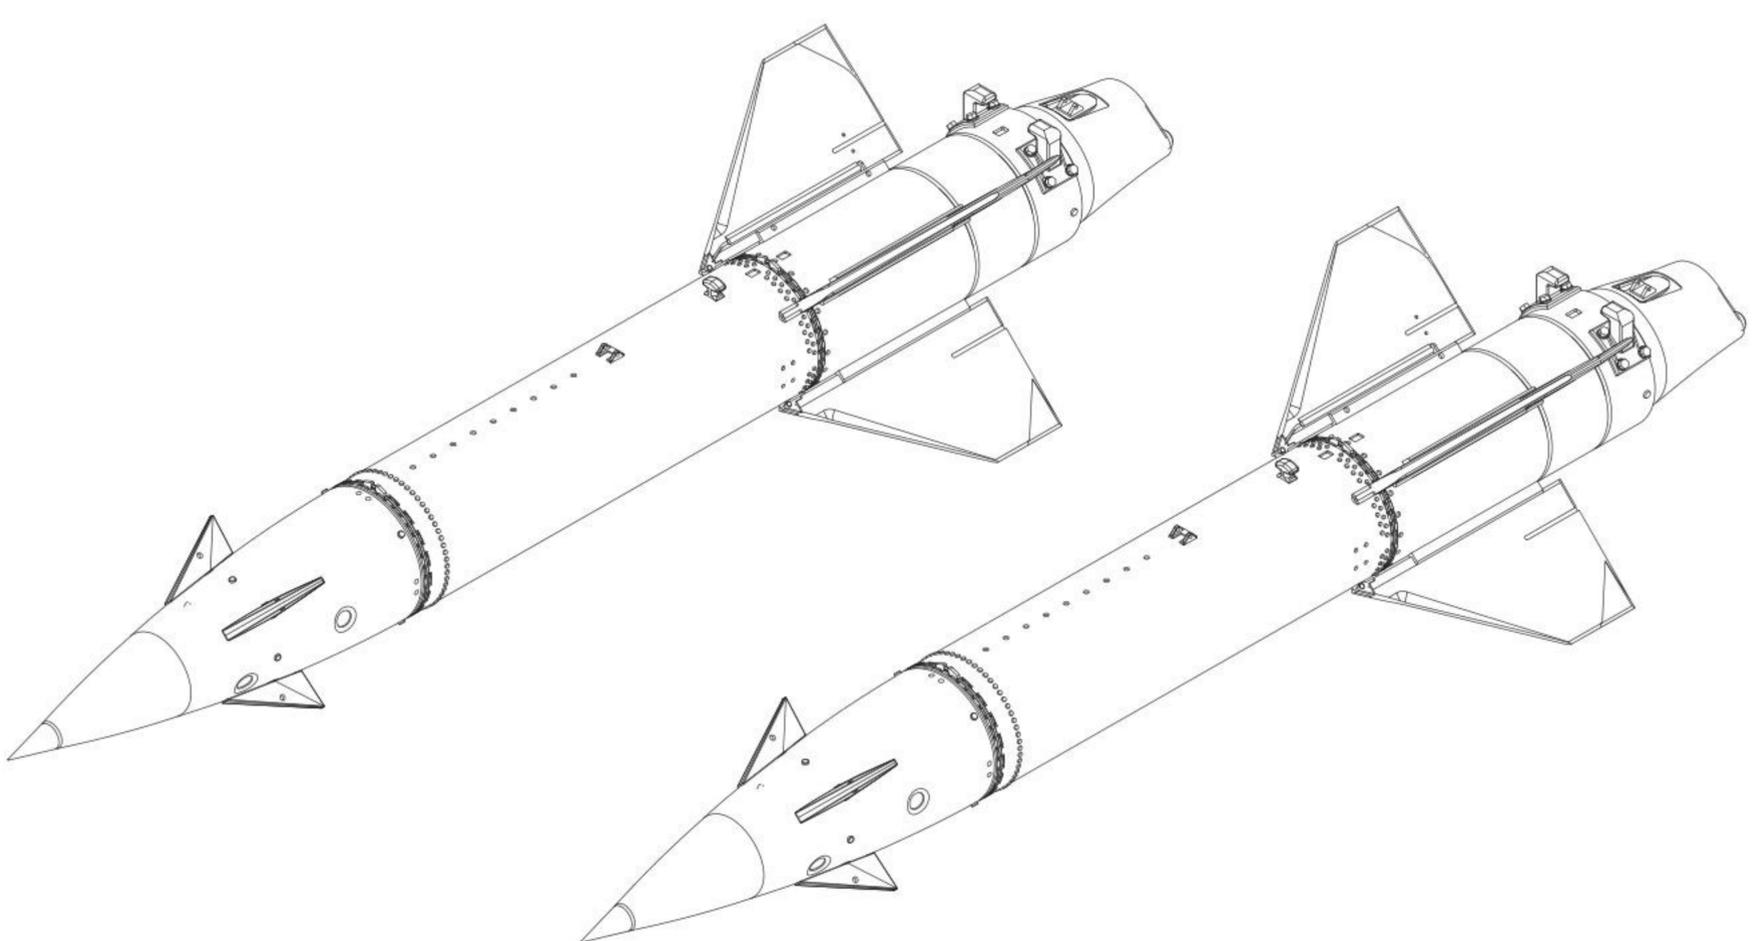

1 X2

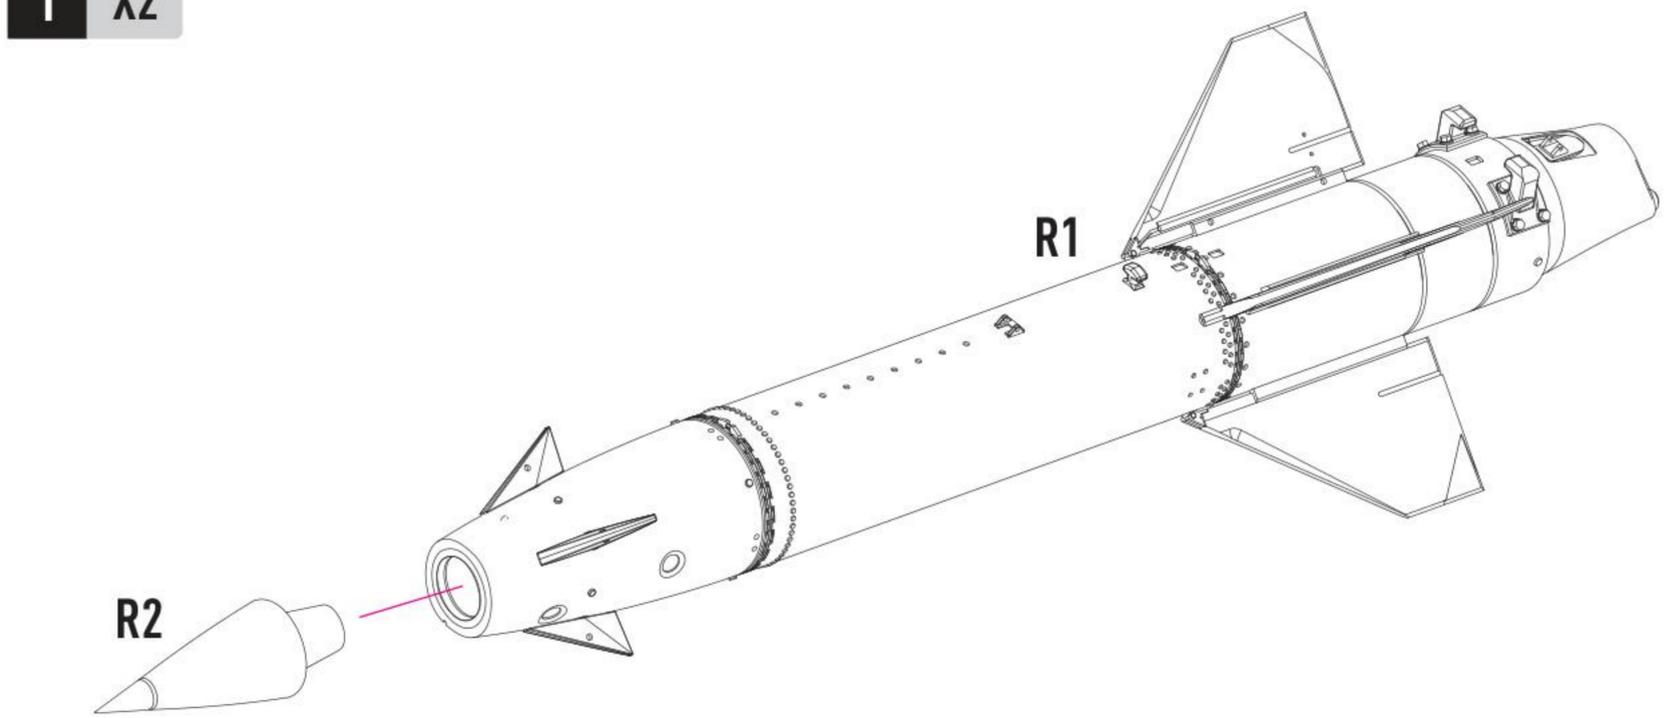

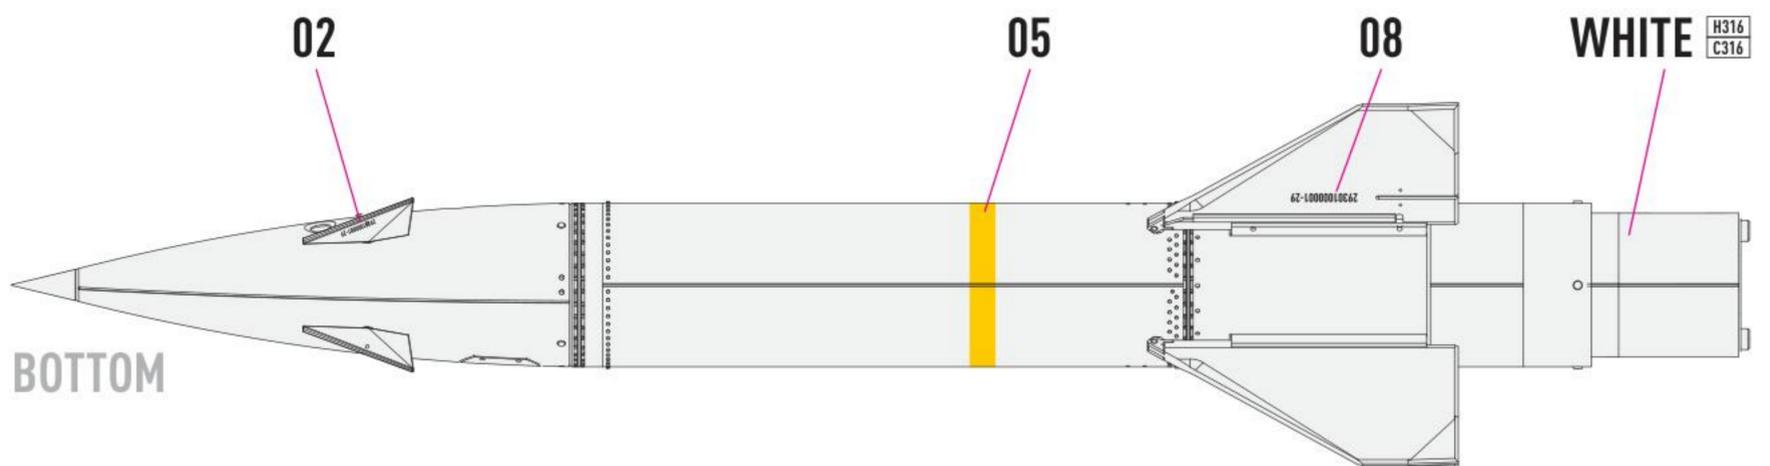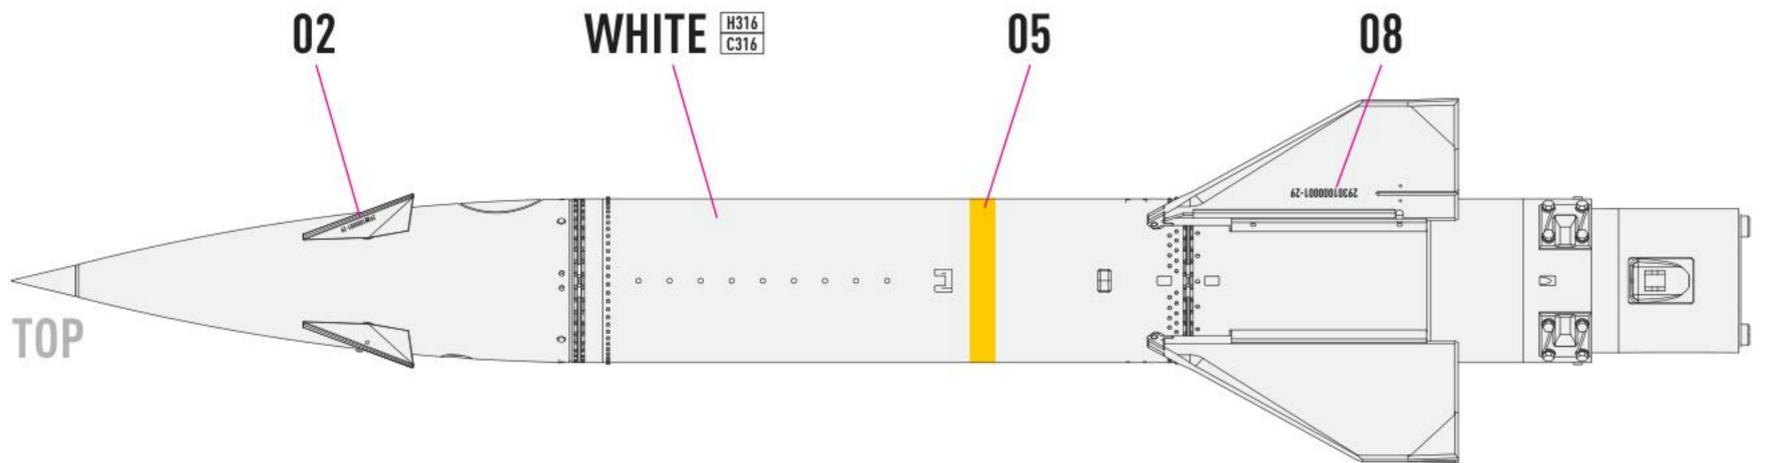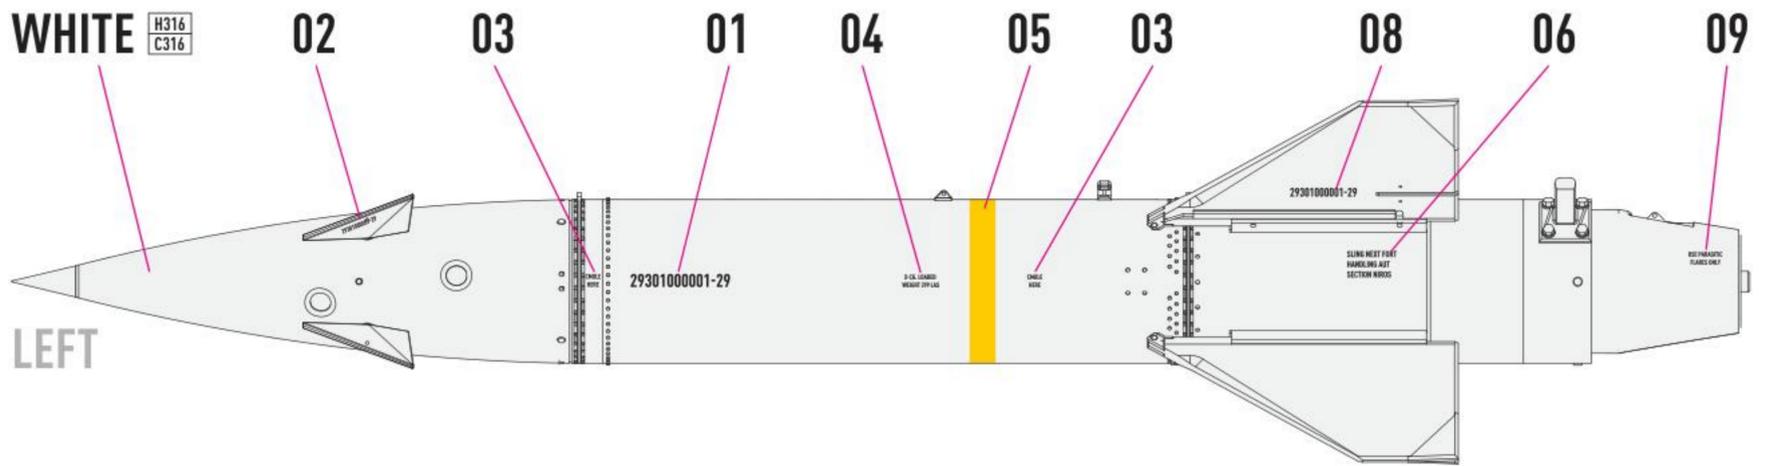

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
WHITE	H316	C316