



**DETAILS AFTER REMOVAL
FROM SUPPORTS**


 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

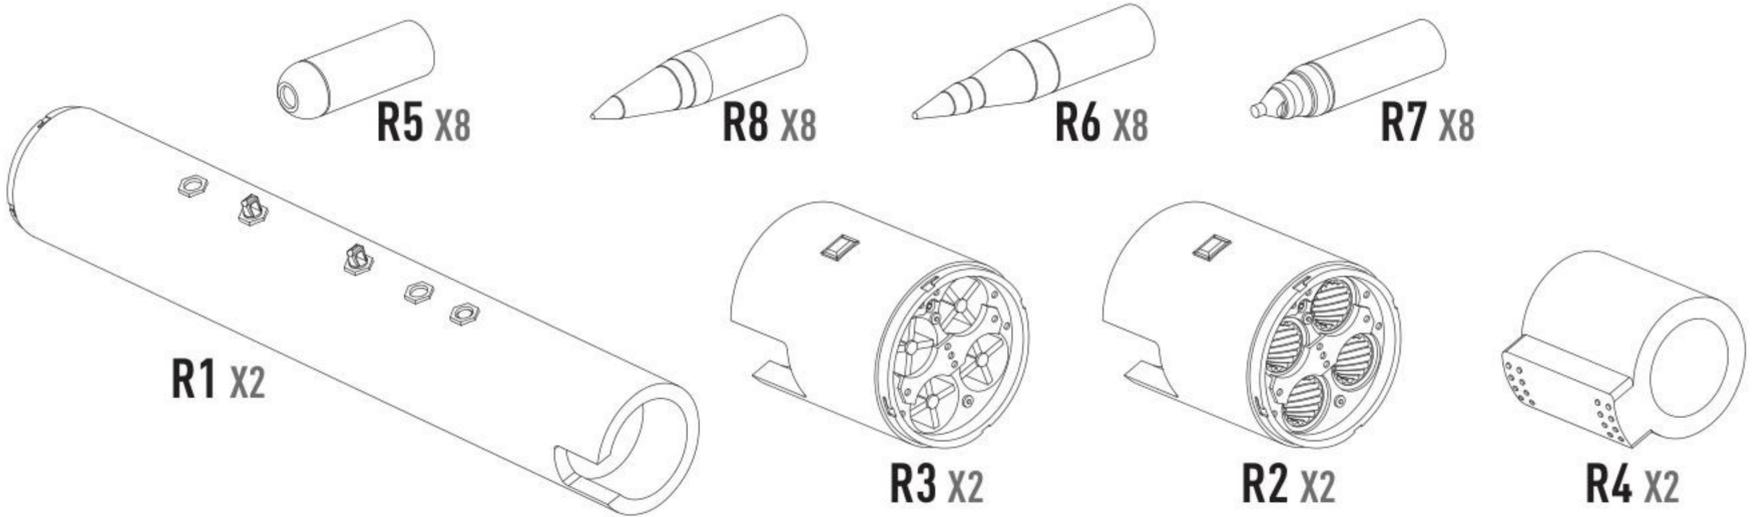





1 X2

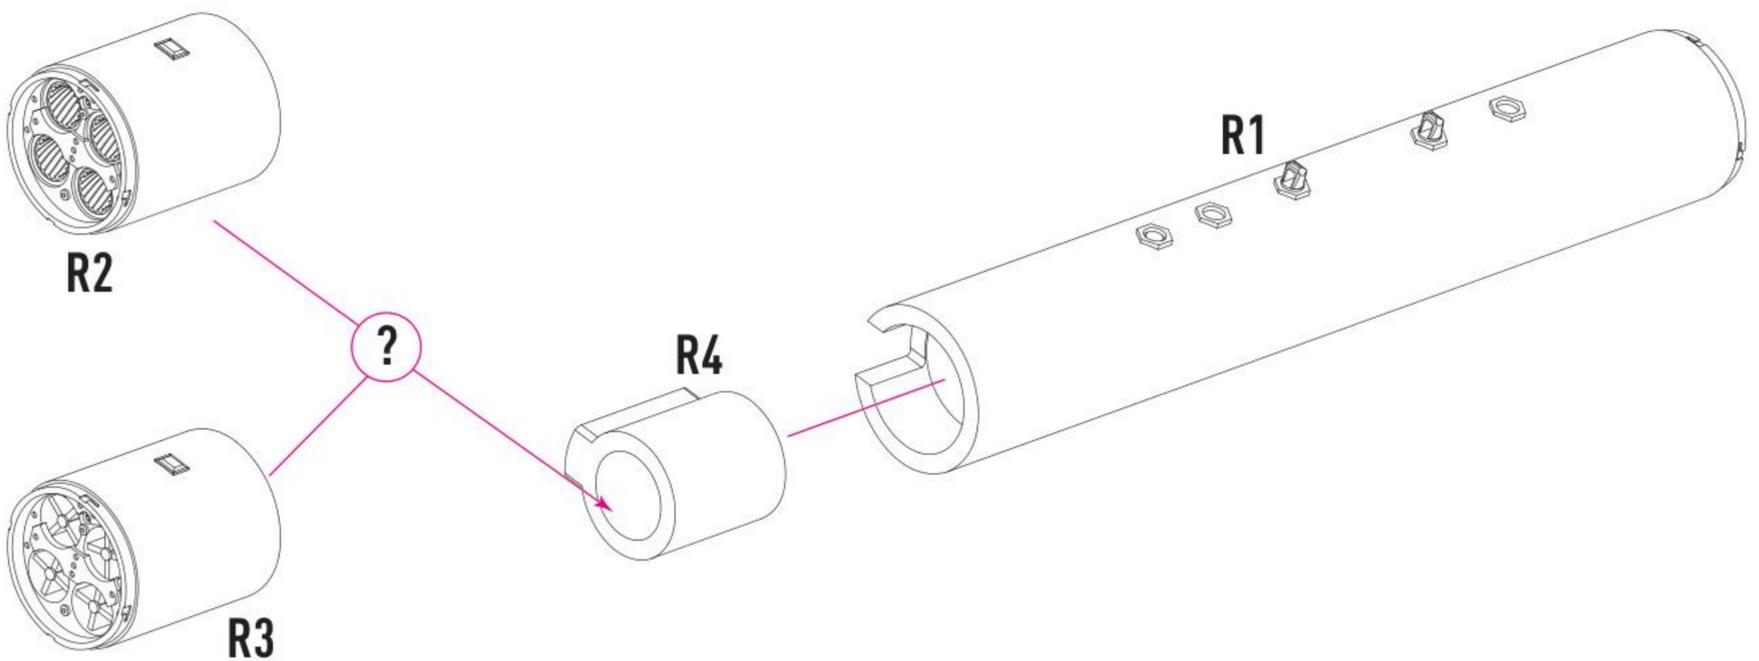

2 X2

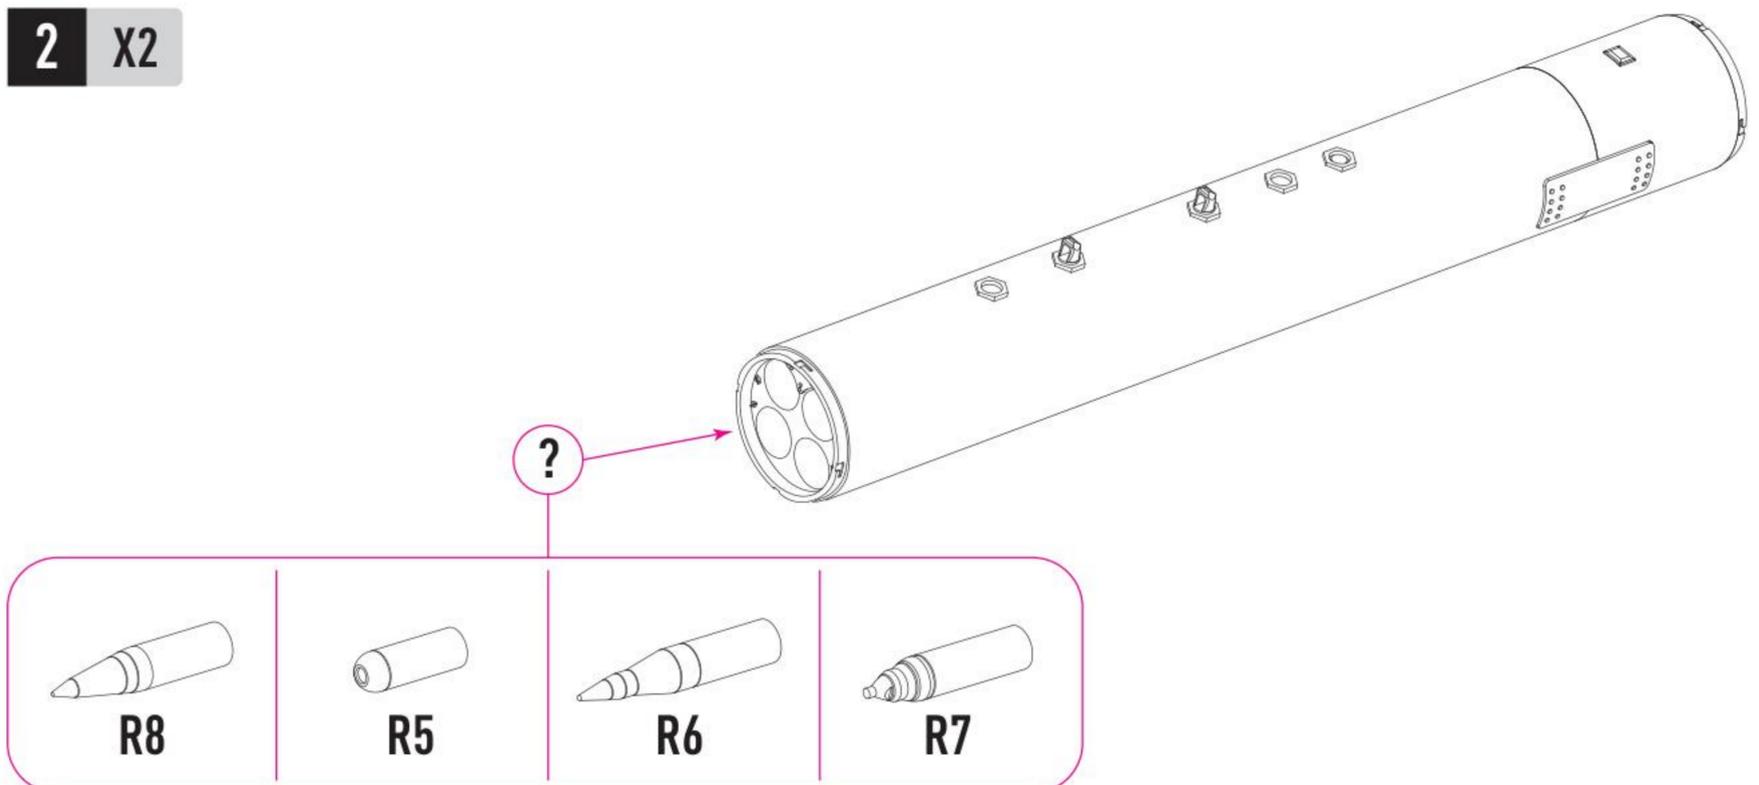

DECAL INSTRUCTION

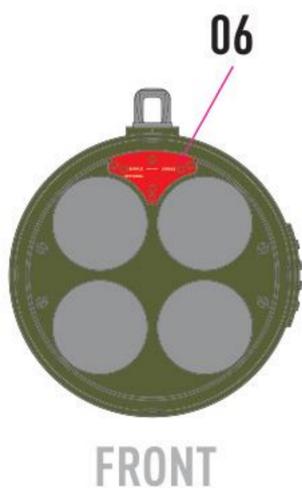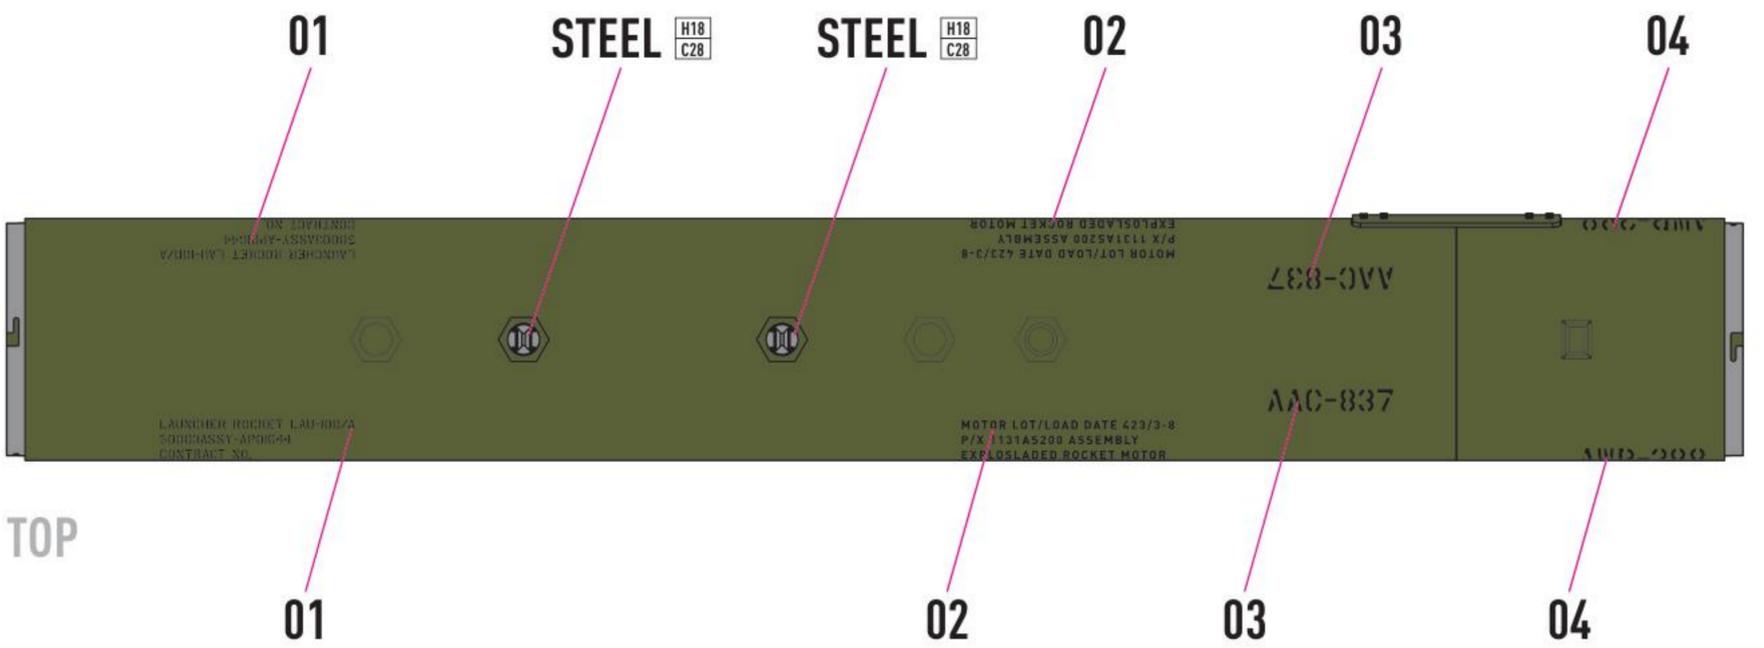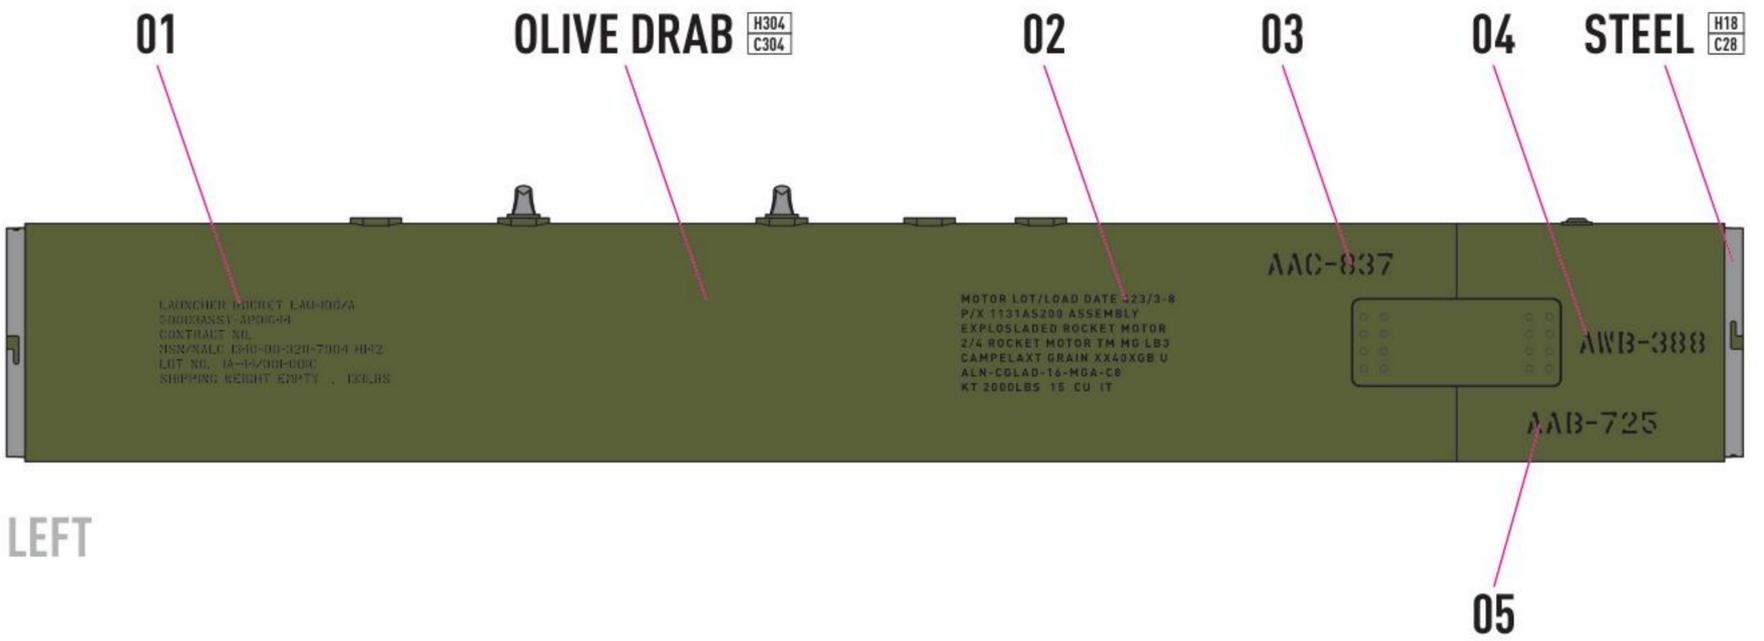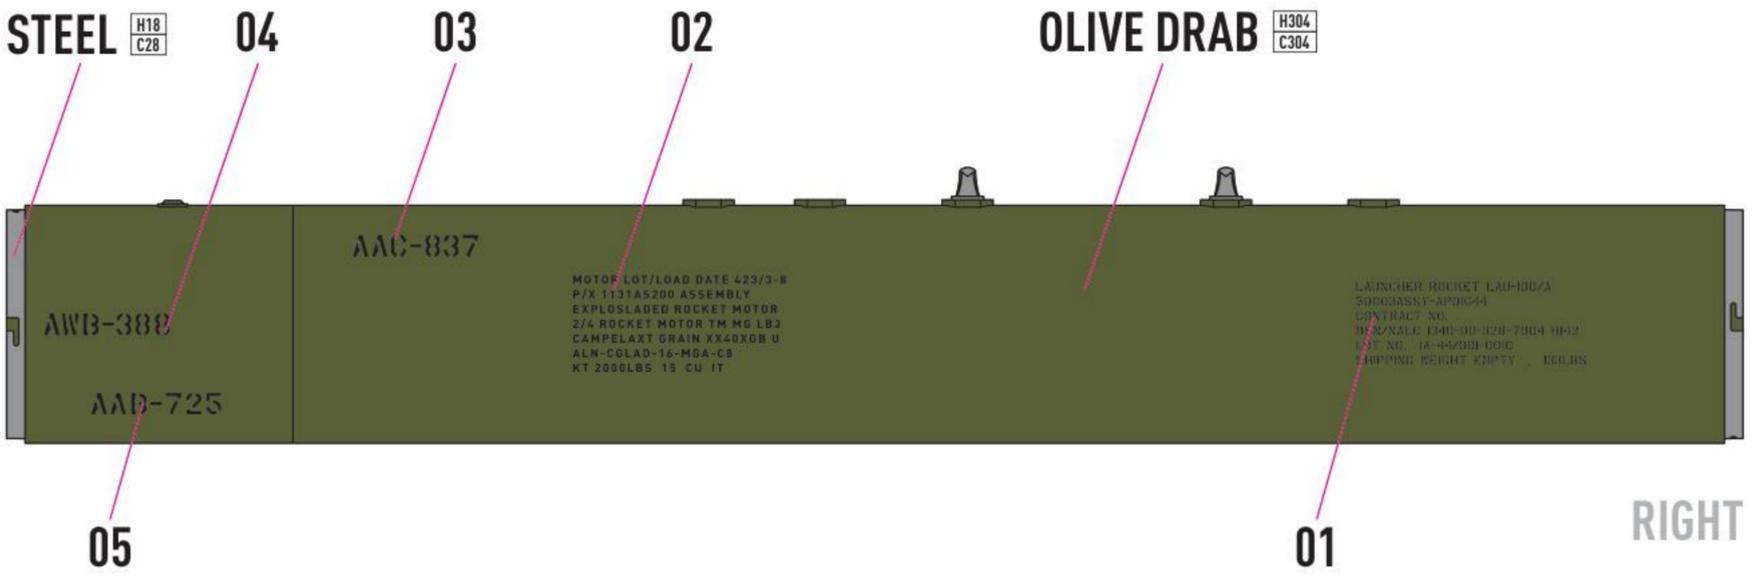

FRONT



BACK

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
STEEL	H18	C28