



 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

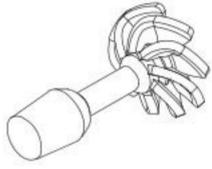

R3 X8

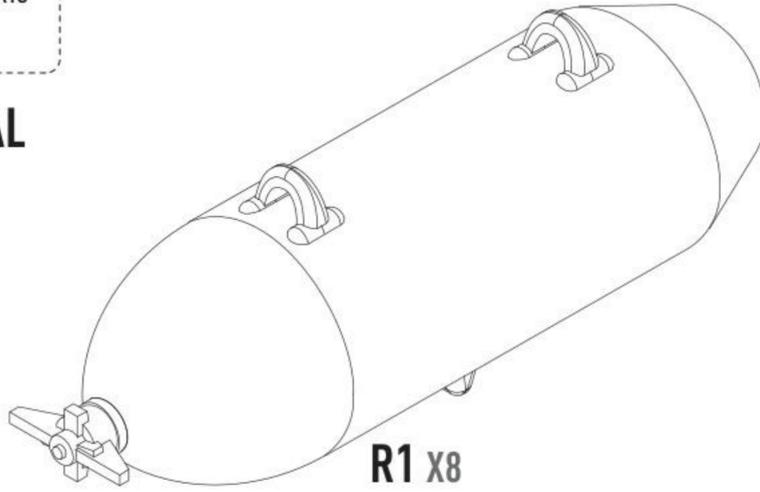


R1 X8

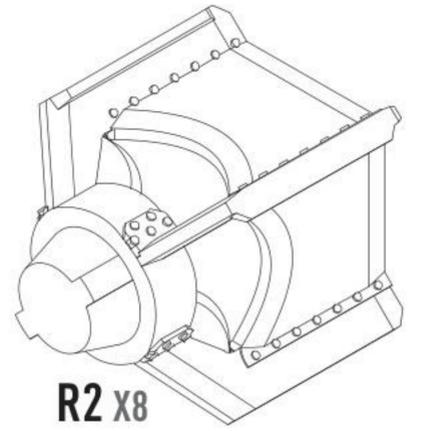


R2 X8

CUT THE ELEMENT FOR A DIFFERENT ANGLE

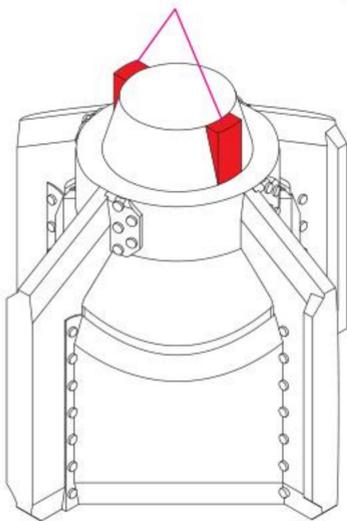

R2


1 X4

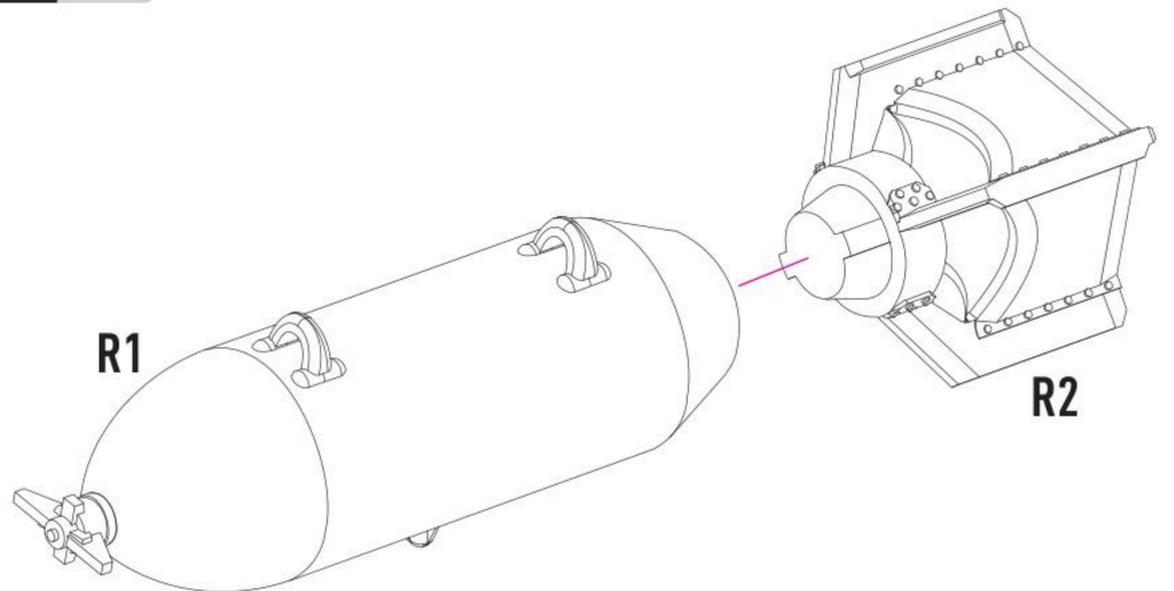

R1


R2

2 X4



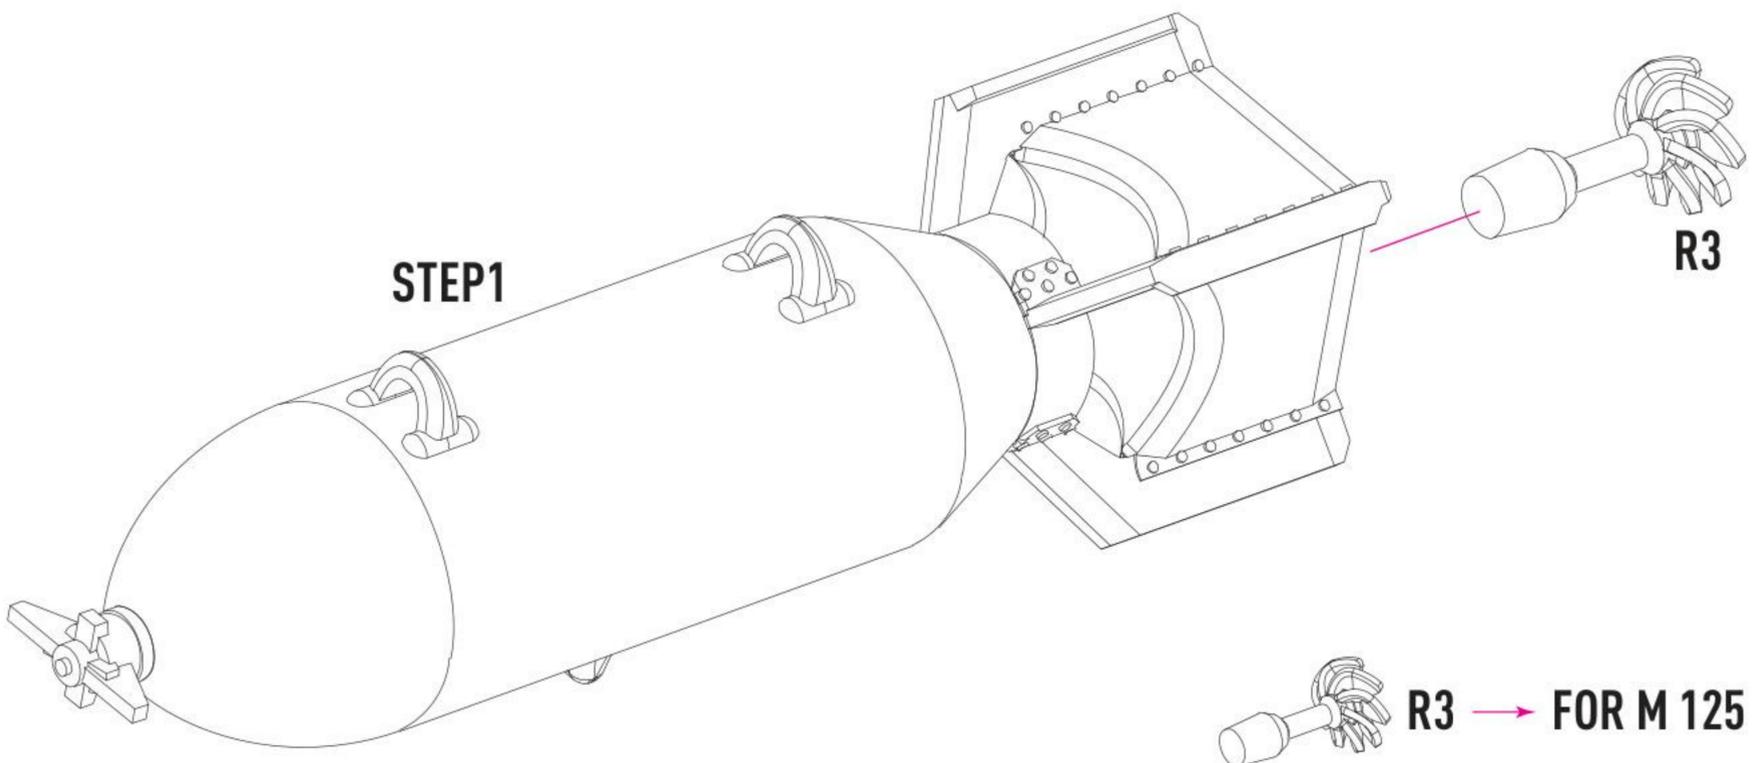


STEP1

R3



R3 → FOR M 125

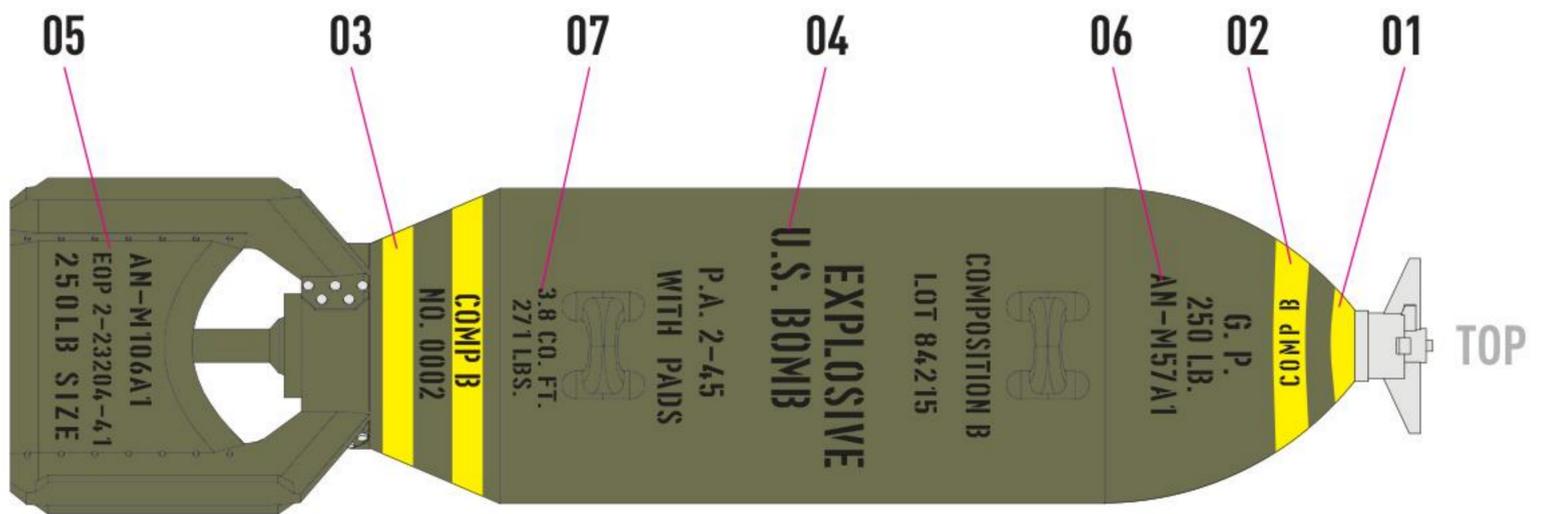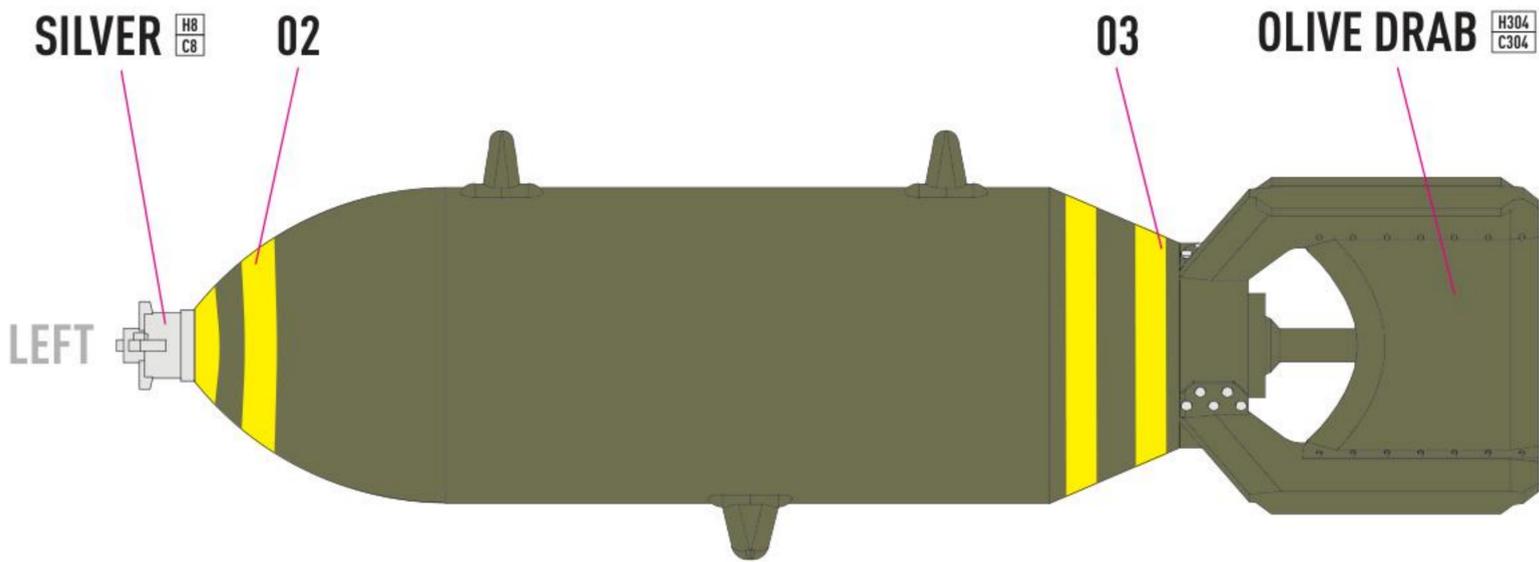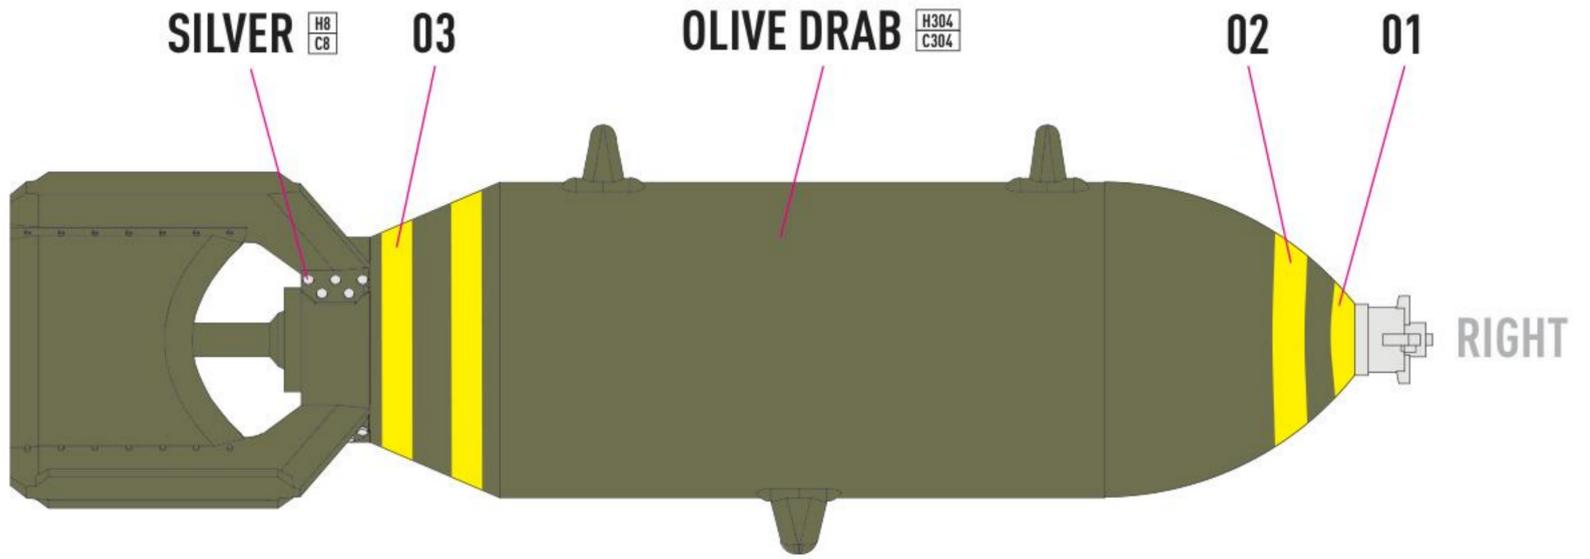

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SILVER	H8	C8