


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

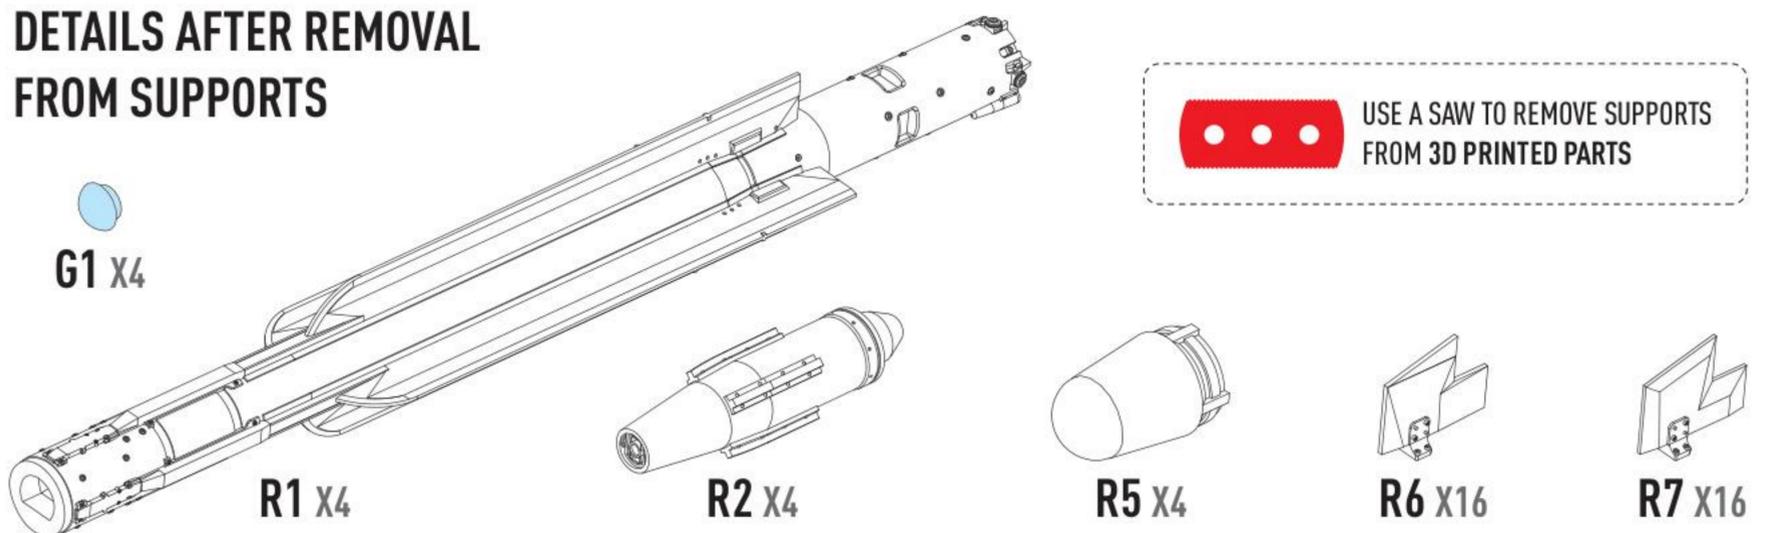


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

1 X4

USE PARTS R6 OR R7
ON YOUR CHOICE


OP OF UV GLUE

OR USE DROP
OF UV GLUE

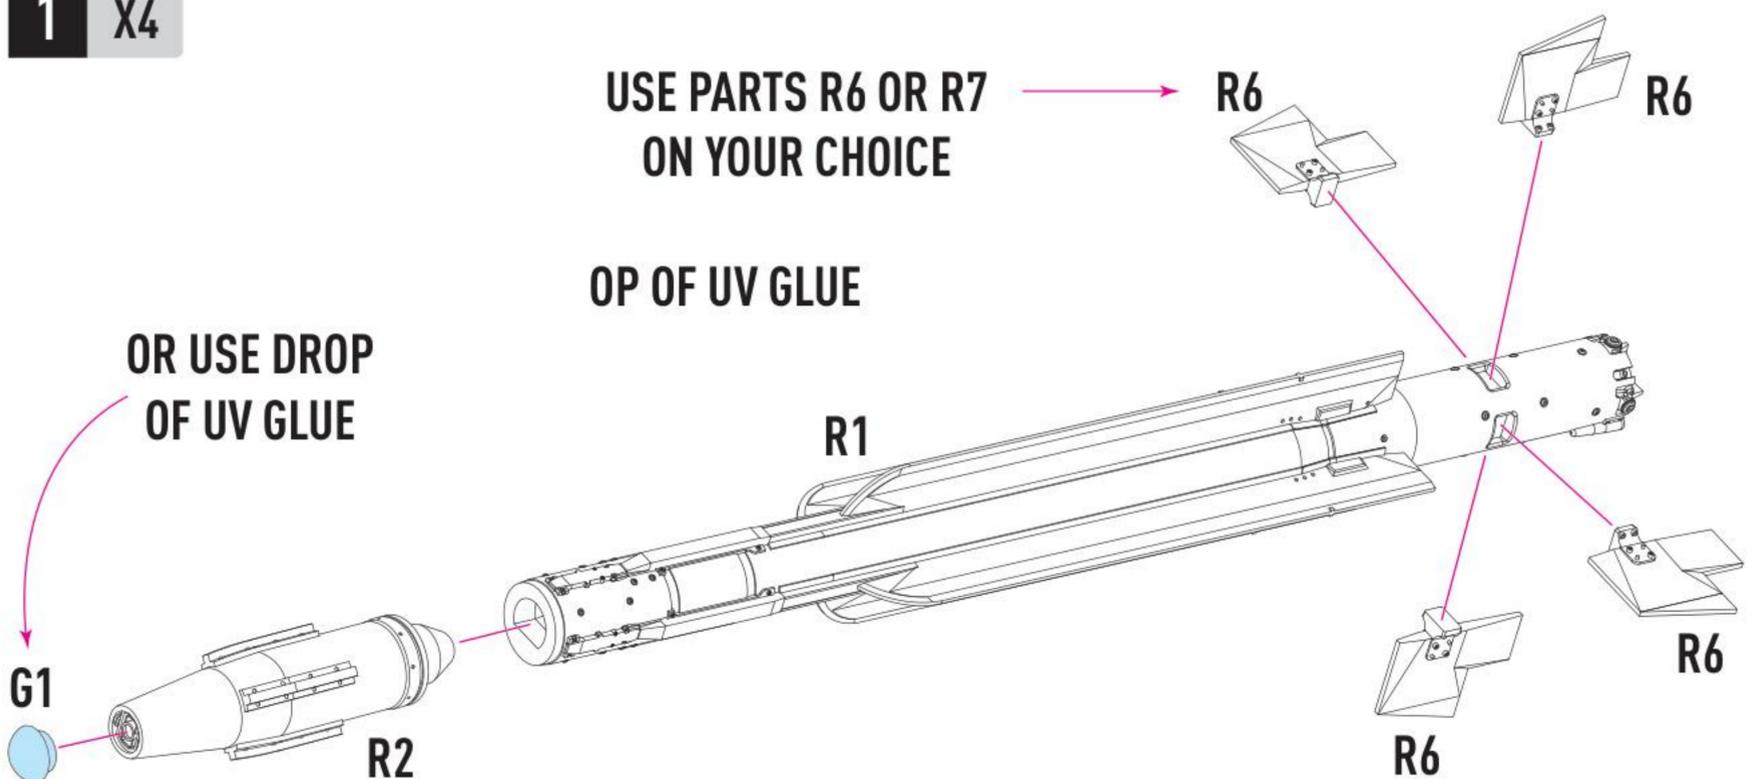


2 X4



USE R5 PART FOR COVER IR ROCKET HEAD
USE ONLY ON THE GROUND AND REMOVING BEFORE FLIGHT

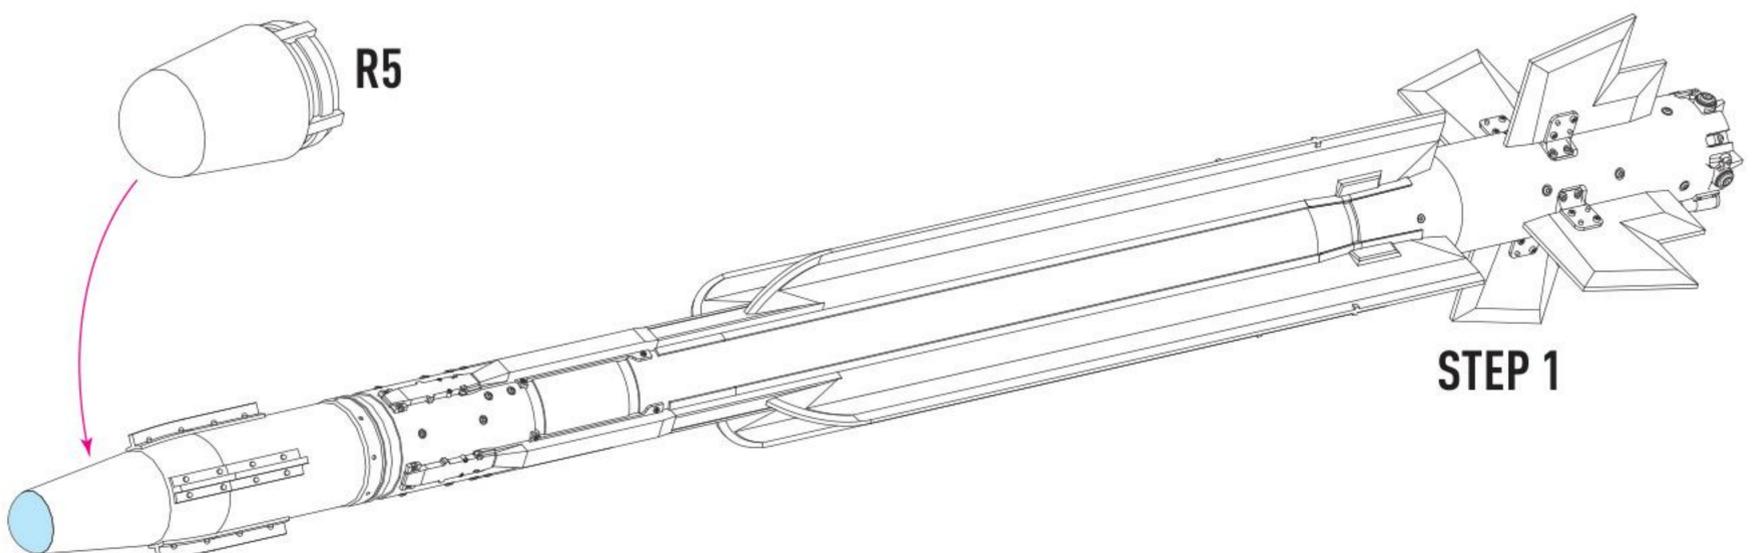

V1

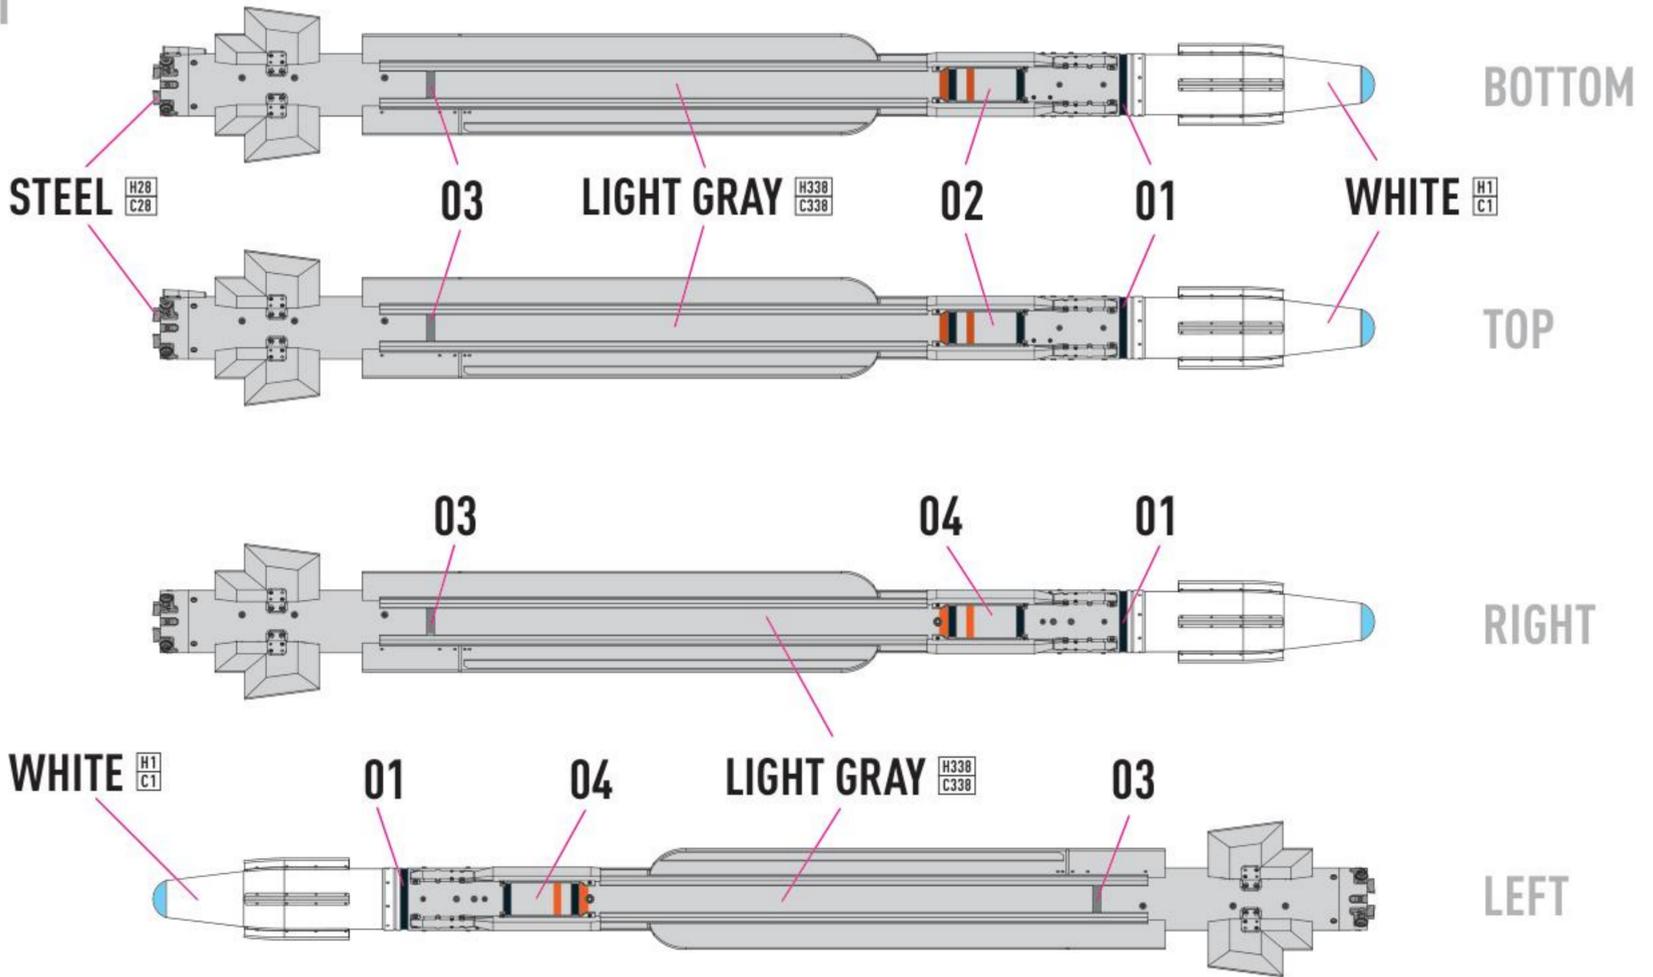

V2

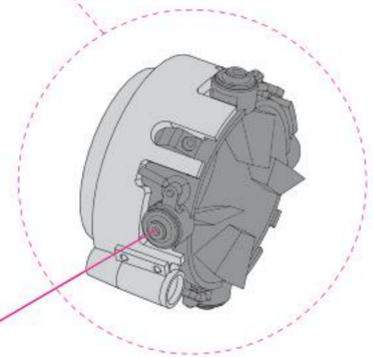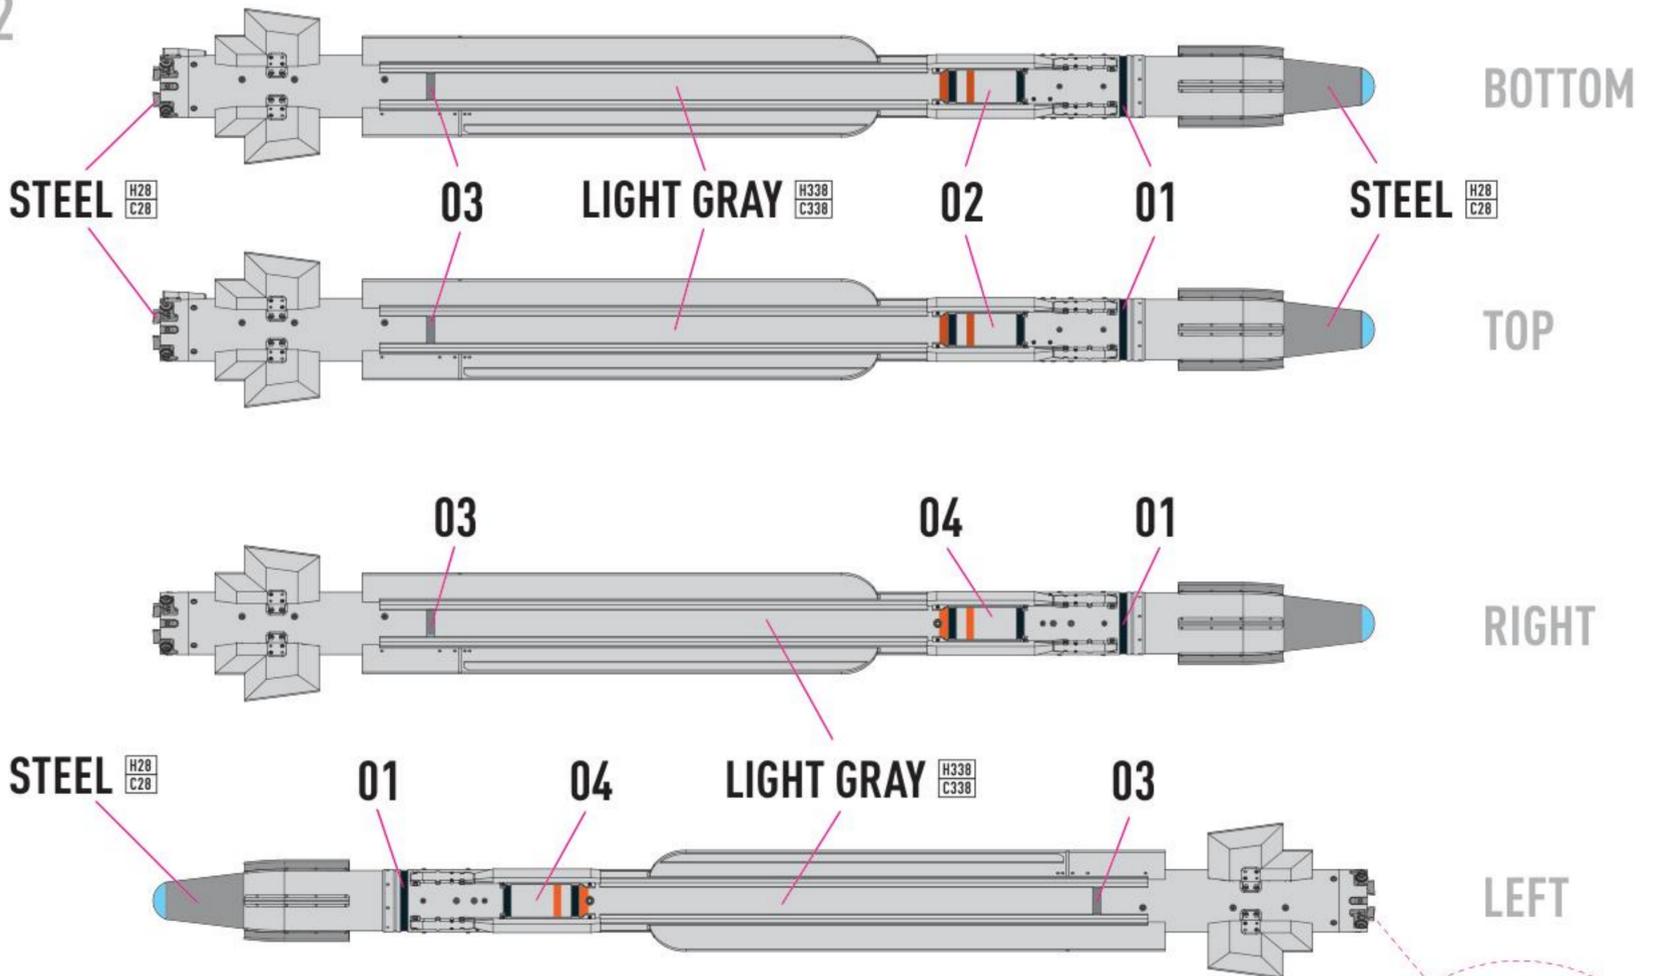

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR	FEDERAL STANDARD
WHITE	H1	C1	
LIGHT GRAY	H338	C338	FS36495
STEEL	H28	C28	