





USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

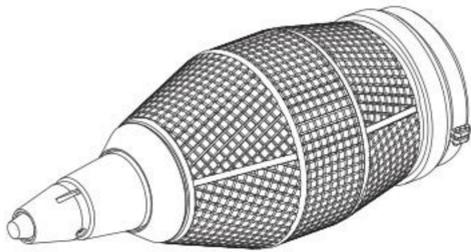

R4 X2

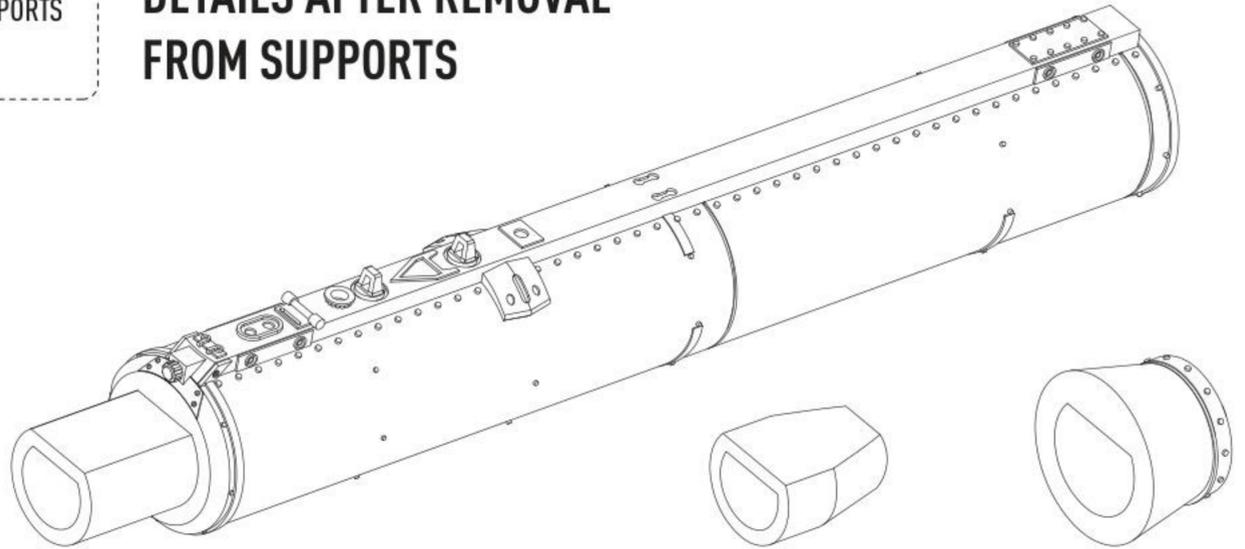

R1 X2

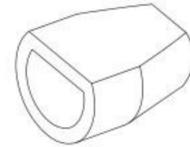


R2 X2




R3 X2




1 X2

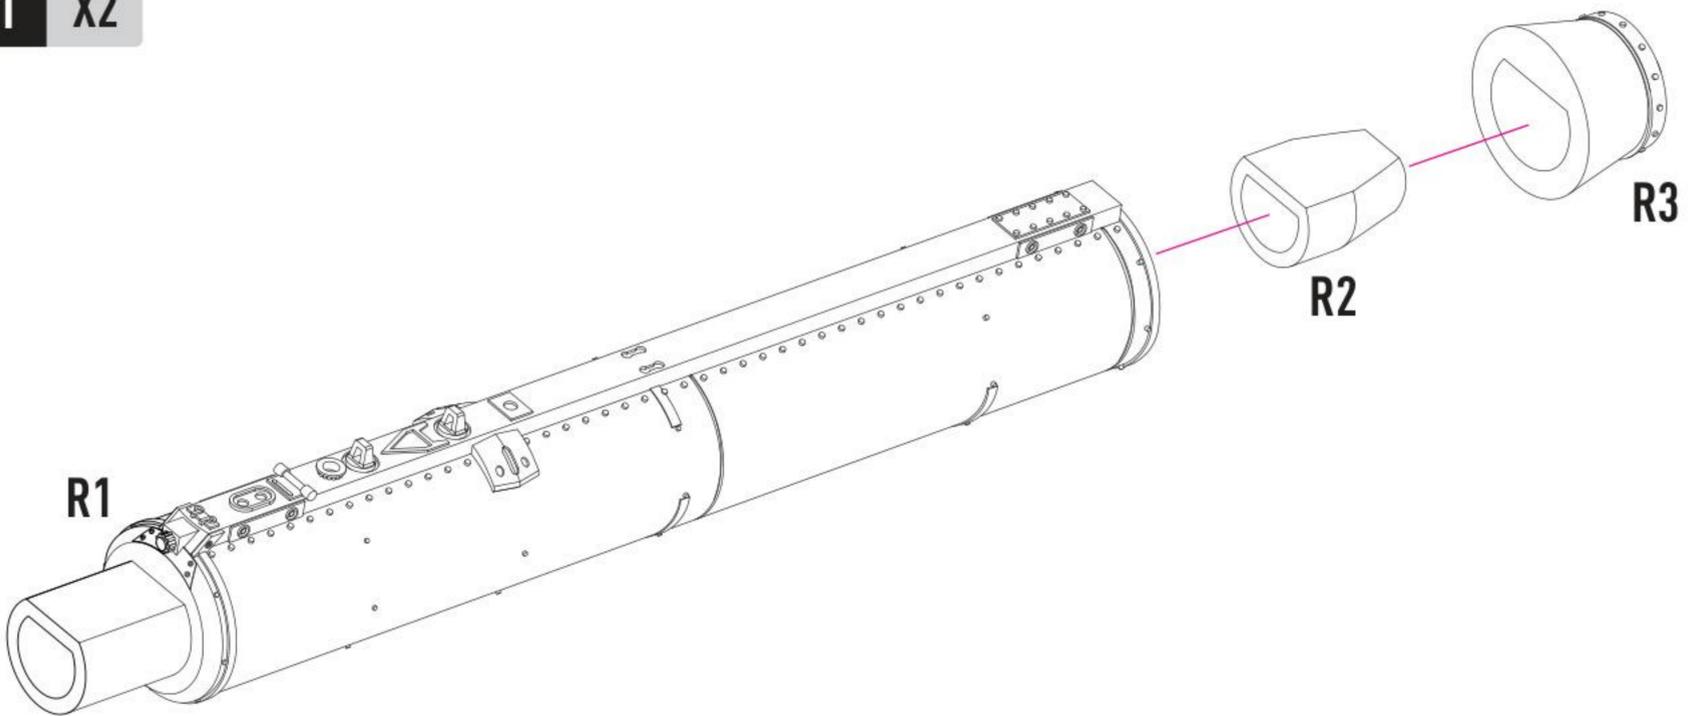

2 X2

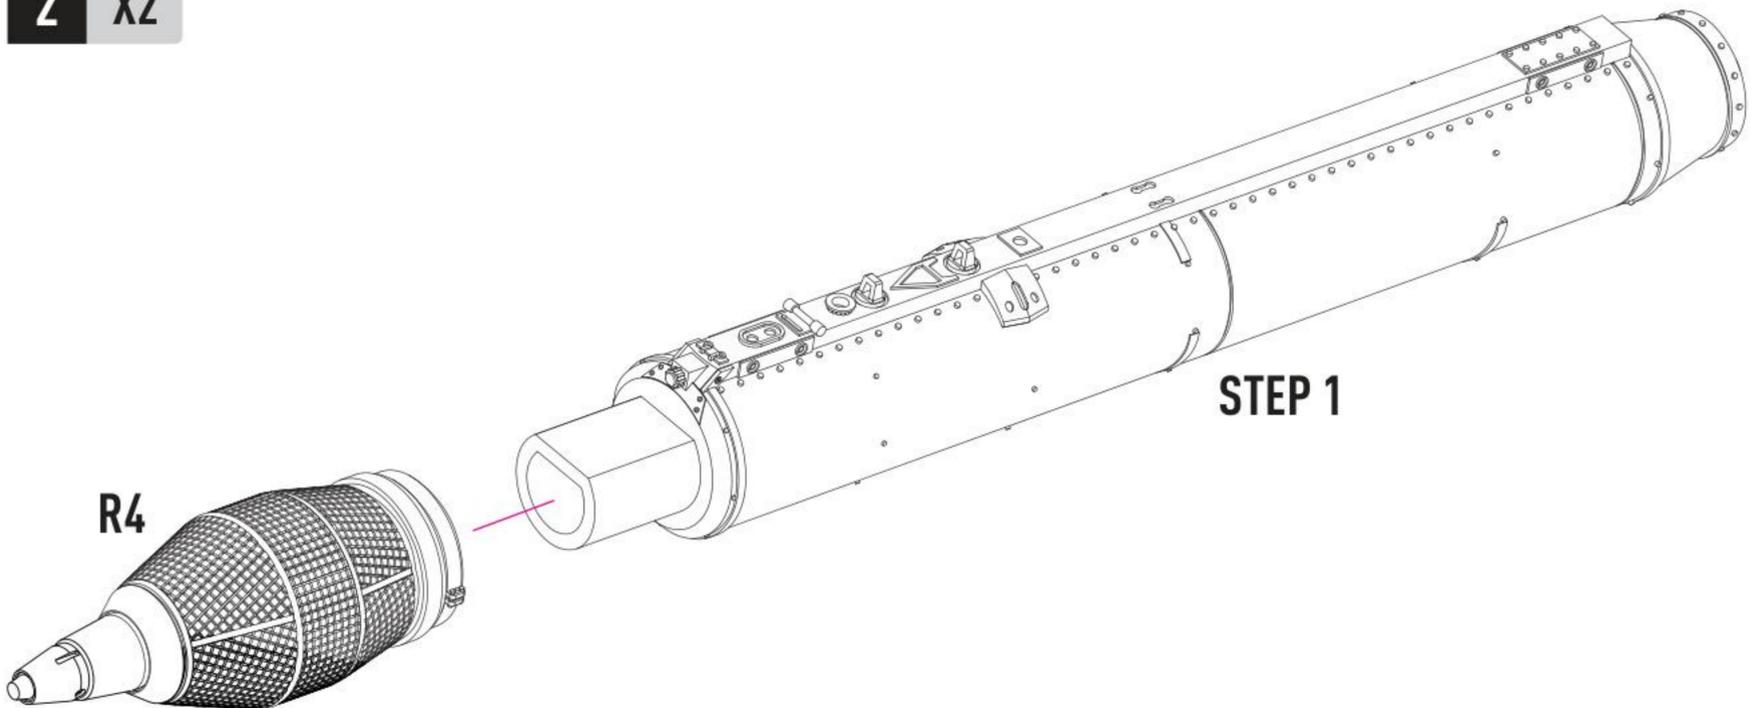

STEP 1

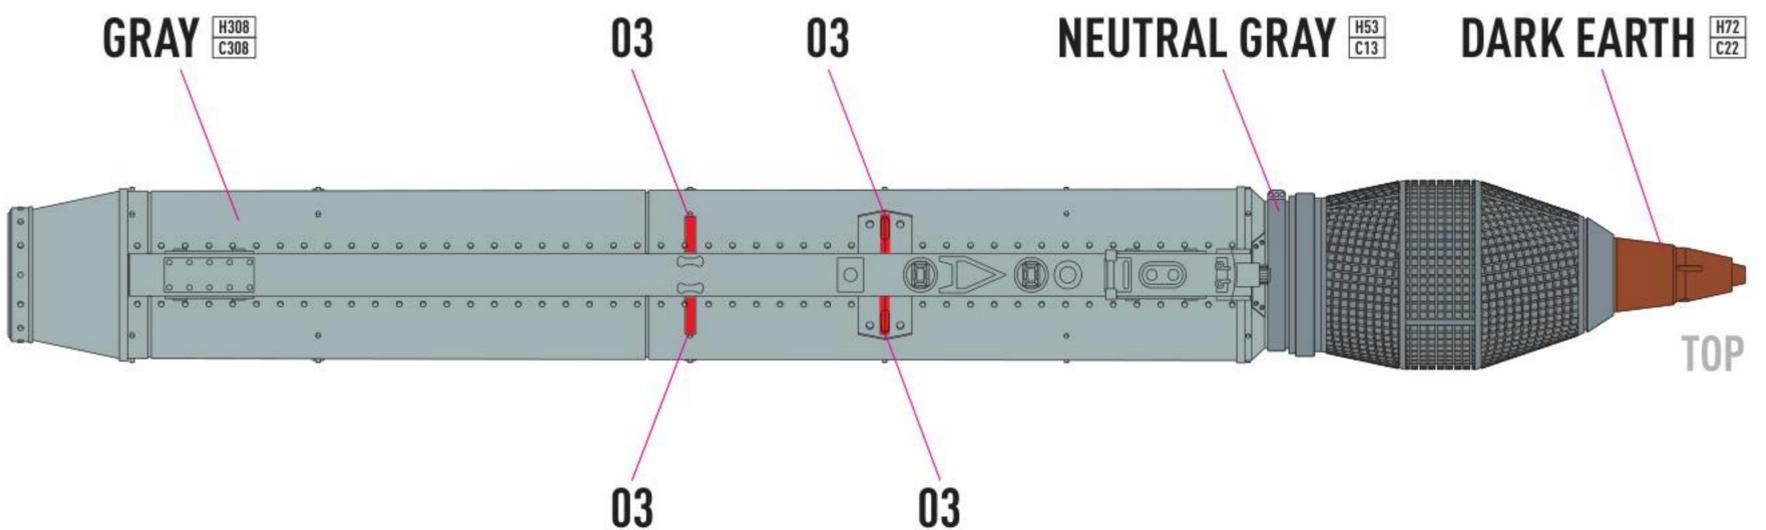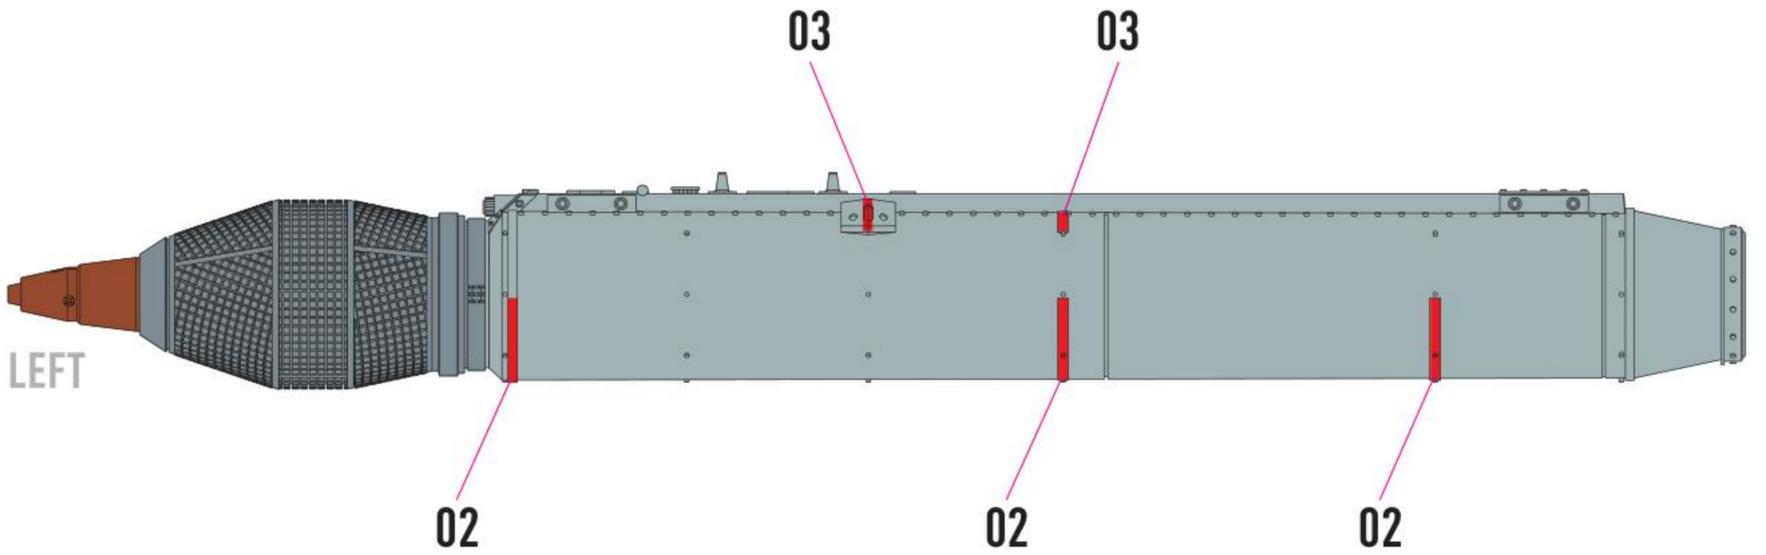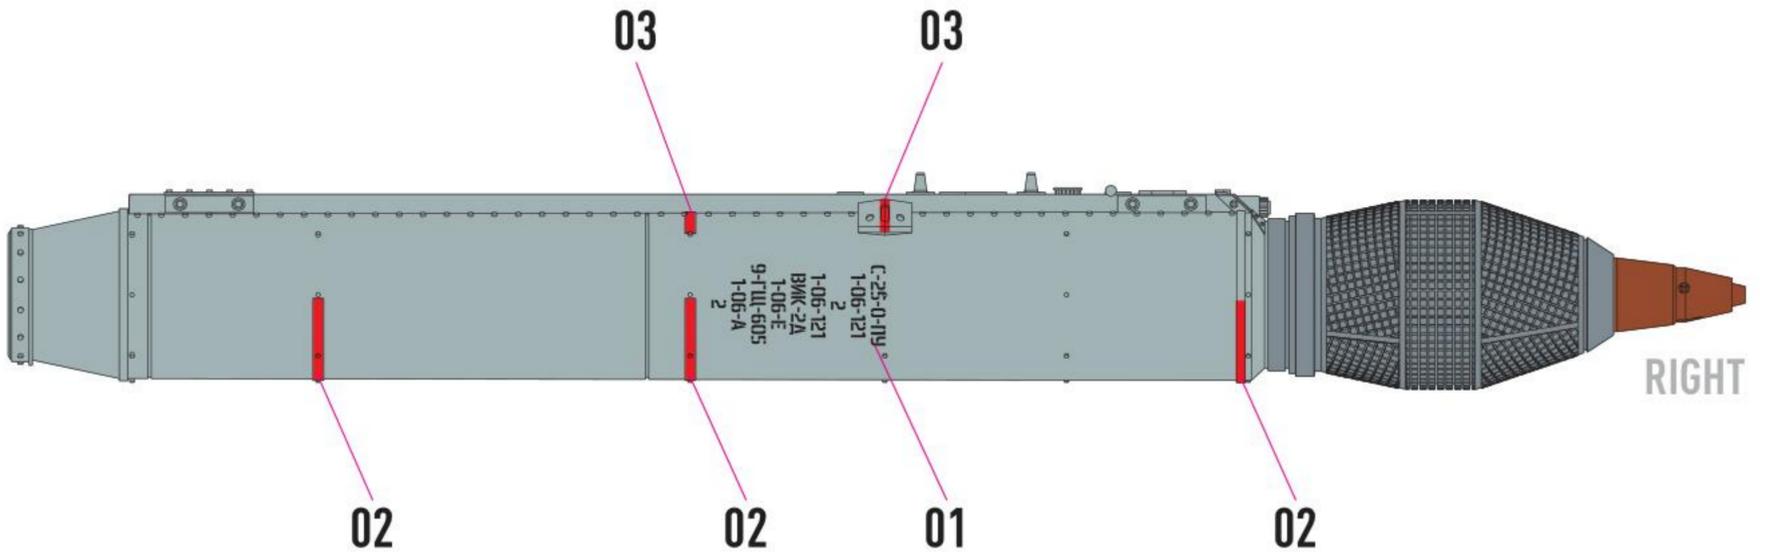

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
DARK EARTH	H72	C22
NEUTRAL GRAY	H53	C13