





USE A SAW TO REMOVE SUPPORTS
 FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
 FROM SUPPORTS**



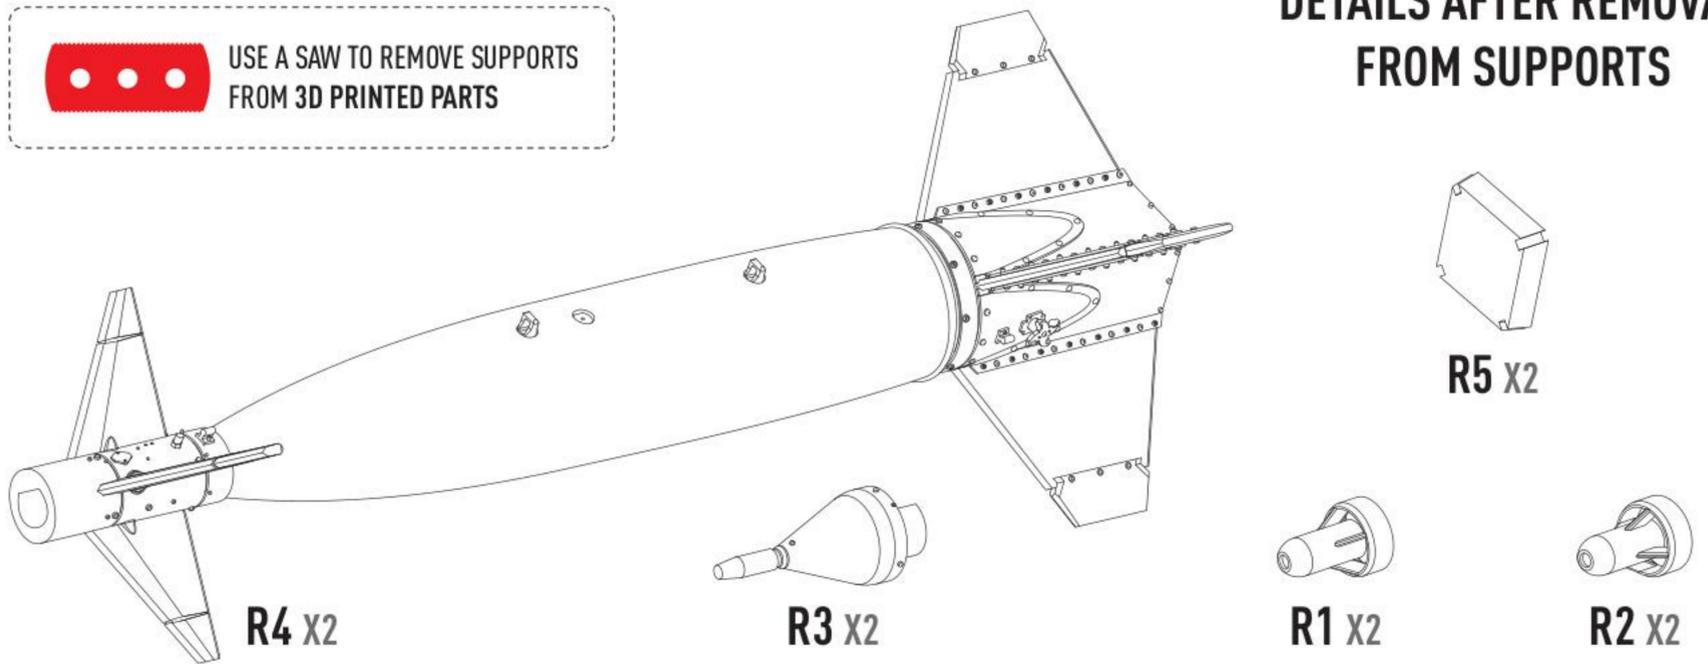


1 X2

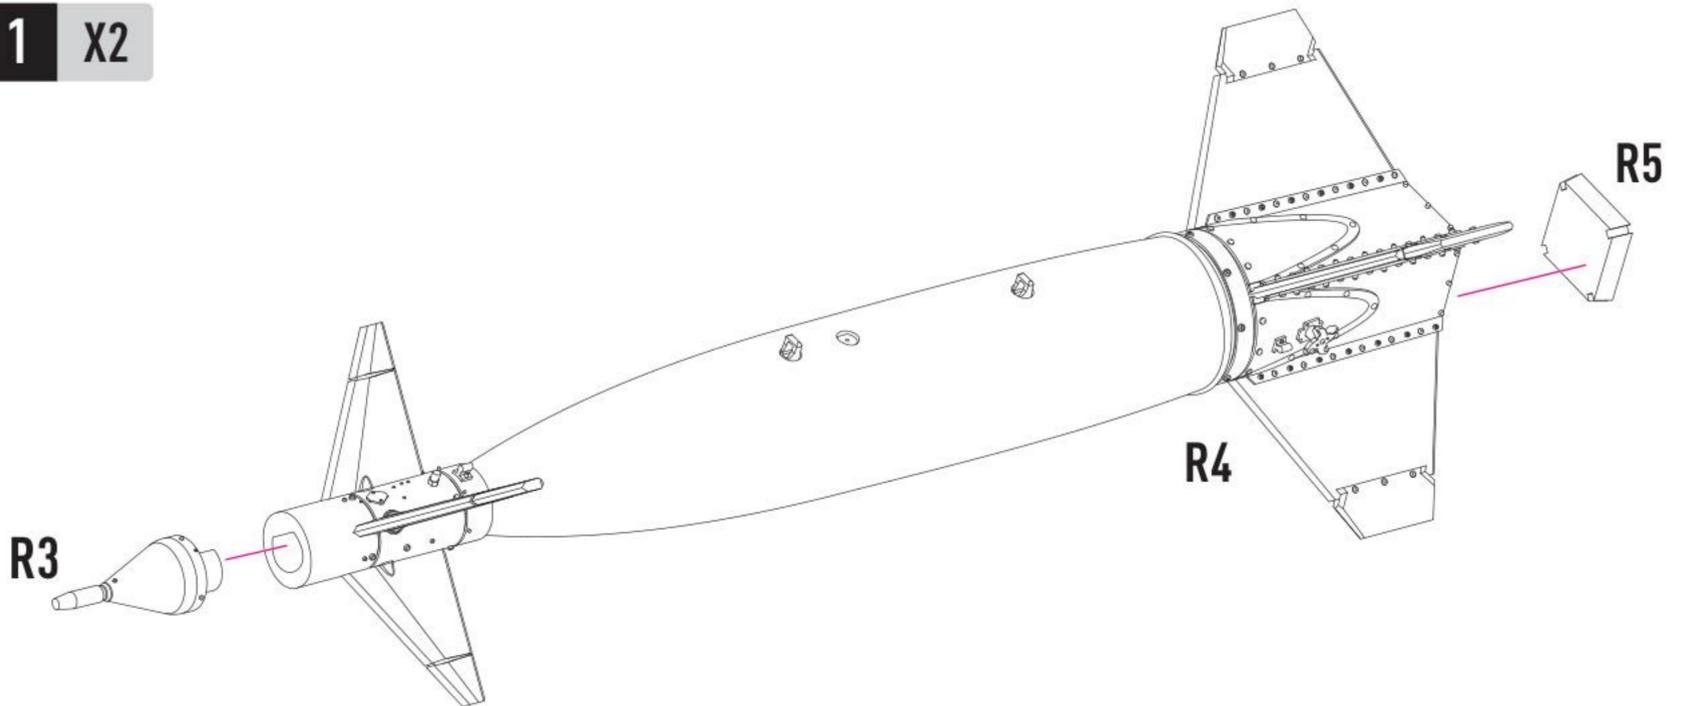

2 X2

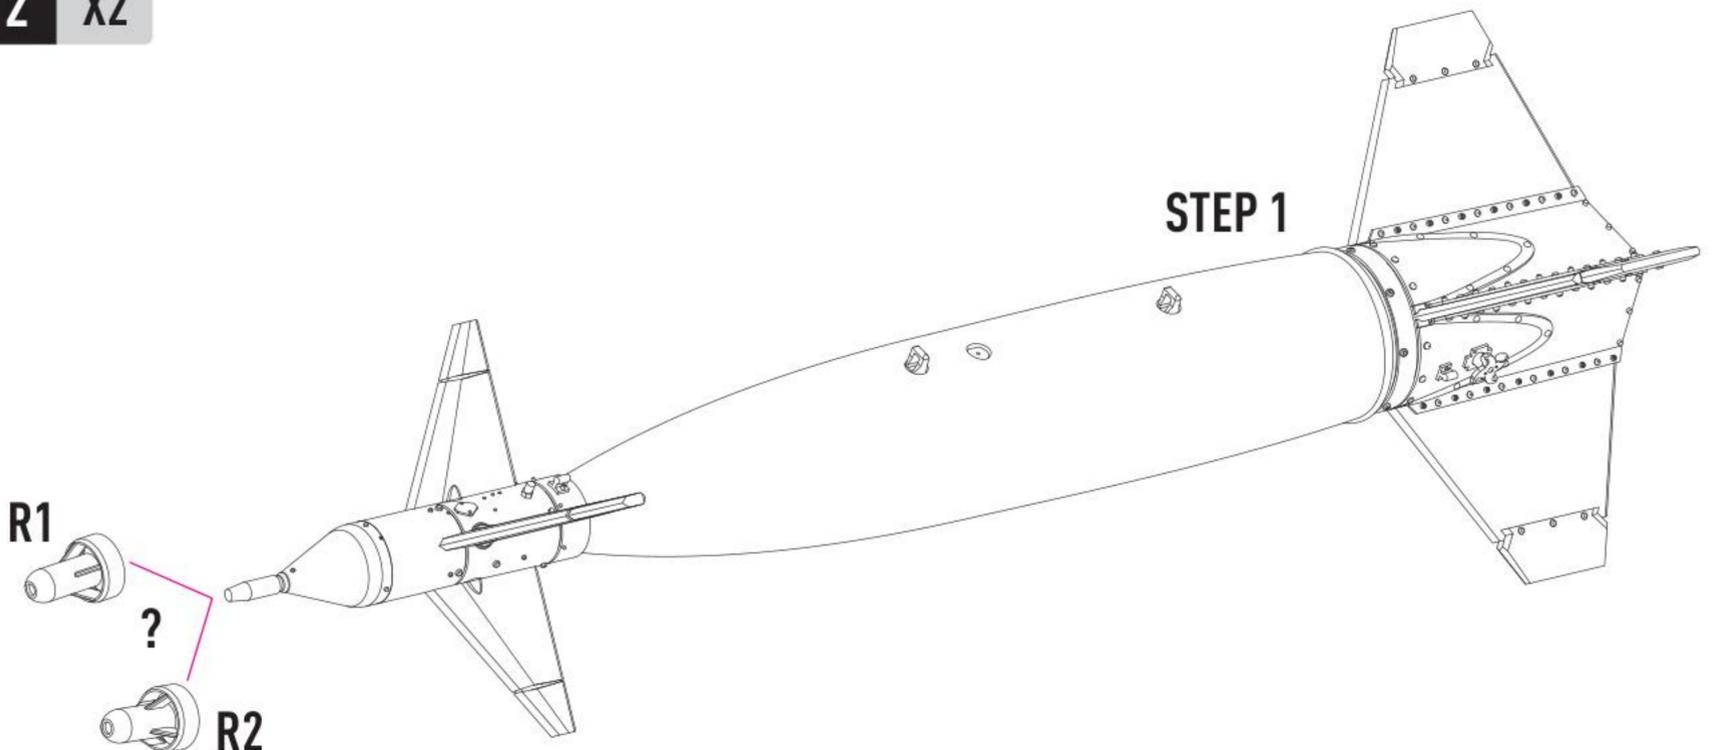

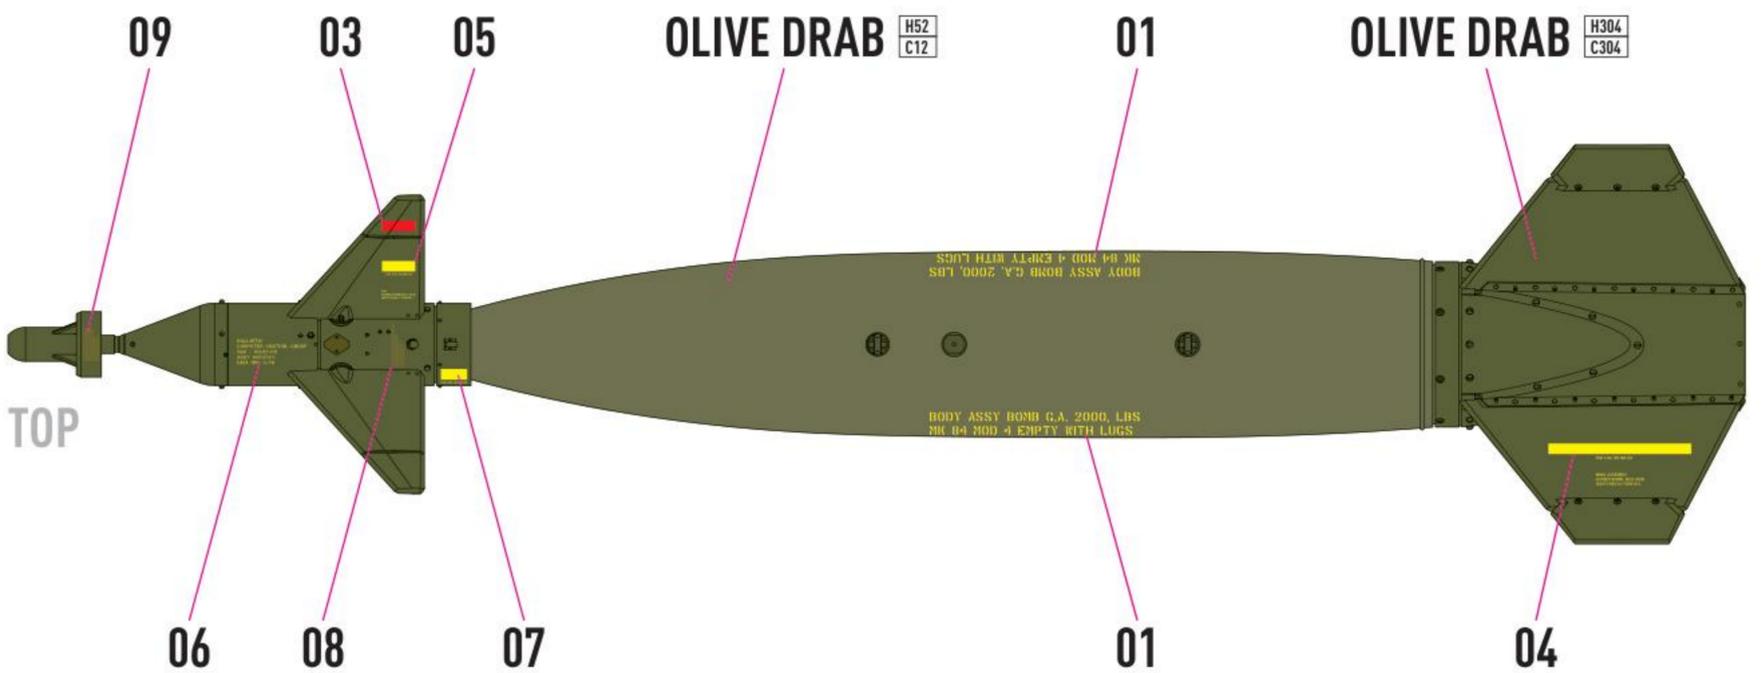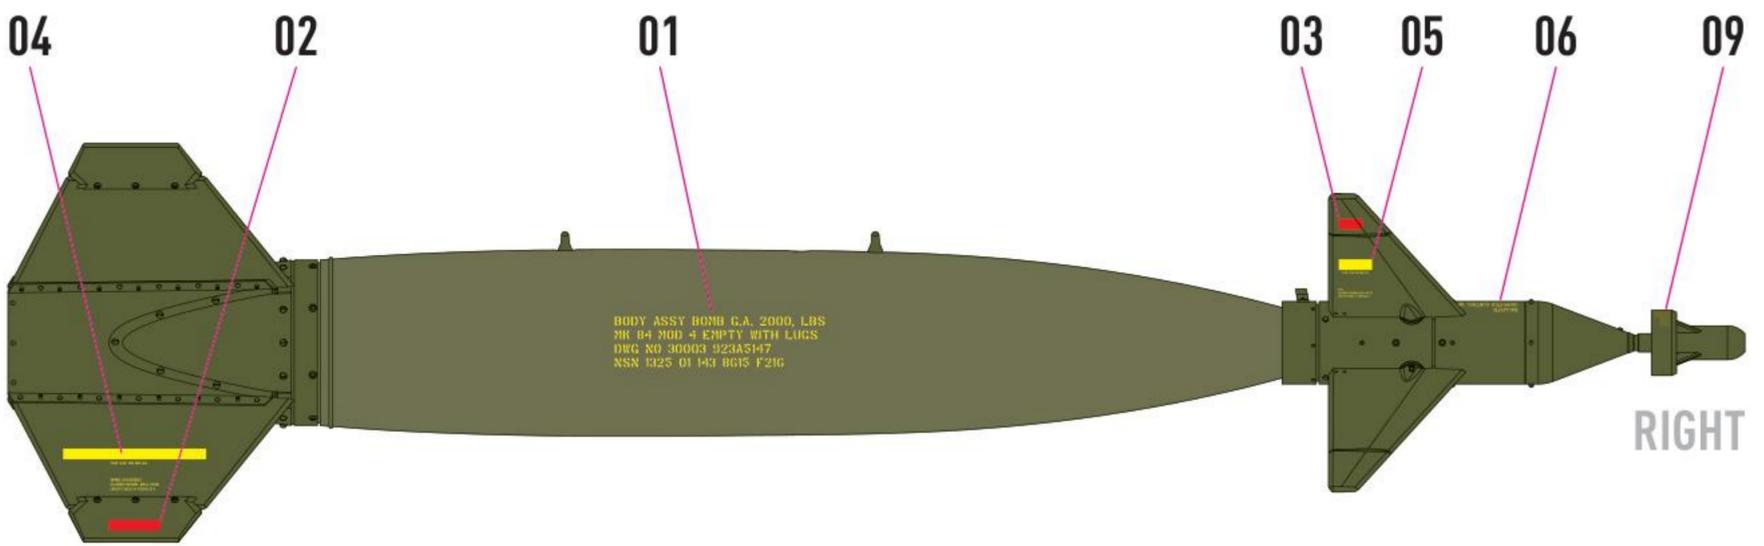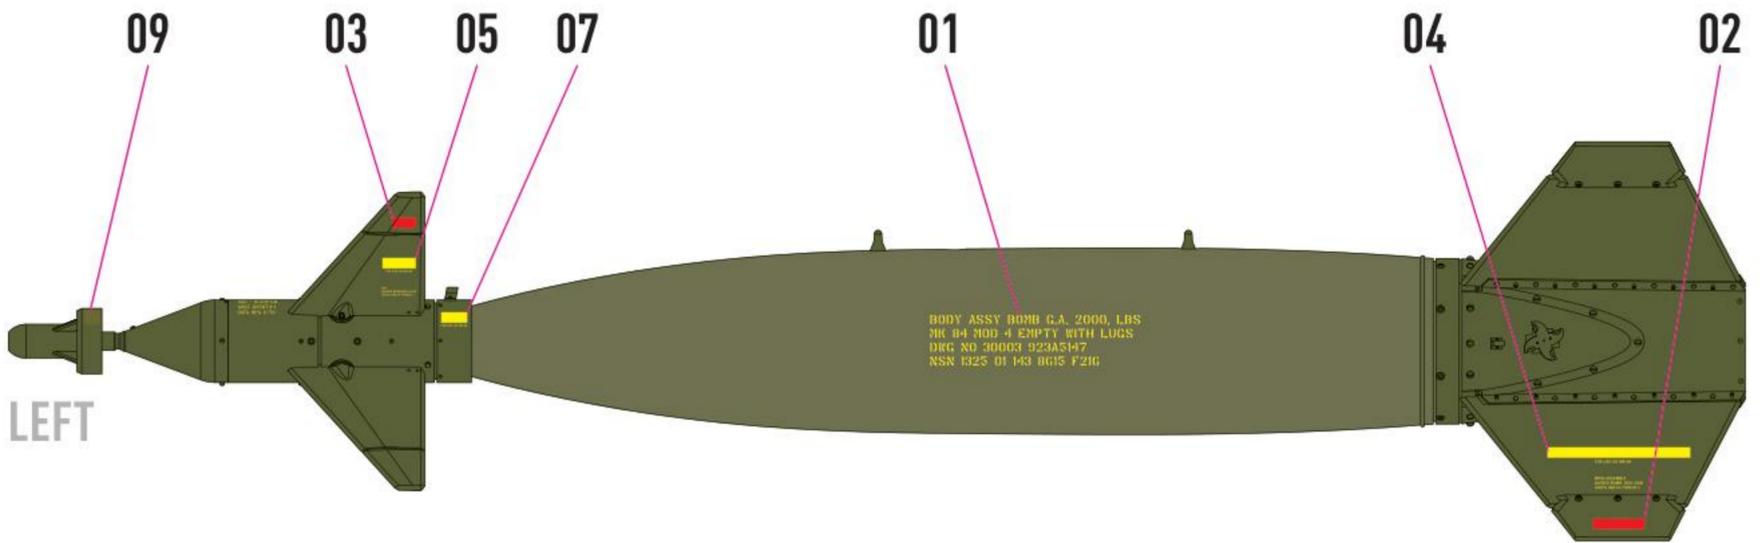

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H304	C304

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12