



DETAILS AFTER REMOVAL FROM SUPPORTS



 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS



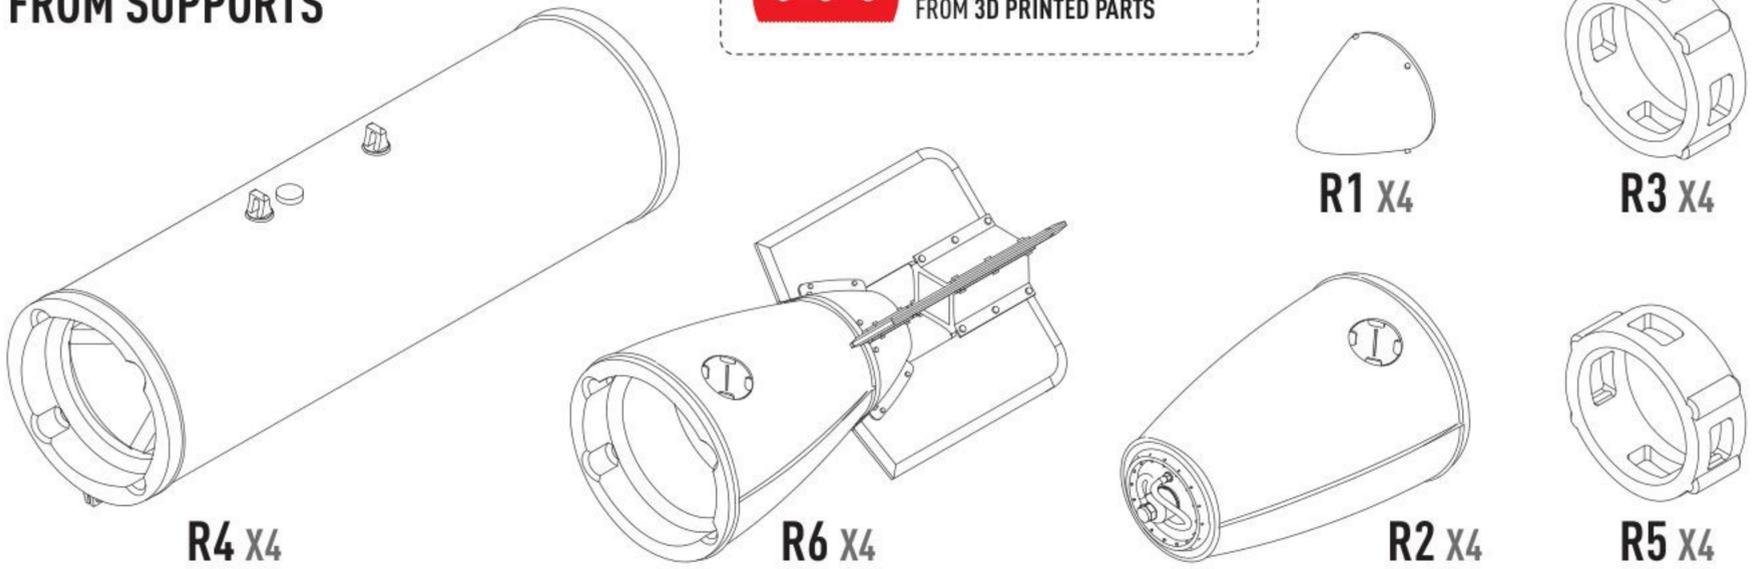


1 X4

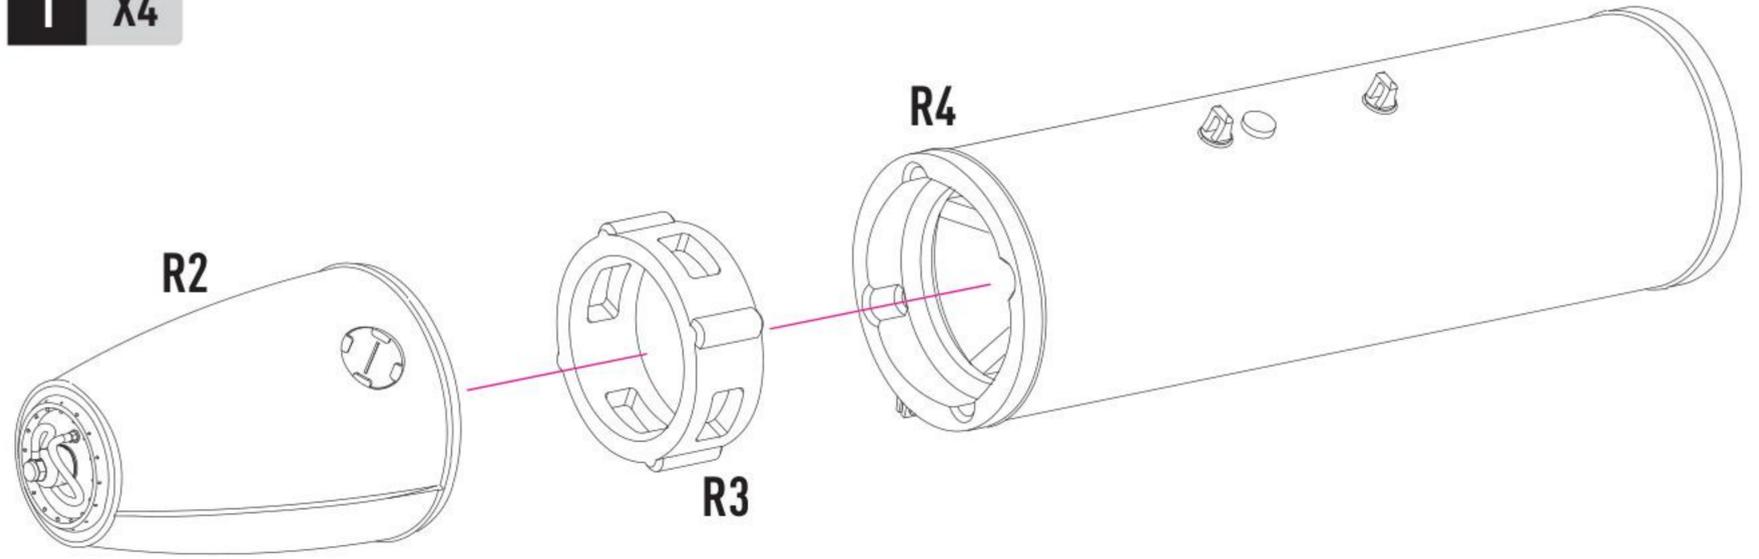

2 X4

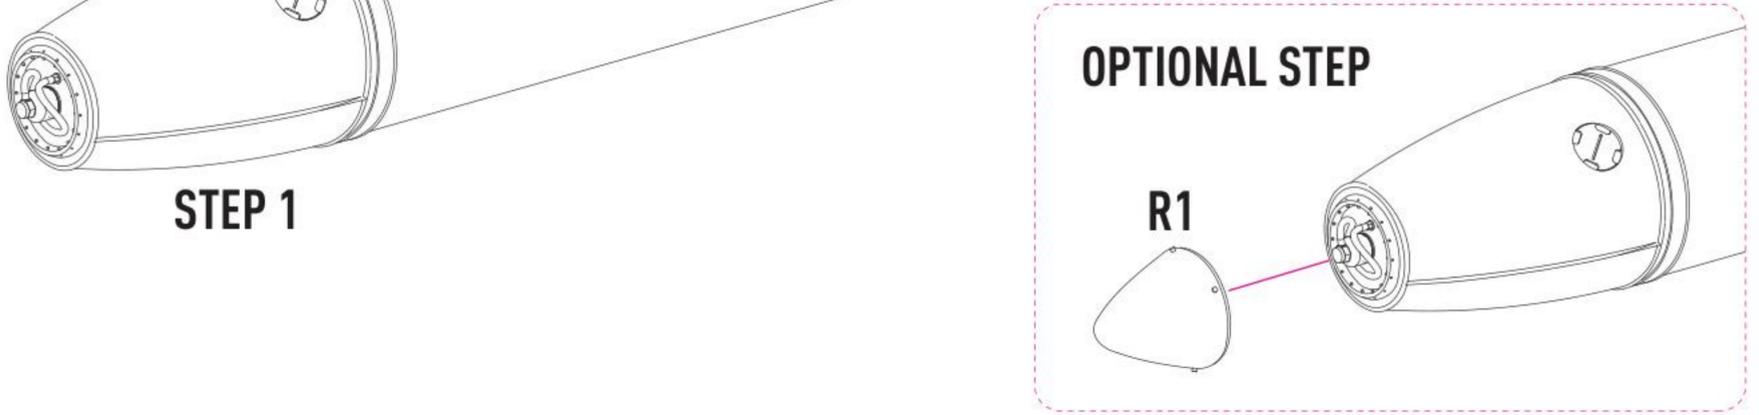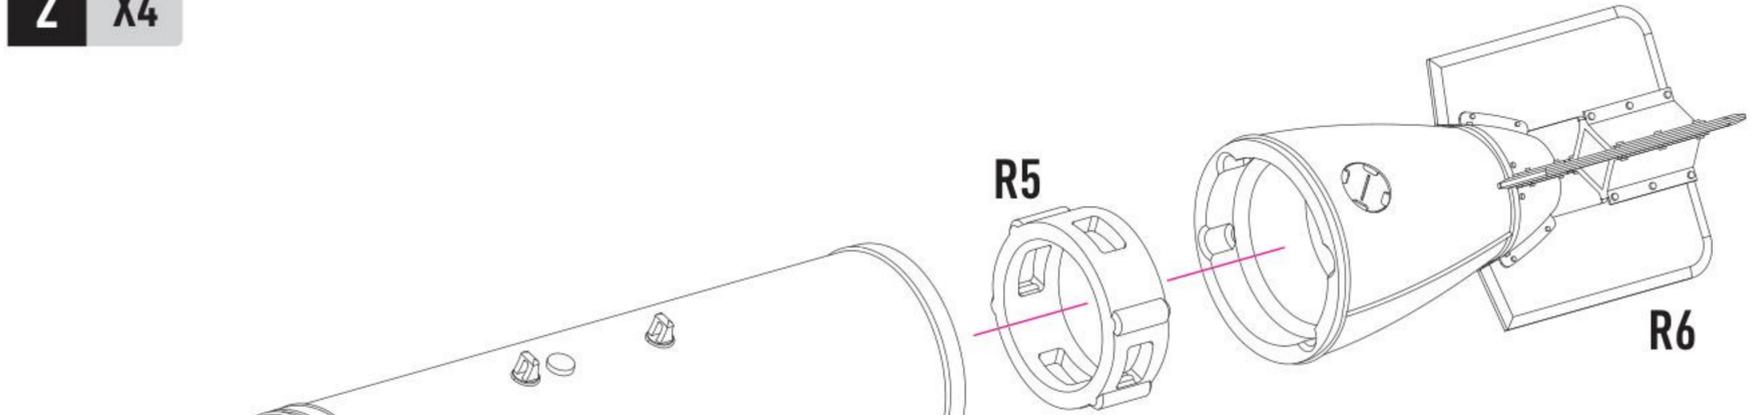

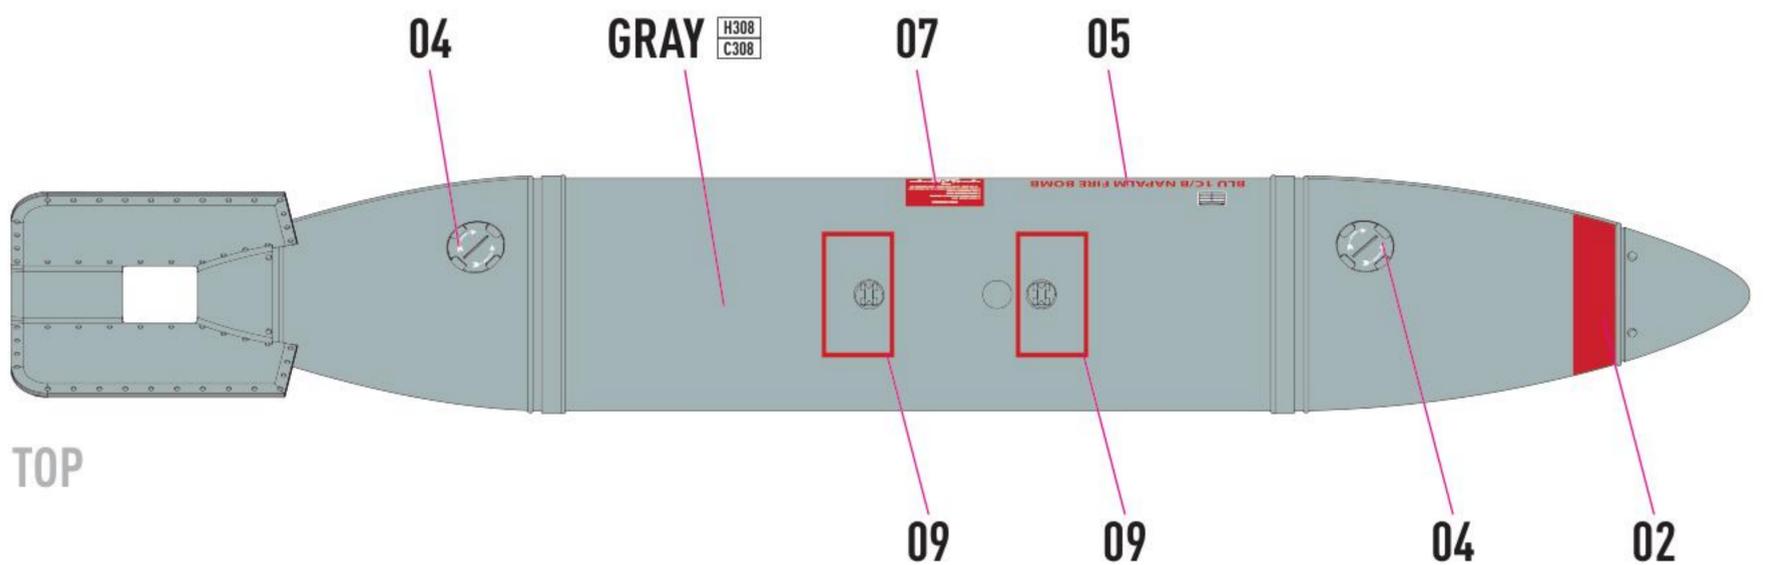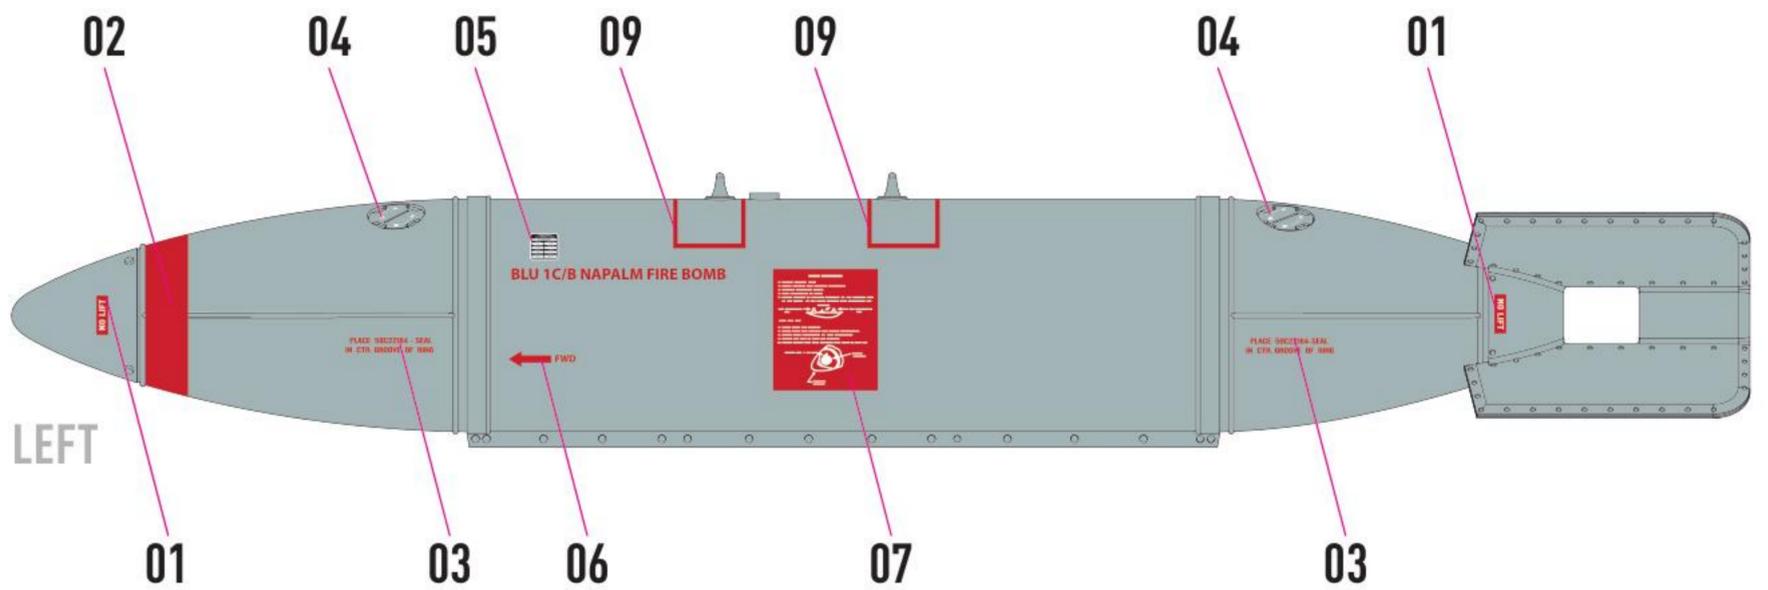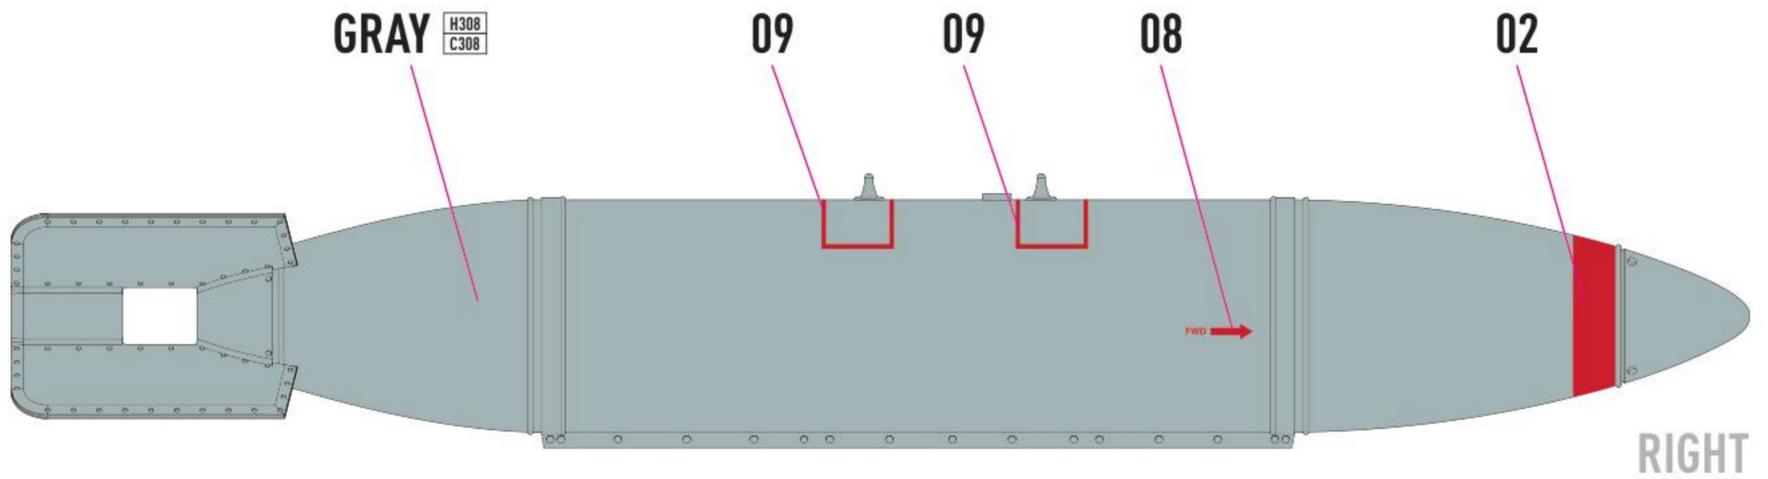

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308