



USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS




R1



R2

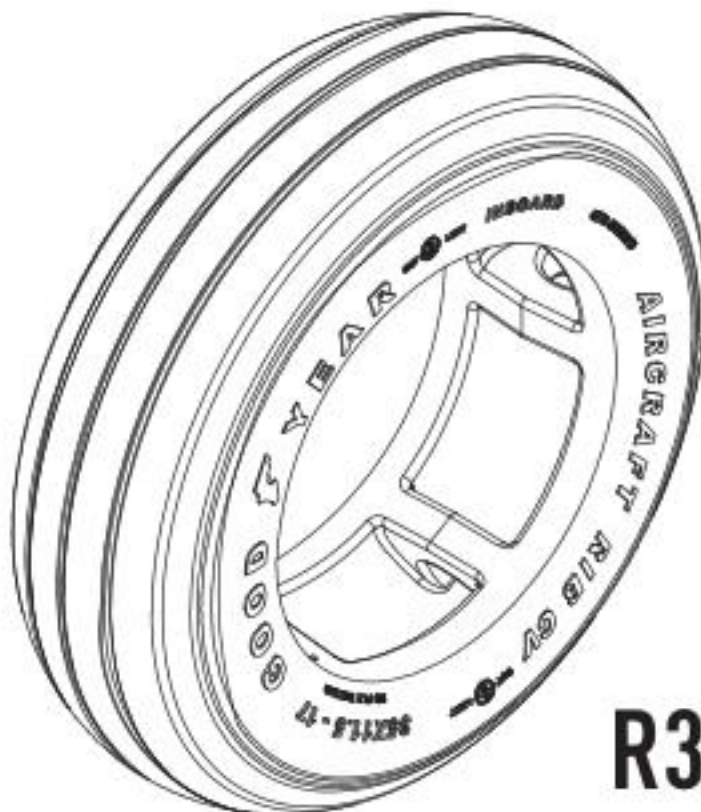

R3

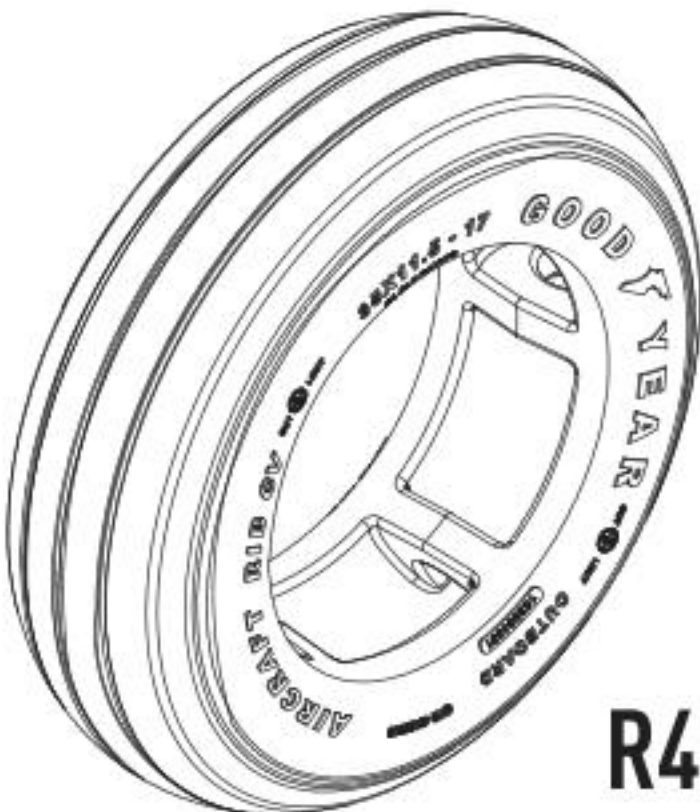

R4

R5 X2




R6 X2



R7 X2



1 X2

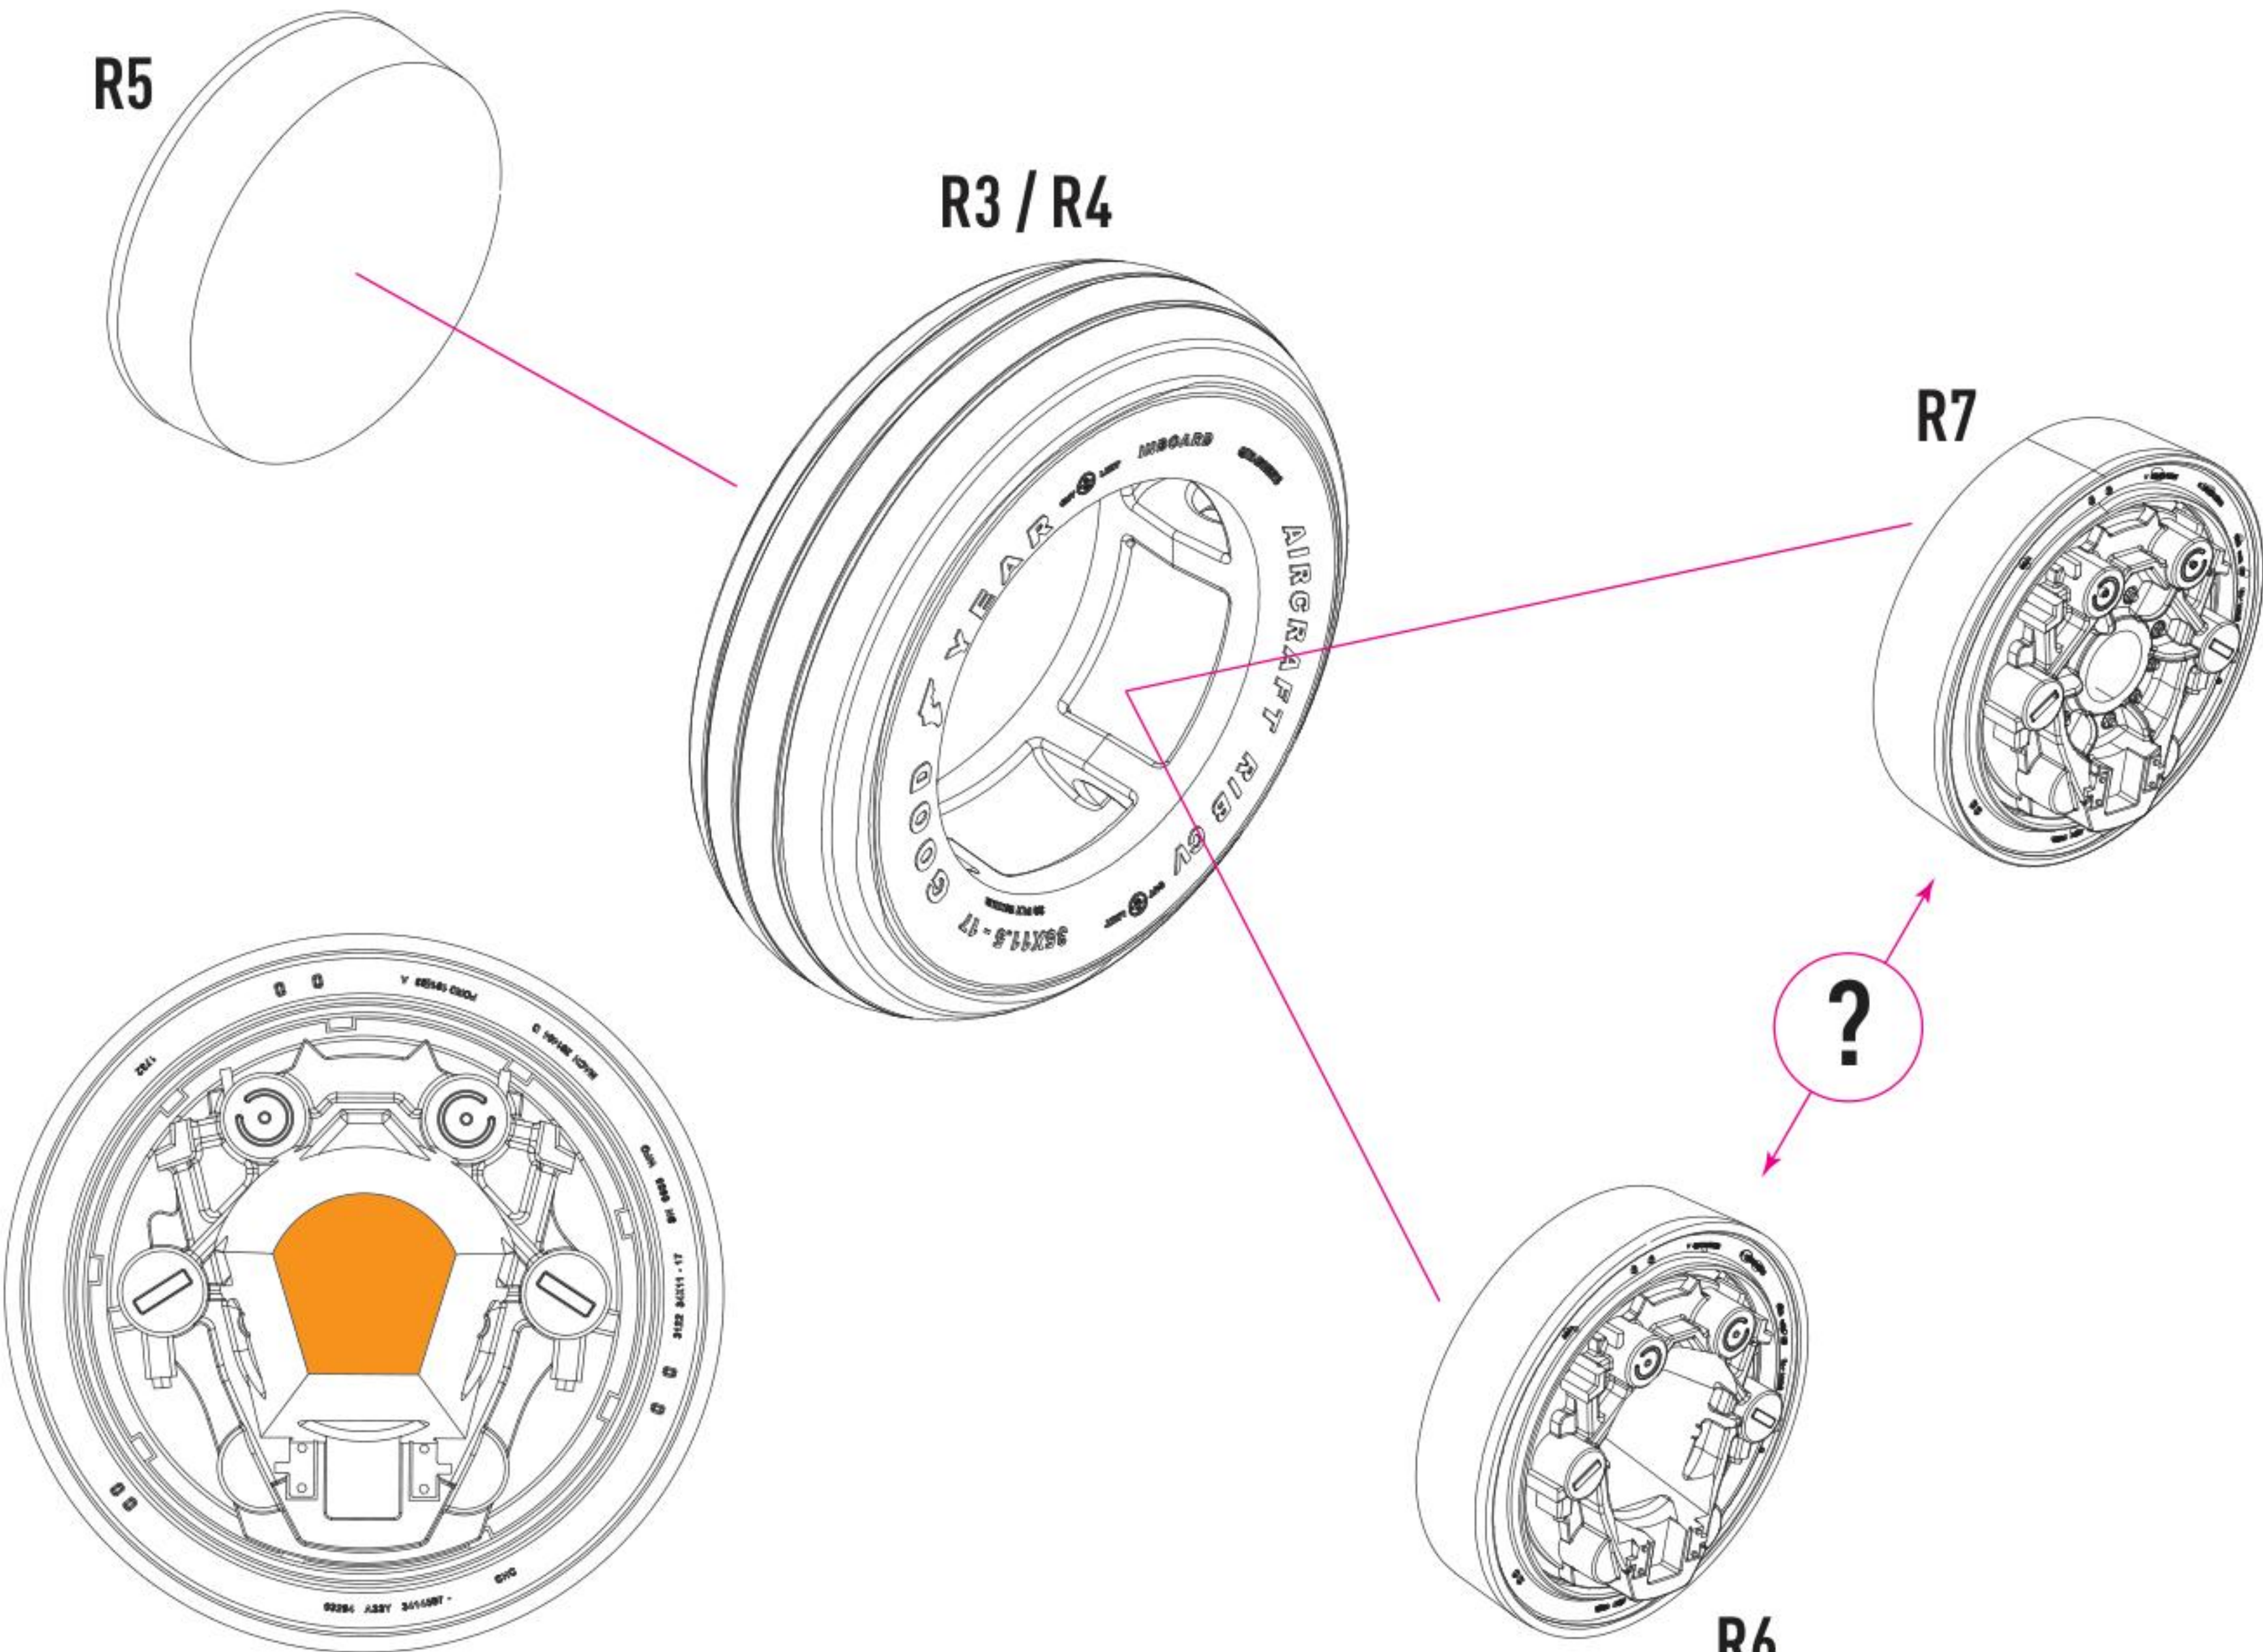

FOR TAMIYA KIT ASSEMBLY (R6) PAY ATTENTION TO THE STRUT KEY WHEN INSTALLING THE WEIGHTED TIRE

(ONLY FOR TAMIYA KIT)