




USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

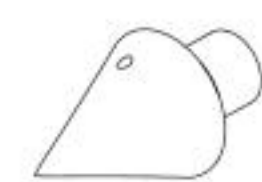

**R6 X12**




**R5 X12**




**R8 X12**




**R7 X12**

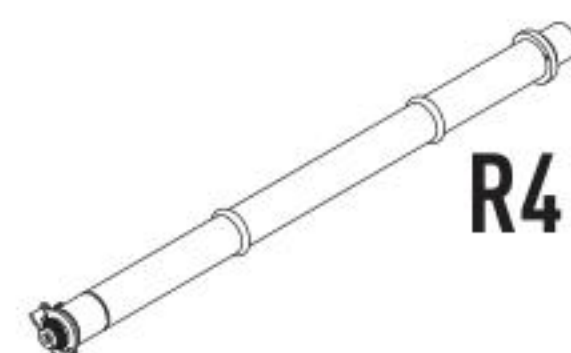


**R4 X12**

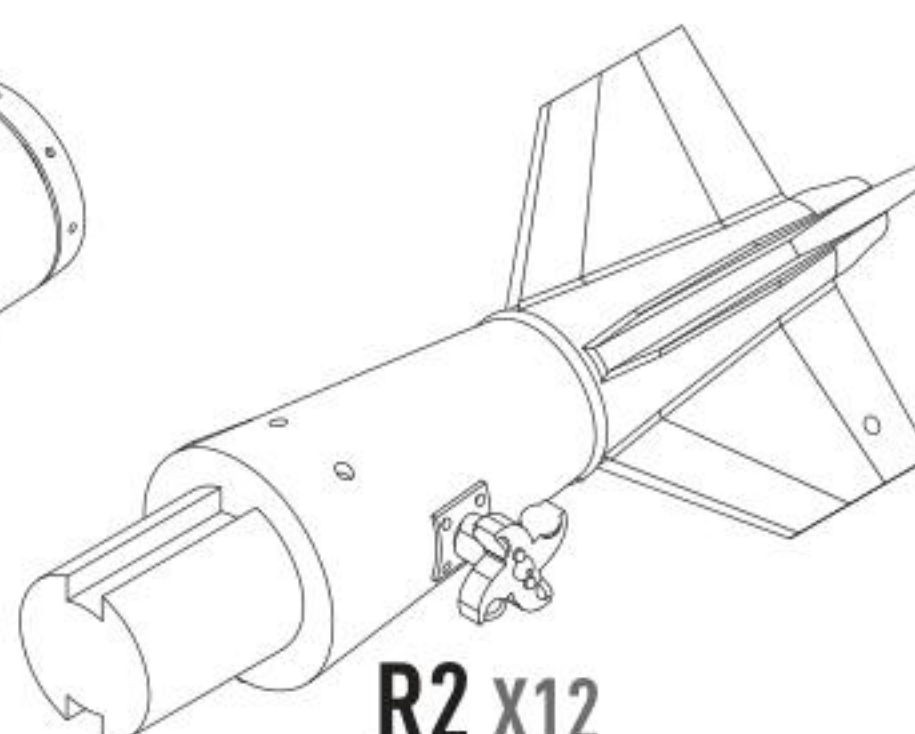

**R2 X12**

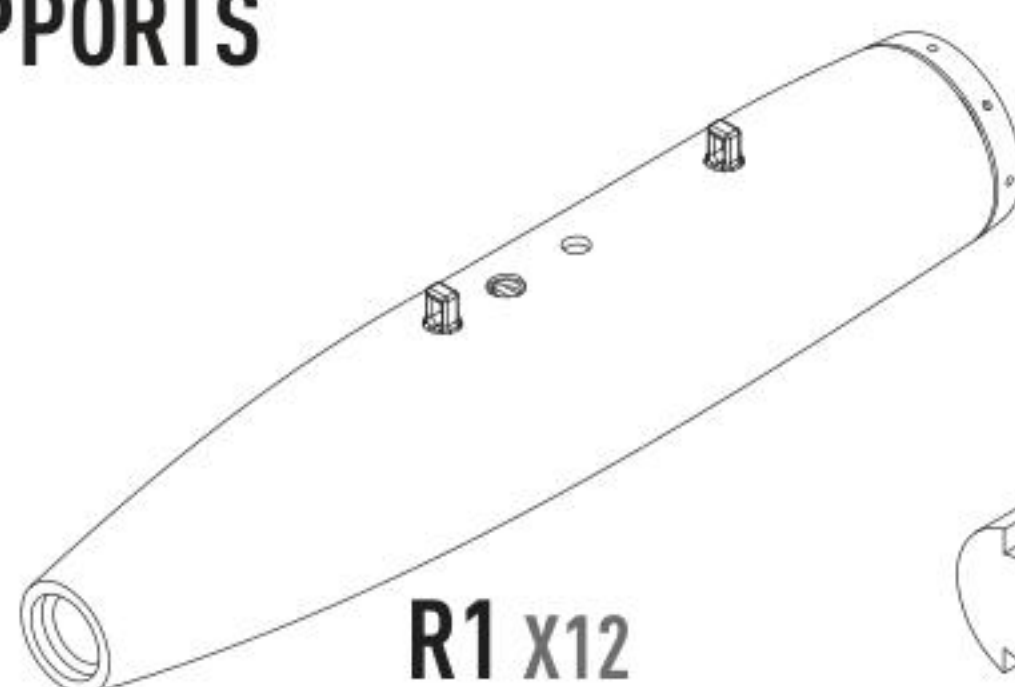


**R1 X12**

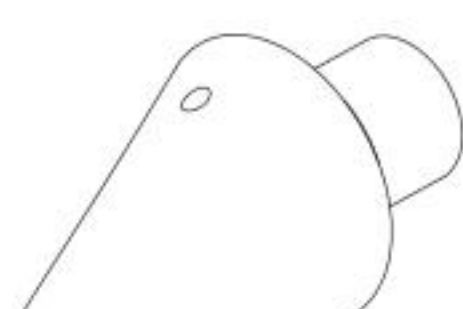


**R6 X12**

## DETAILS AFTER REMOVAL FROM SUPPORTS

**1 X12**

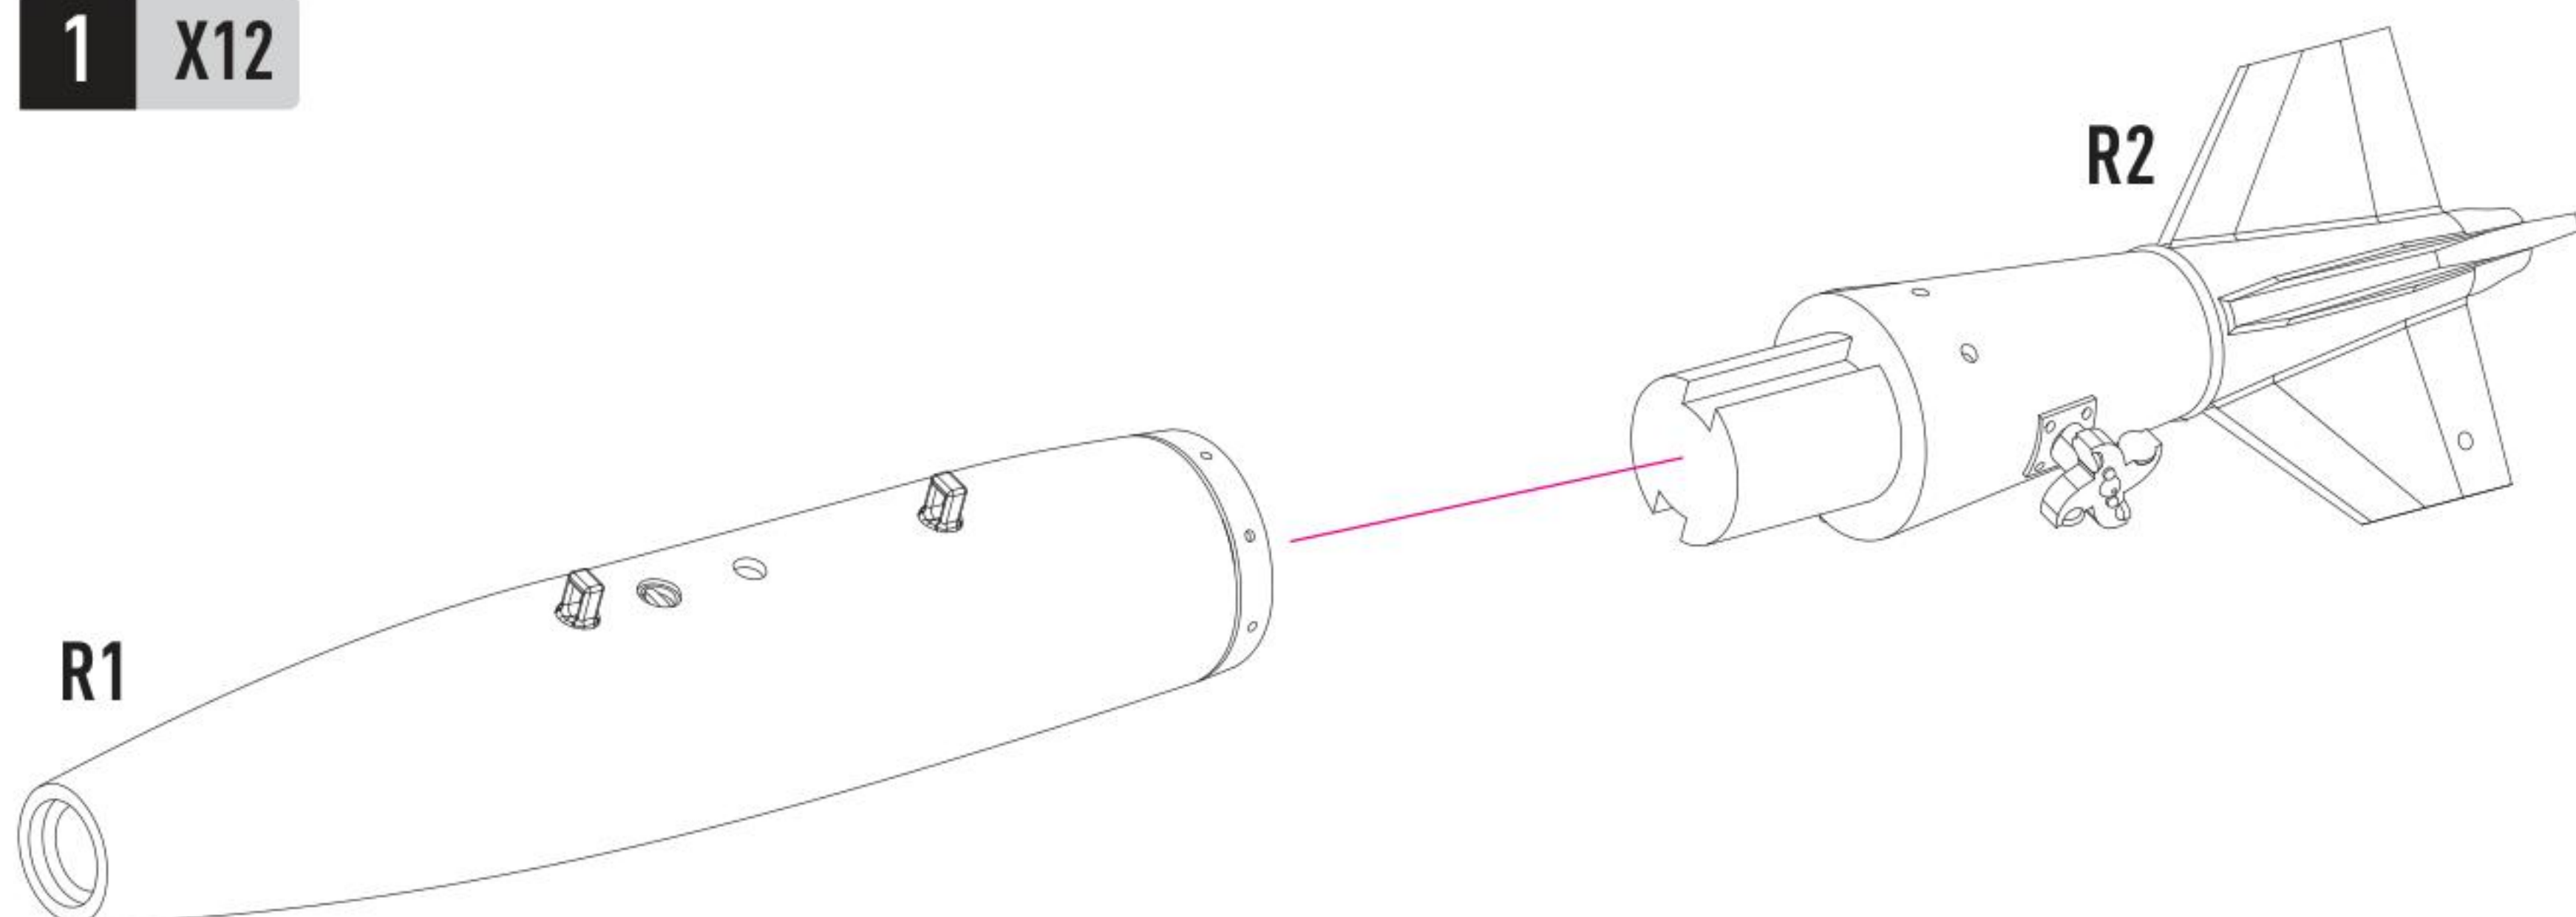

**2 X12**

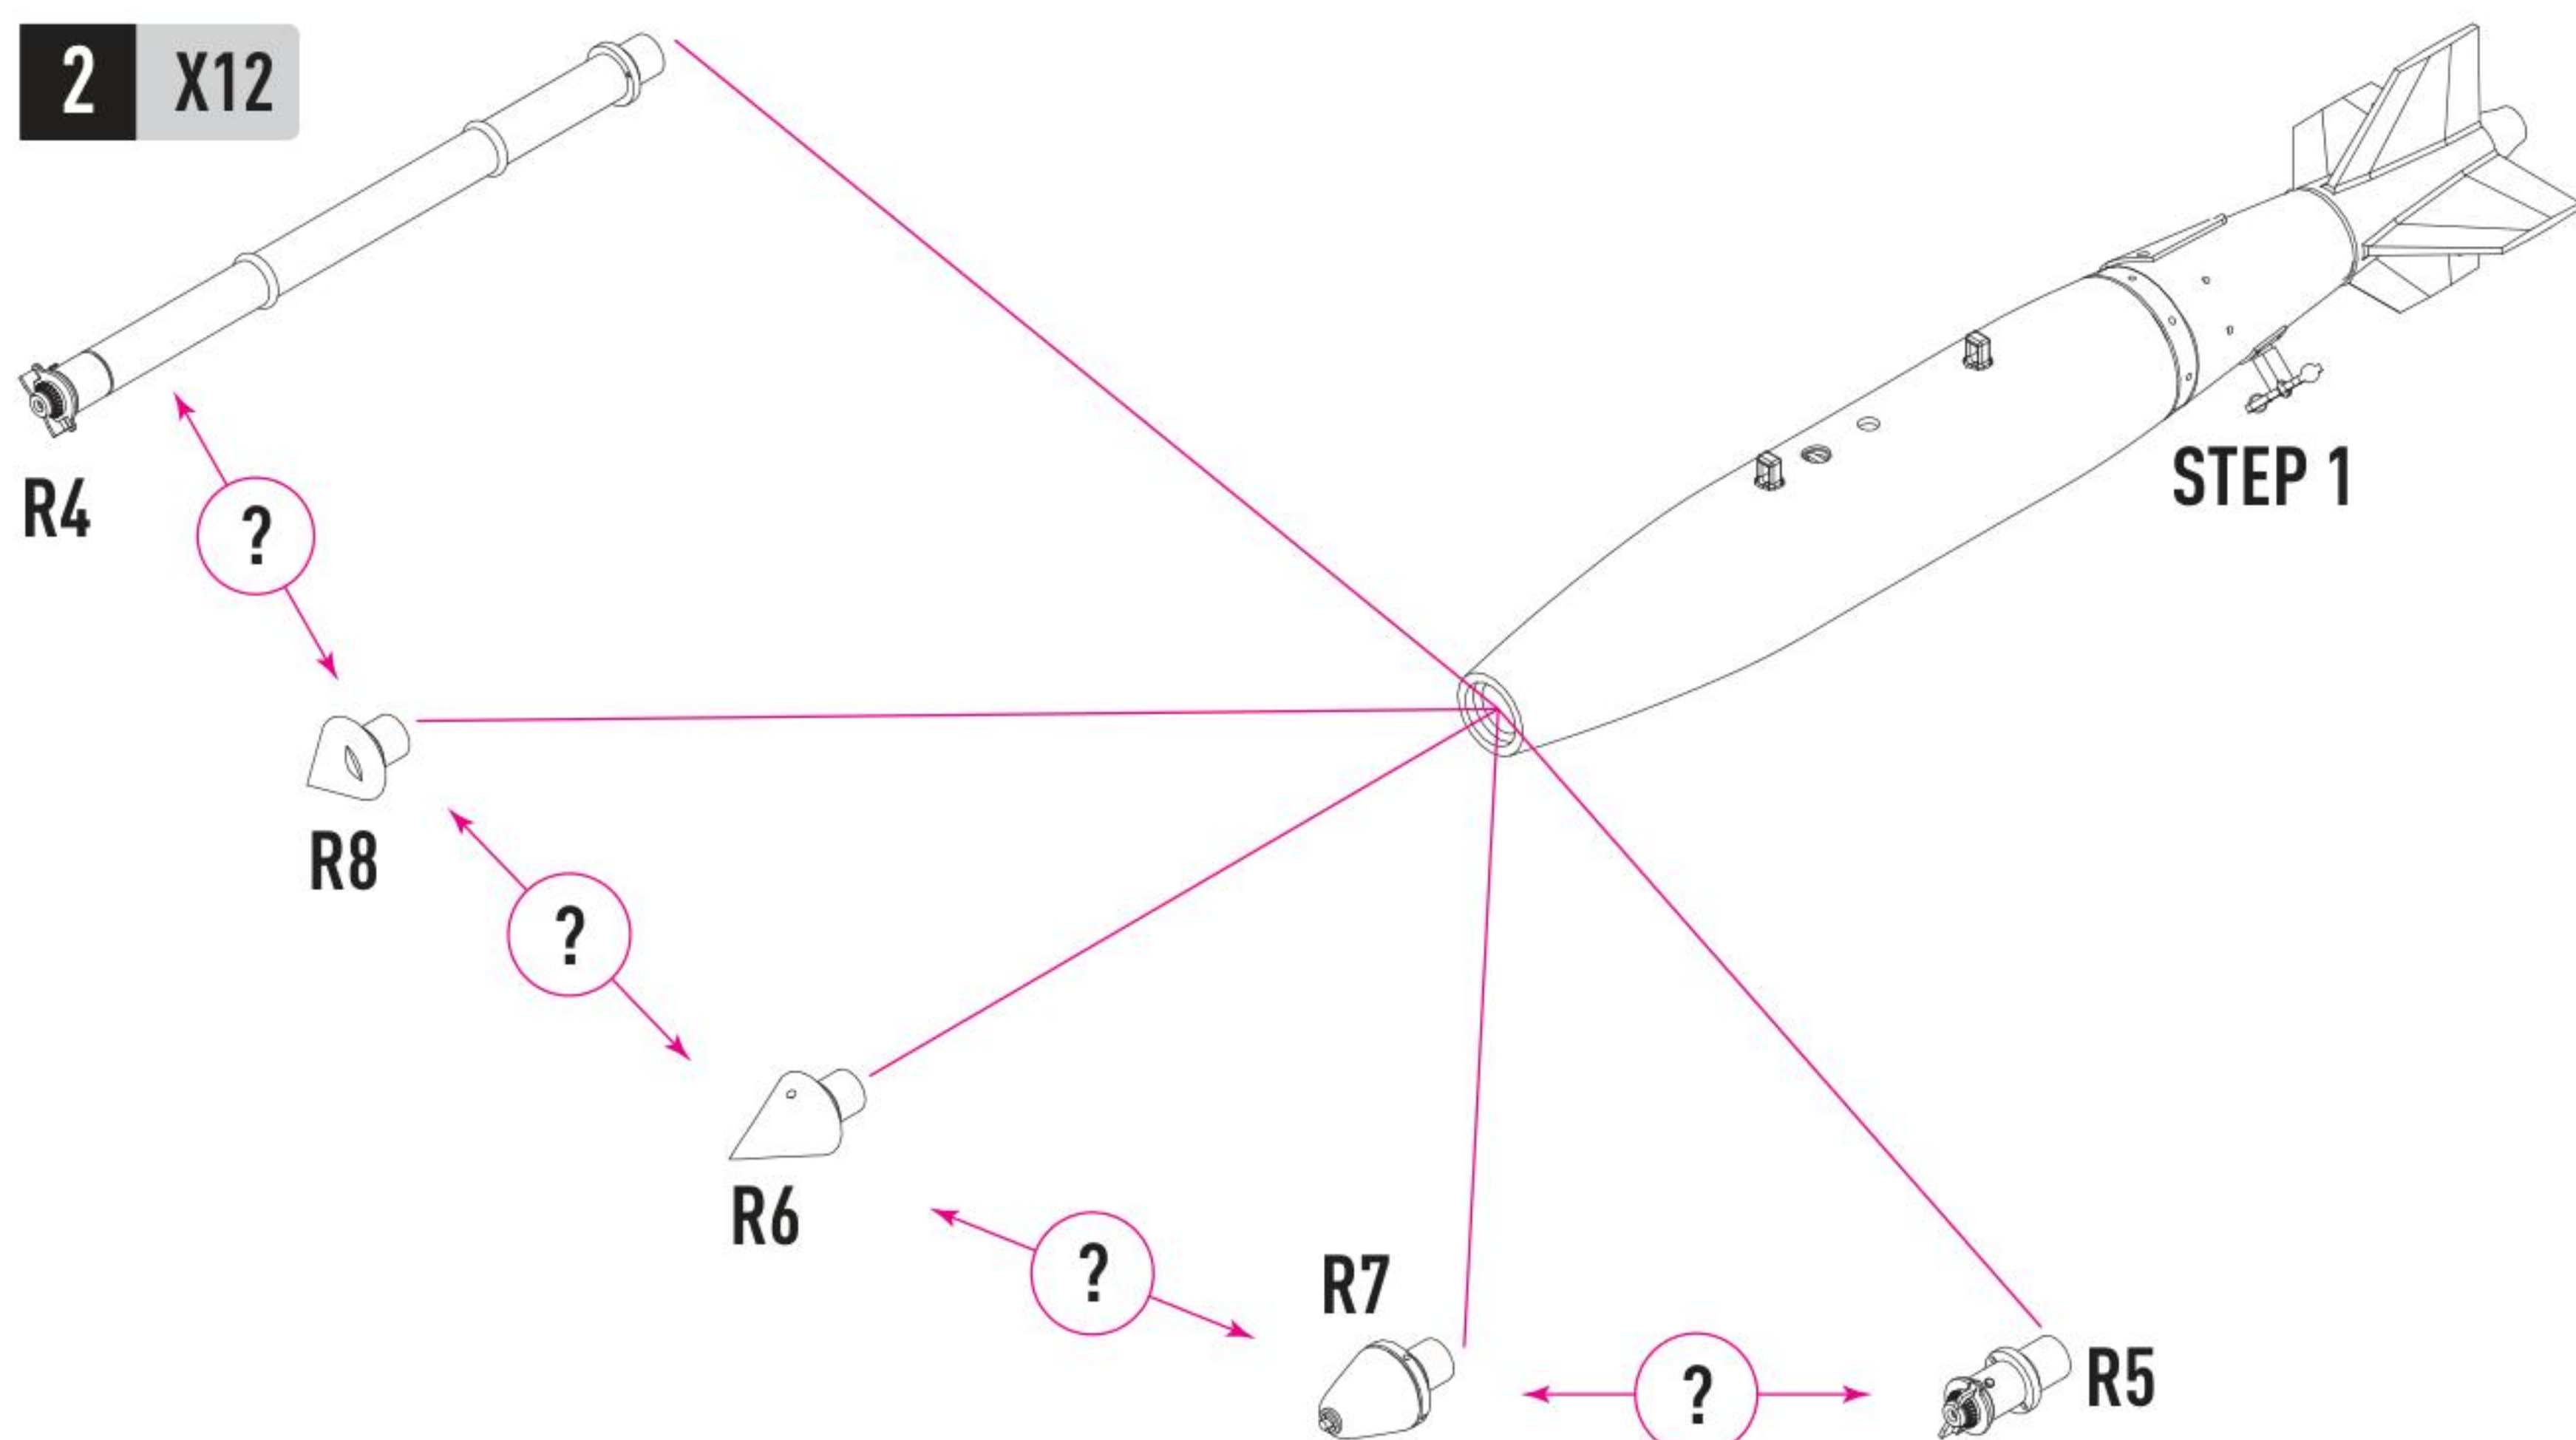



## DECALS AND PAINT INSTRUCTION

| # | COLOR      | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|---|------------|-----------------|------------------|
| B | OLIVE DRAB | H304            | C304             |

RESKIT-MODELS.COM