


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**


R7 X12

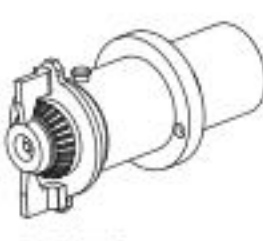


R5 X12



R6 X12

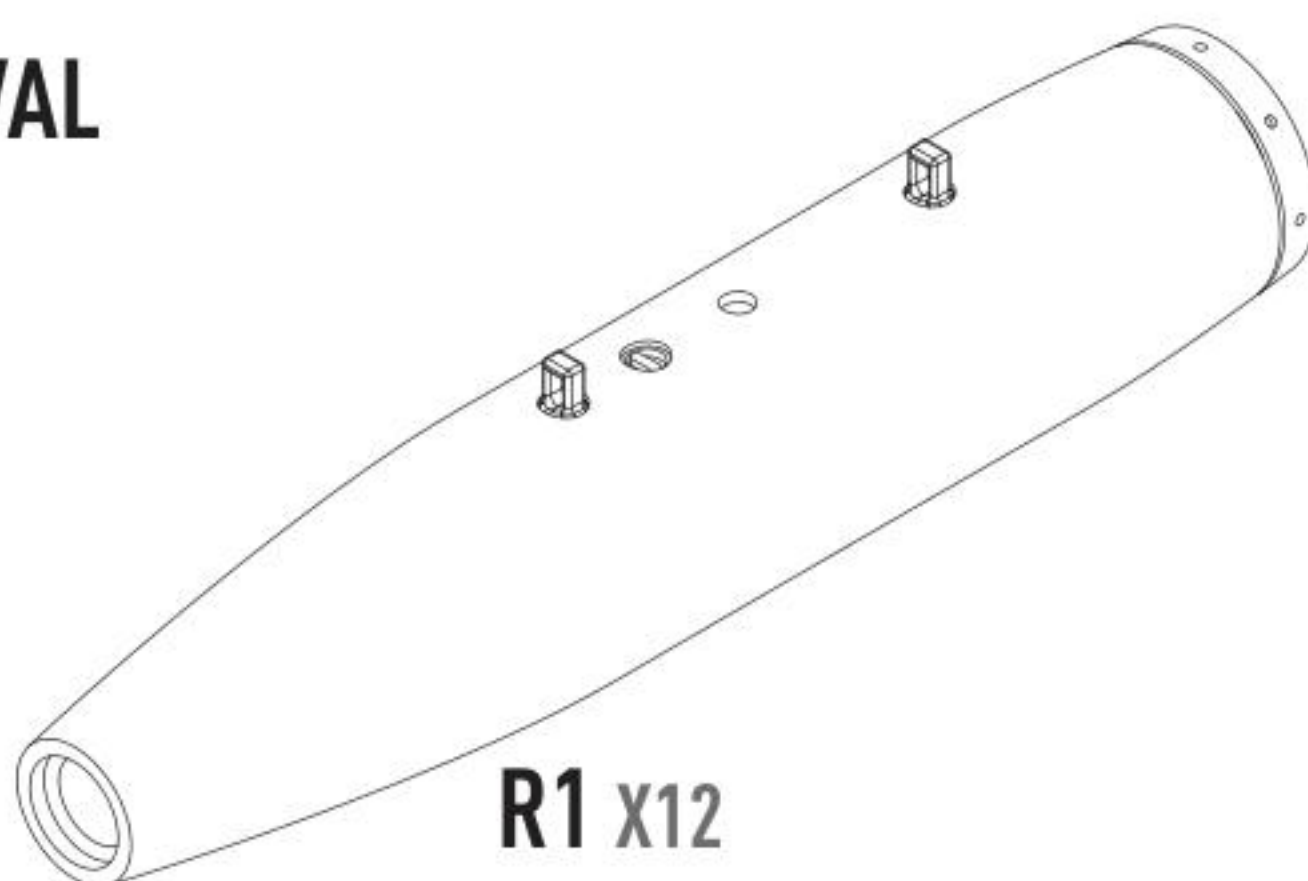


R1 X12

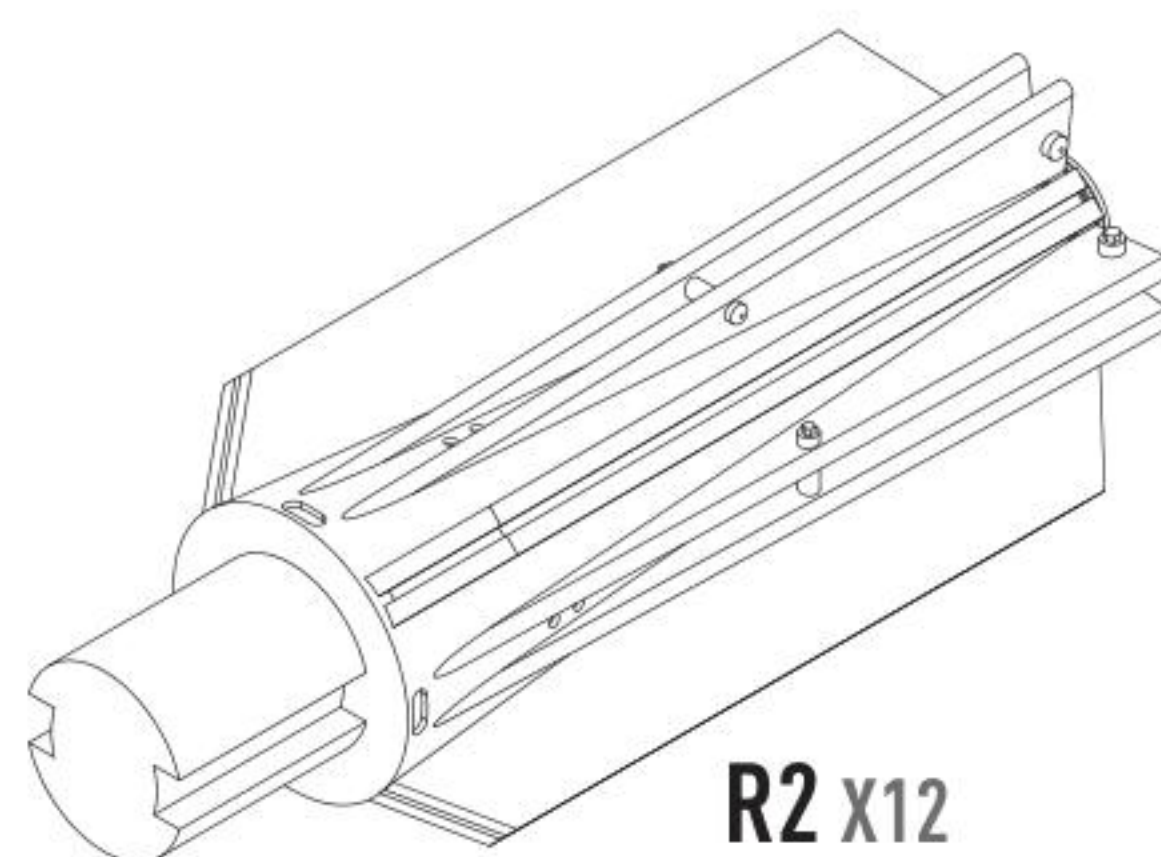



R2 X12

1 X12

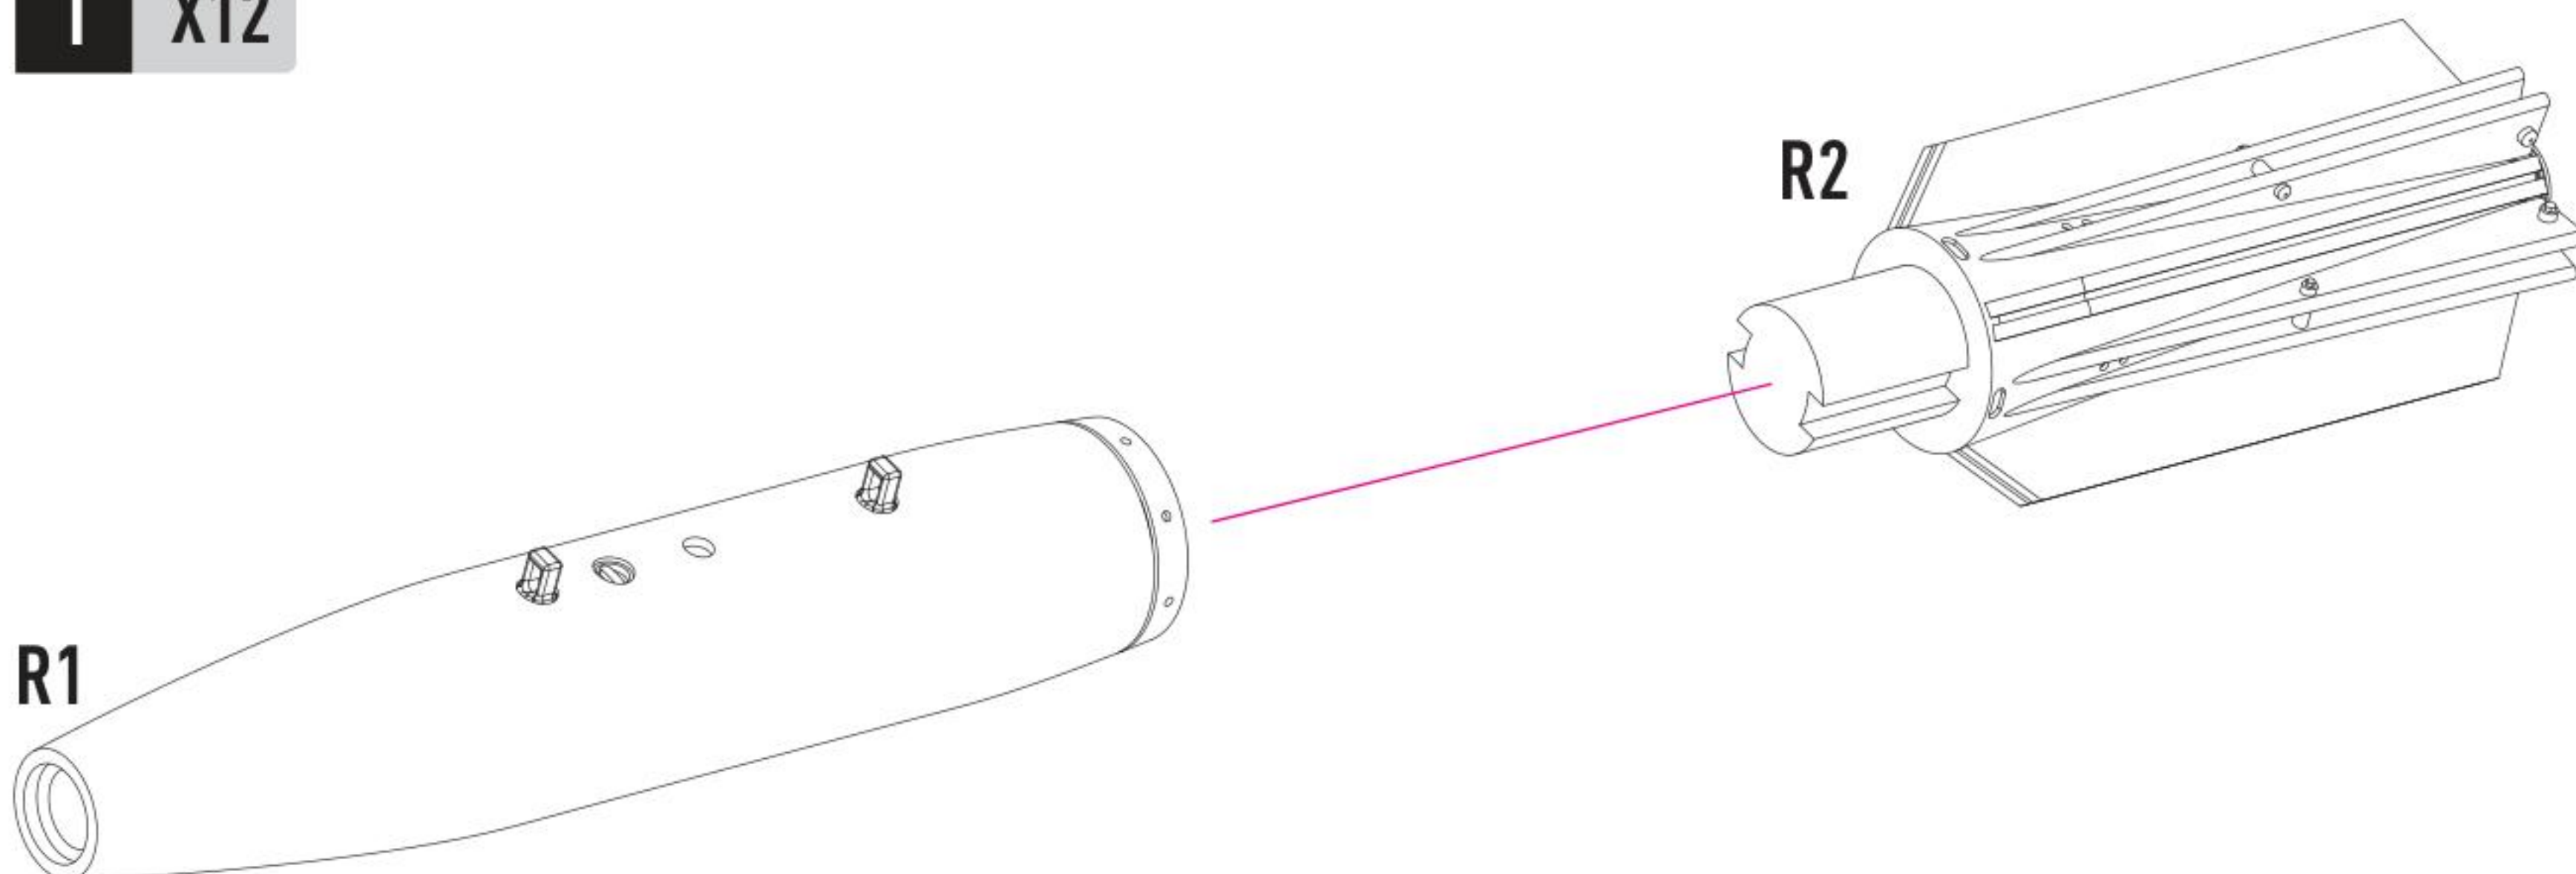

2 X12

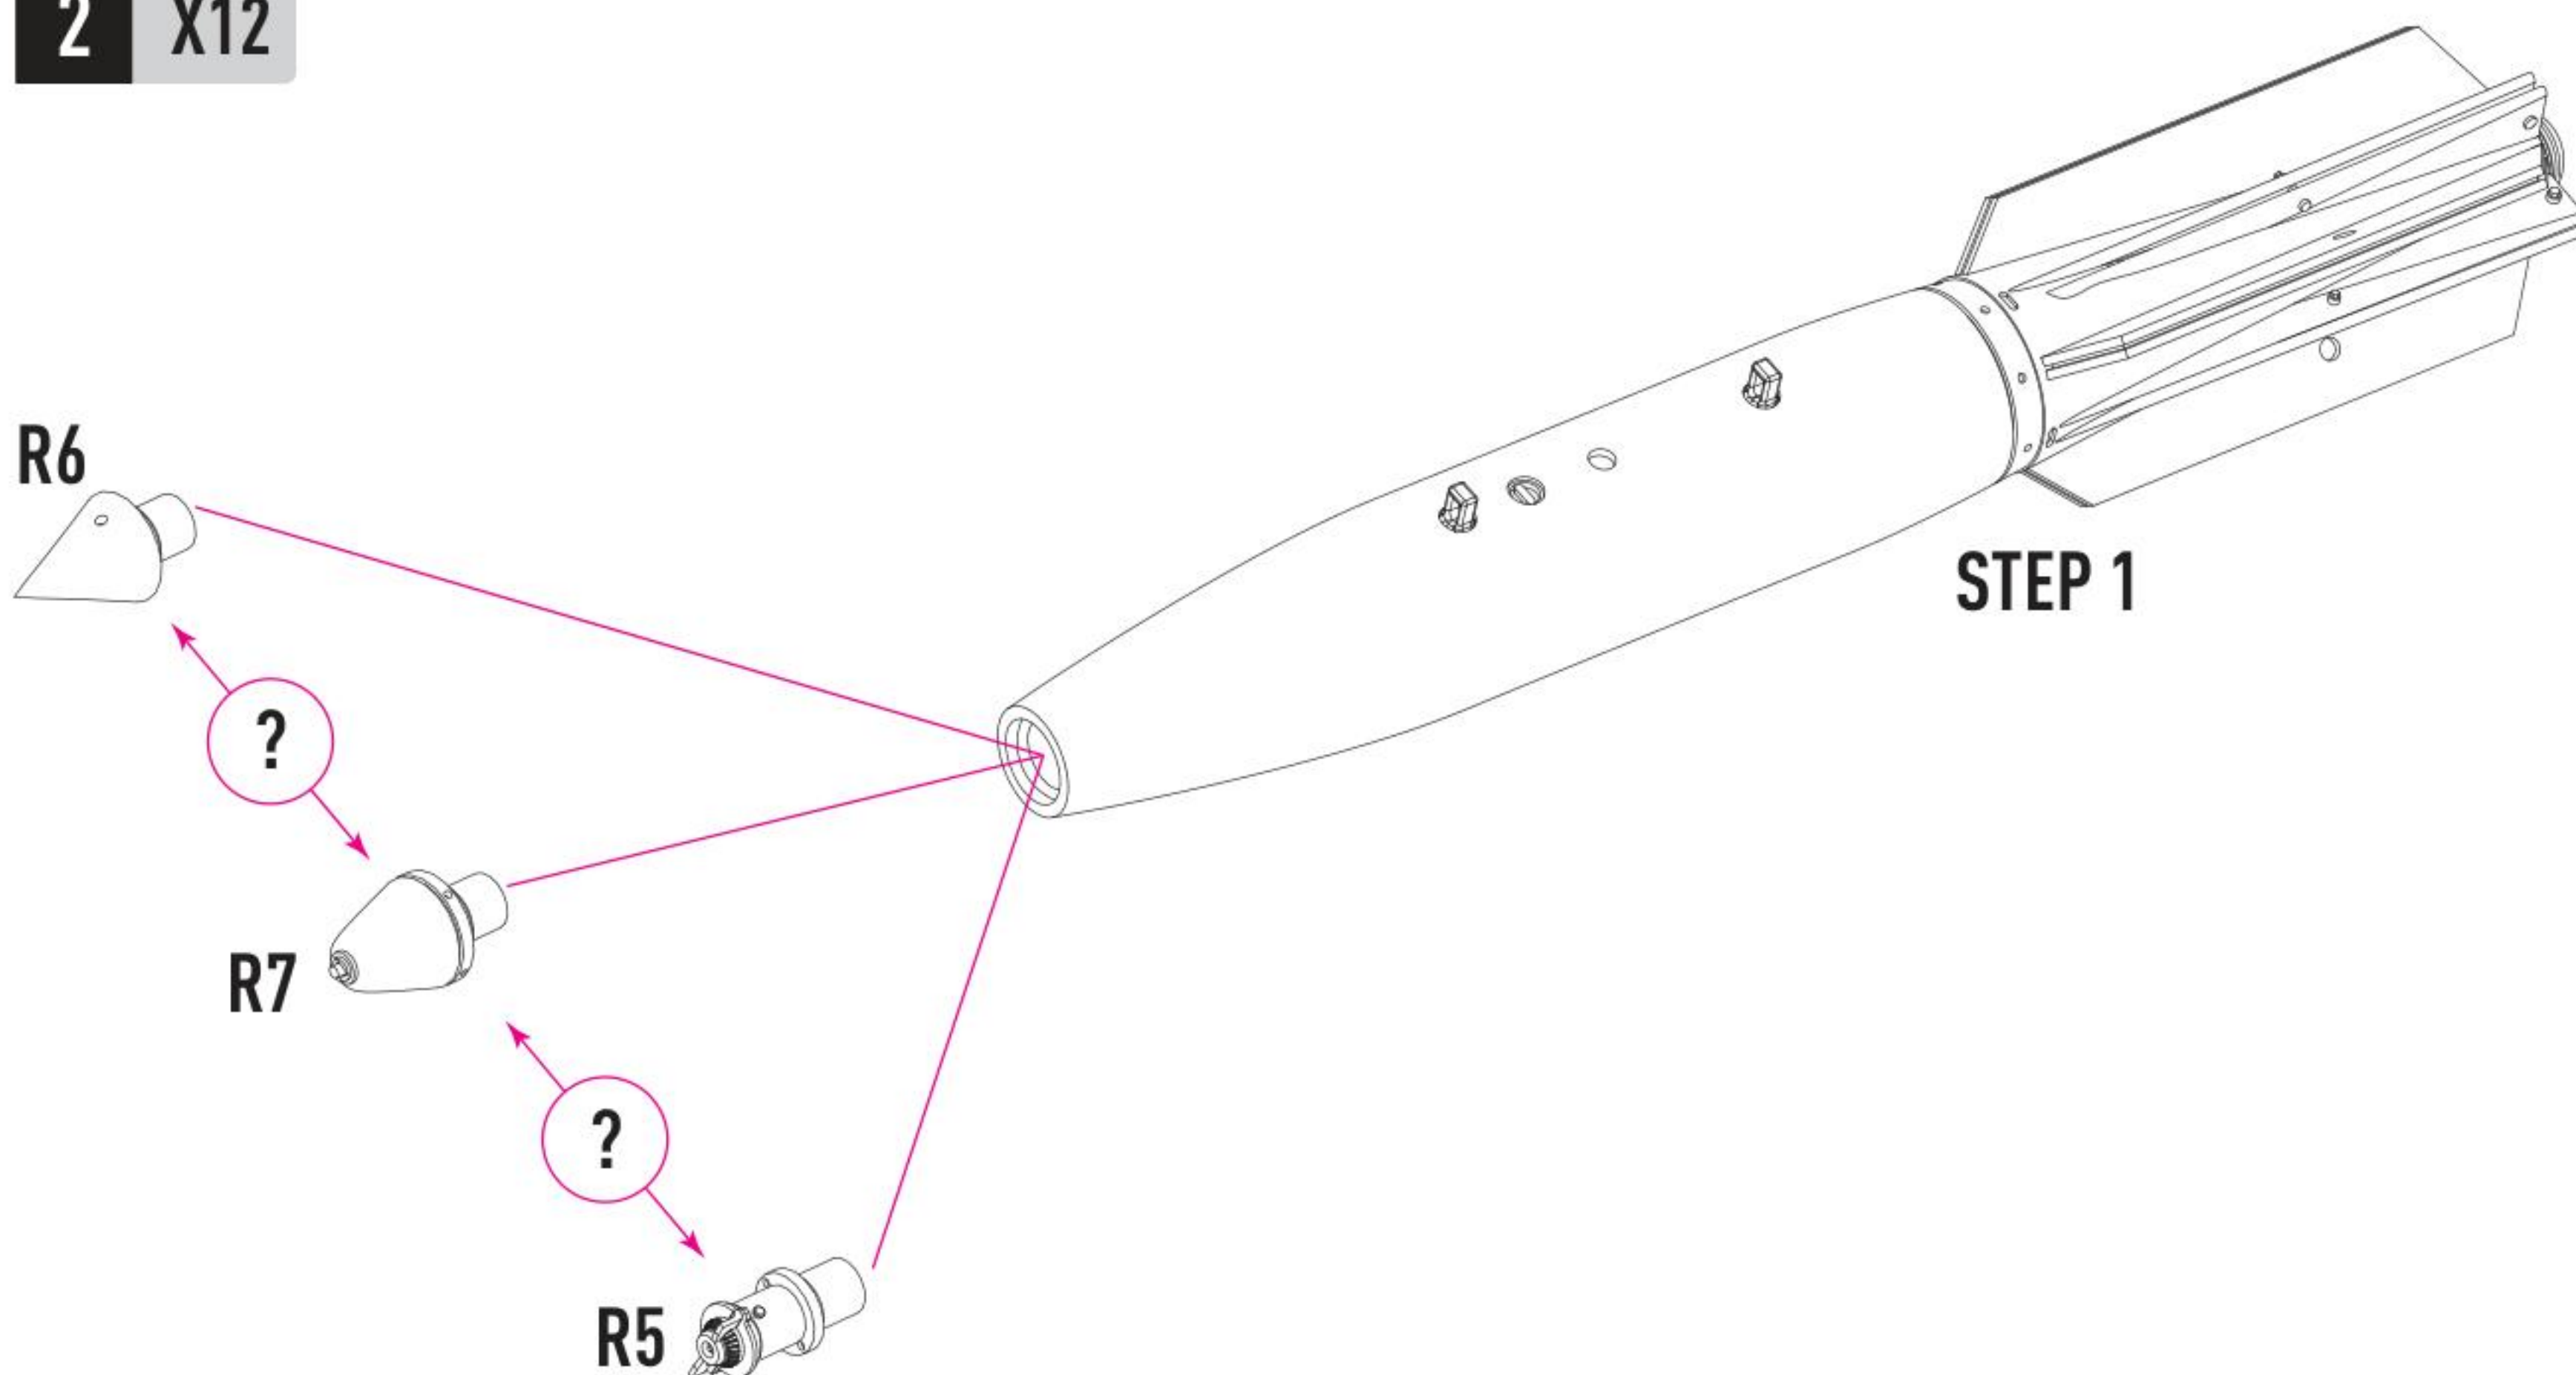

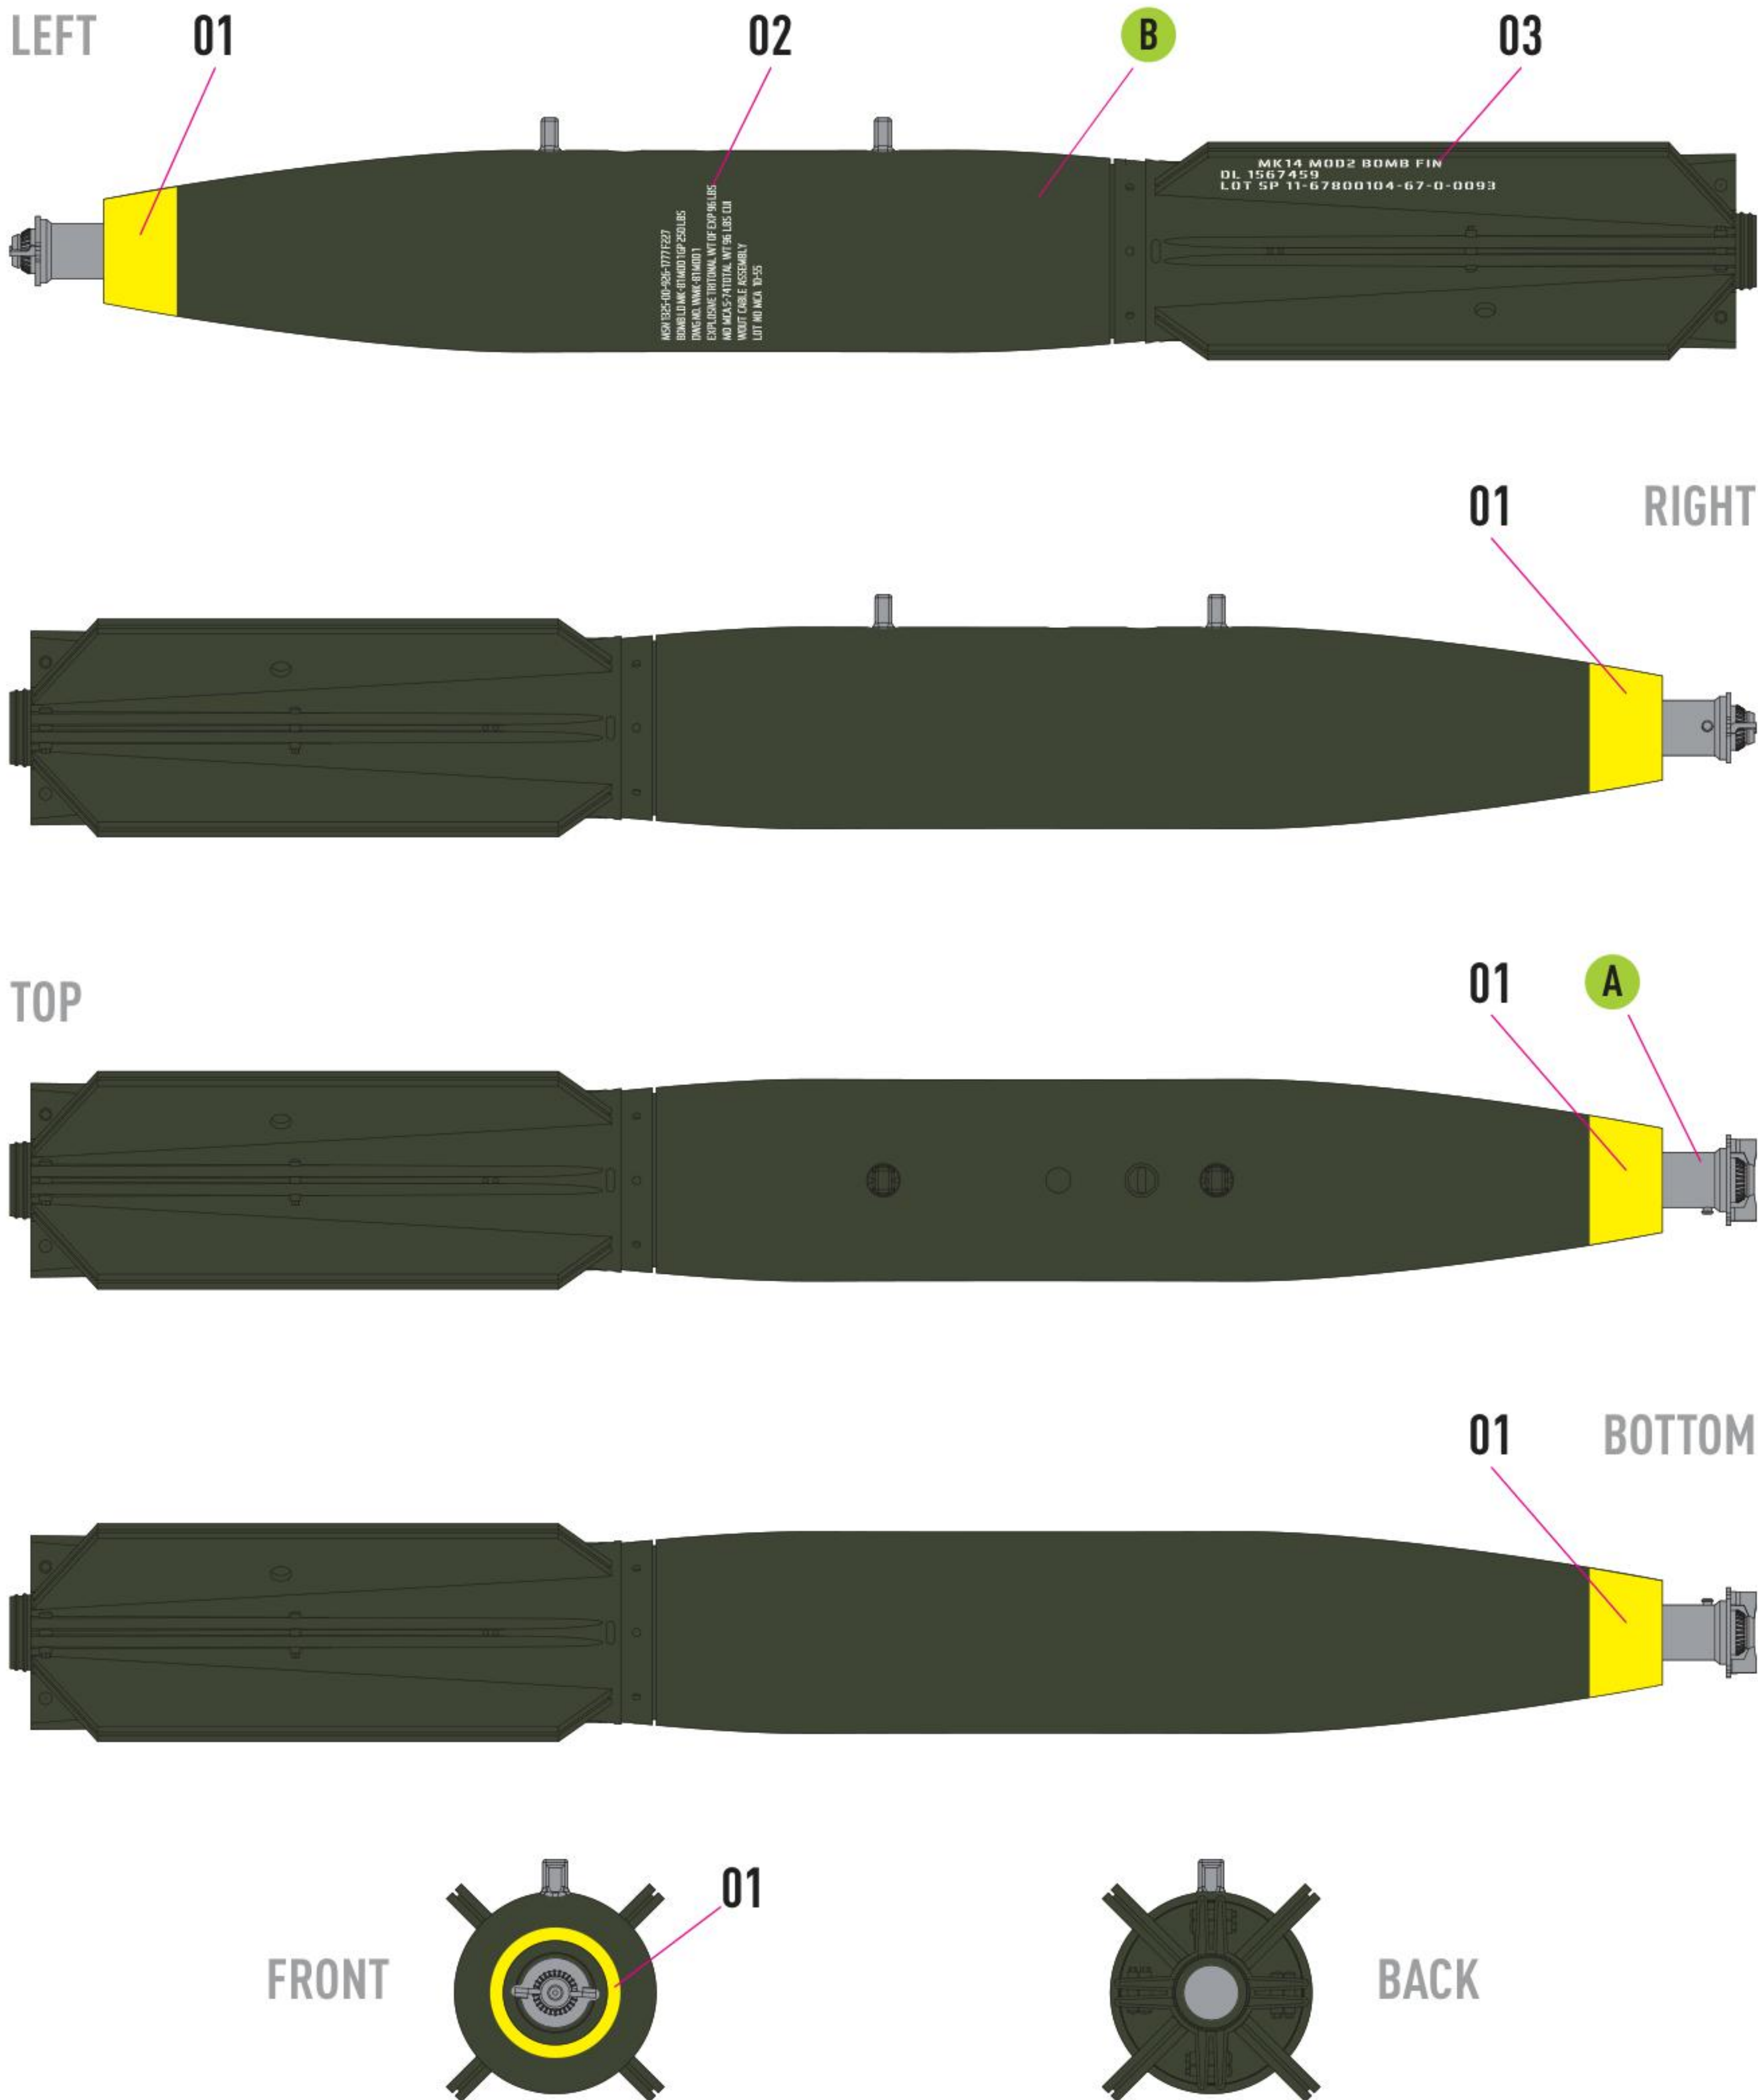

DECALS AND PAINT INSTRUCTION

#	COLOR	GUNZE / AQUEOUS	GUNZE / MR.COLOR
A	SILVER	H8	C8

#	COLOR	GUNZE / AQUEOUS	GUNZE / MR.COLOR
B	OLIVE DRAB	H304	C304