

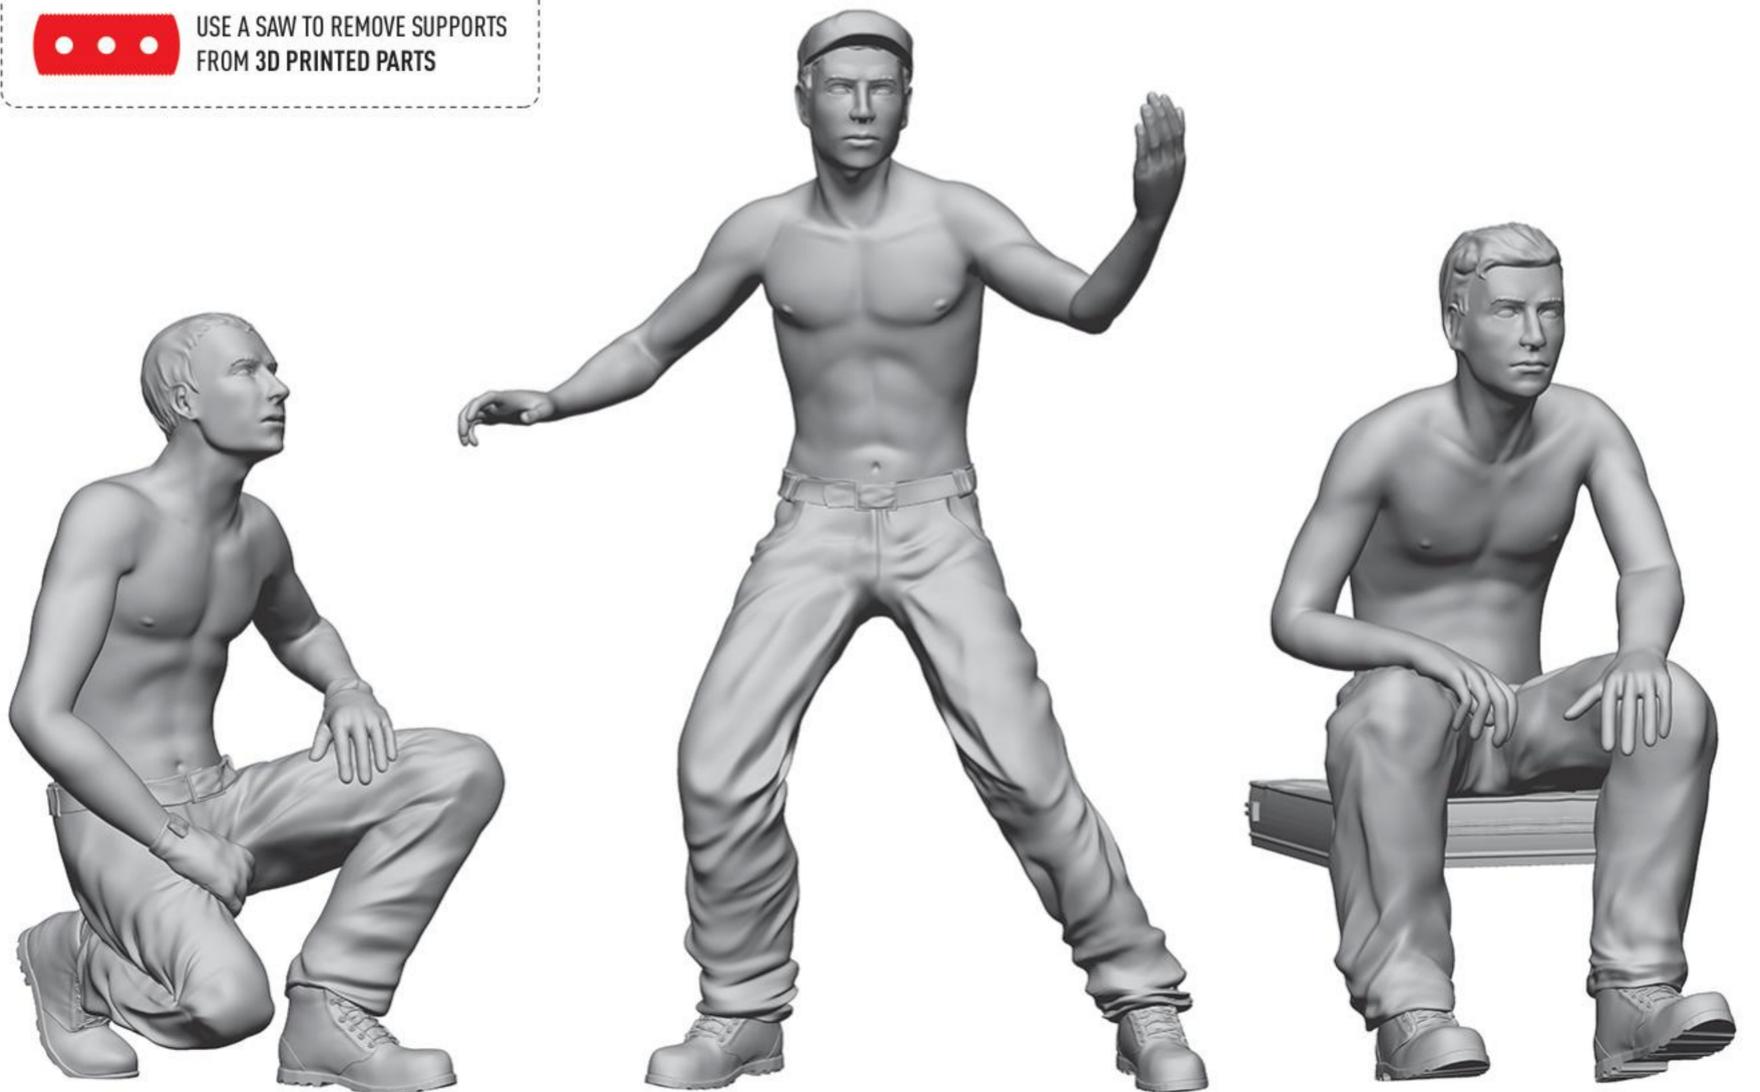


 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

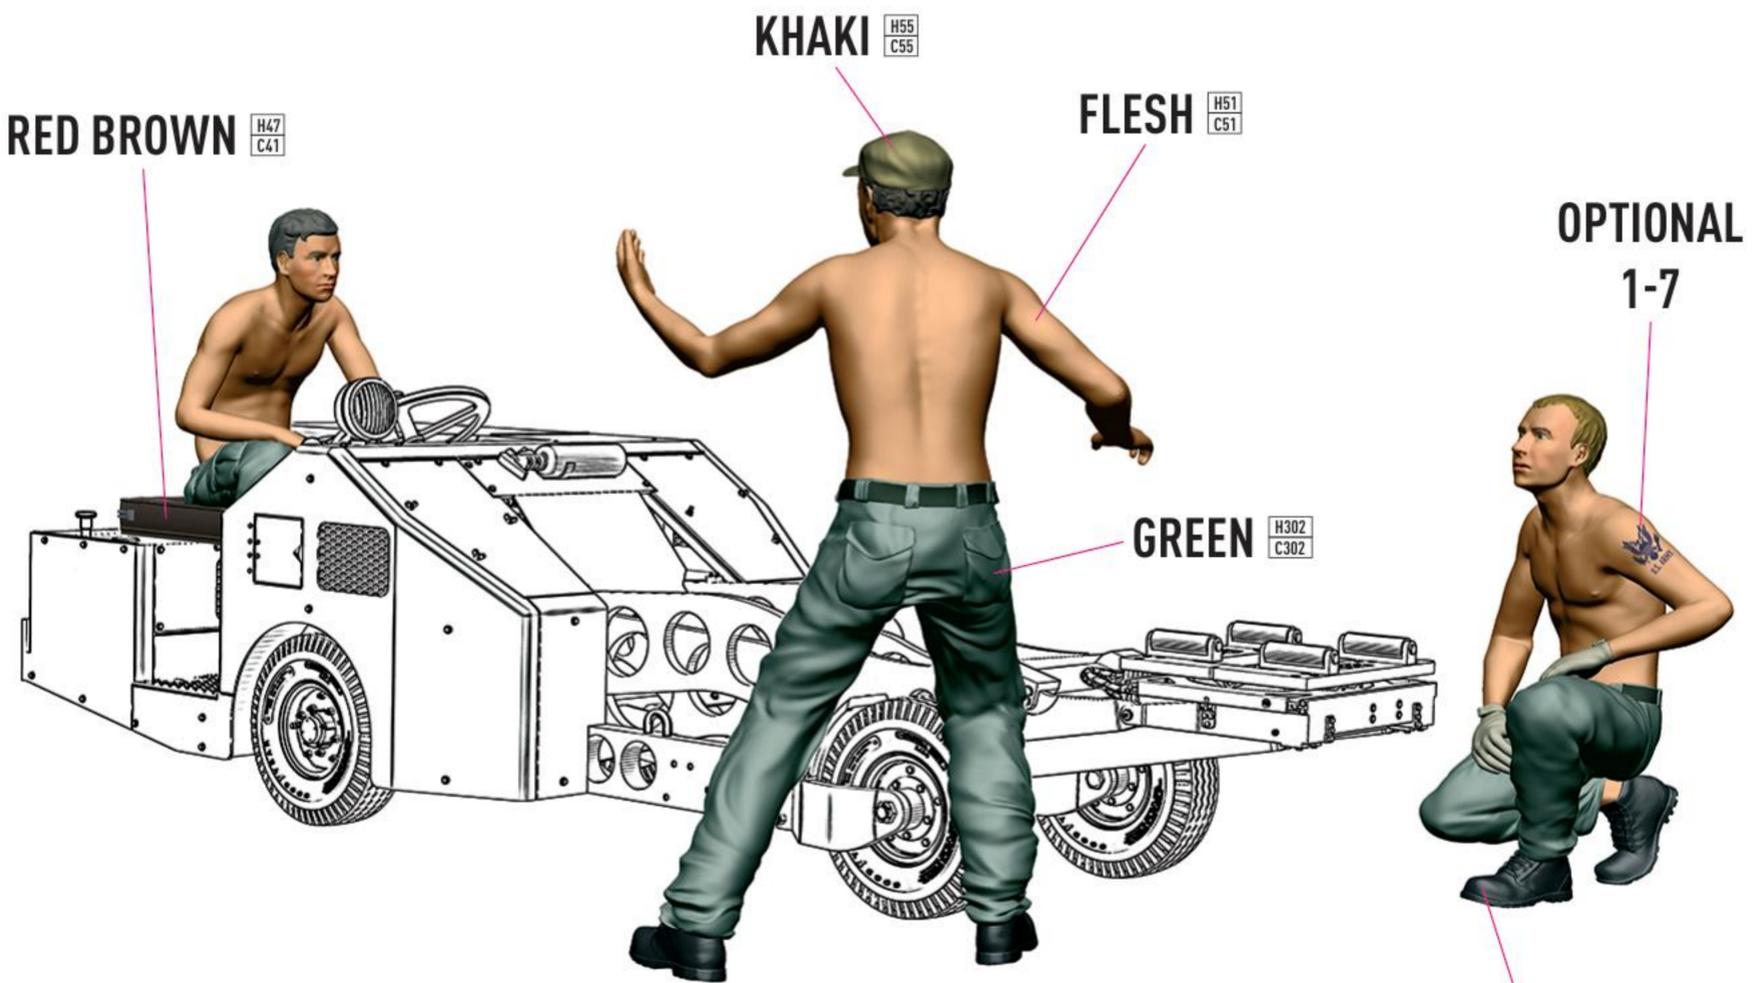

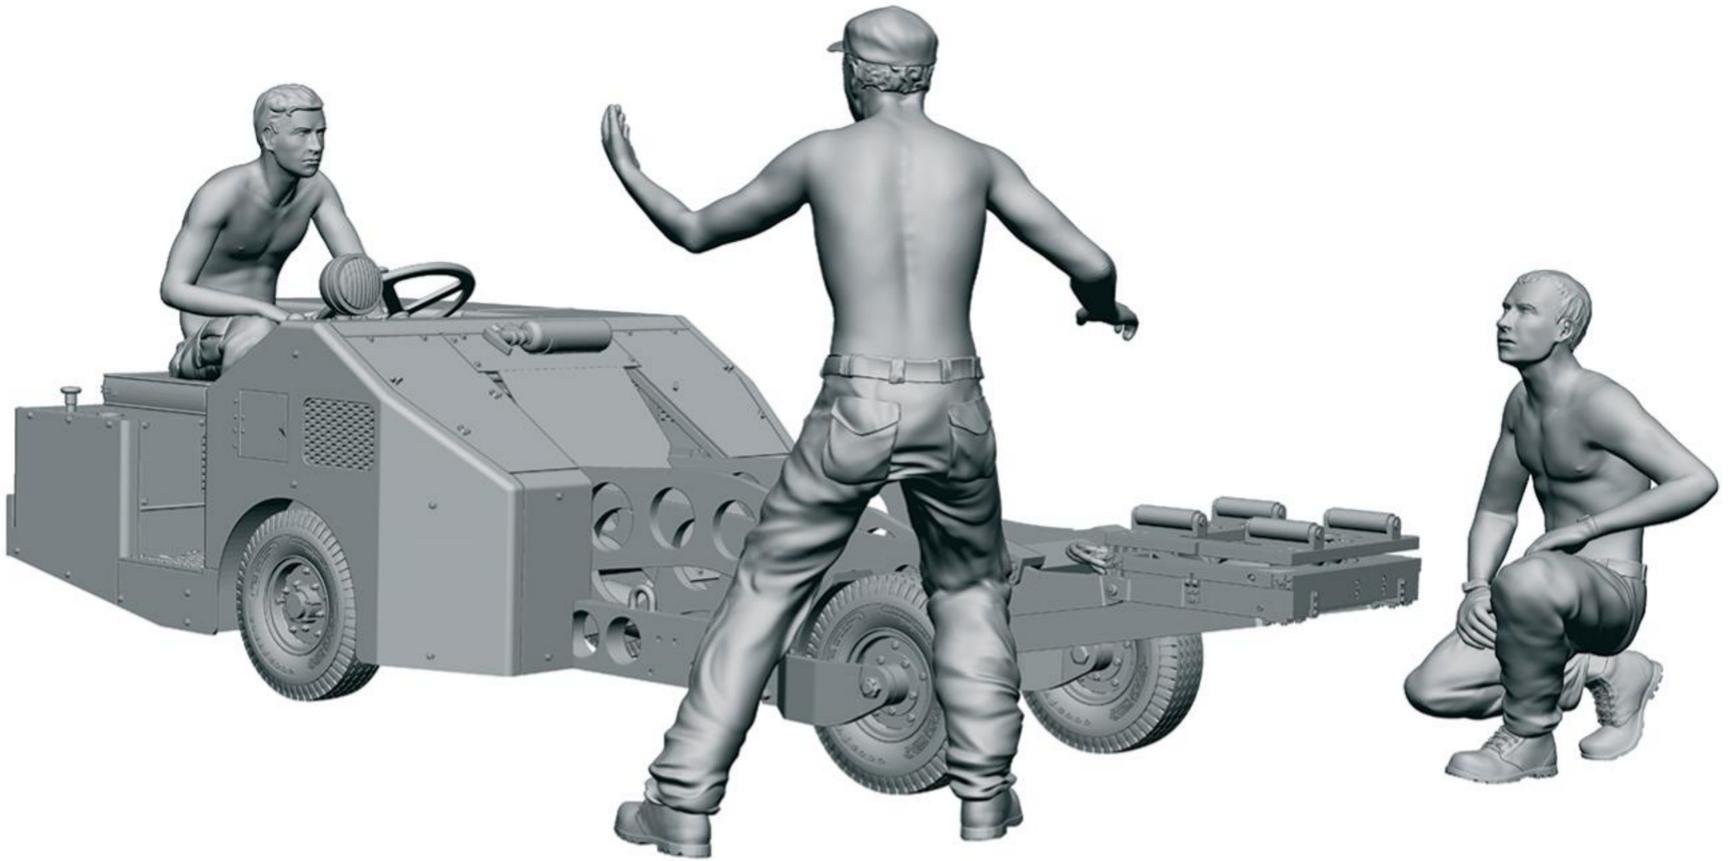

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
RED BROWN	H47	C41
KHAKI	H55	C55
FLESH	H22	C22

SEMI GLOSS BLACK C92

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
GREEN	H302	C302