

R1



R4



R7




R2



R5



R6

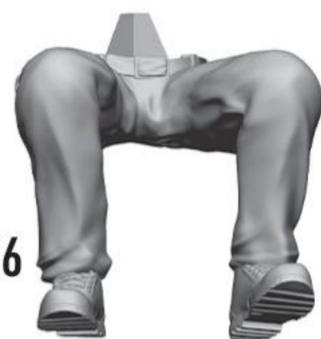

R8




R3



USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS



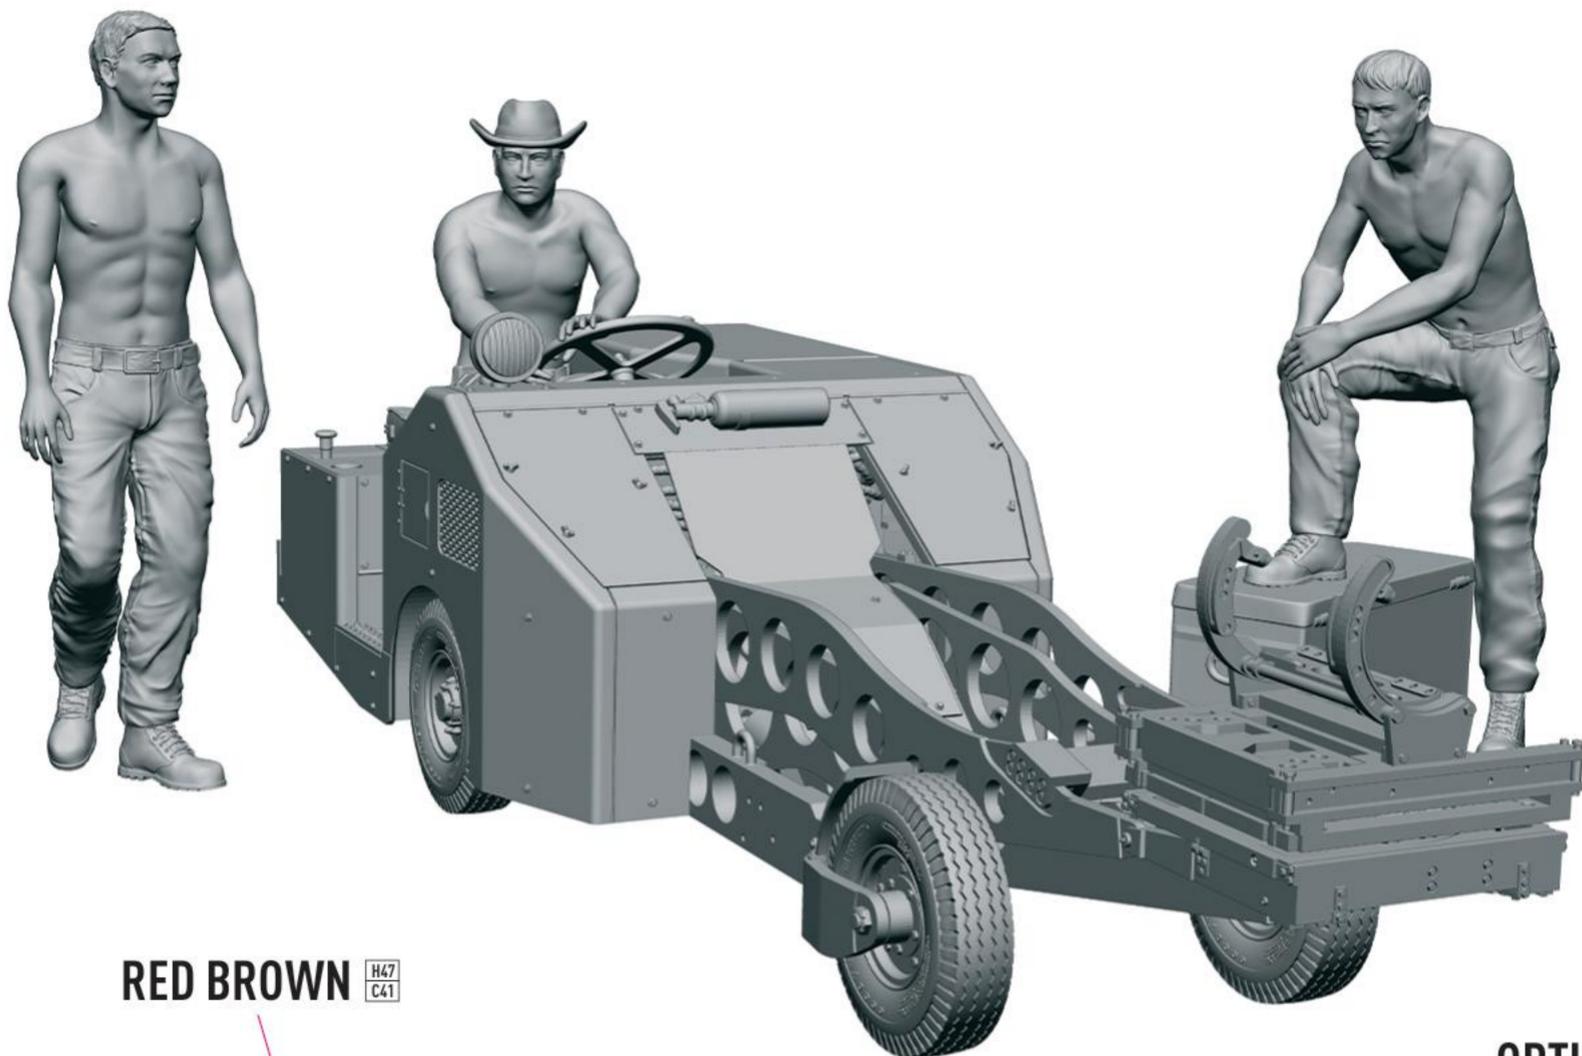

RED BROWN H47
C41

OPTIONAL
1-7

FLESH H51
C51

GREEN H302
C302

SEMI GLOSS BLACK C92

YELLOW H4
C4

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
RED BROWN	H47	C41
YELLOW	H4	C4
FLESH	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
GREEN	H302	C302