



 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

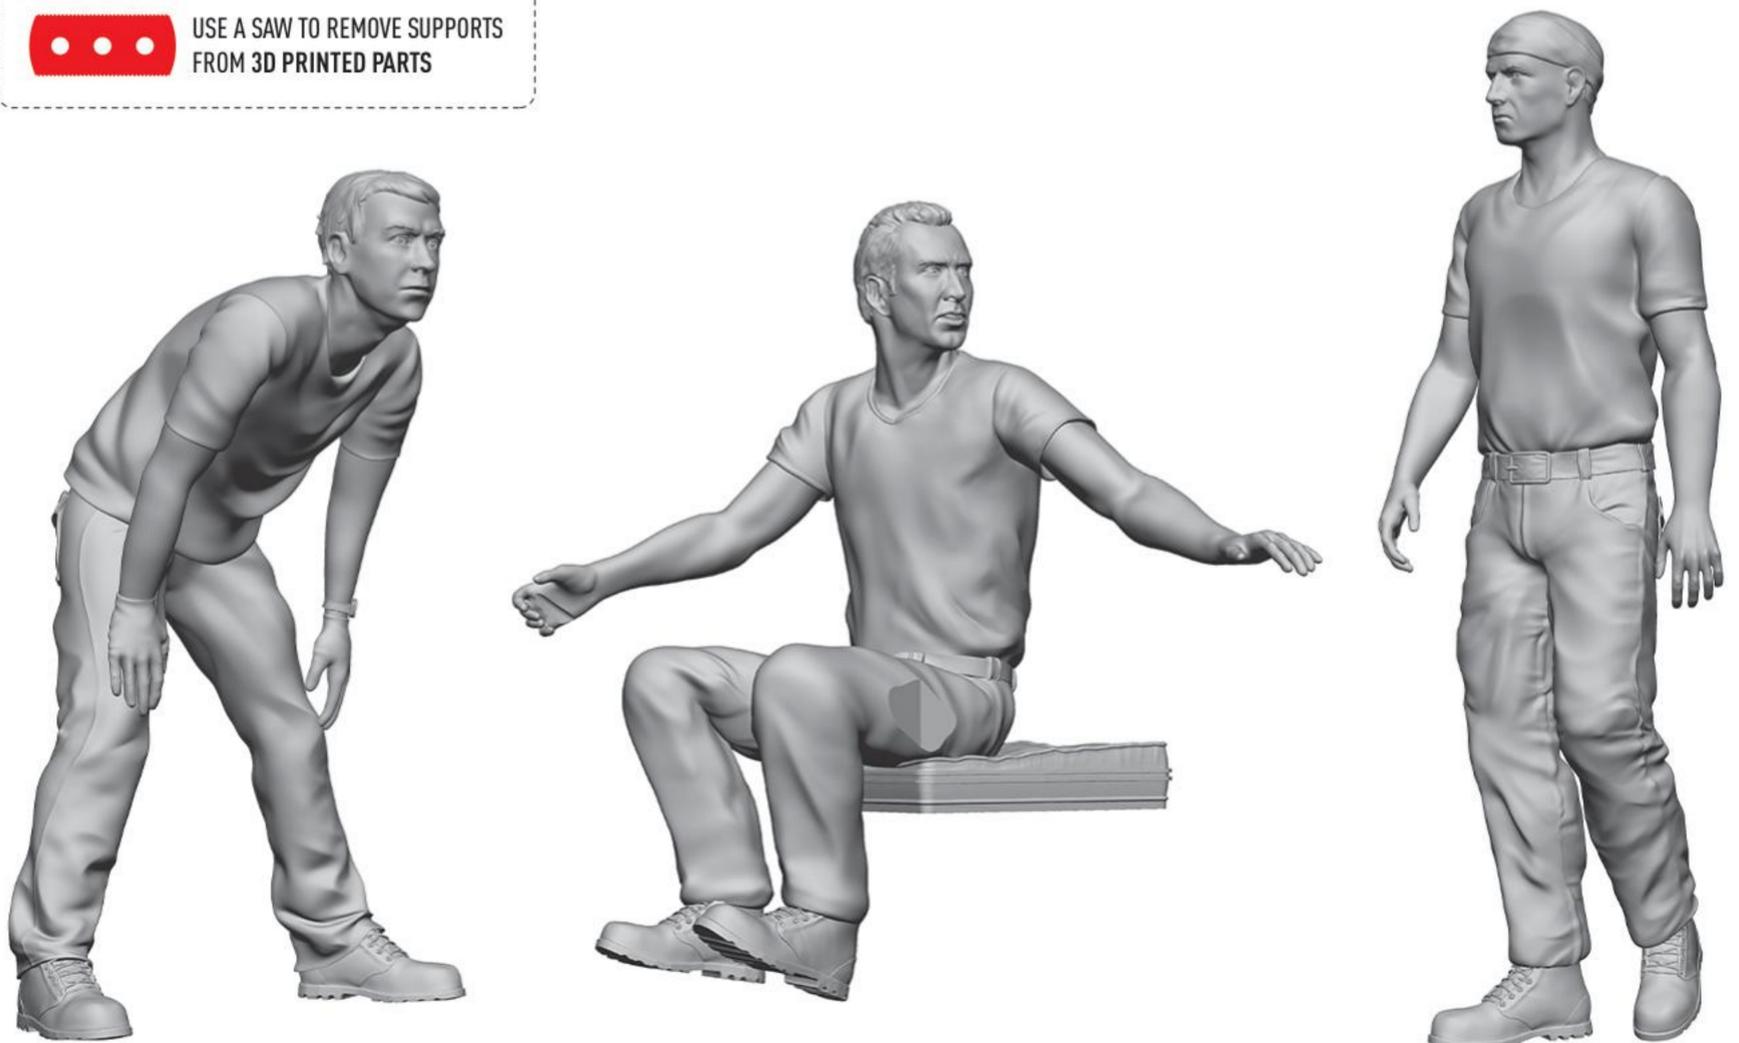


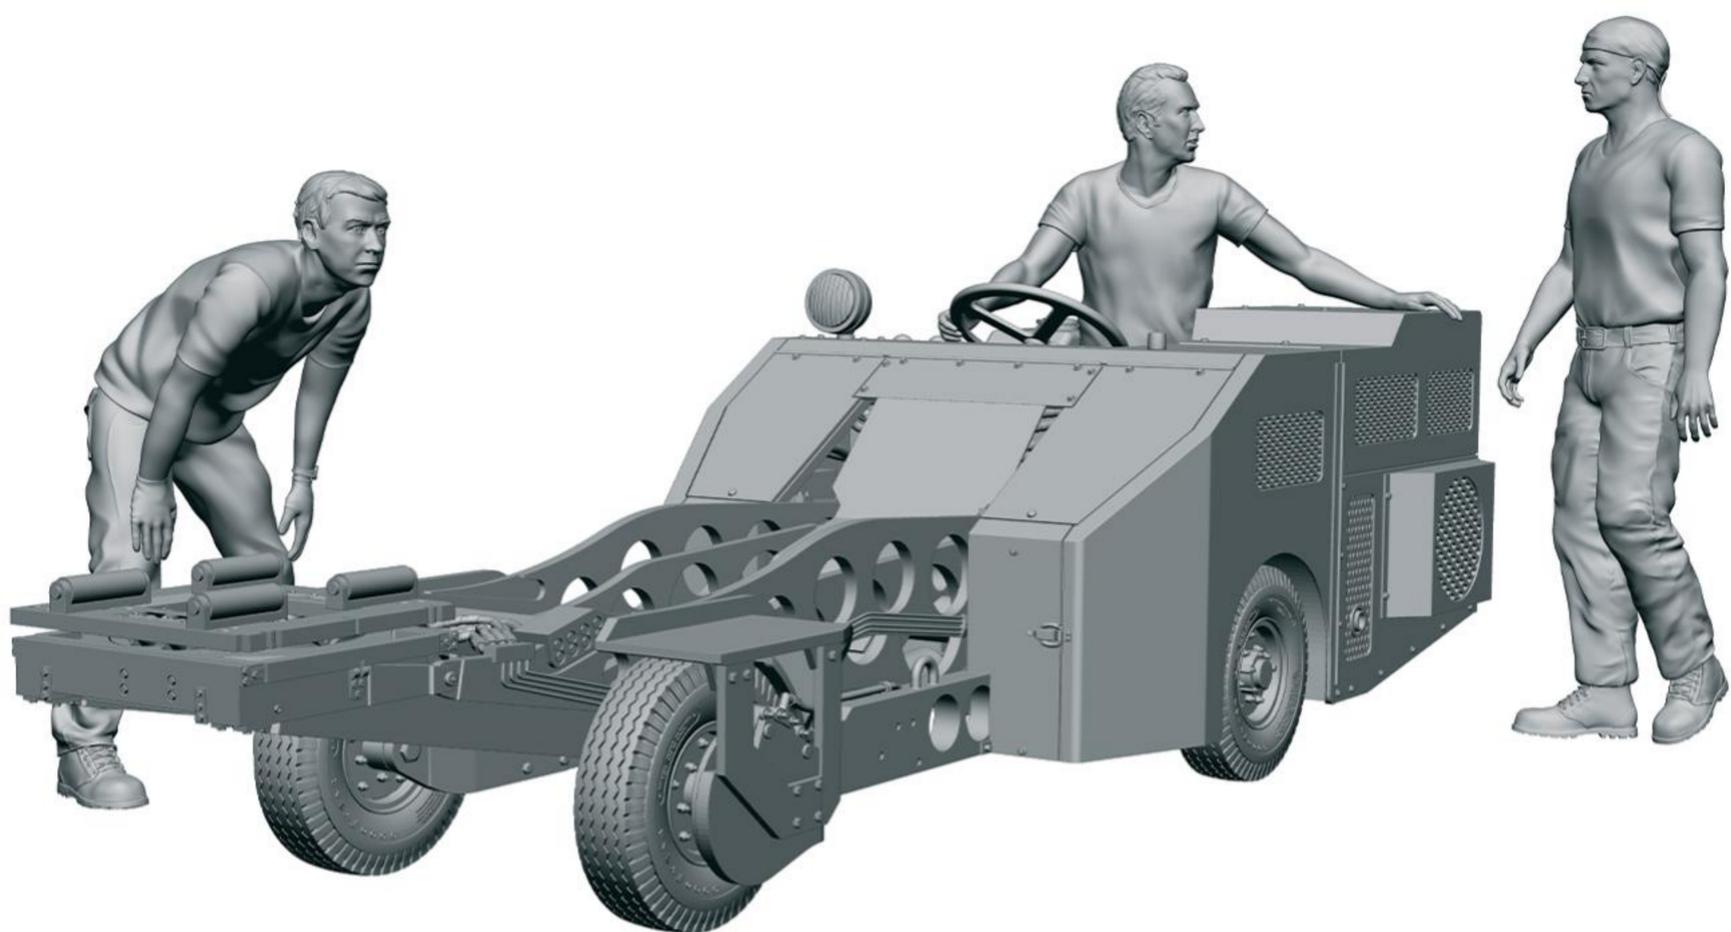

DARK GREEN H70
C70

TAN H44
C44

FLESH H51
C51

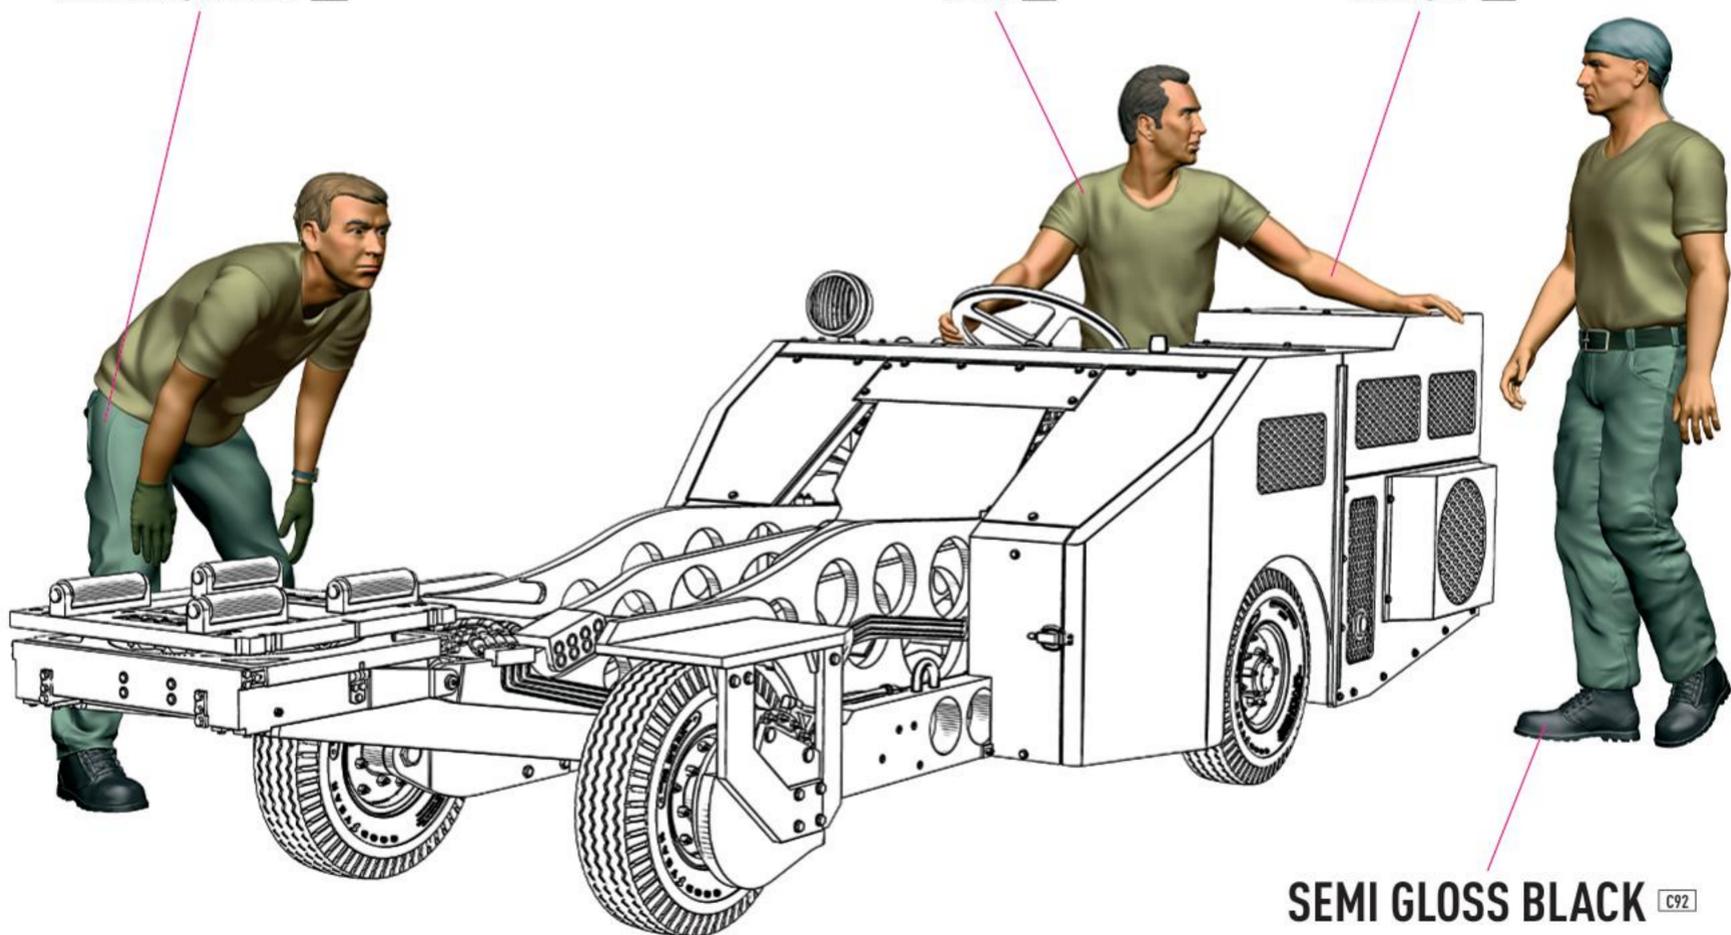

SEMI GLOSS BLACK C92

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
CRED BROWN	H47	C41
TAN	H44	C44
FLESH	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
DARK GREEN	H70	C70