



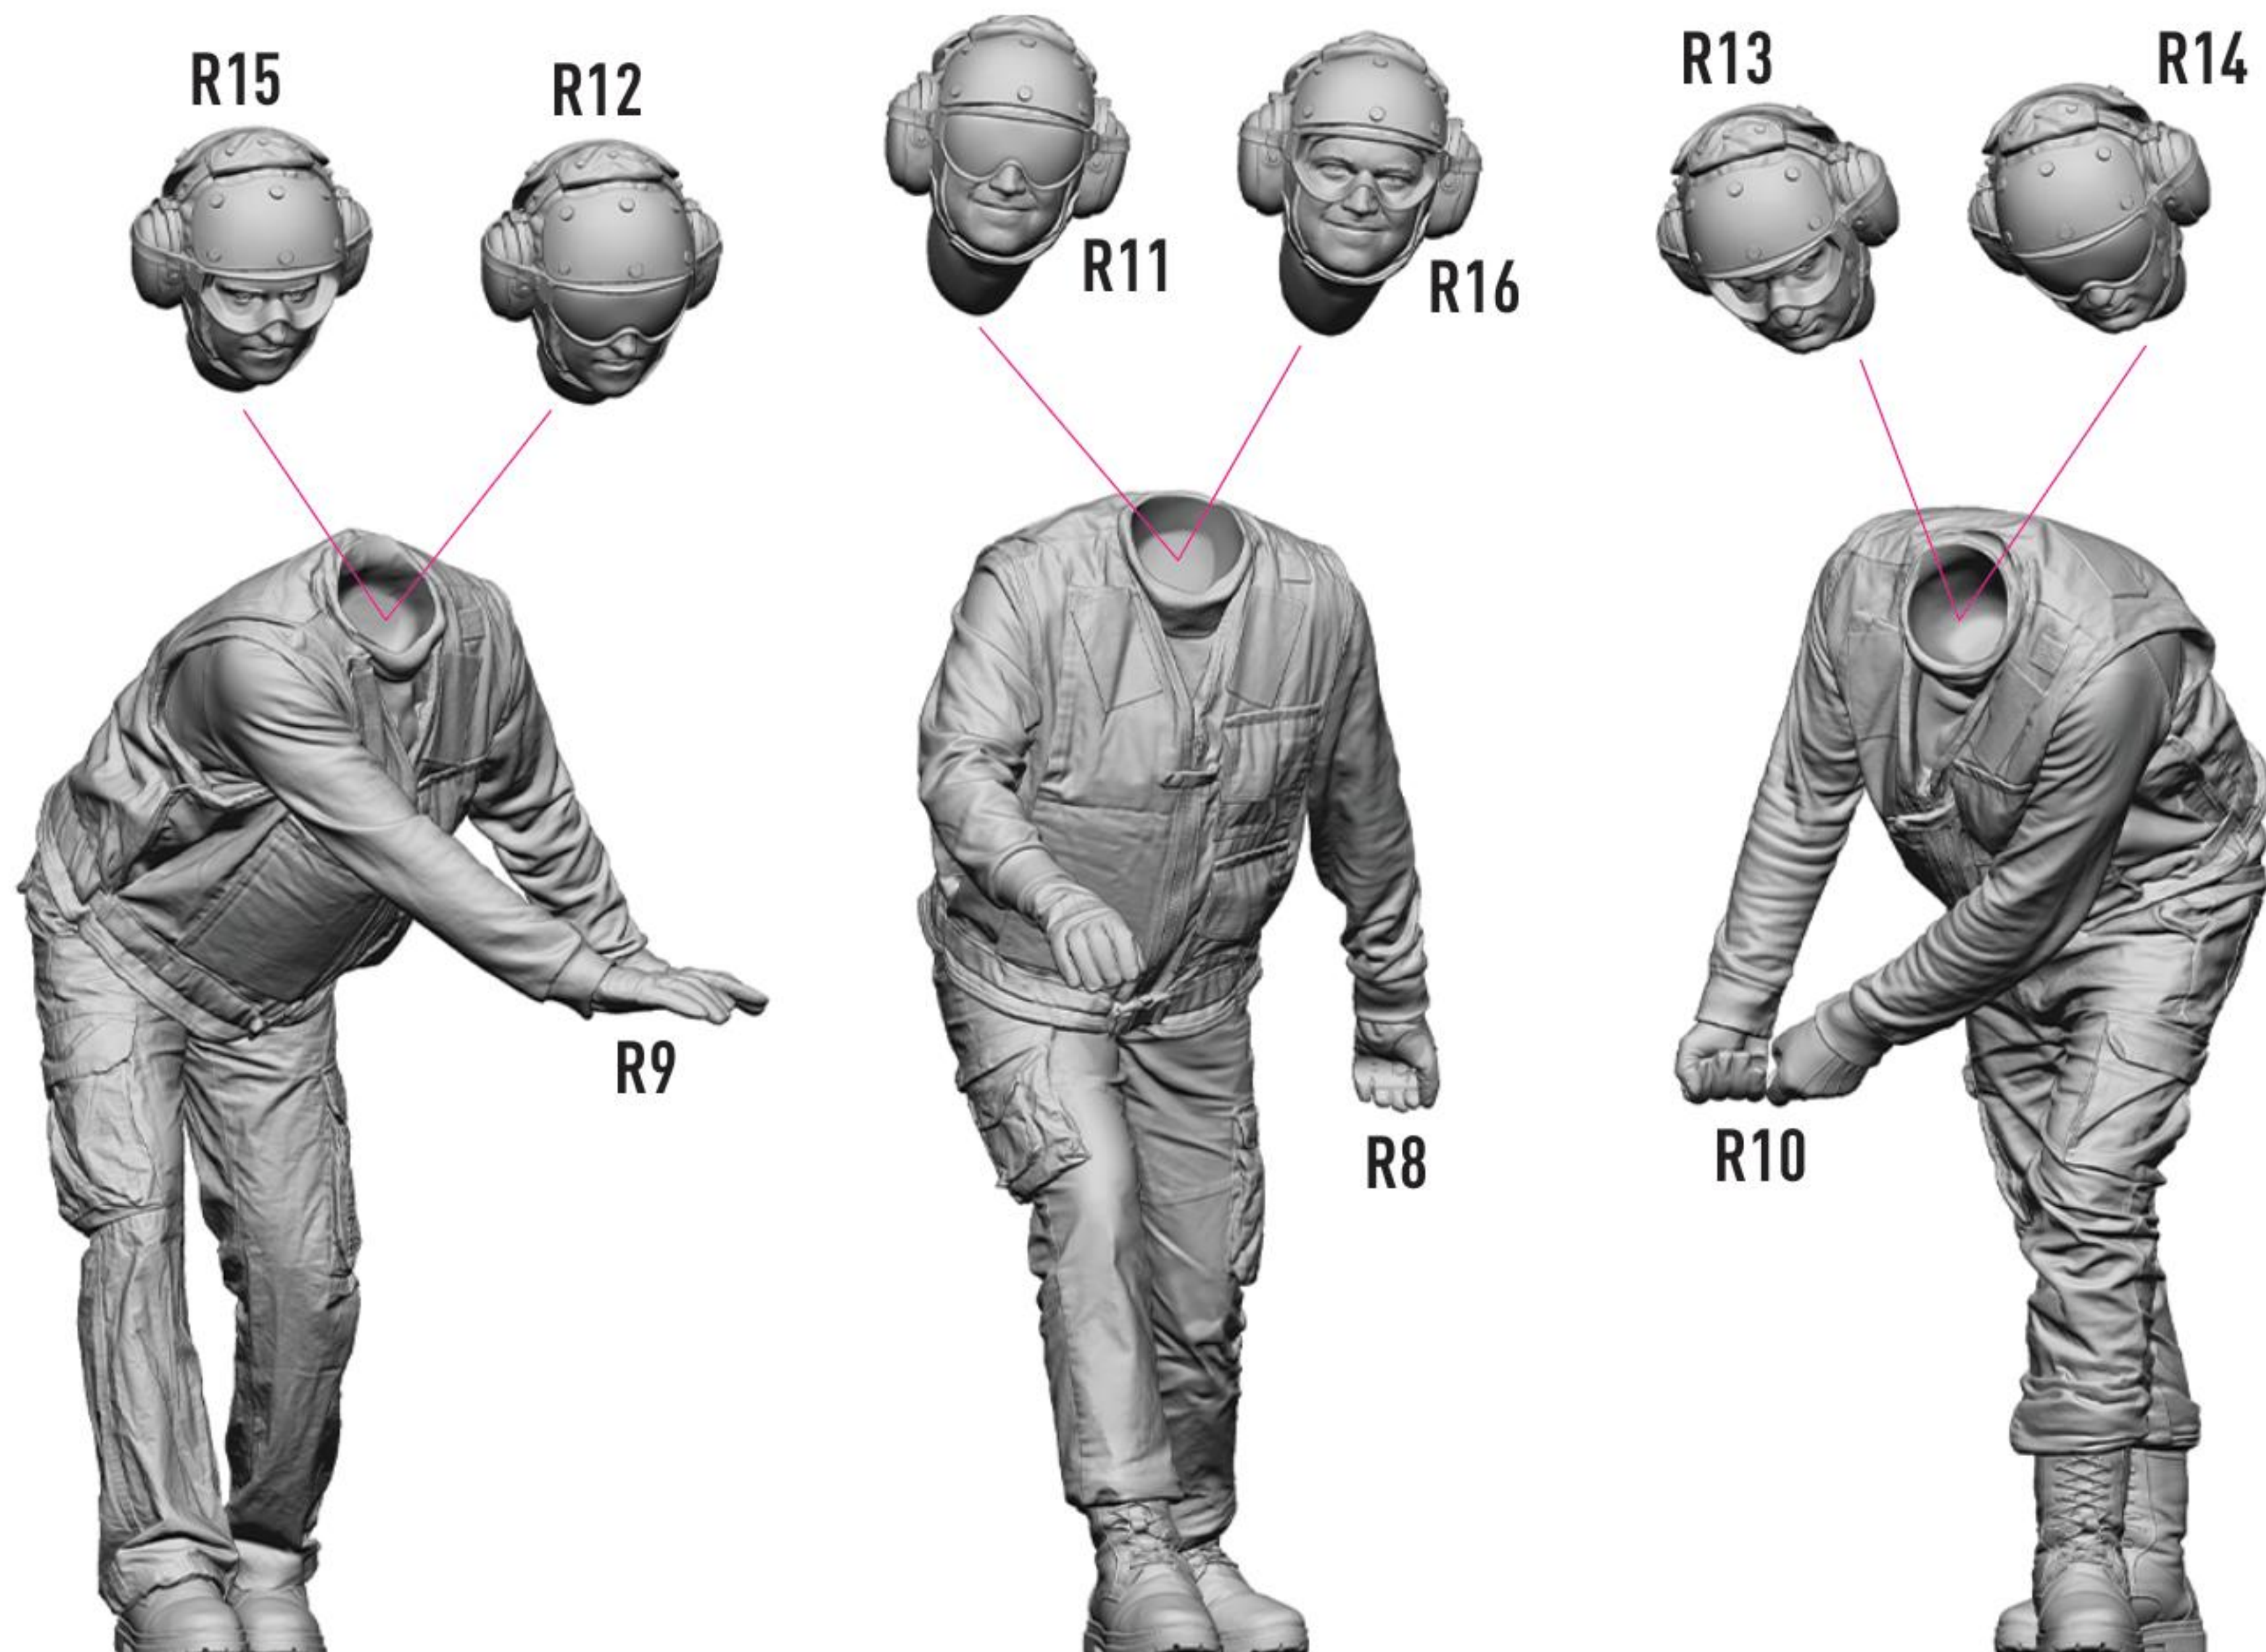


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

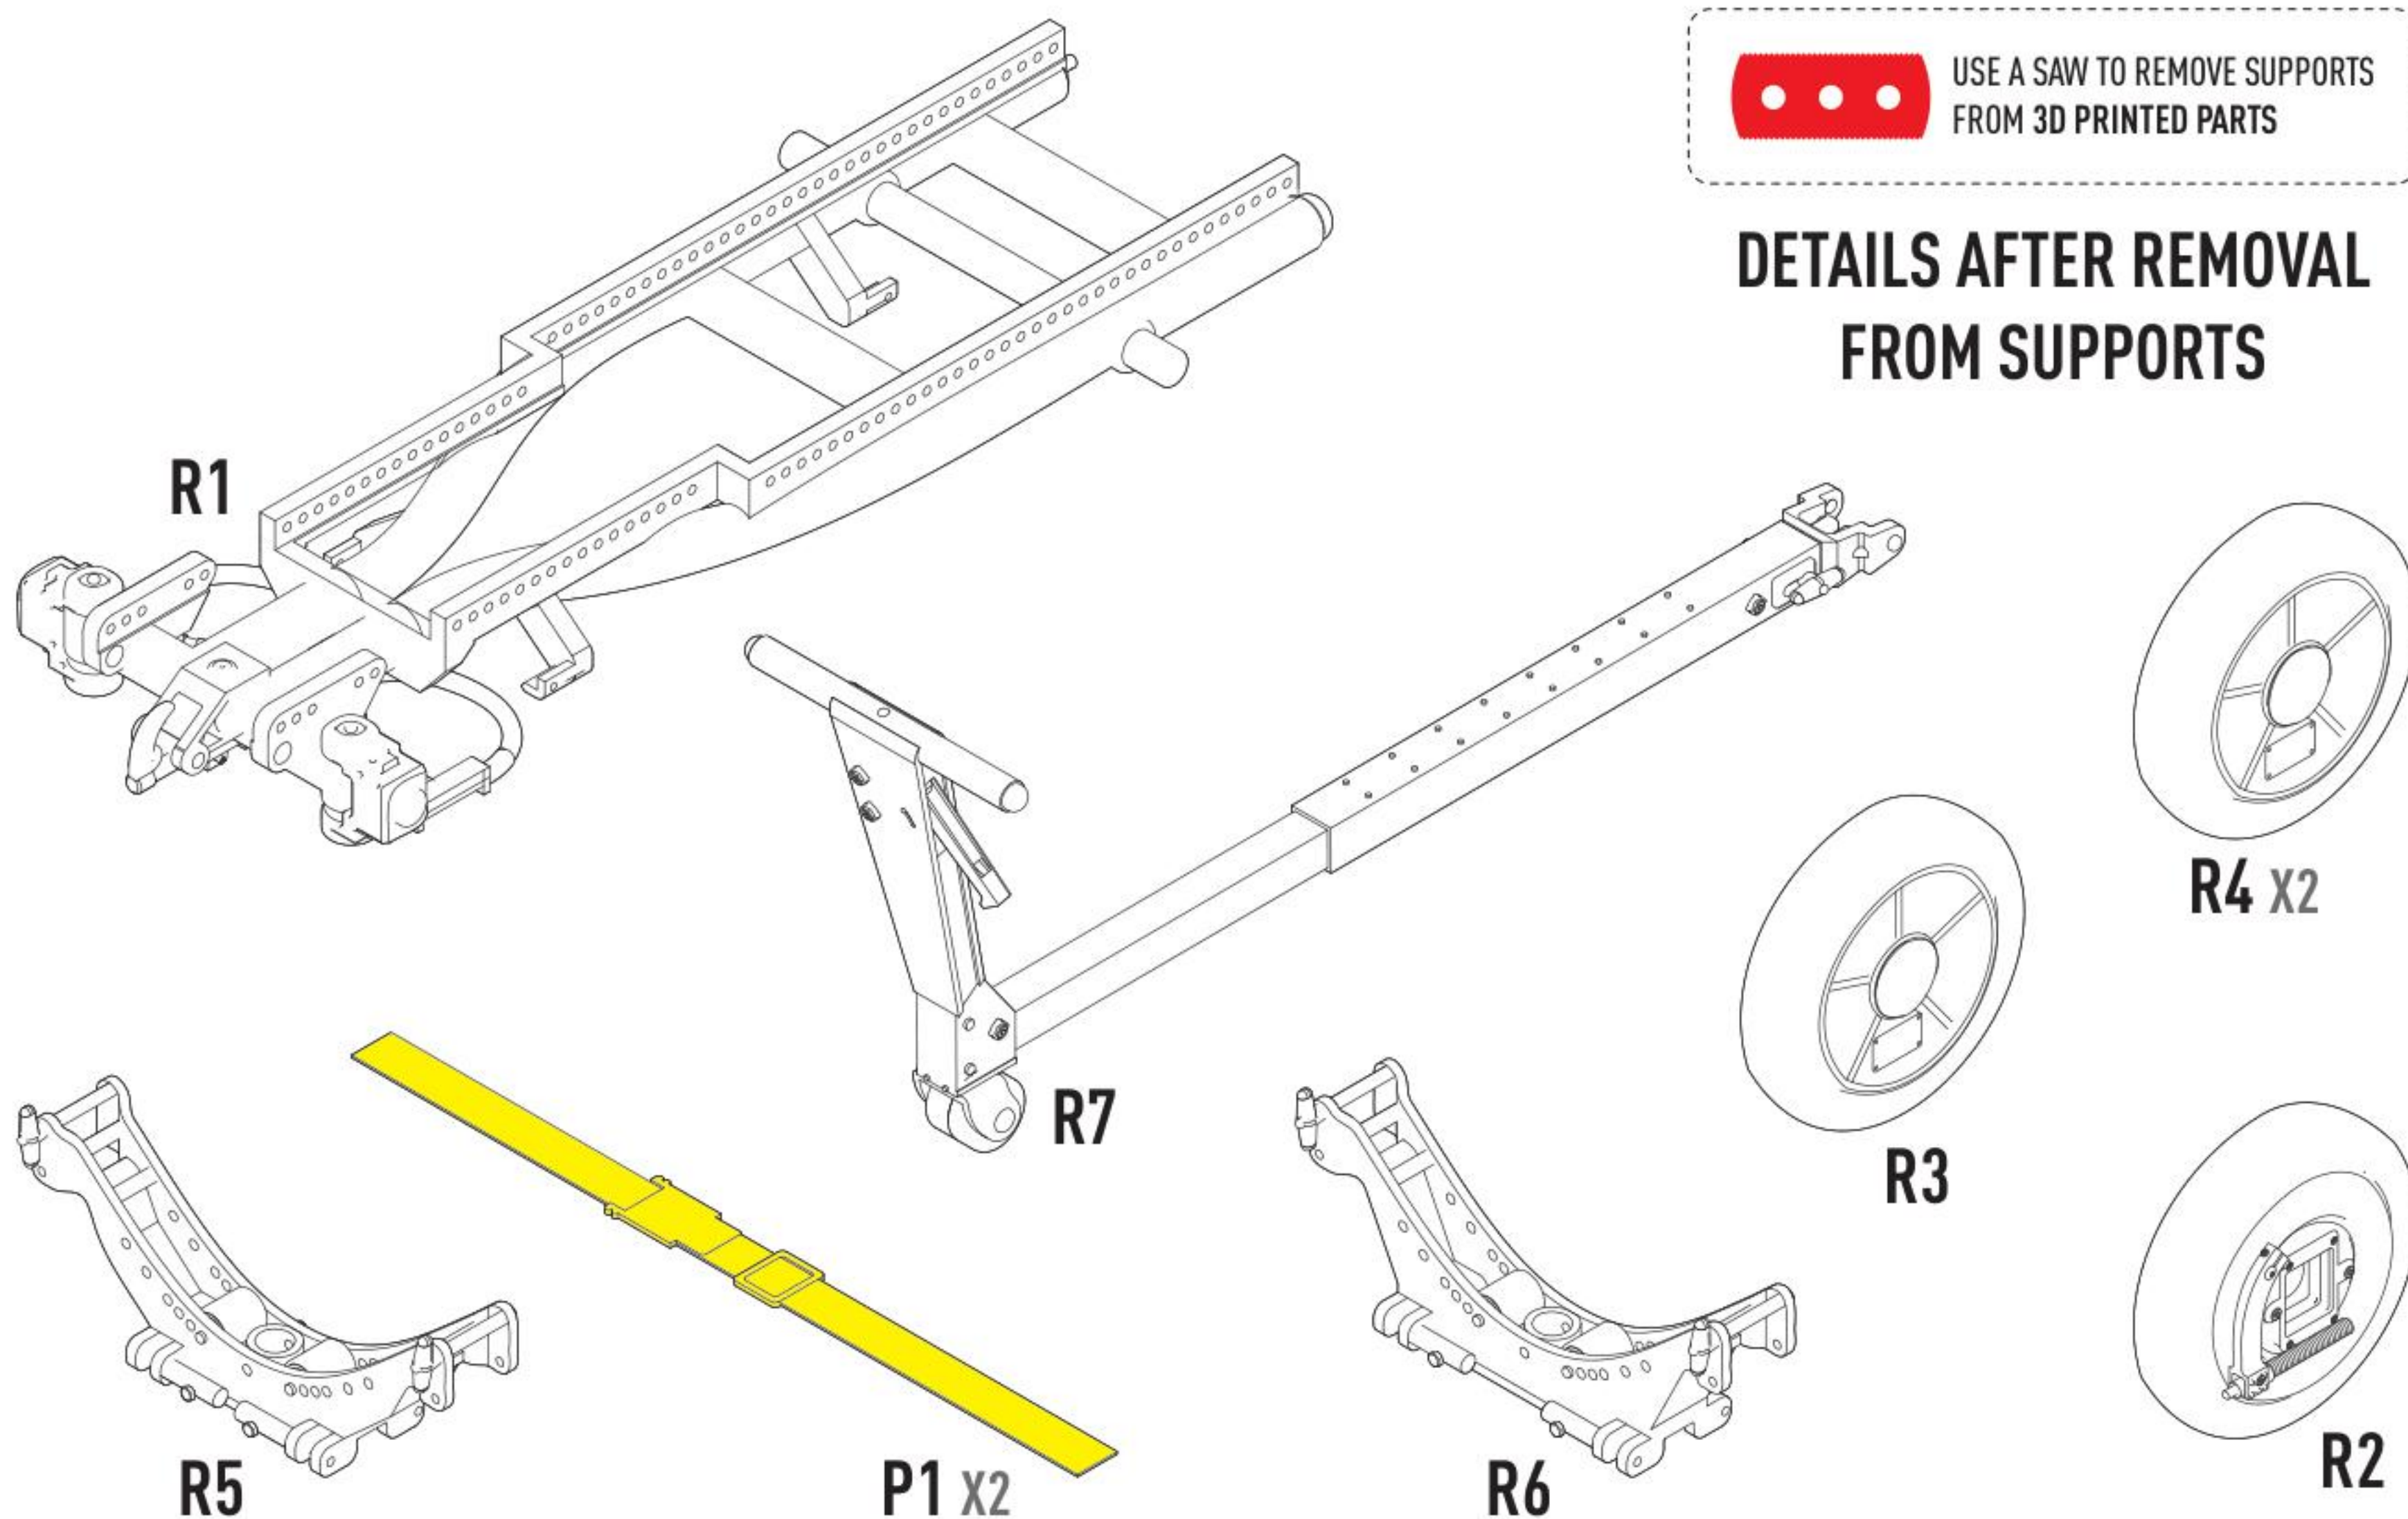



1

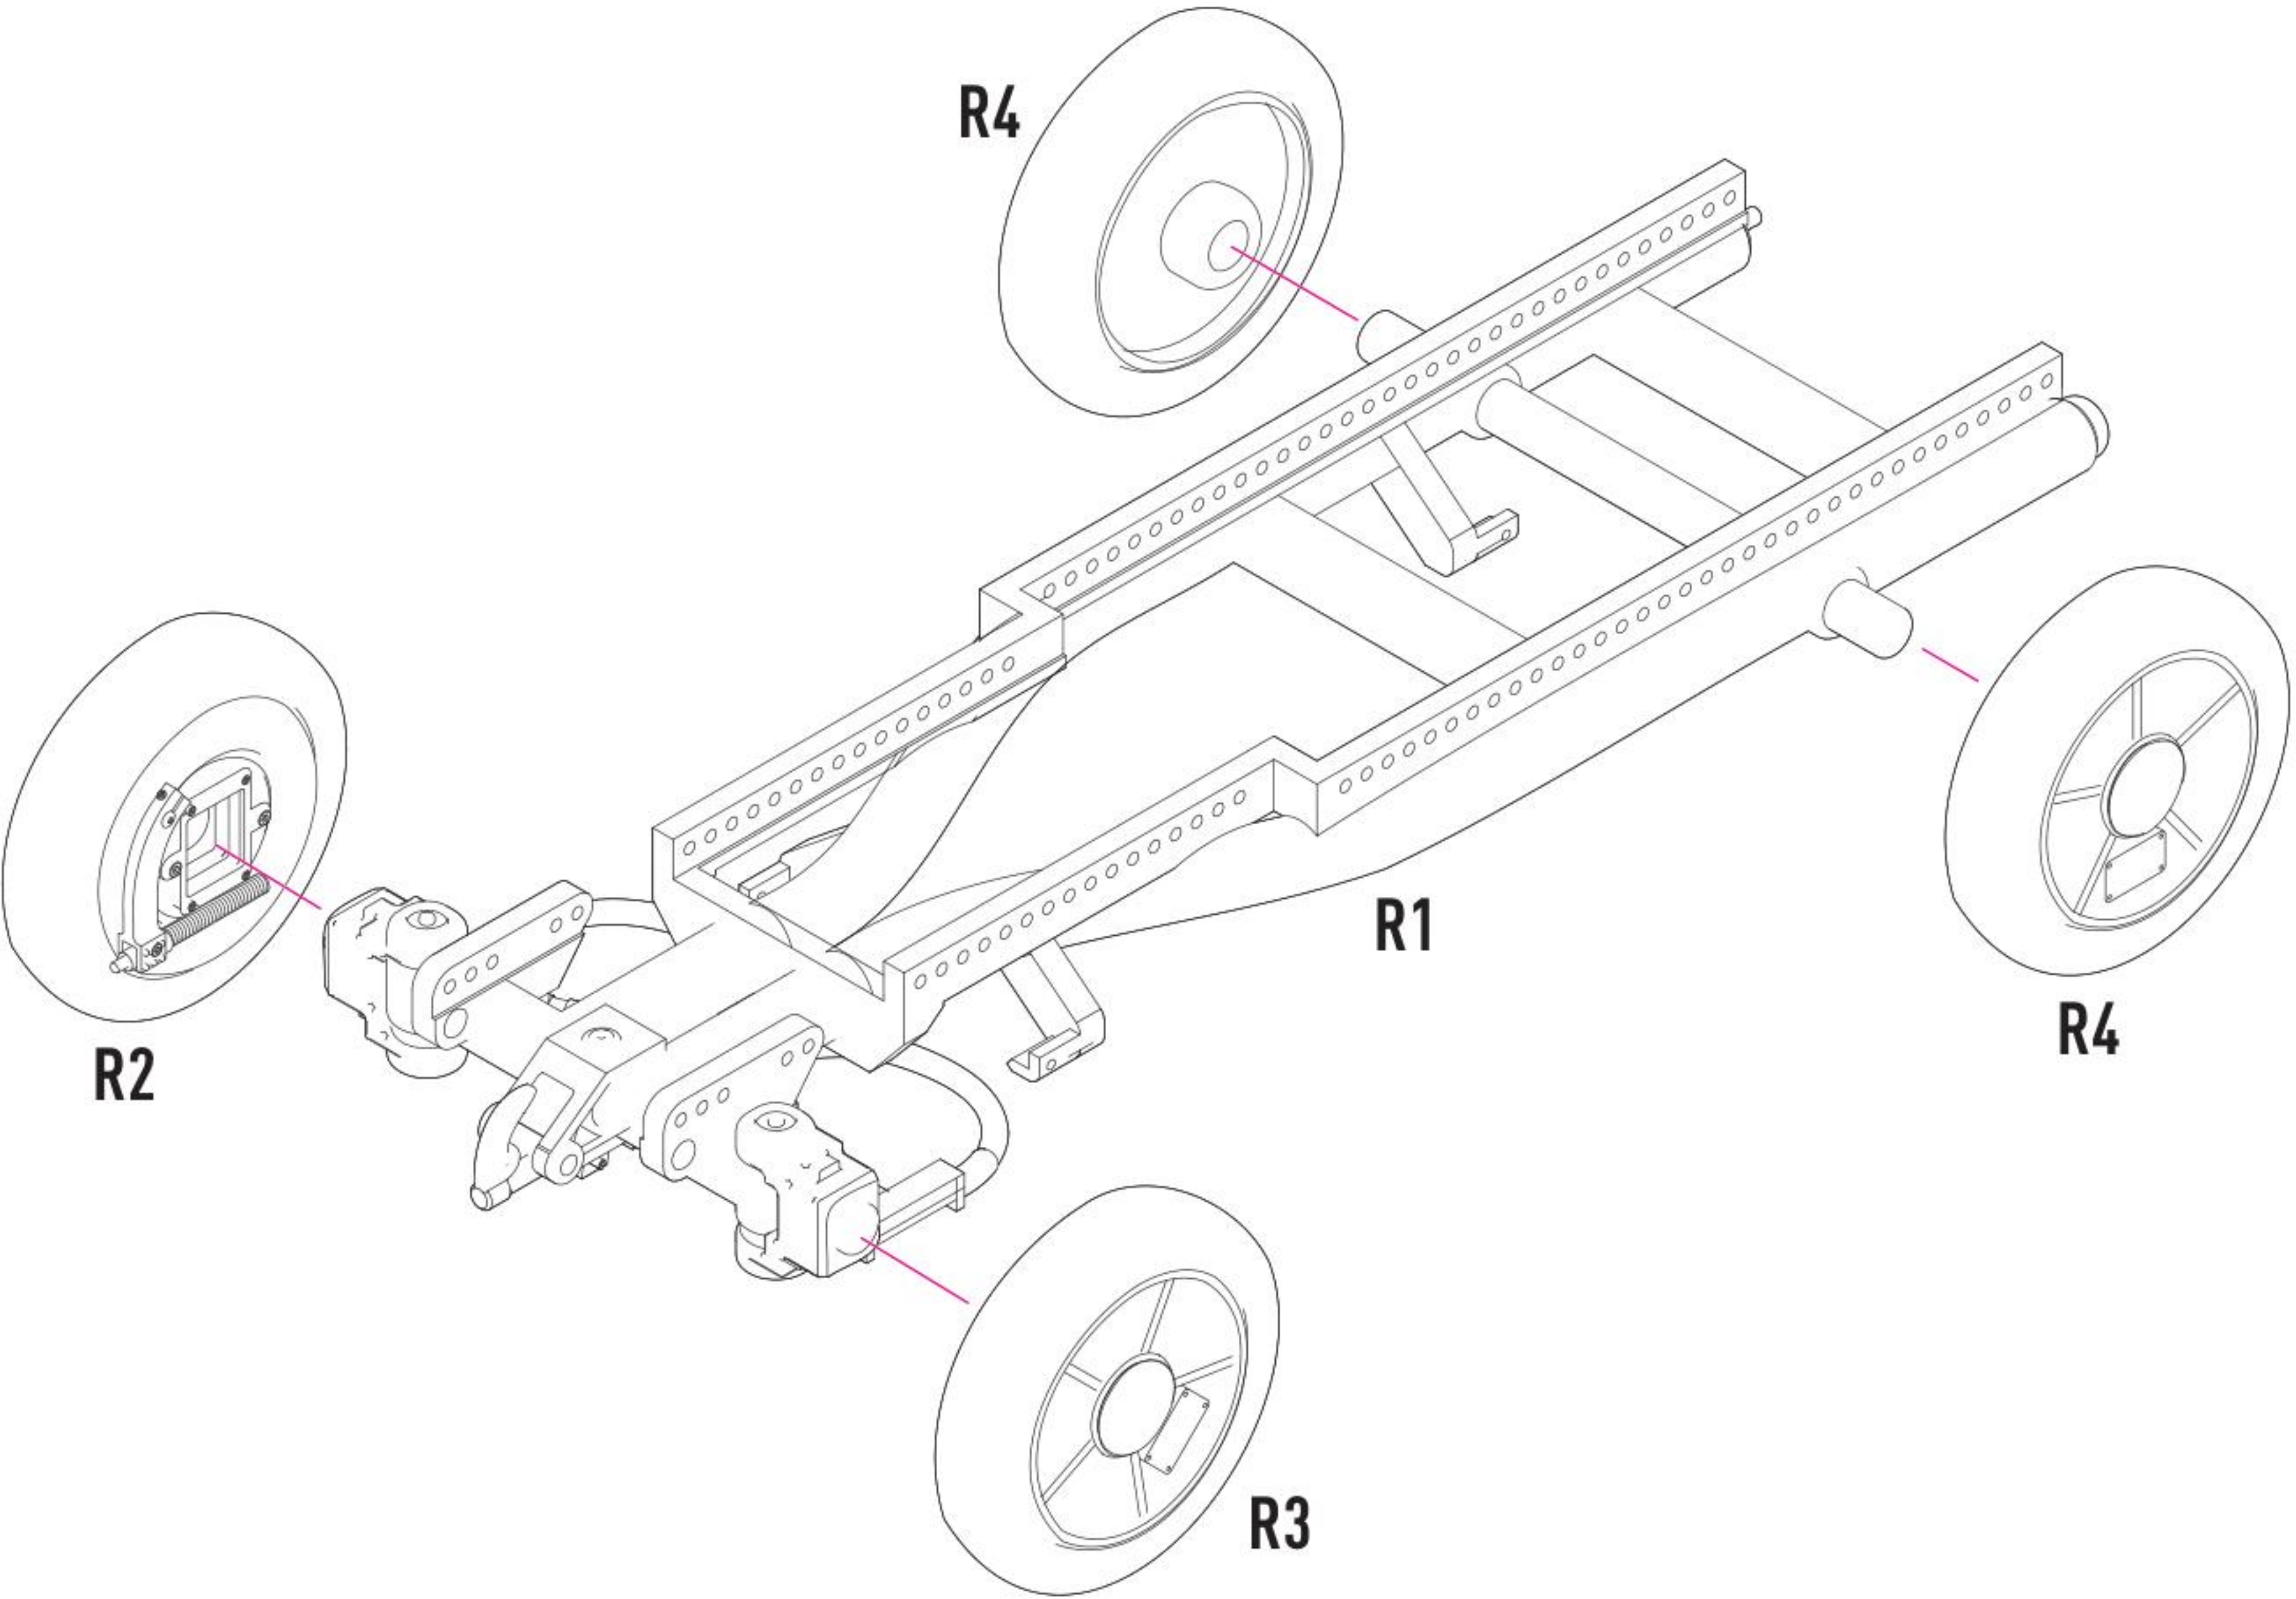


2

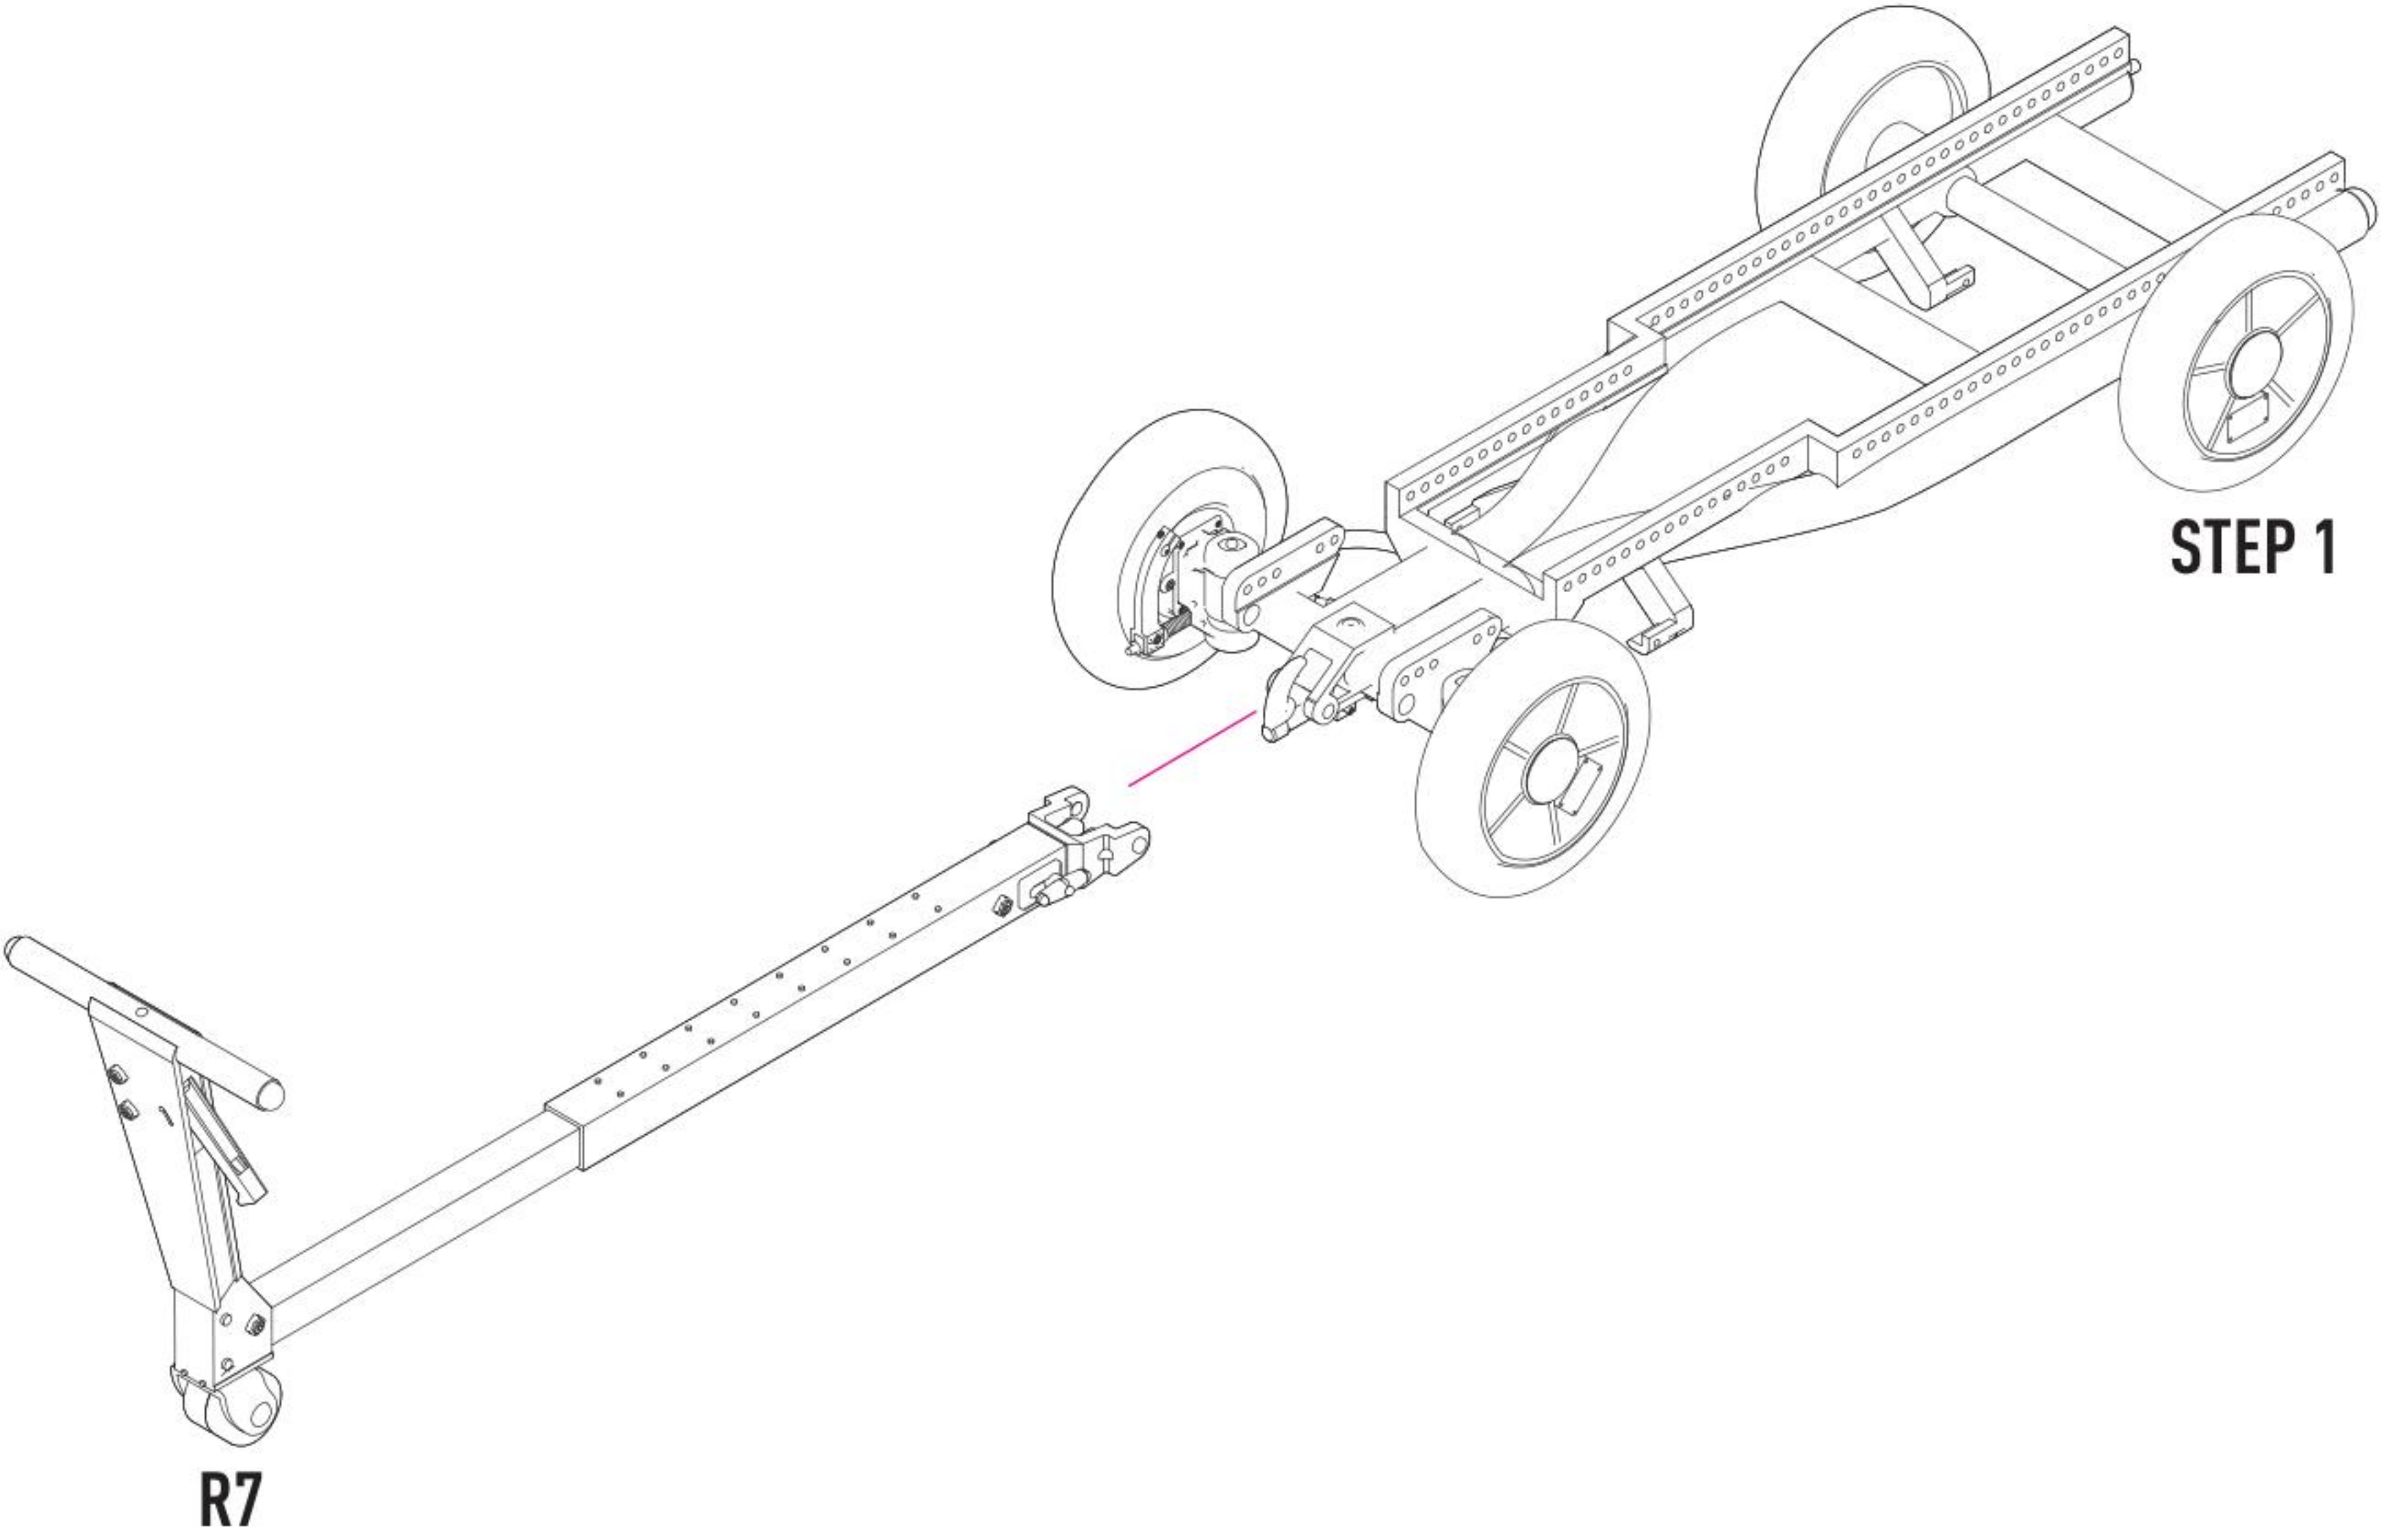

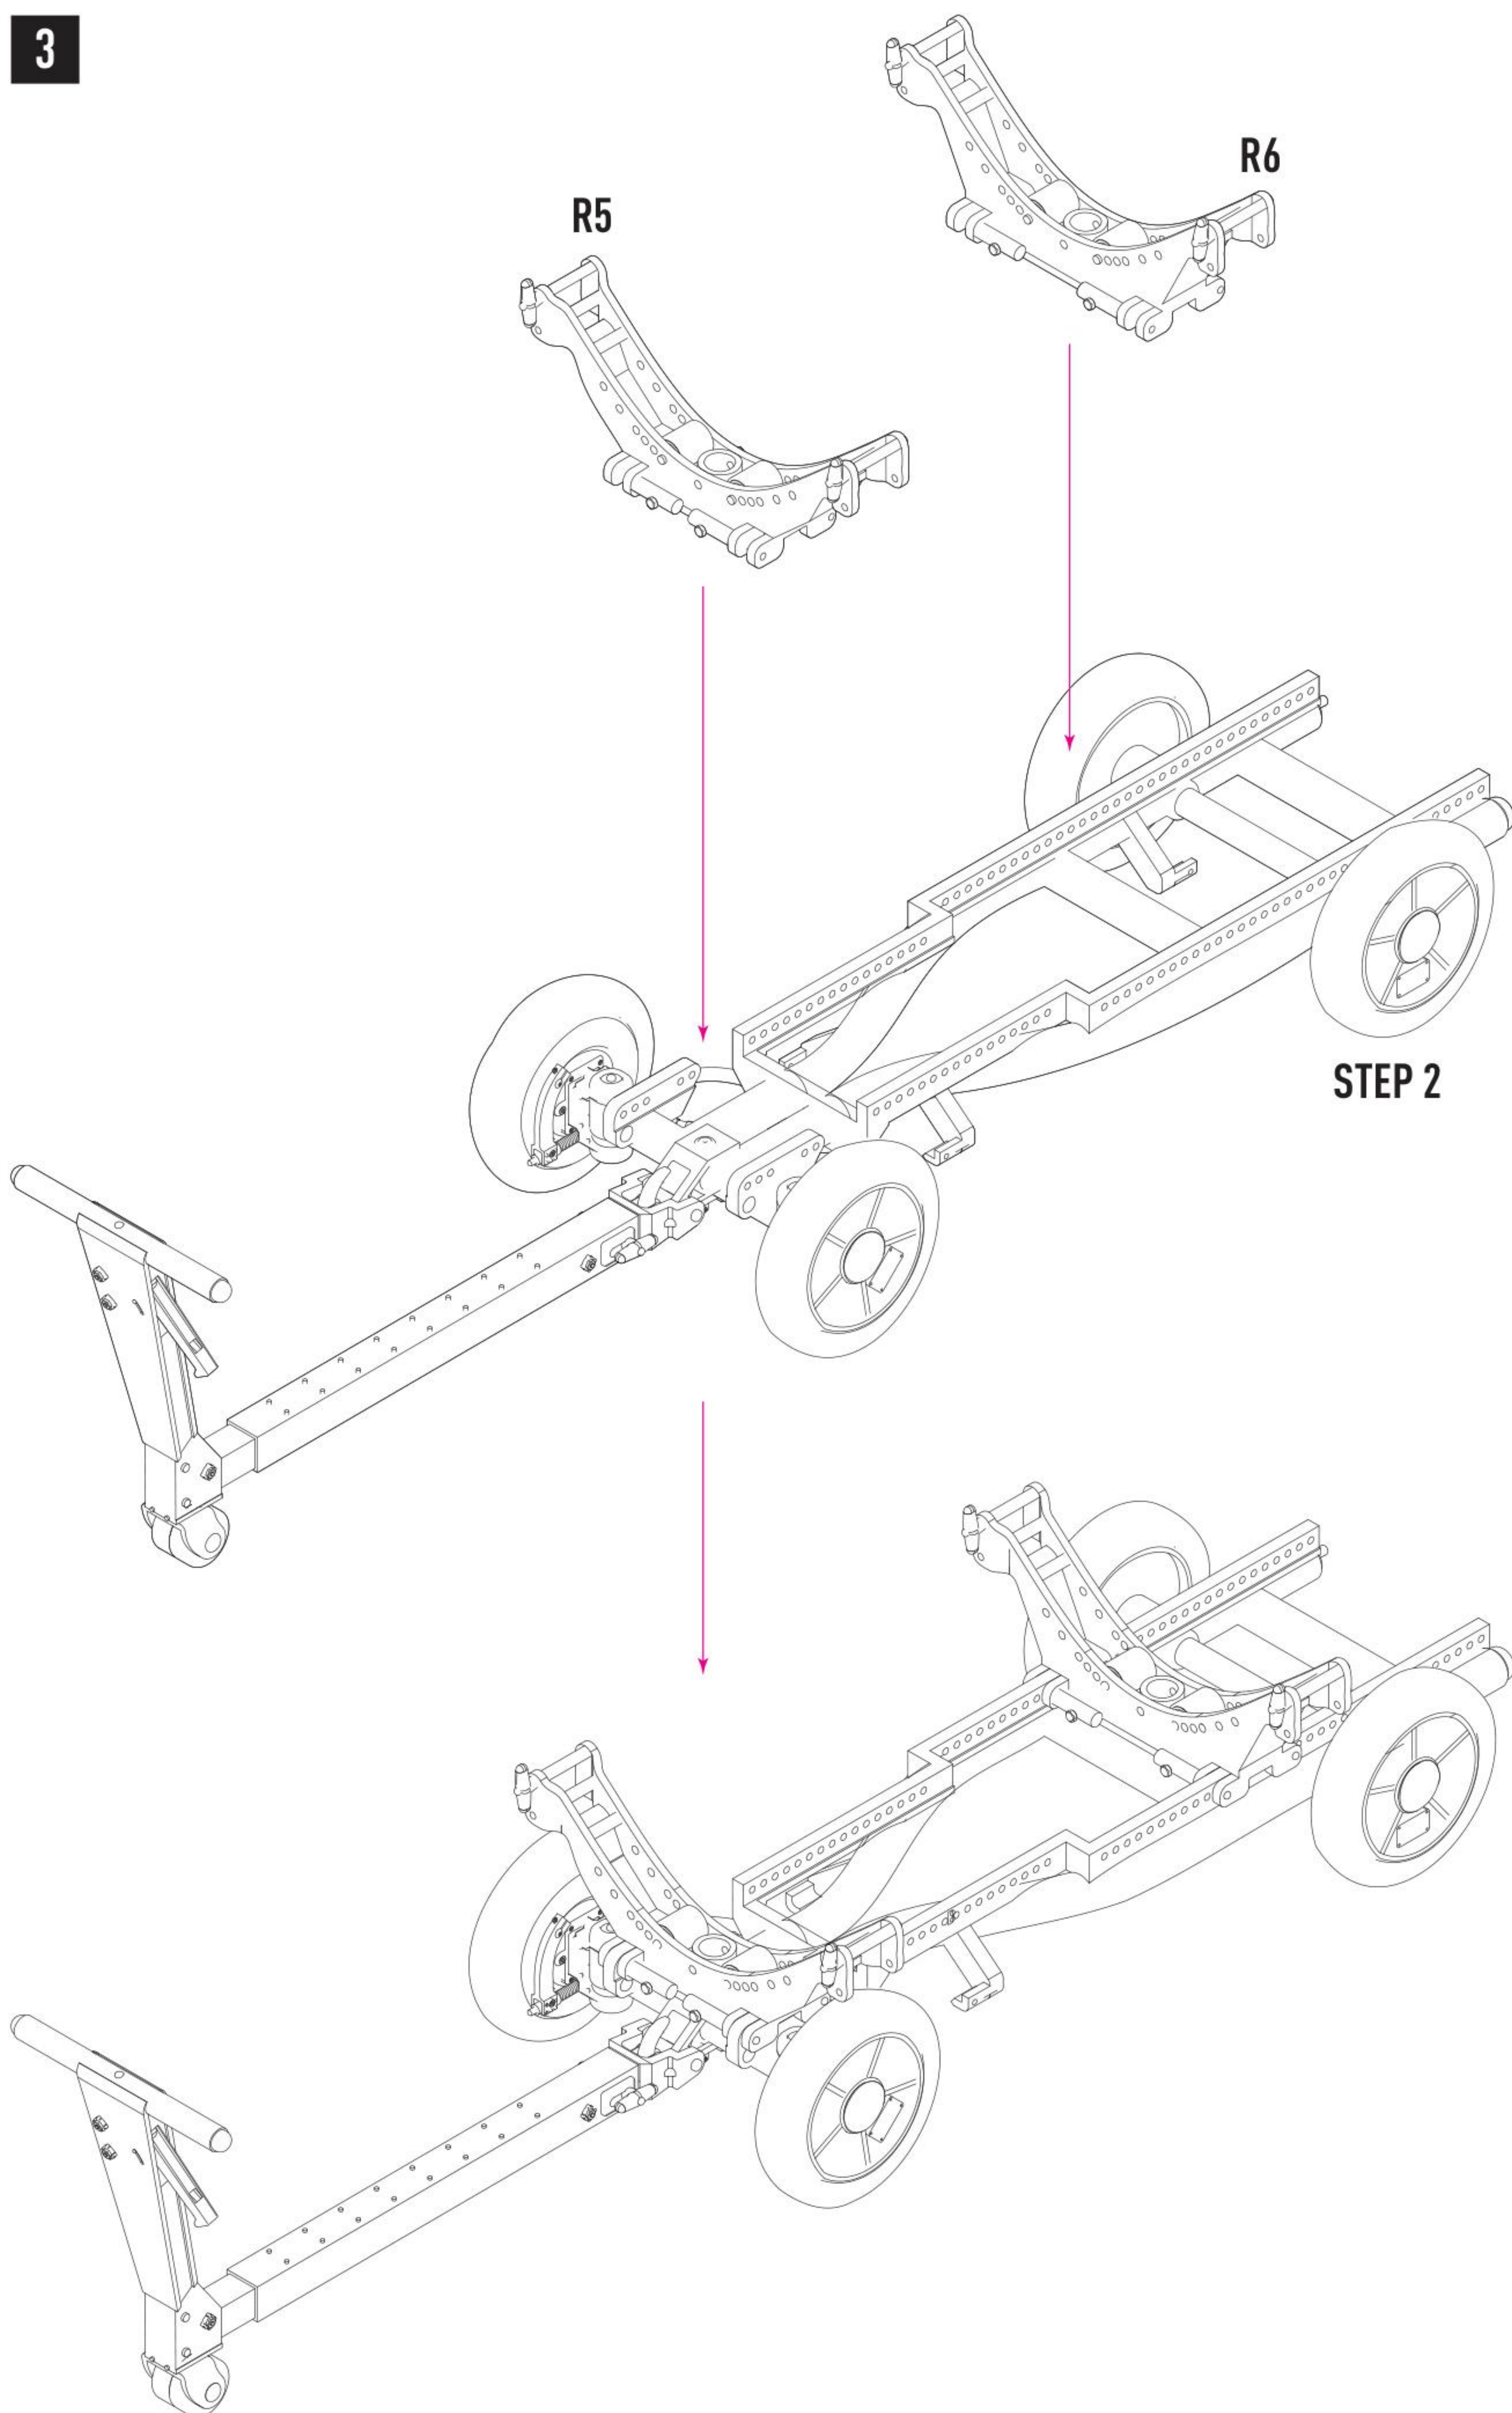


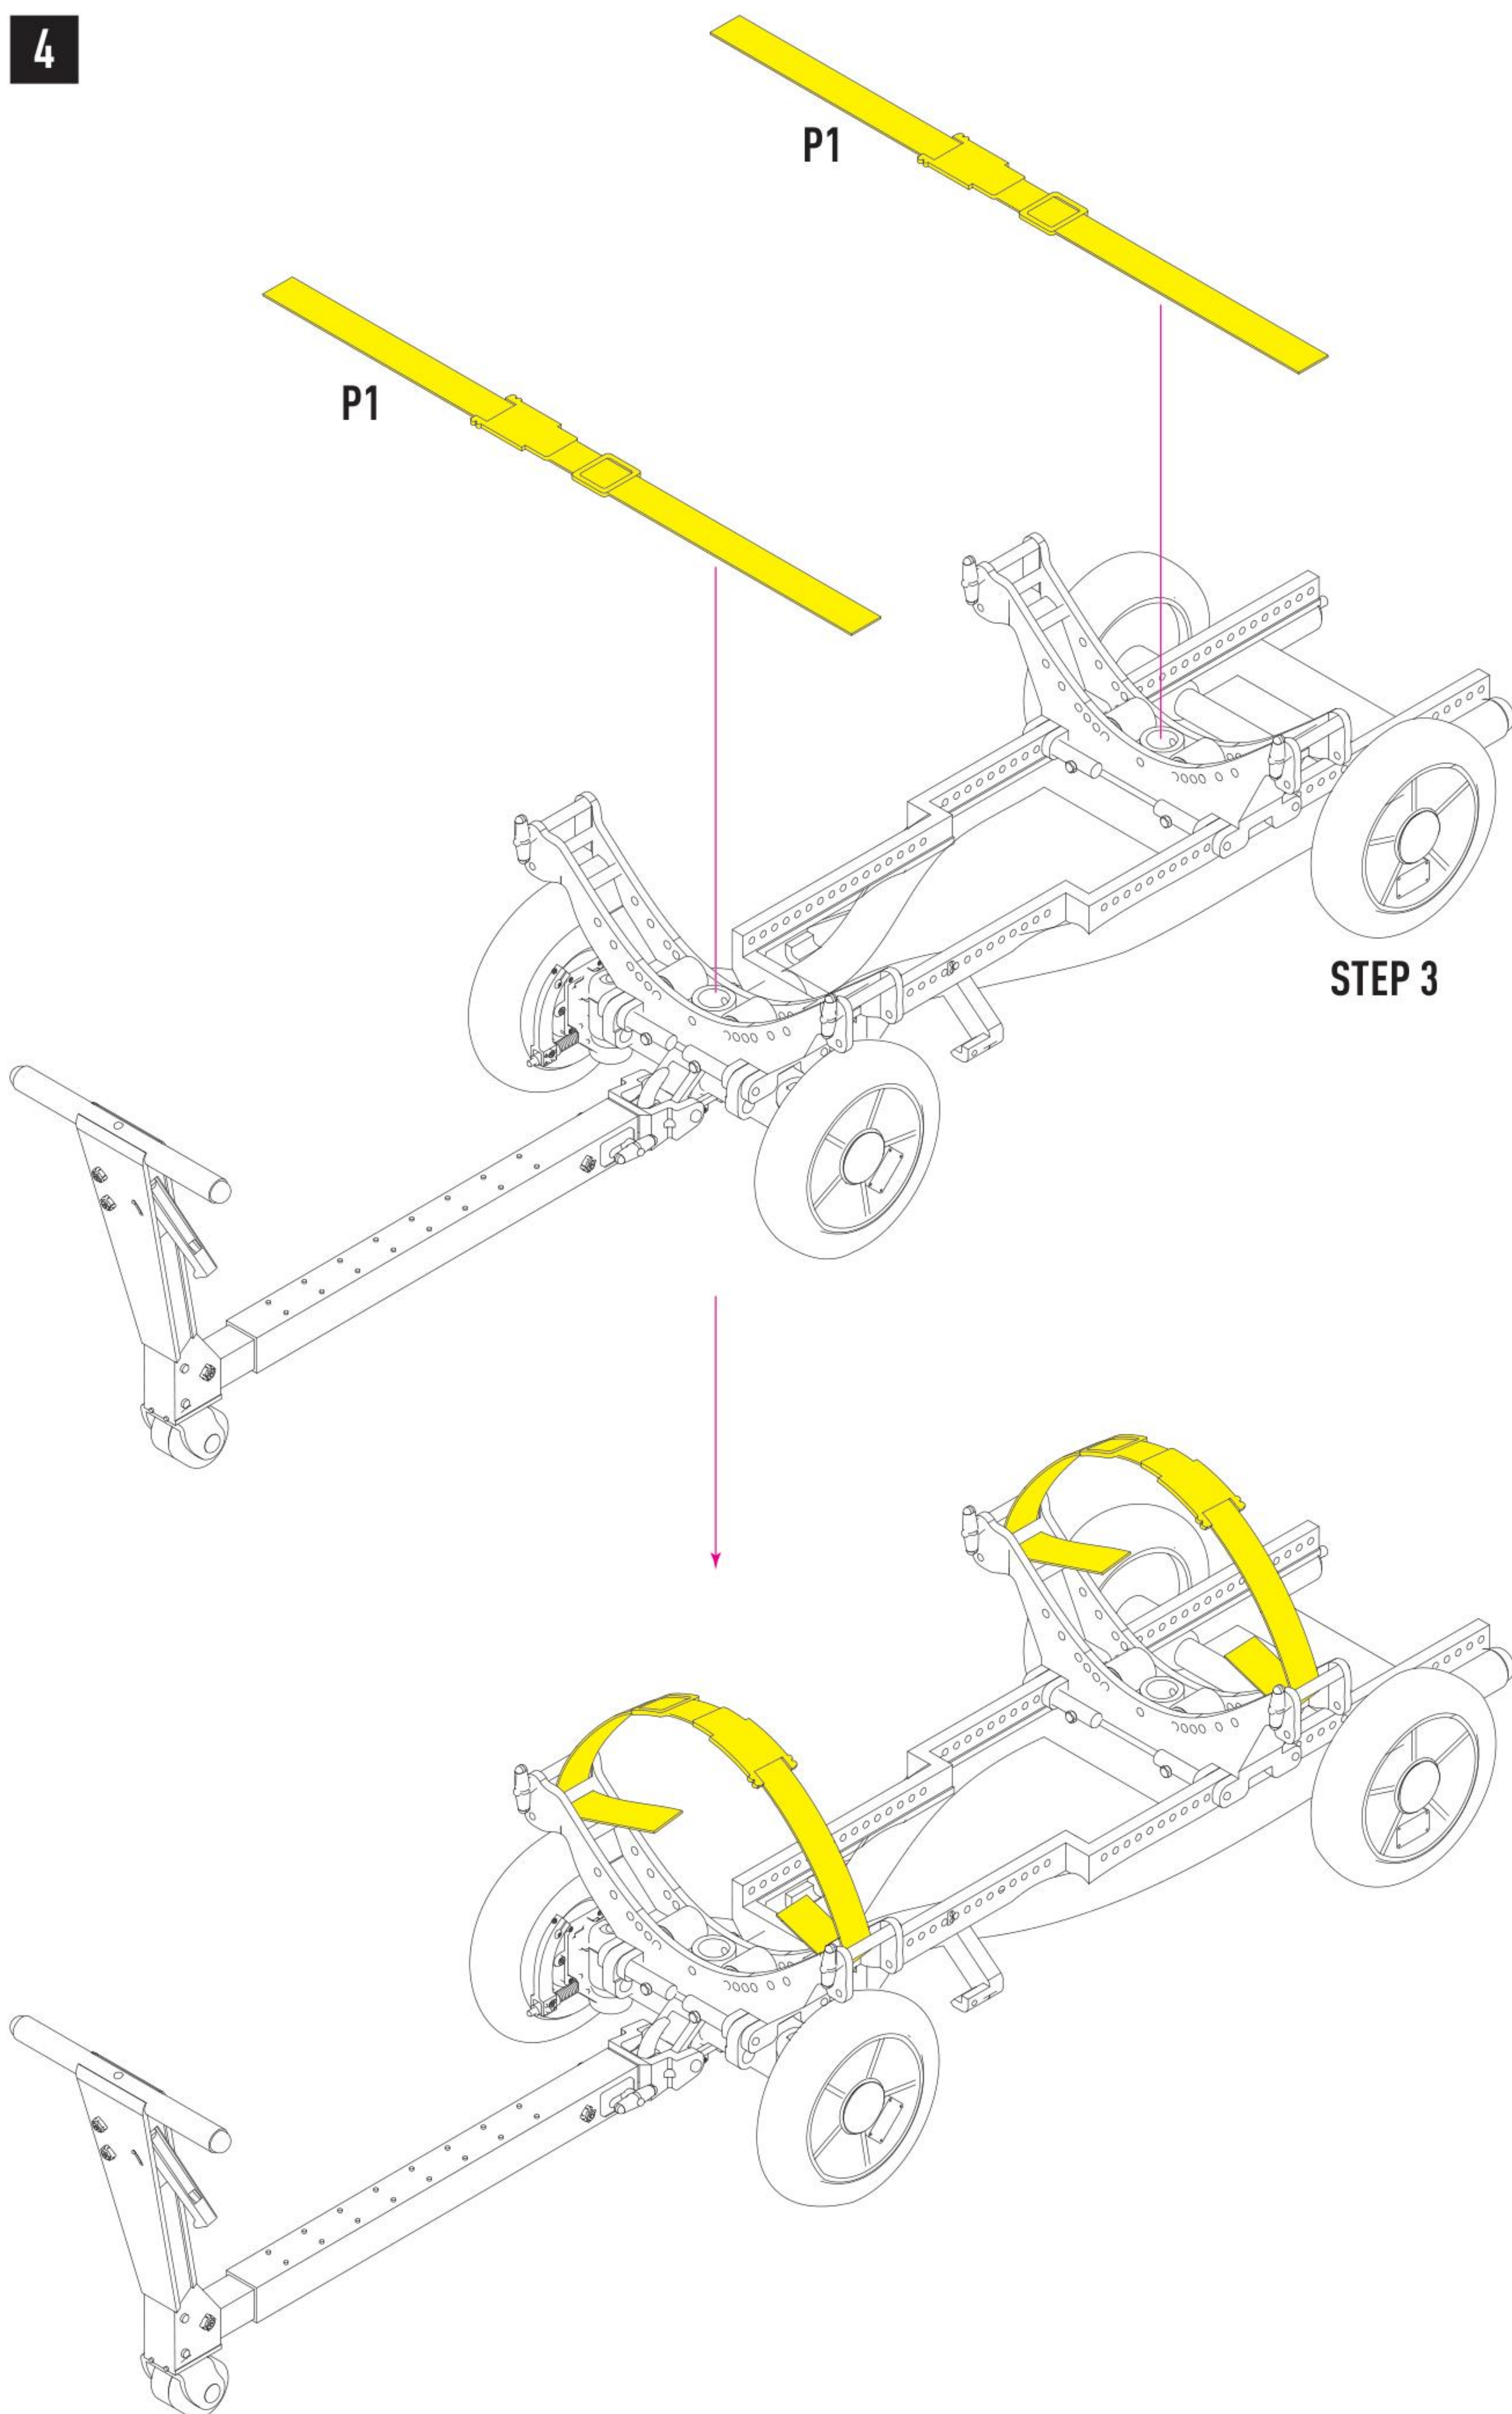

MK.84 FAMILY BOMBS

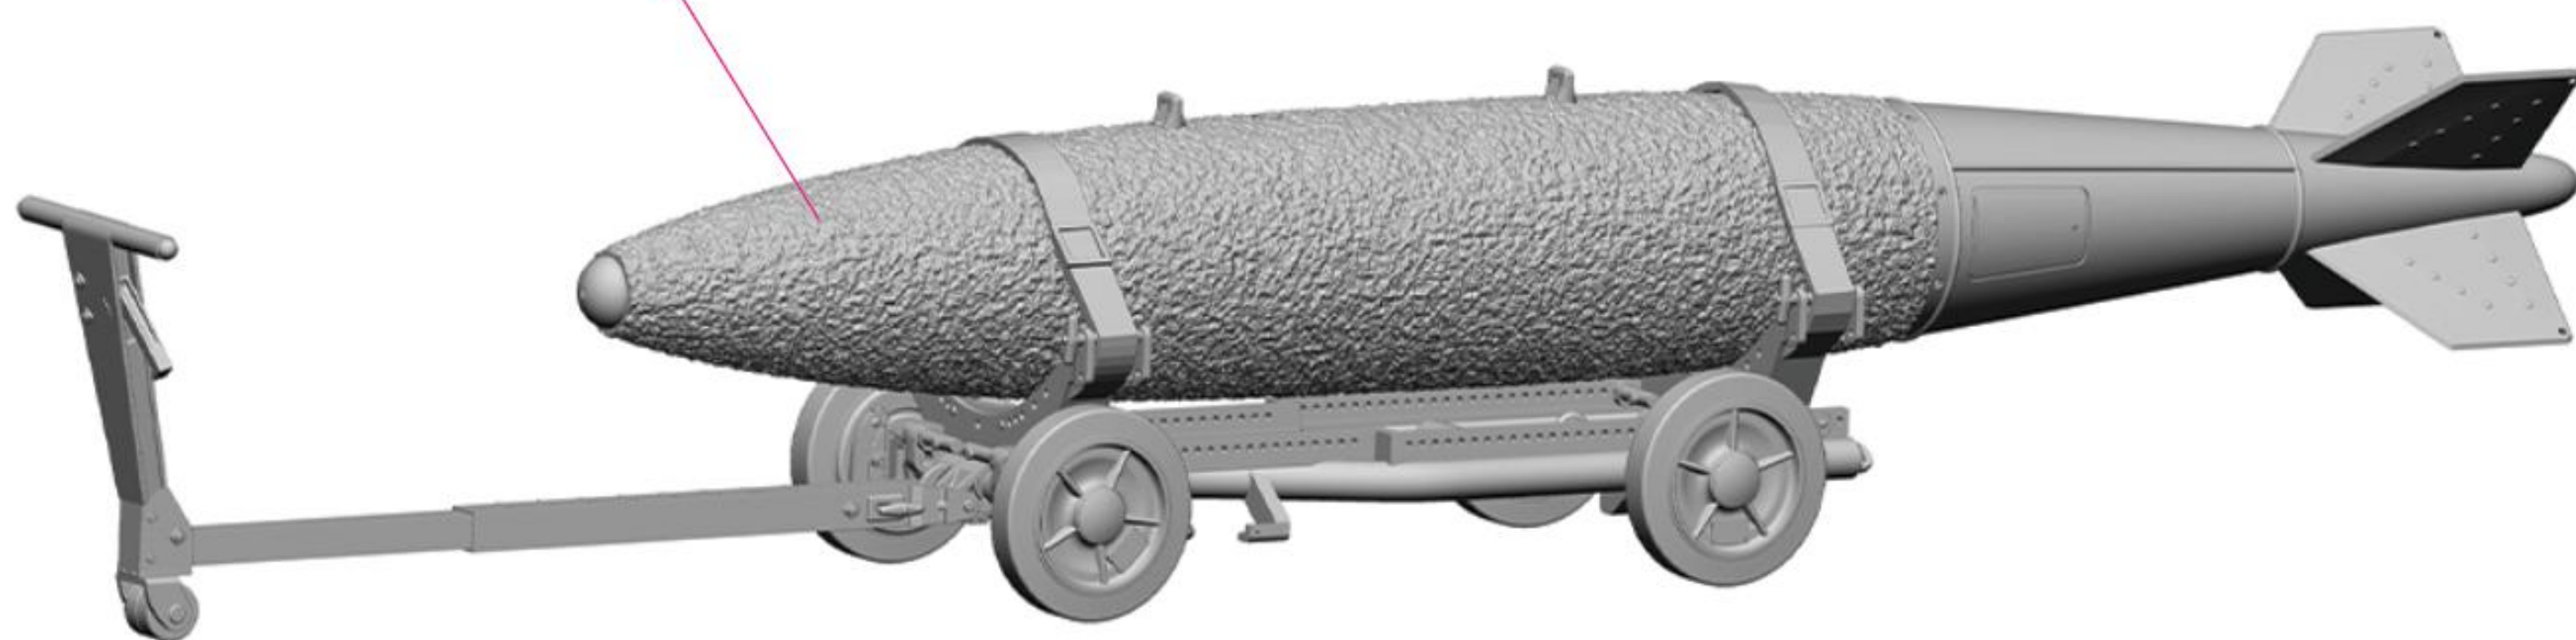

BOMB SET ARE NOT INCLUDED

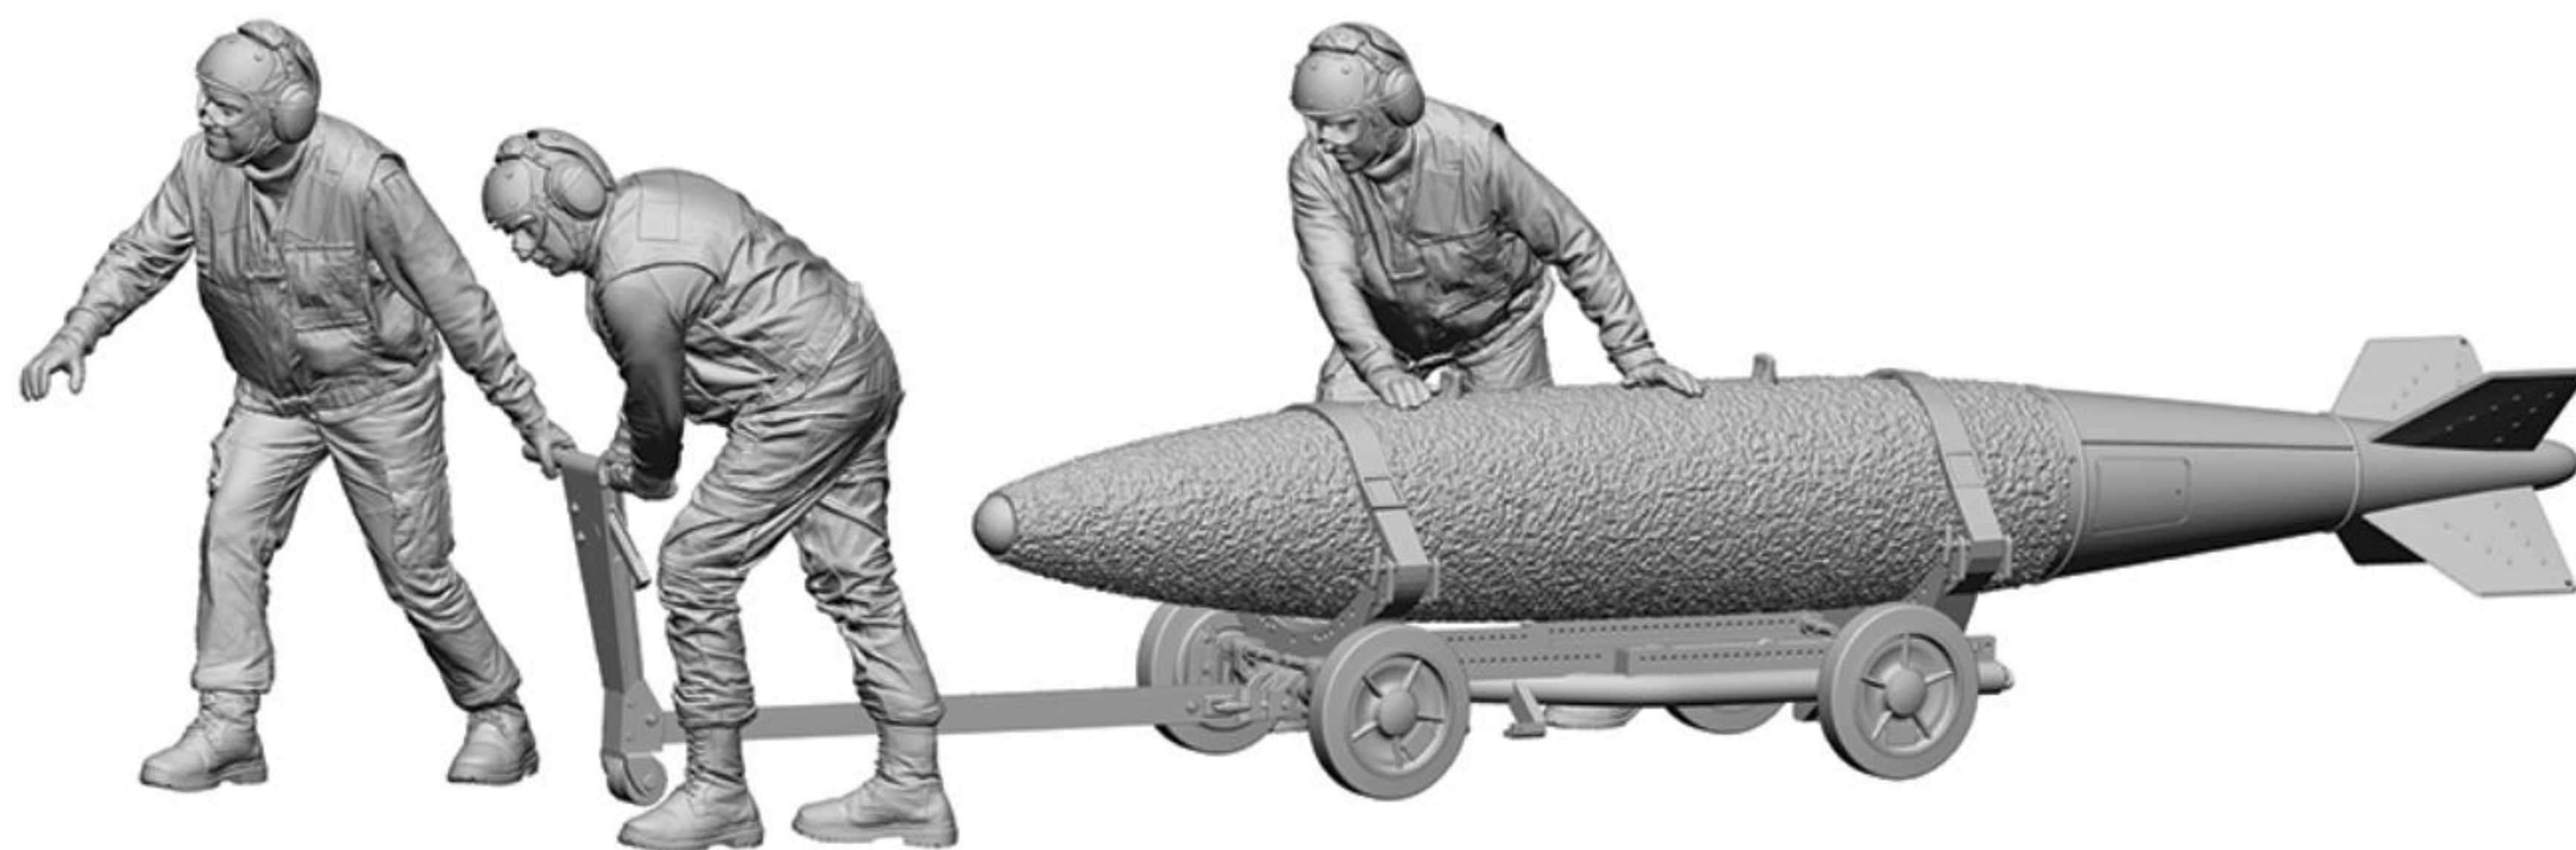





general Issues: info@reskit.com.ua / claim resolution: claims@reskit.com.ua

RESKIT-MODELS.COM

 fb.com/reskit.official

 instagram.com/reskit_official






 youtube.com/@reskit-usmd

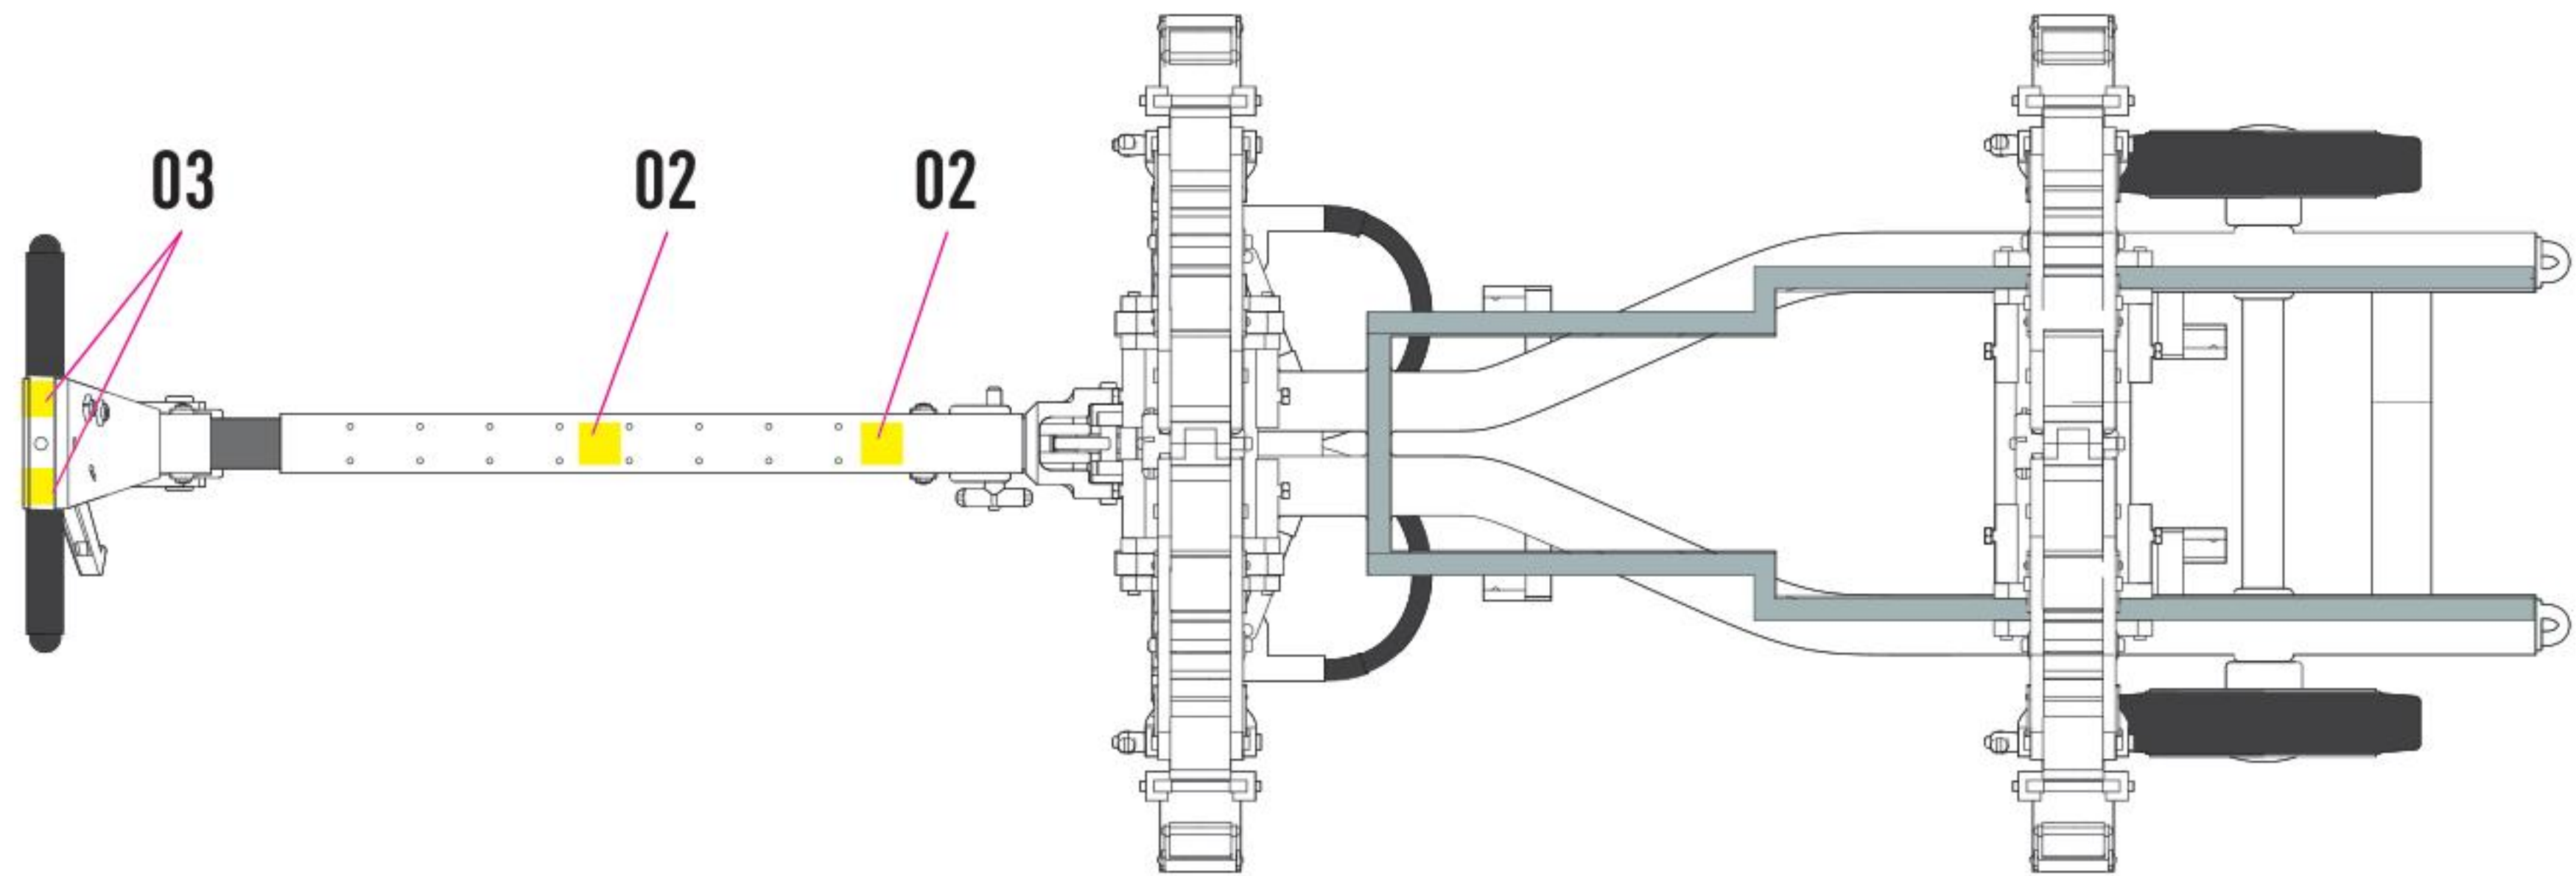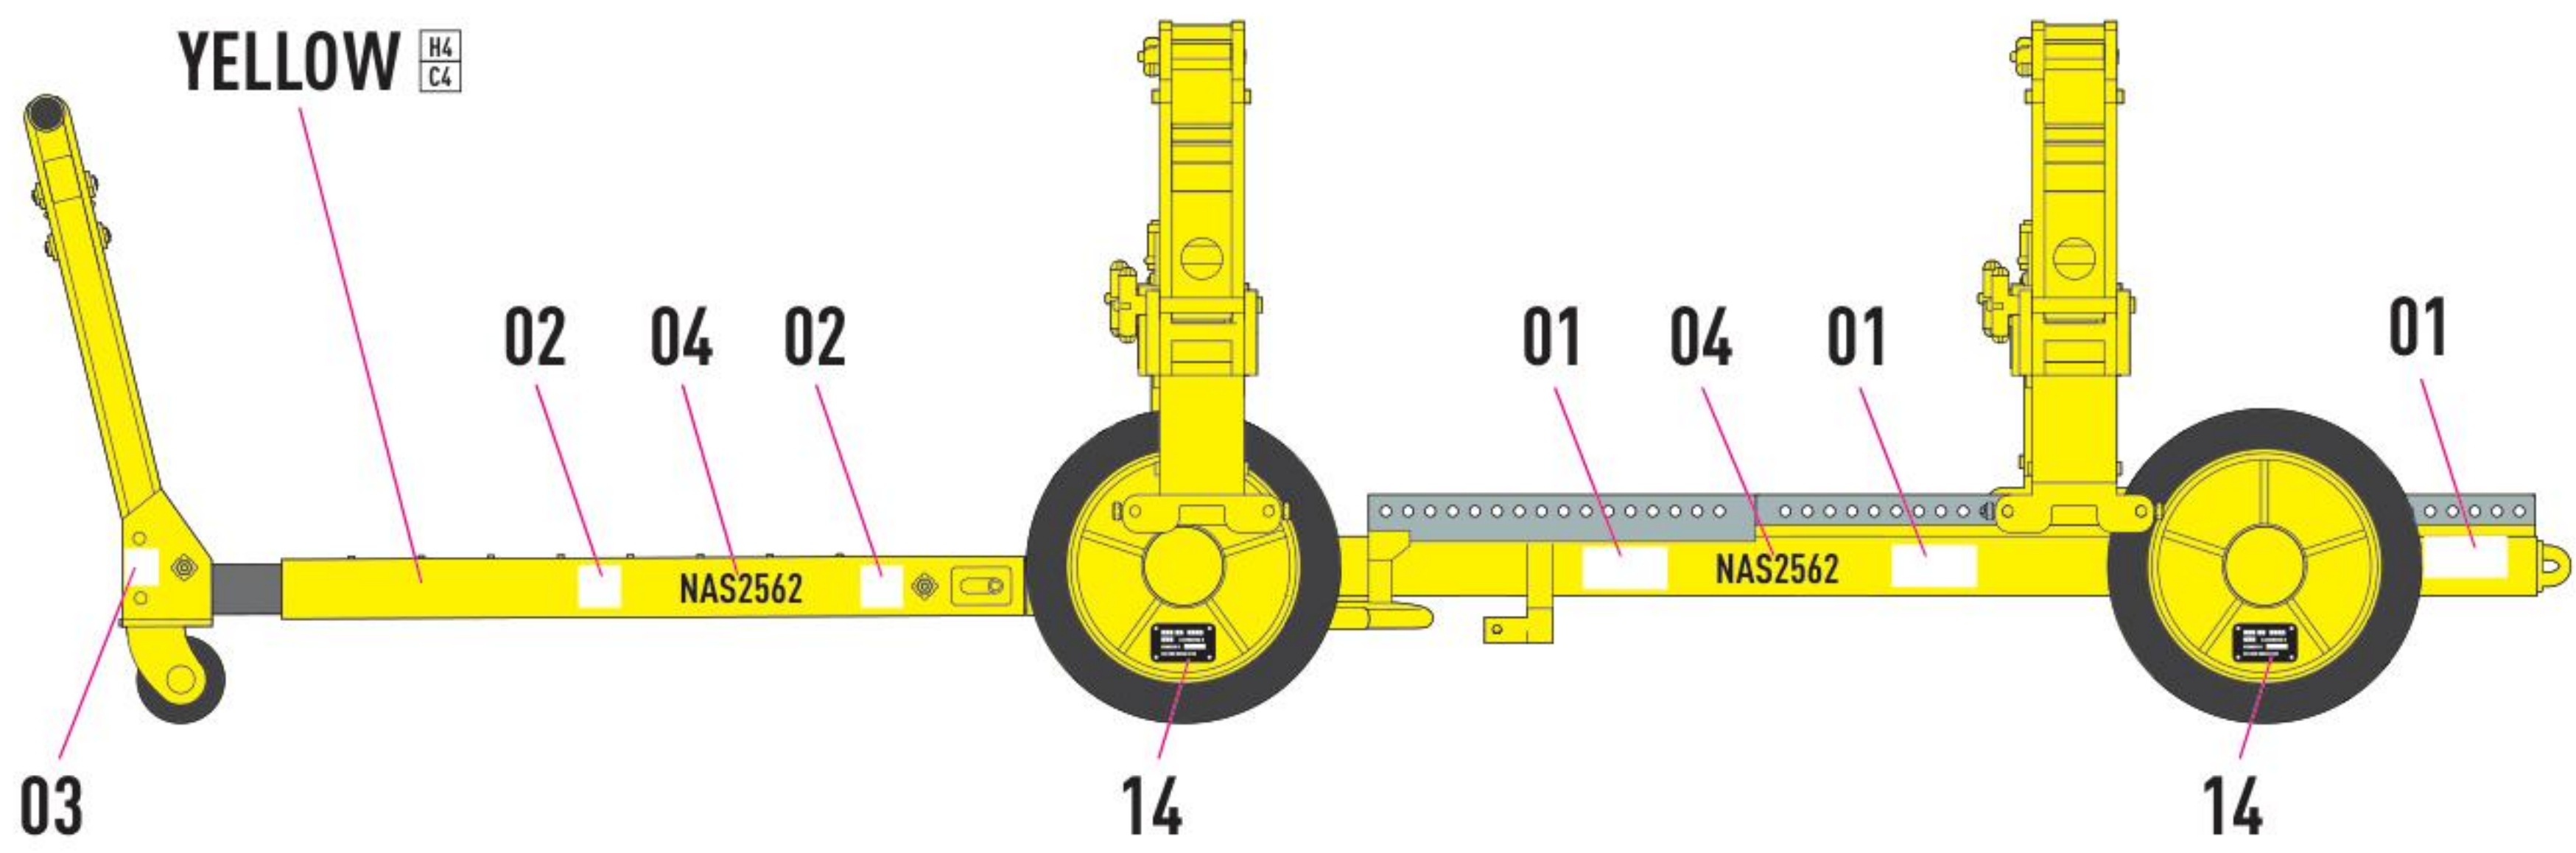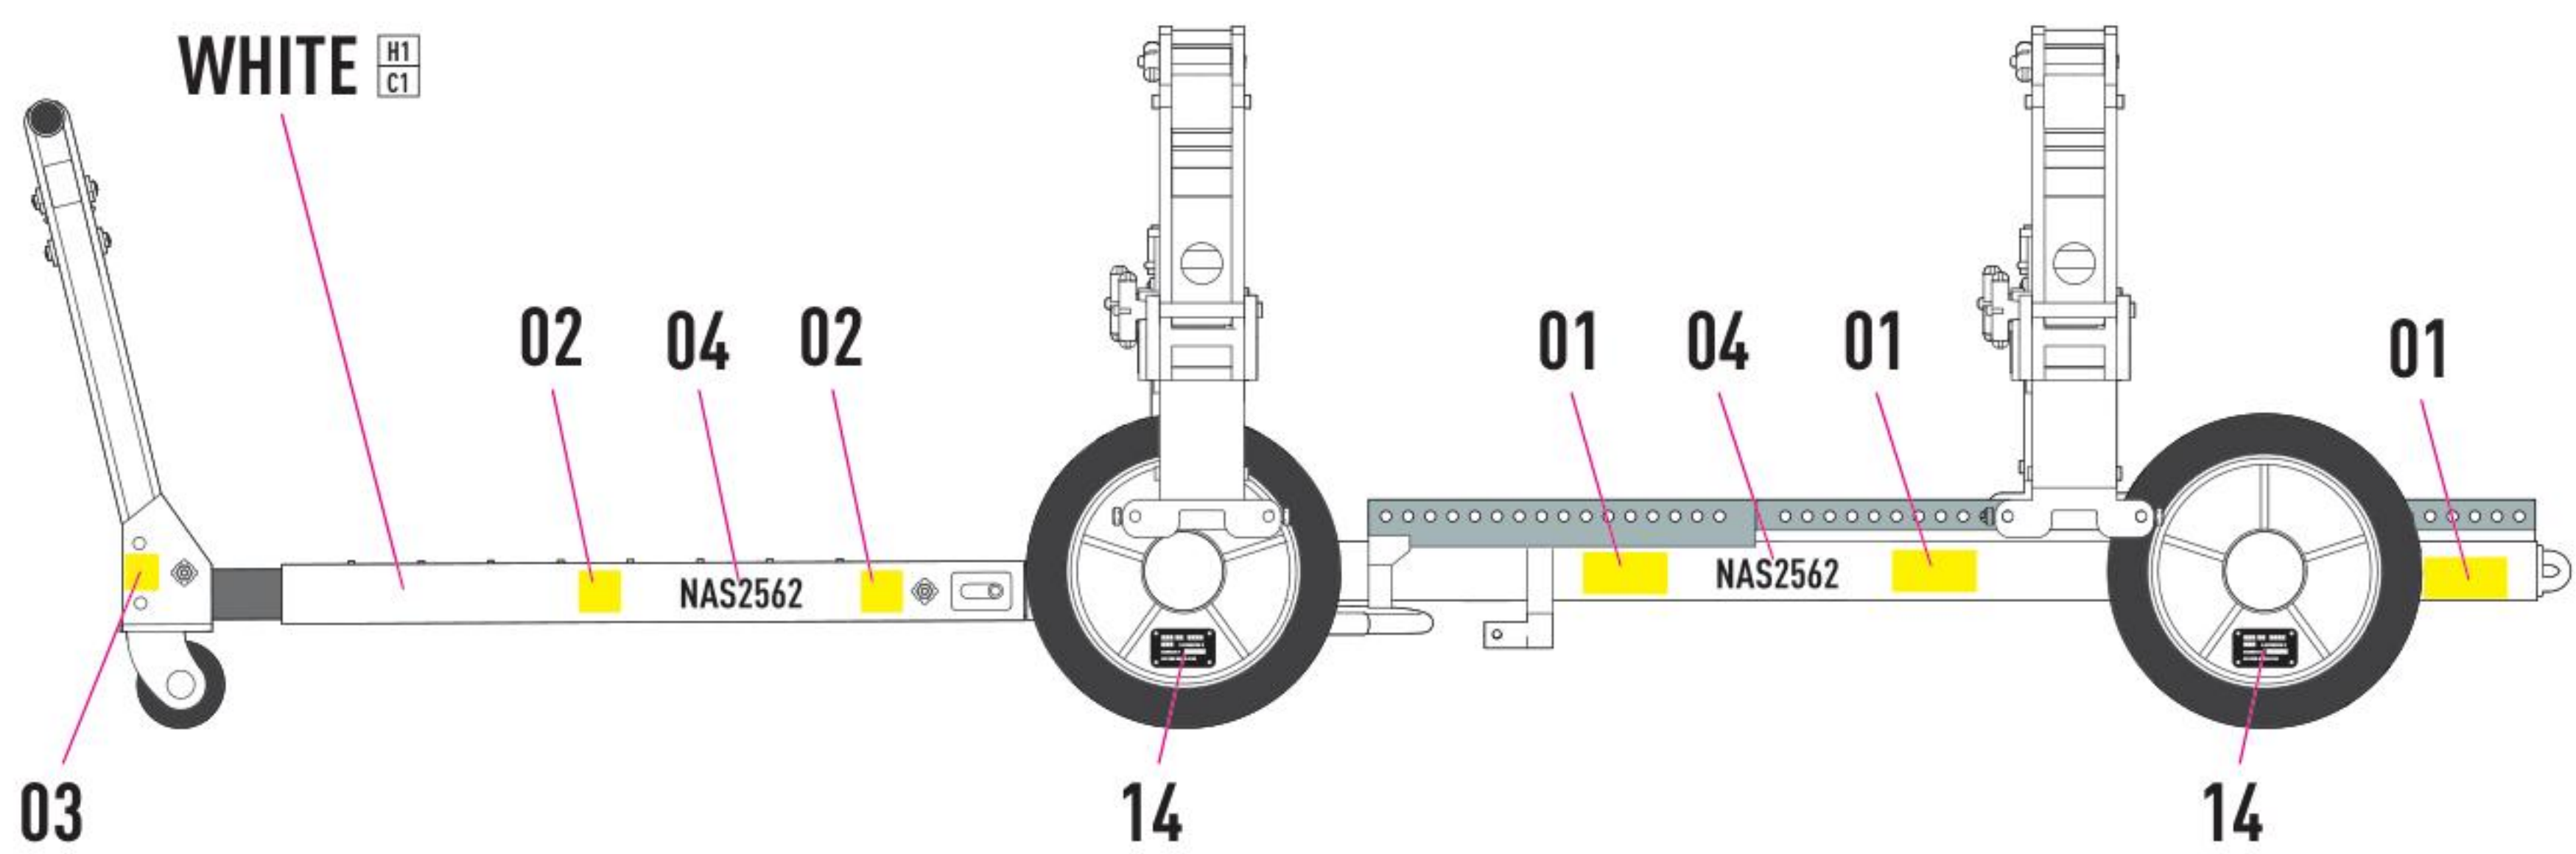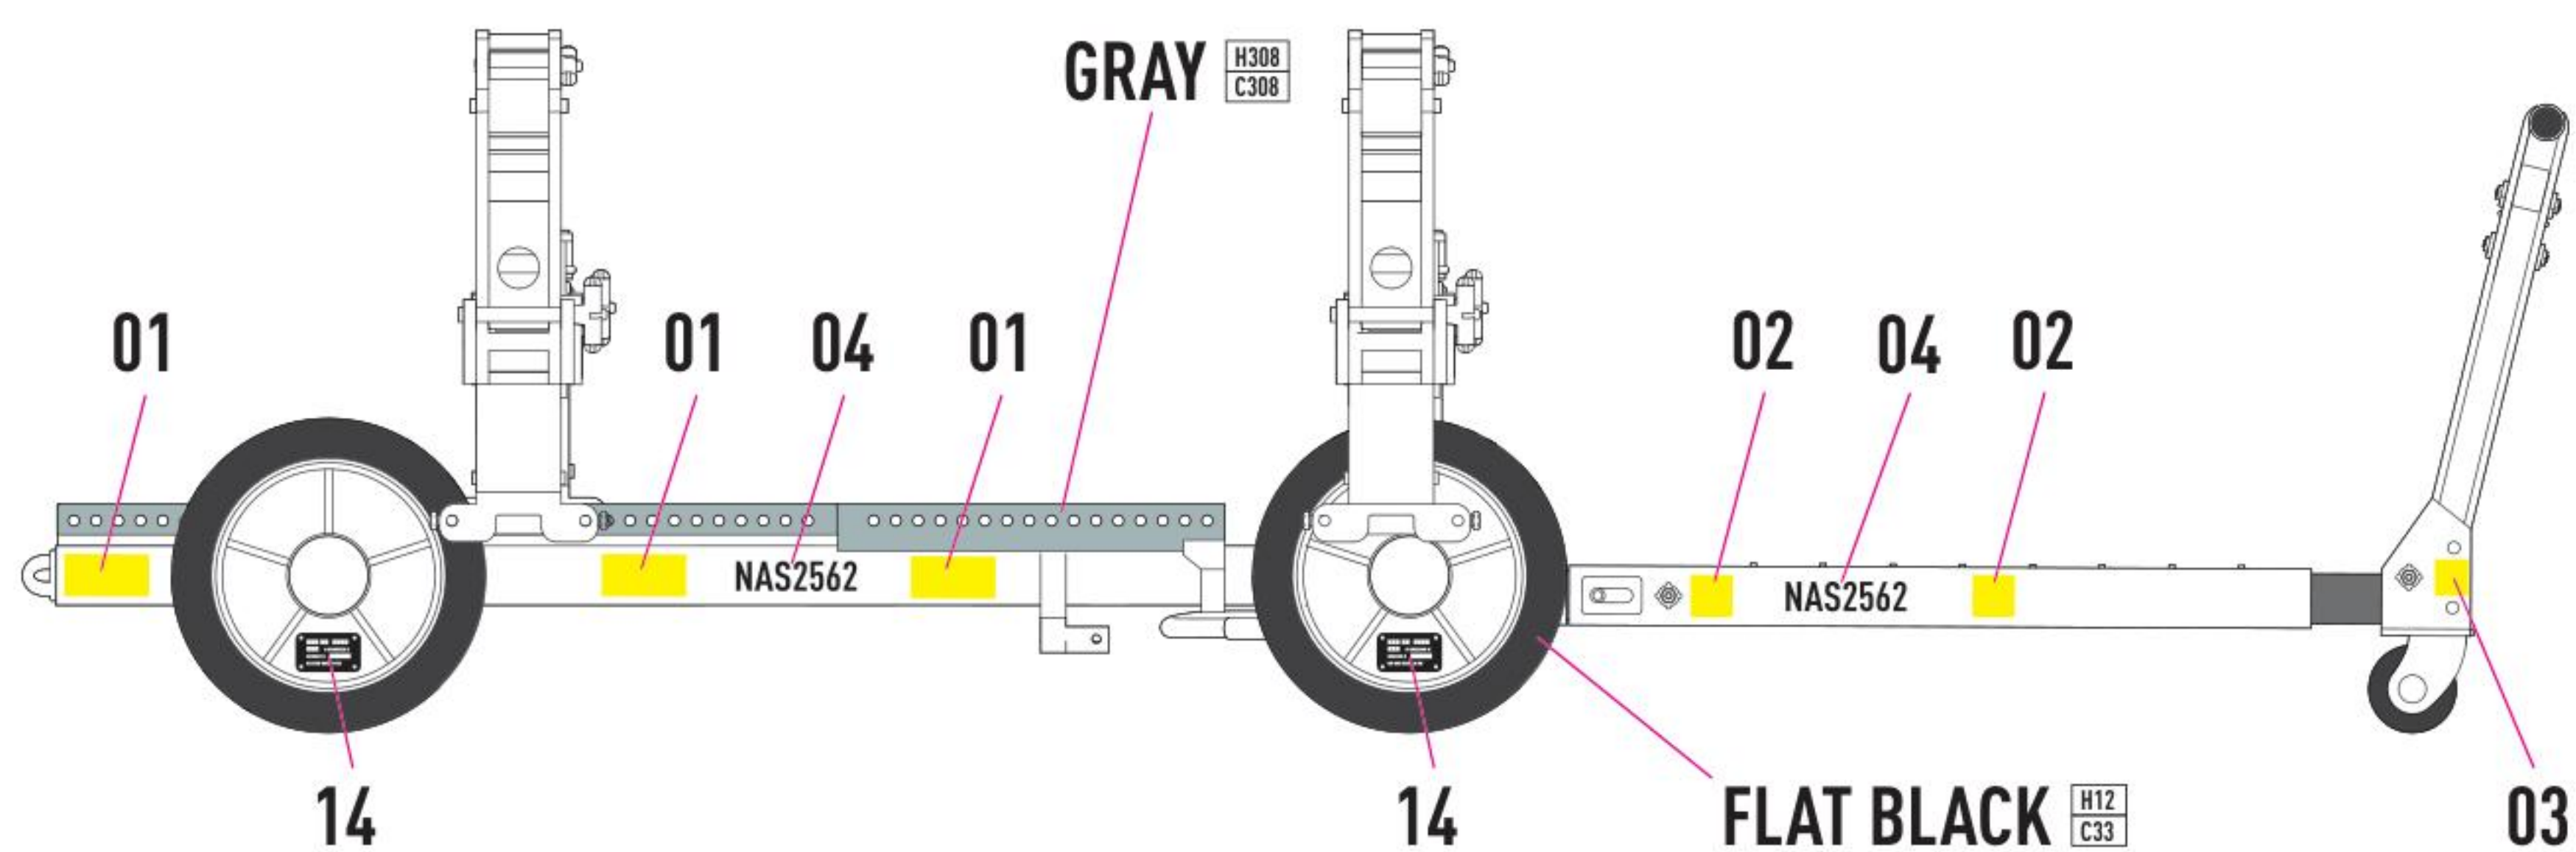

DECALS AND PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
WHITE	H1	C1
YELLOW	H4	C4

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308
FLAT BLACK	H12	C33

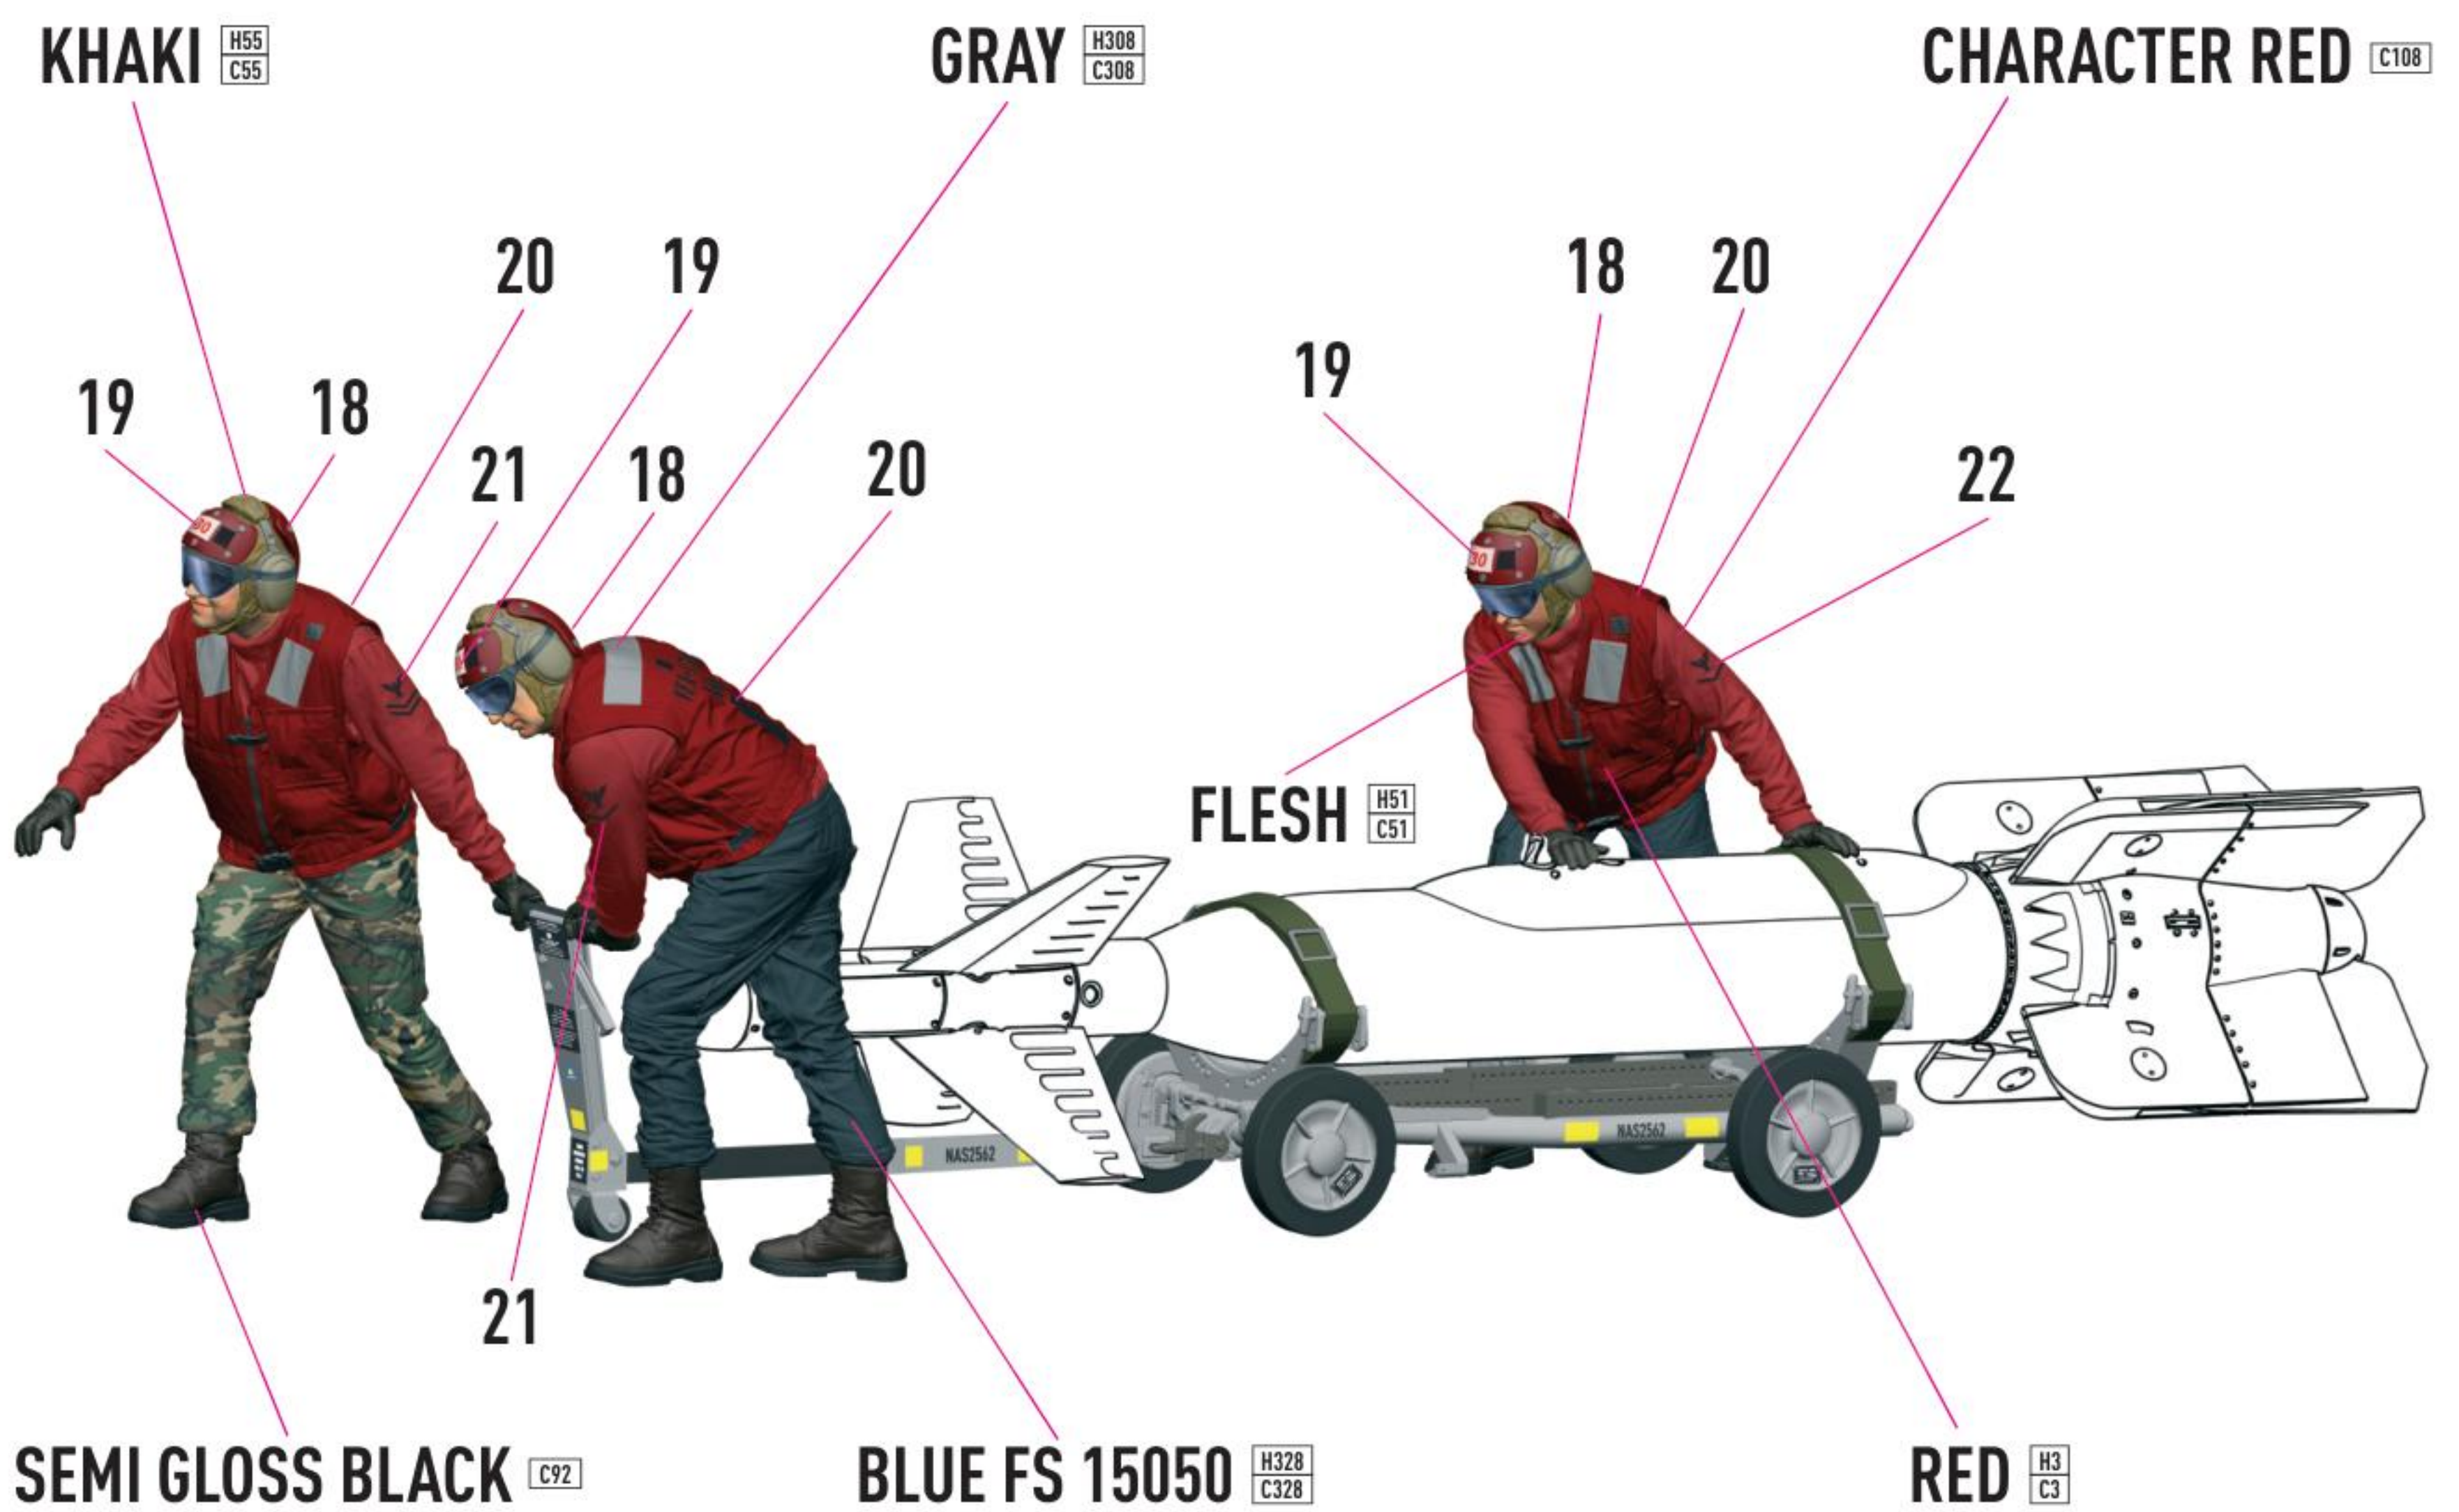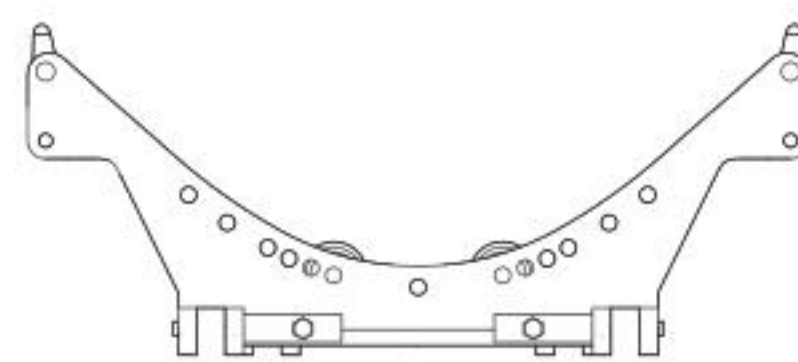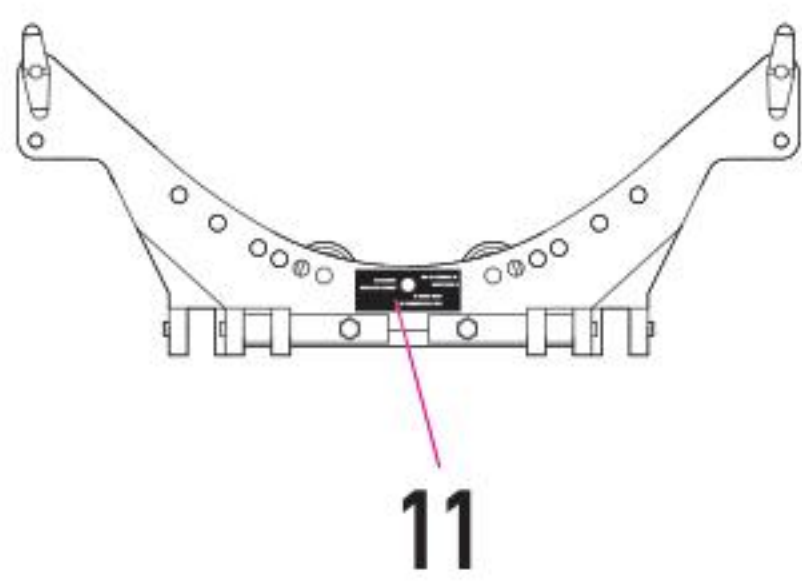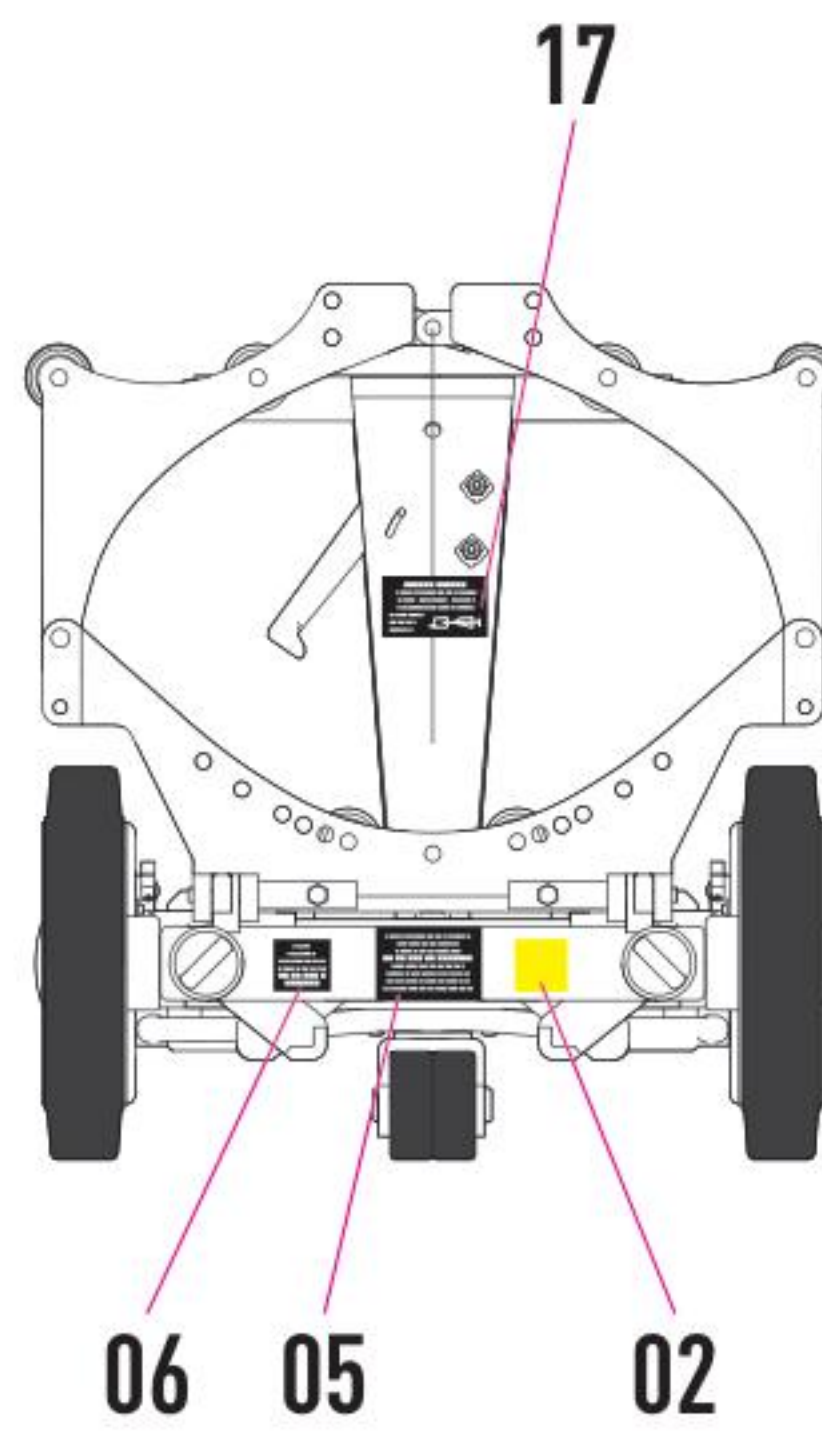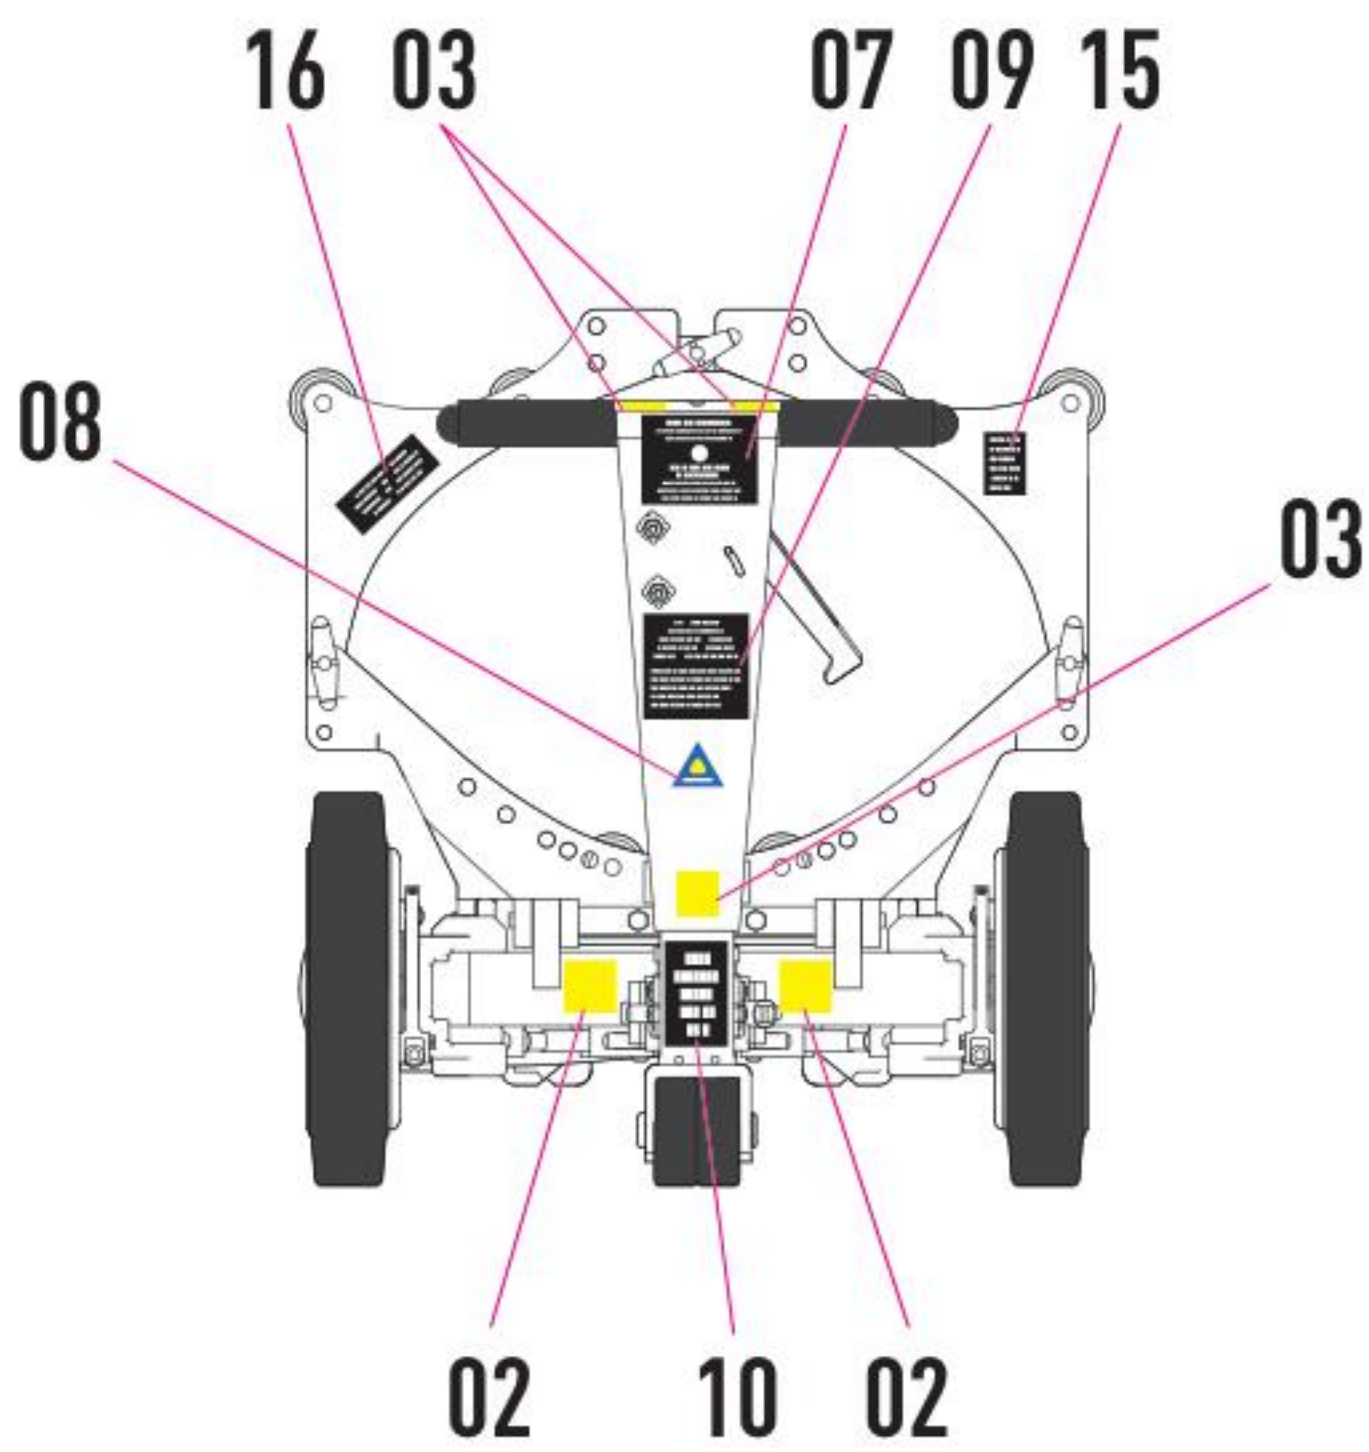

DECALS AND PAINT INSTRUCTION

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
CHARACTER RED		C108
RED	H3	C3
KHAKI	H55	C55

COLORS	GUNZE / AQEOUS	GUNZE / MR.COLOR
FLESH	H51	C51
BLUE FS 15050	H328	C328
GRAY	H308	C308
SEMI GLOSS BLACK		C92

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua