




USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

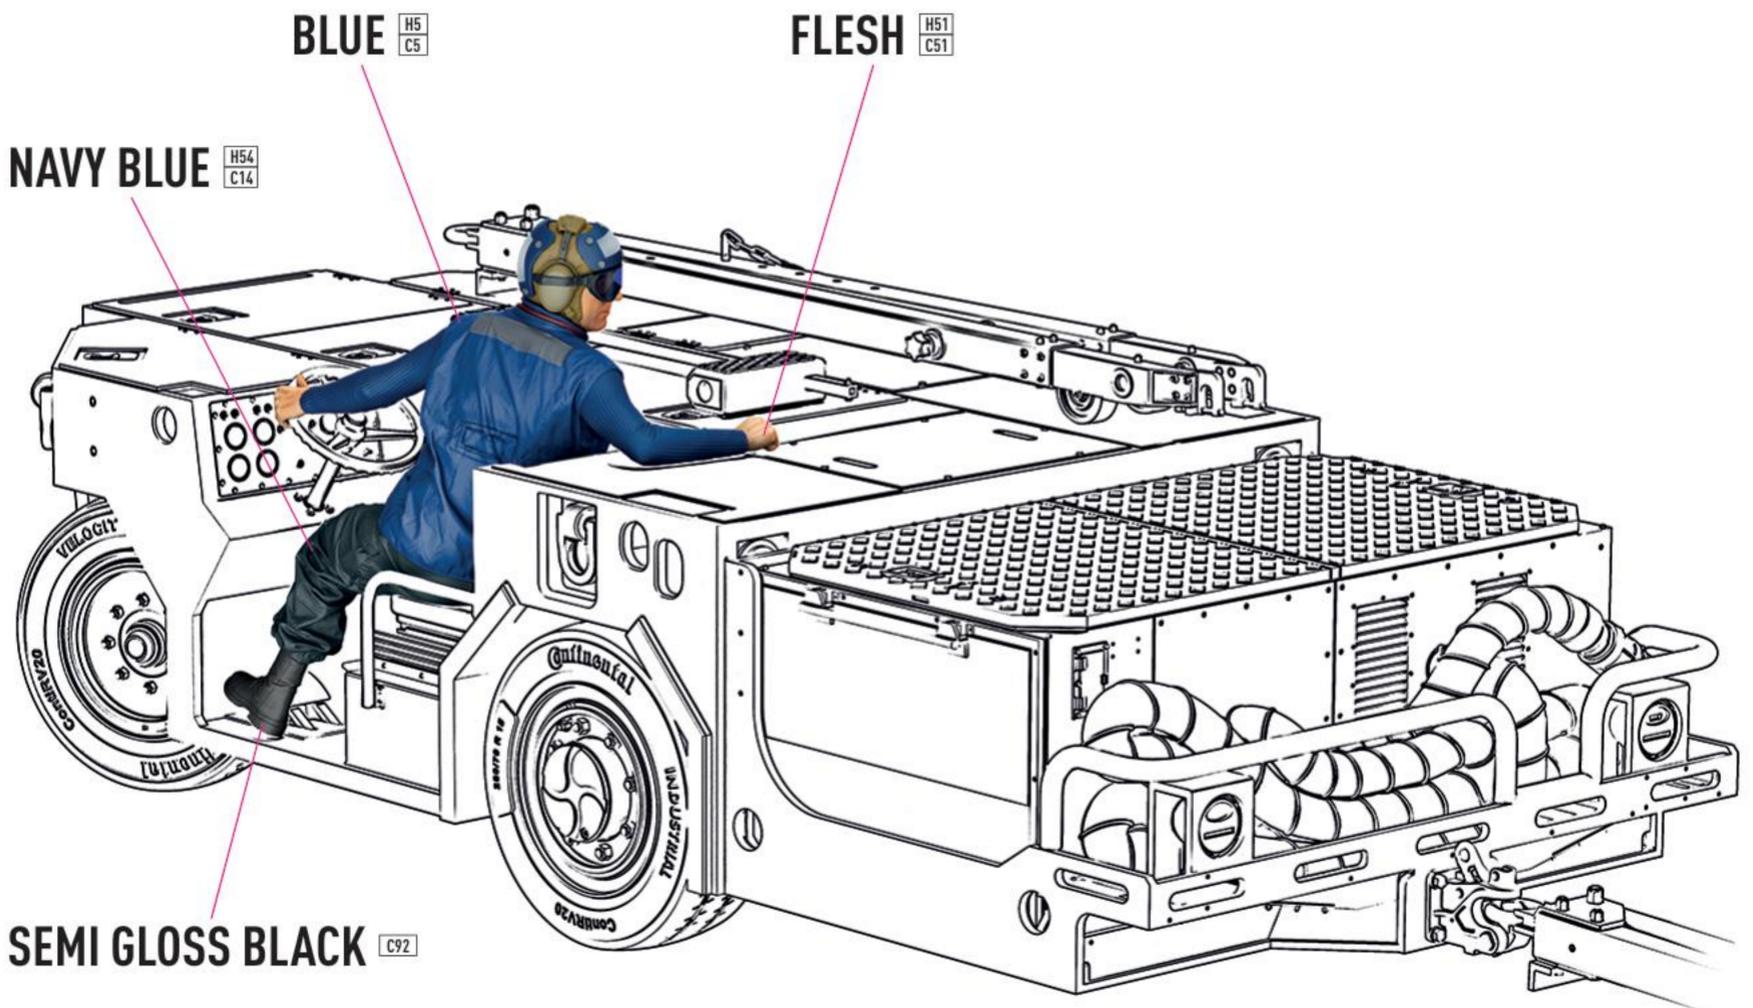

## PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
 BLUE	H5	C5
 FLESH	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
 NAVY BLUE	H54	C14
 SEMI GLOSS BLACK		C92