



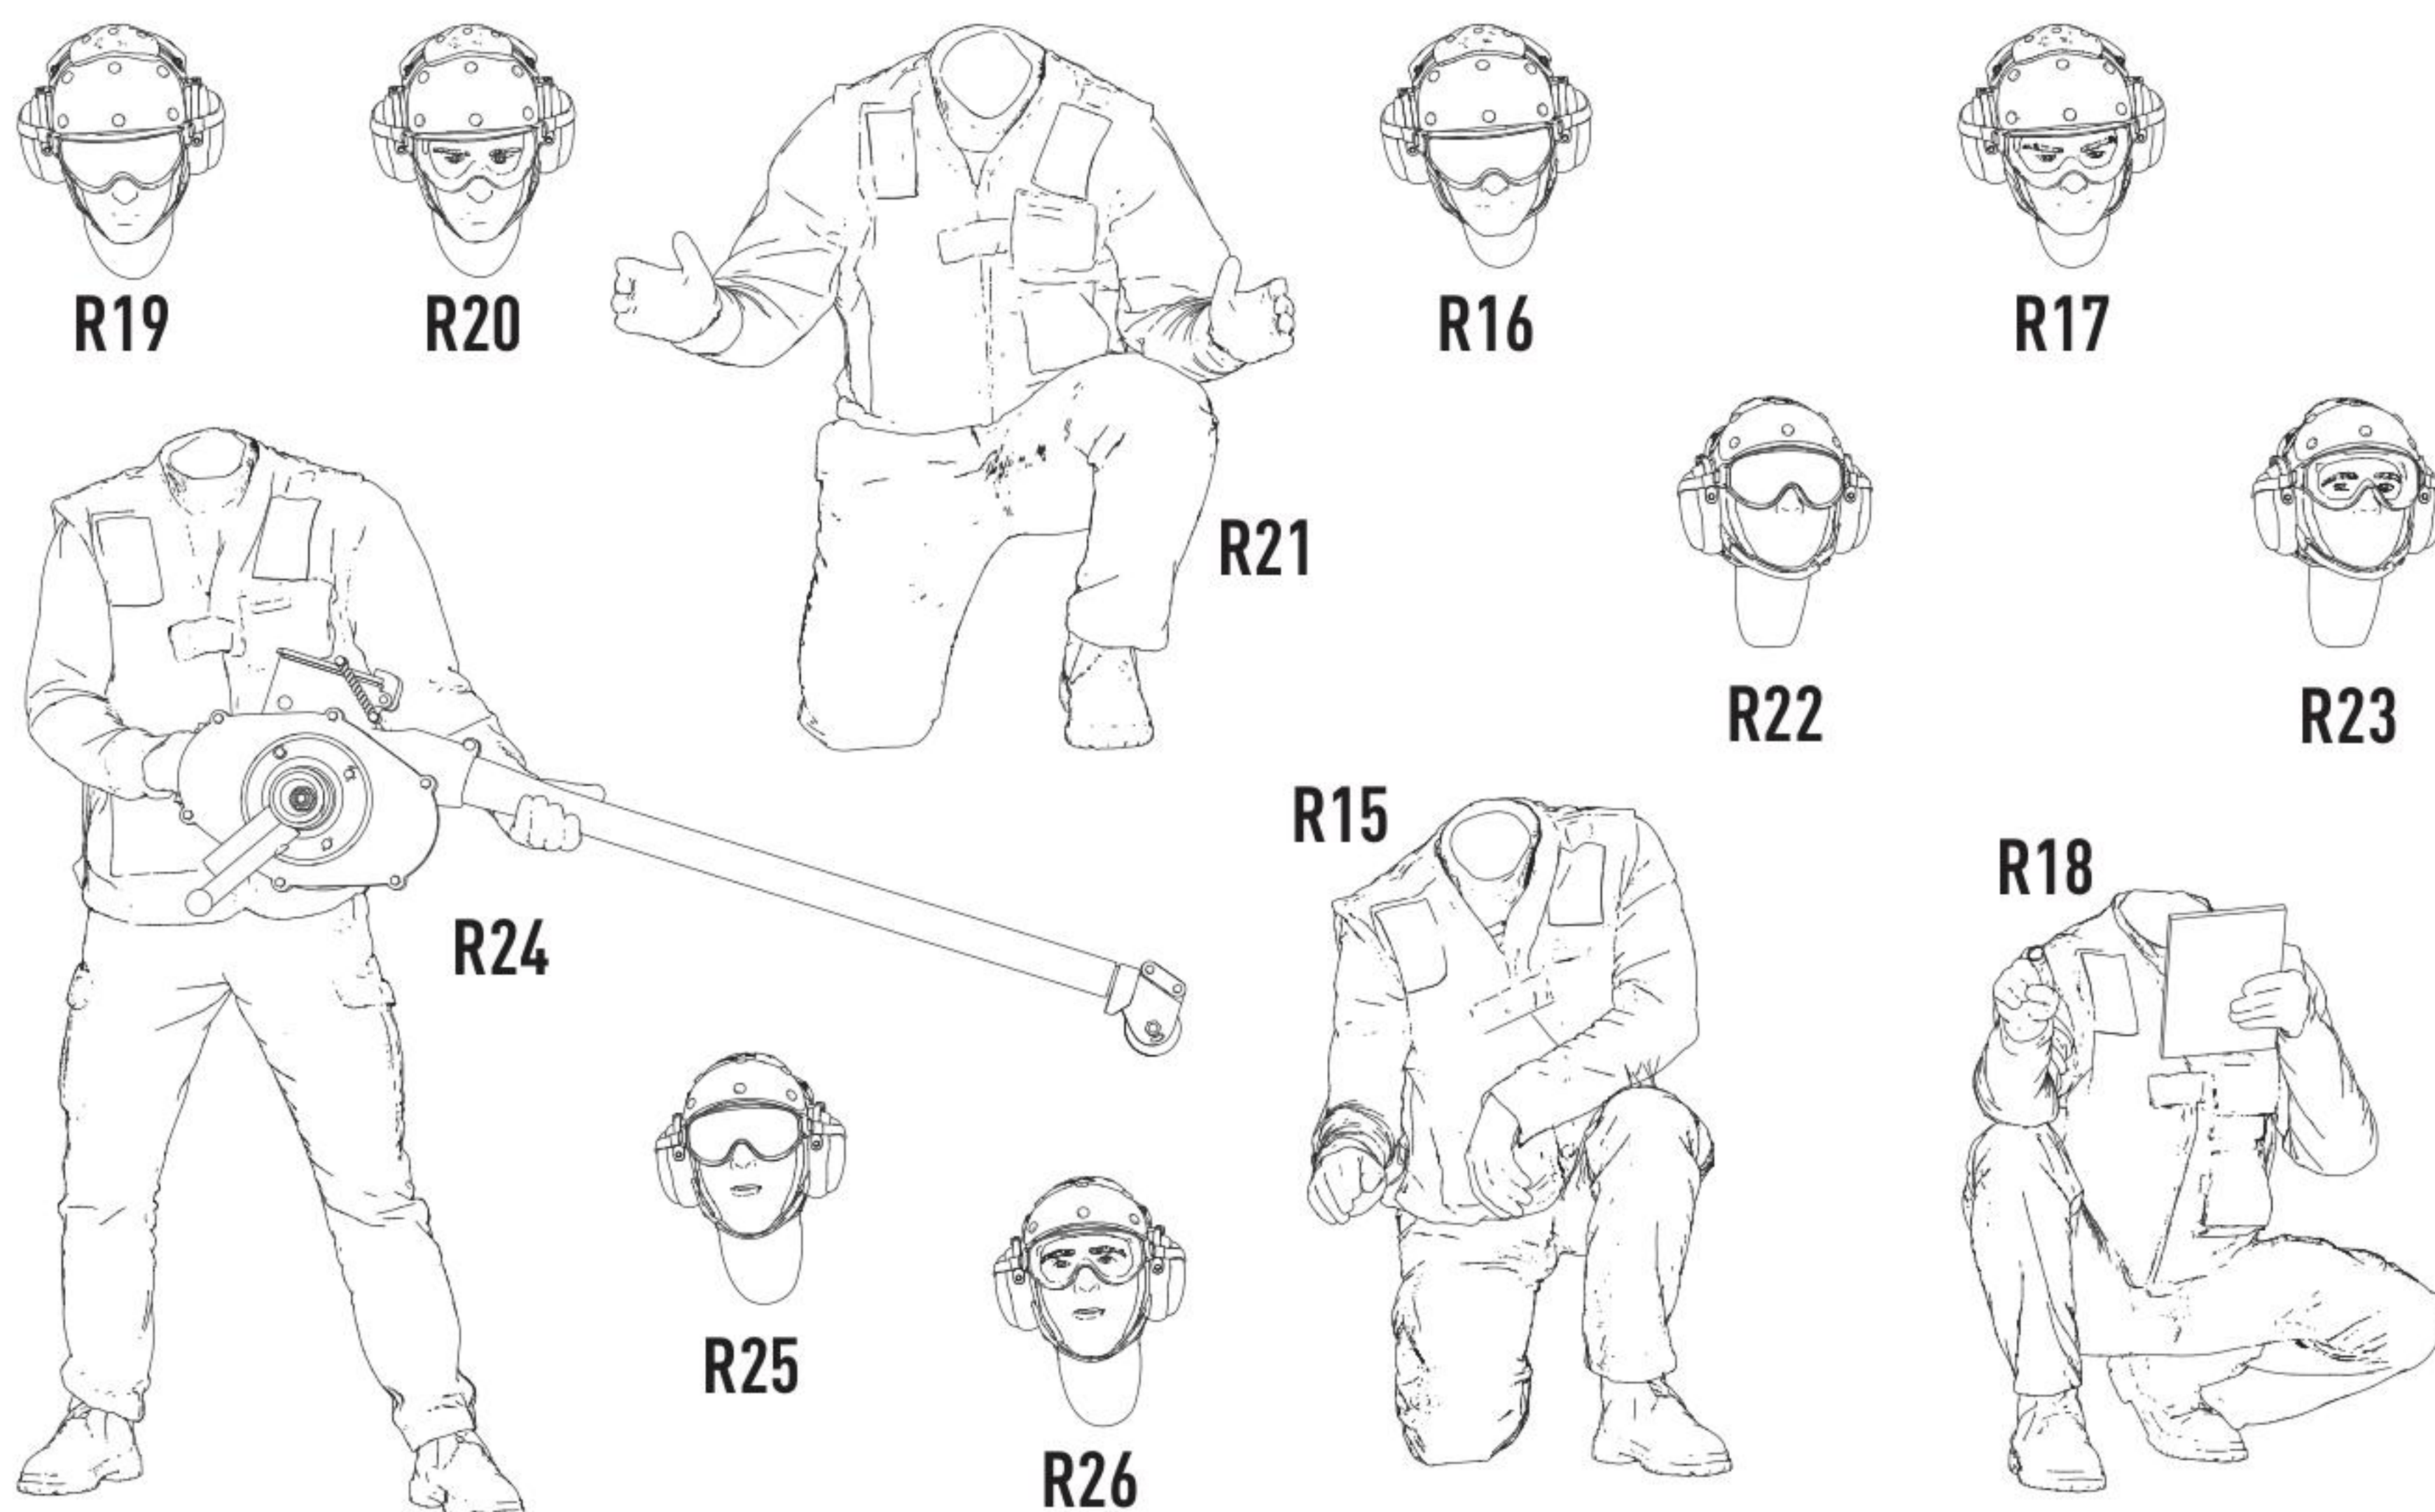


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

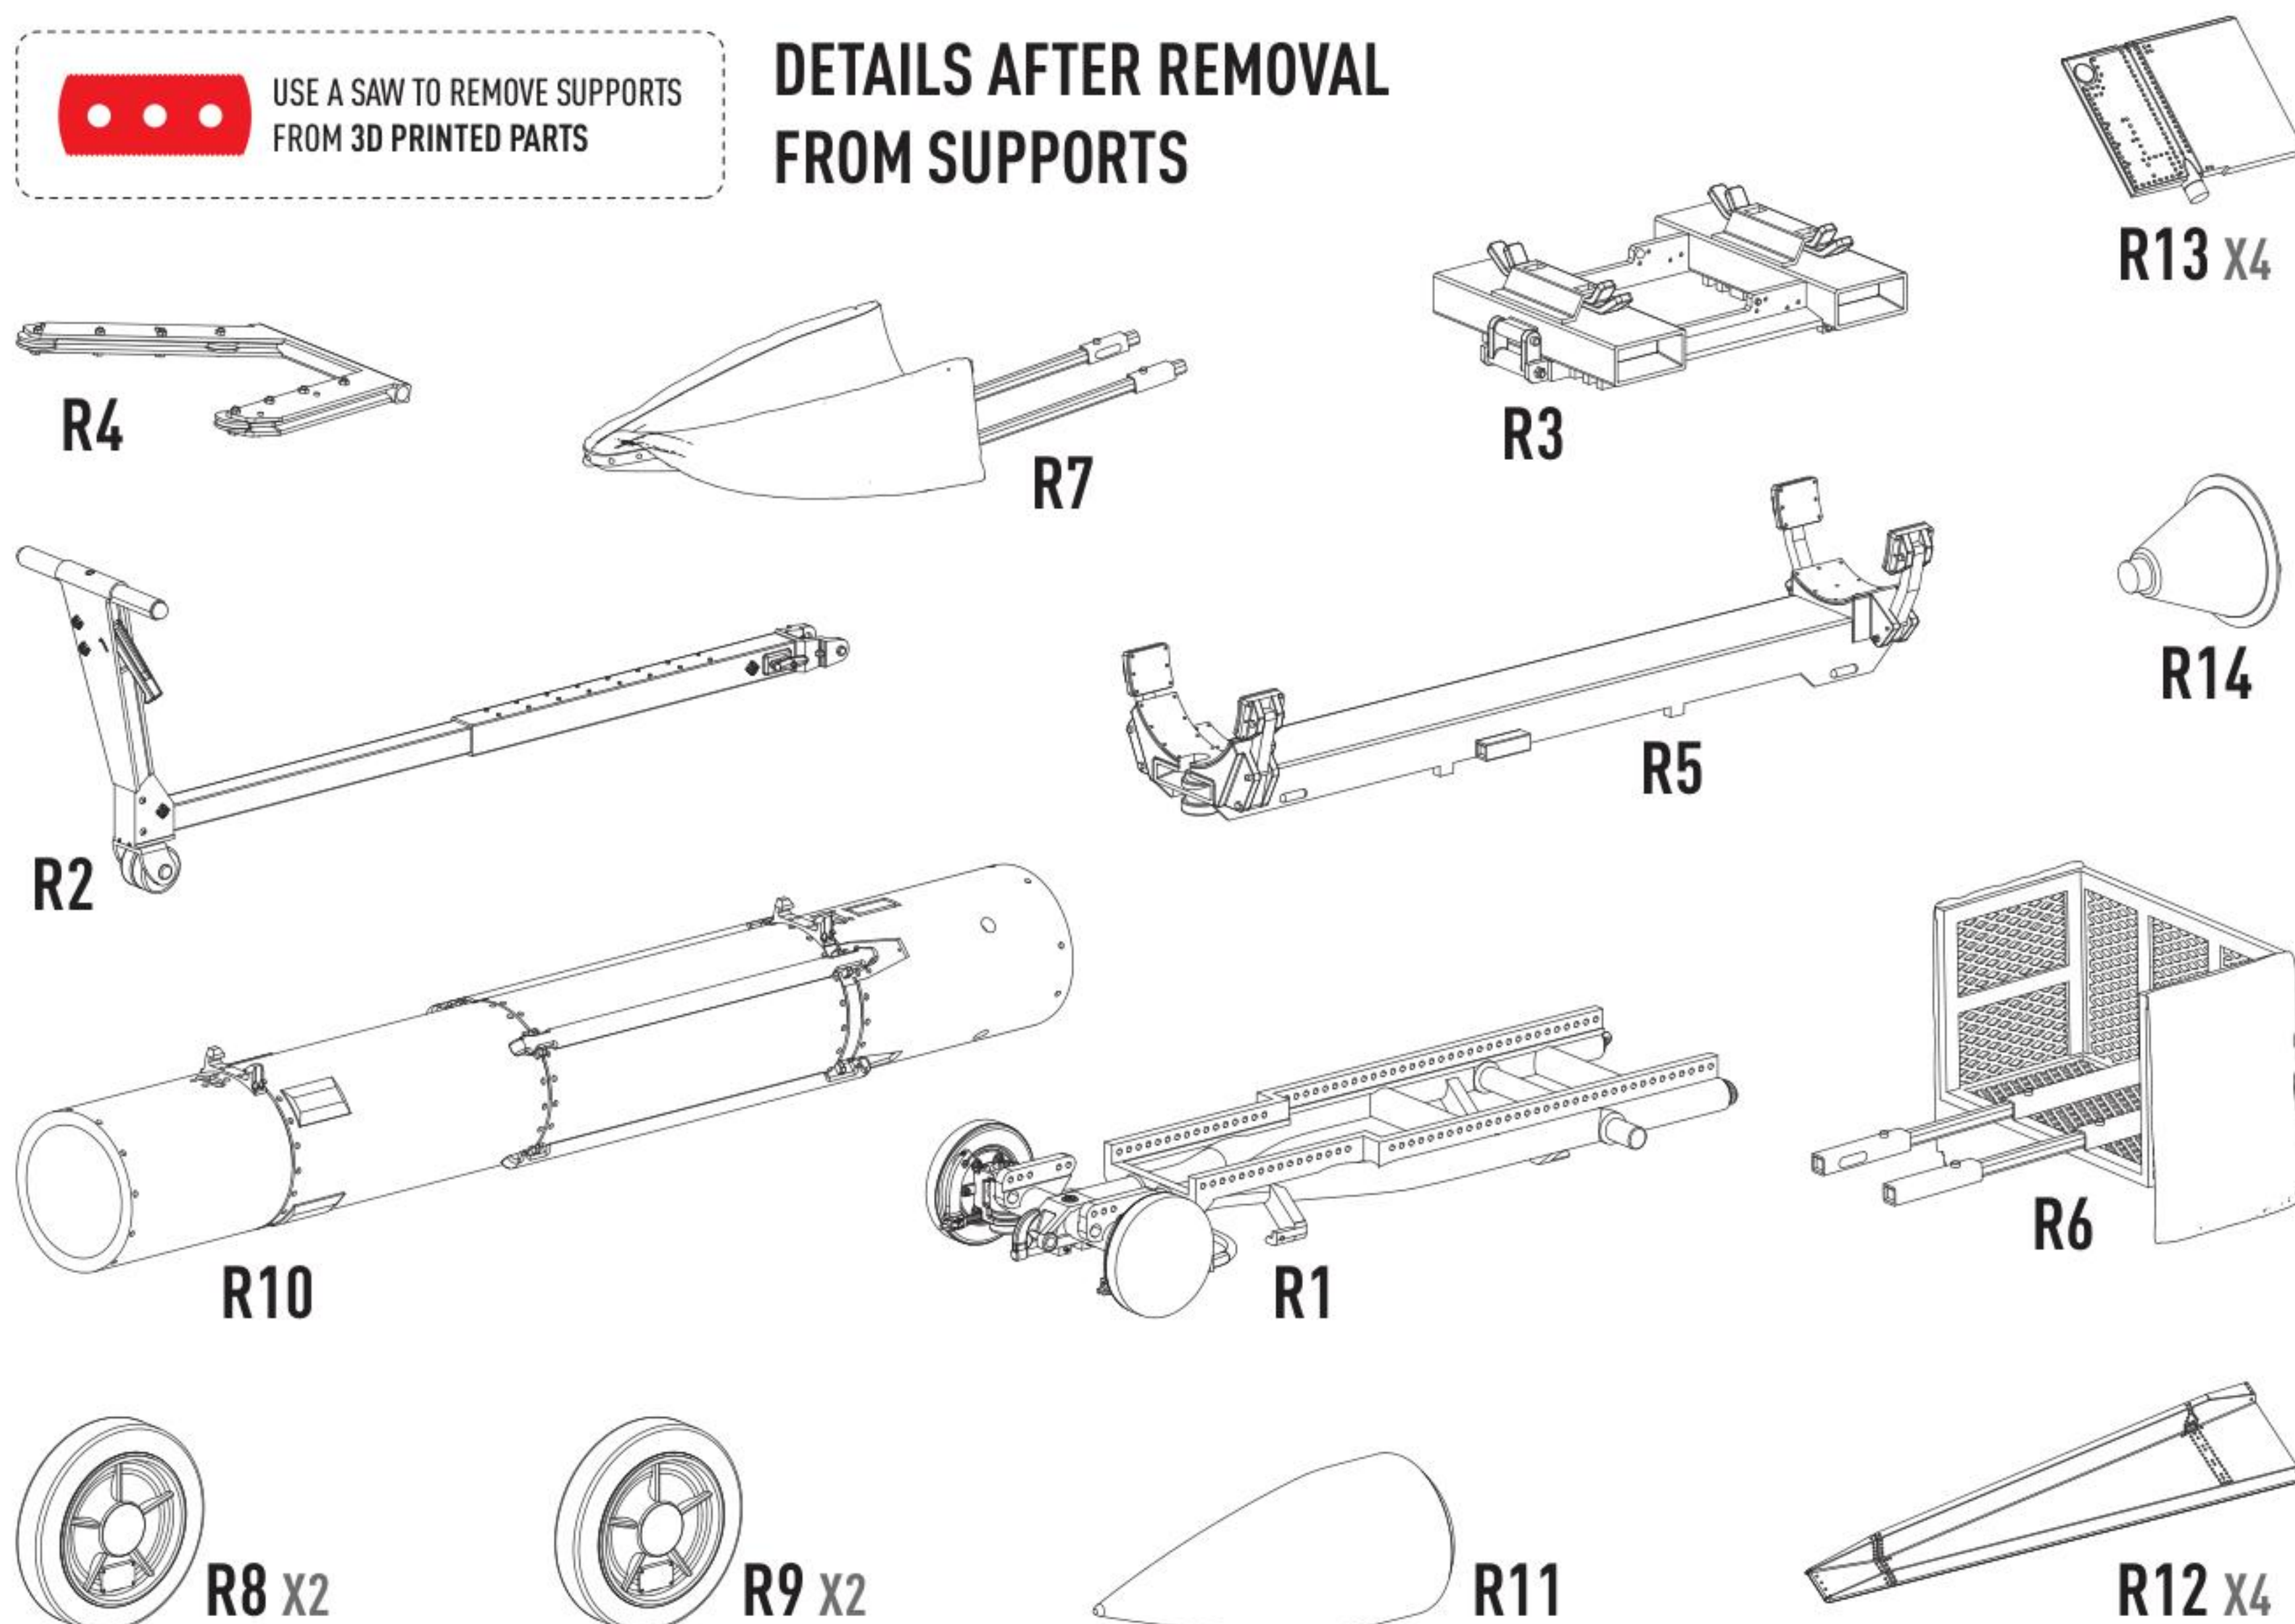


1

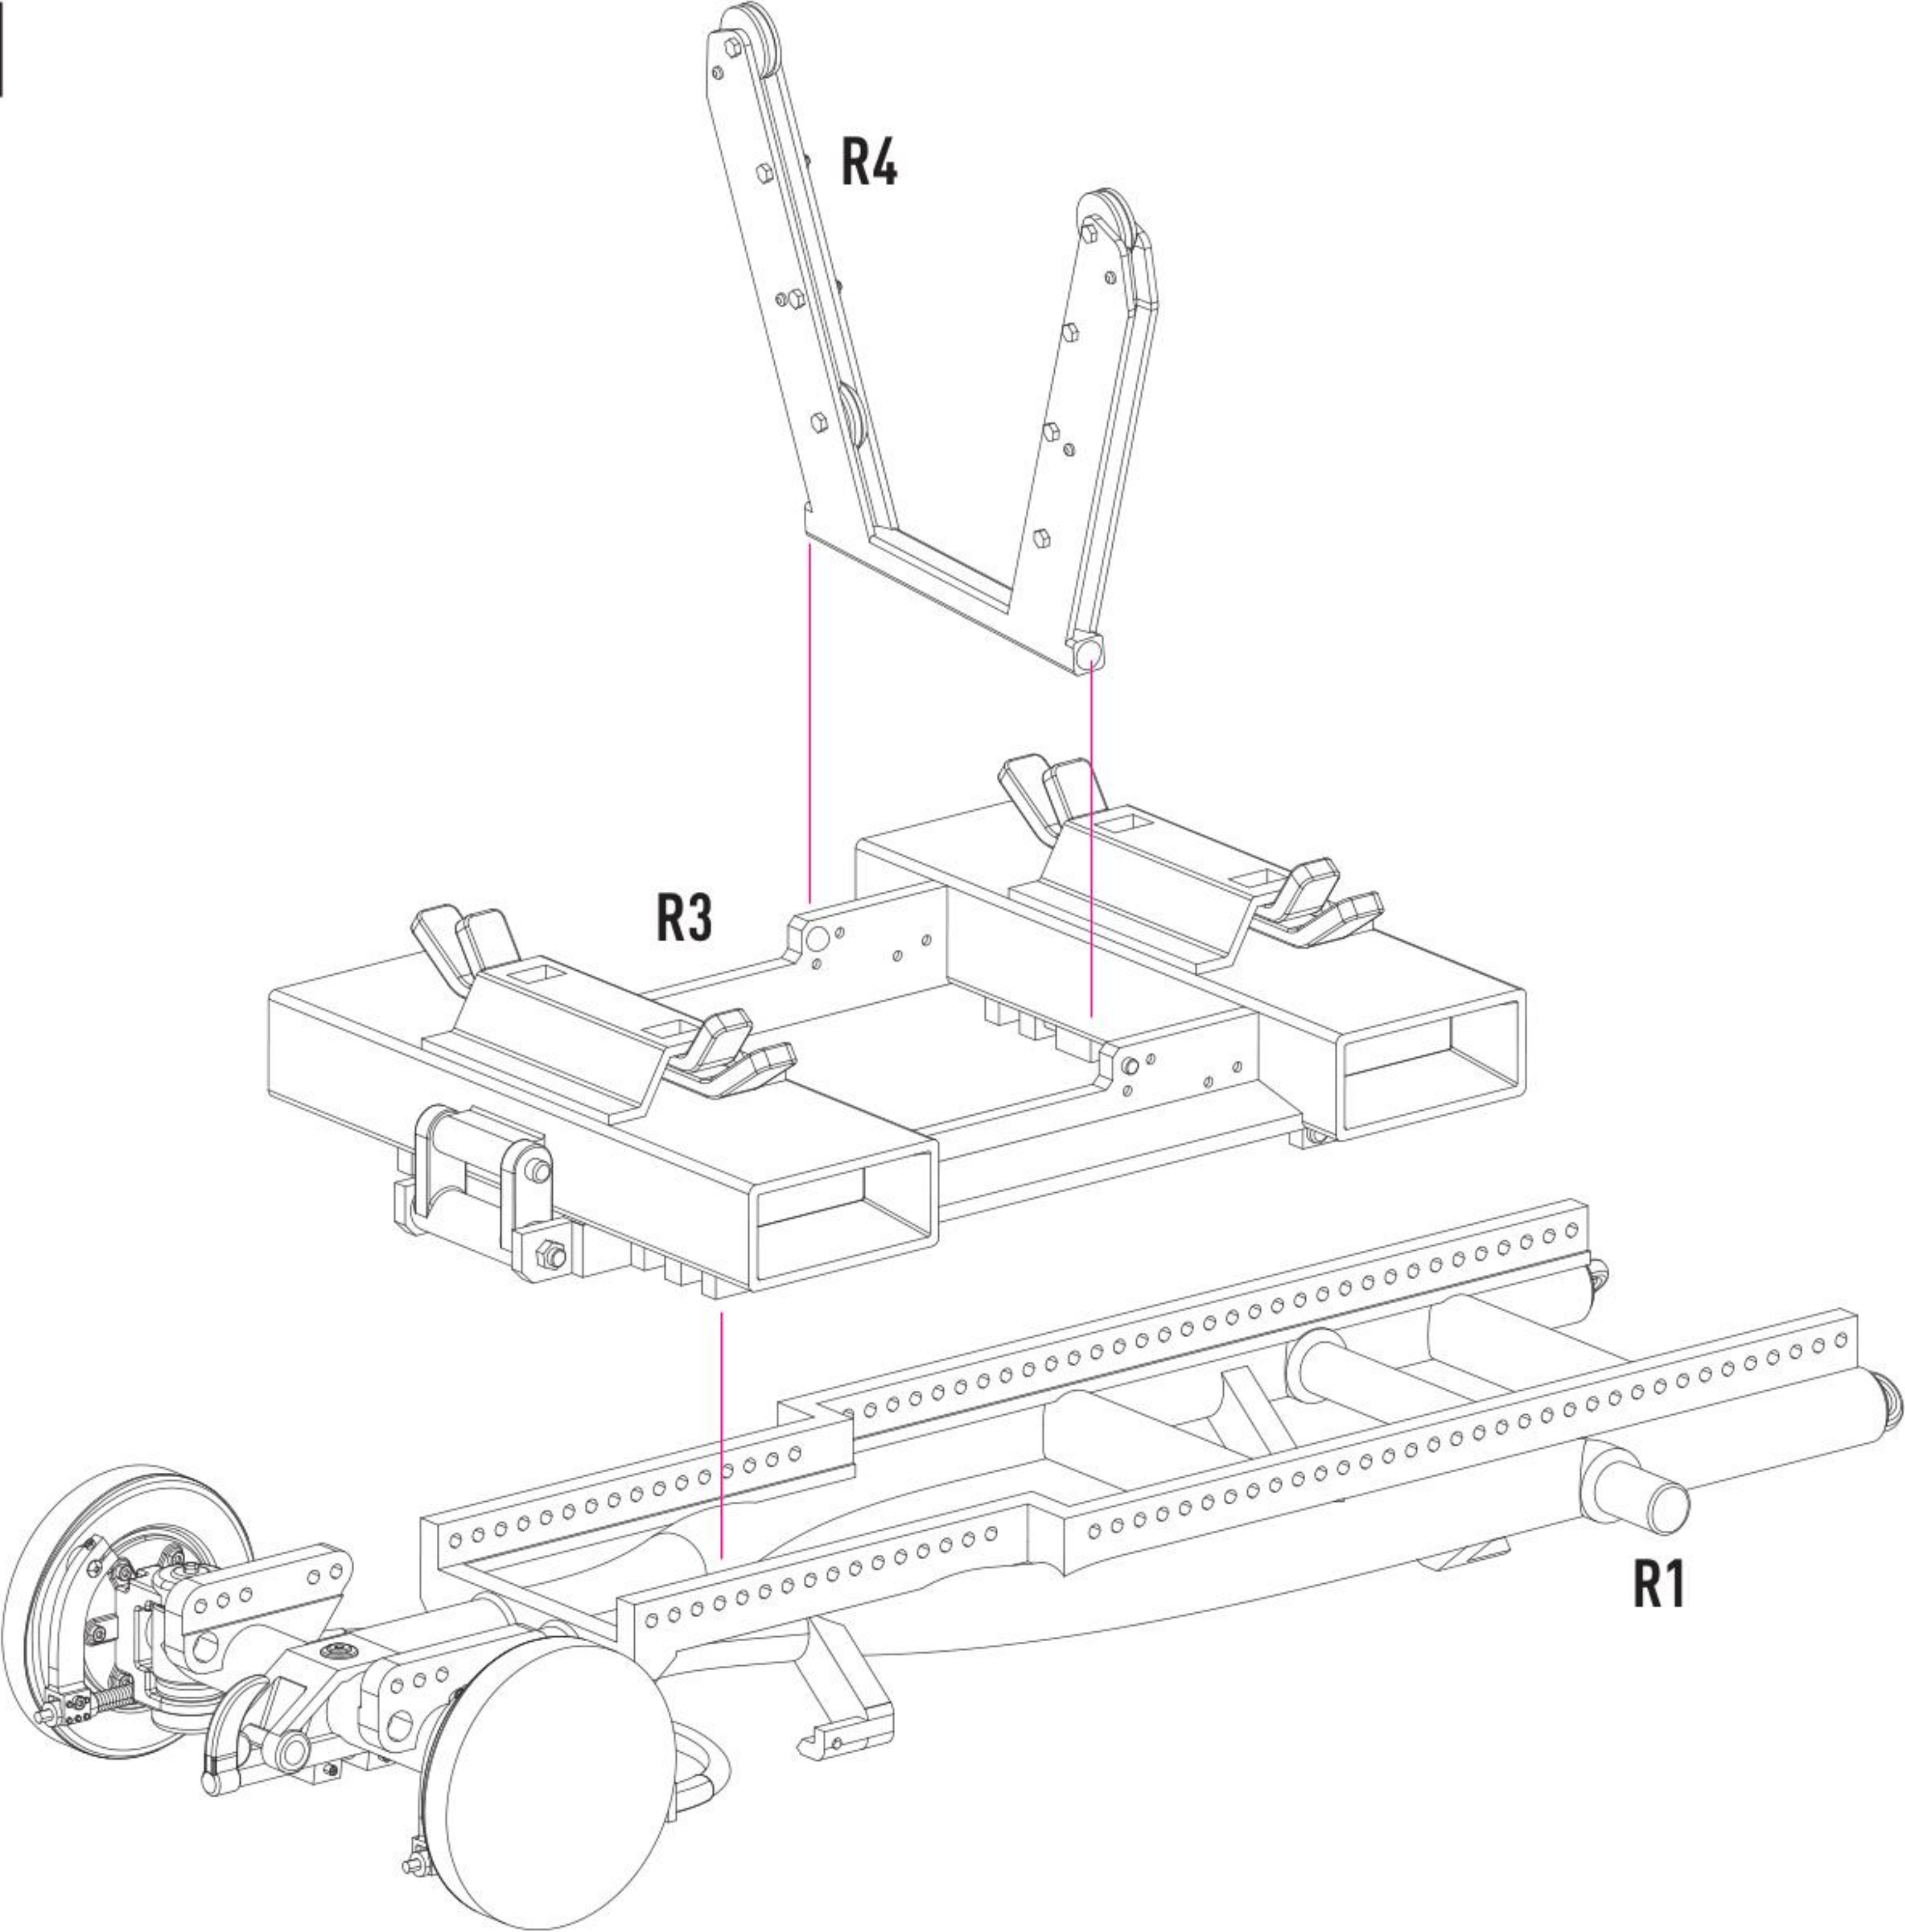


2

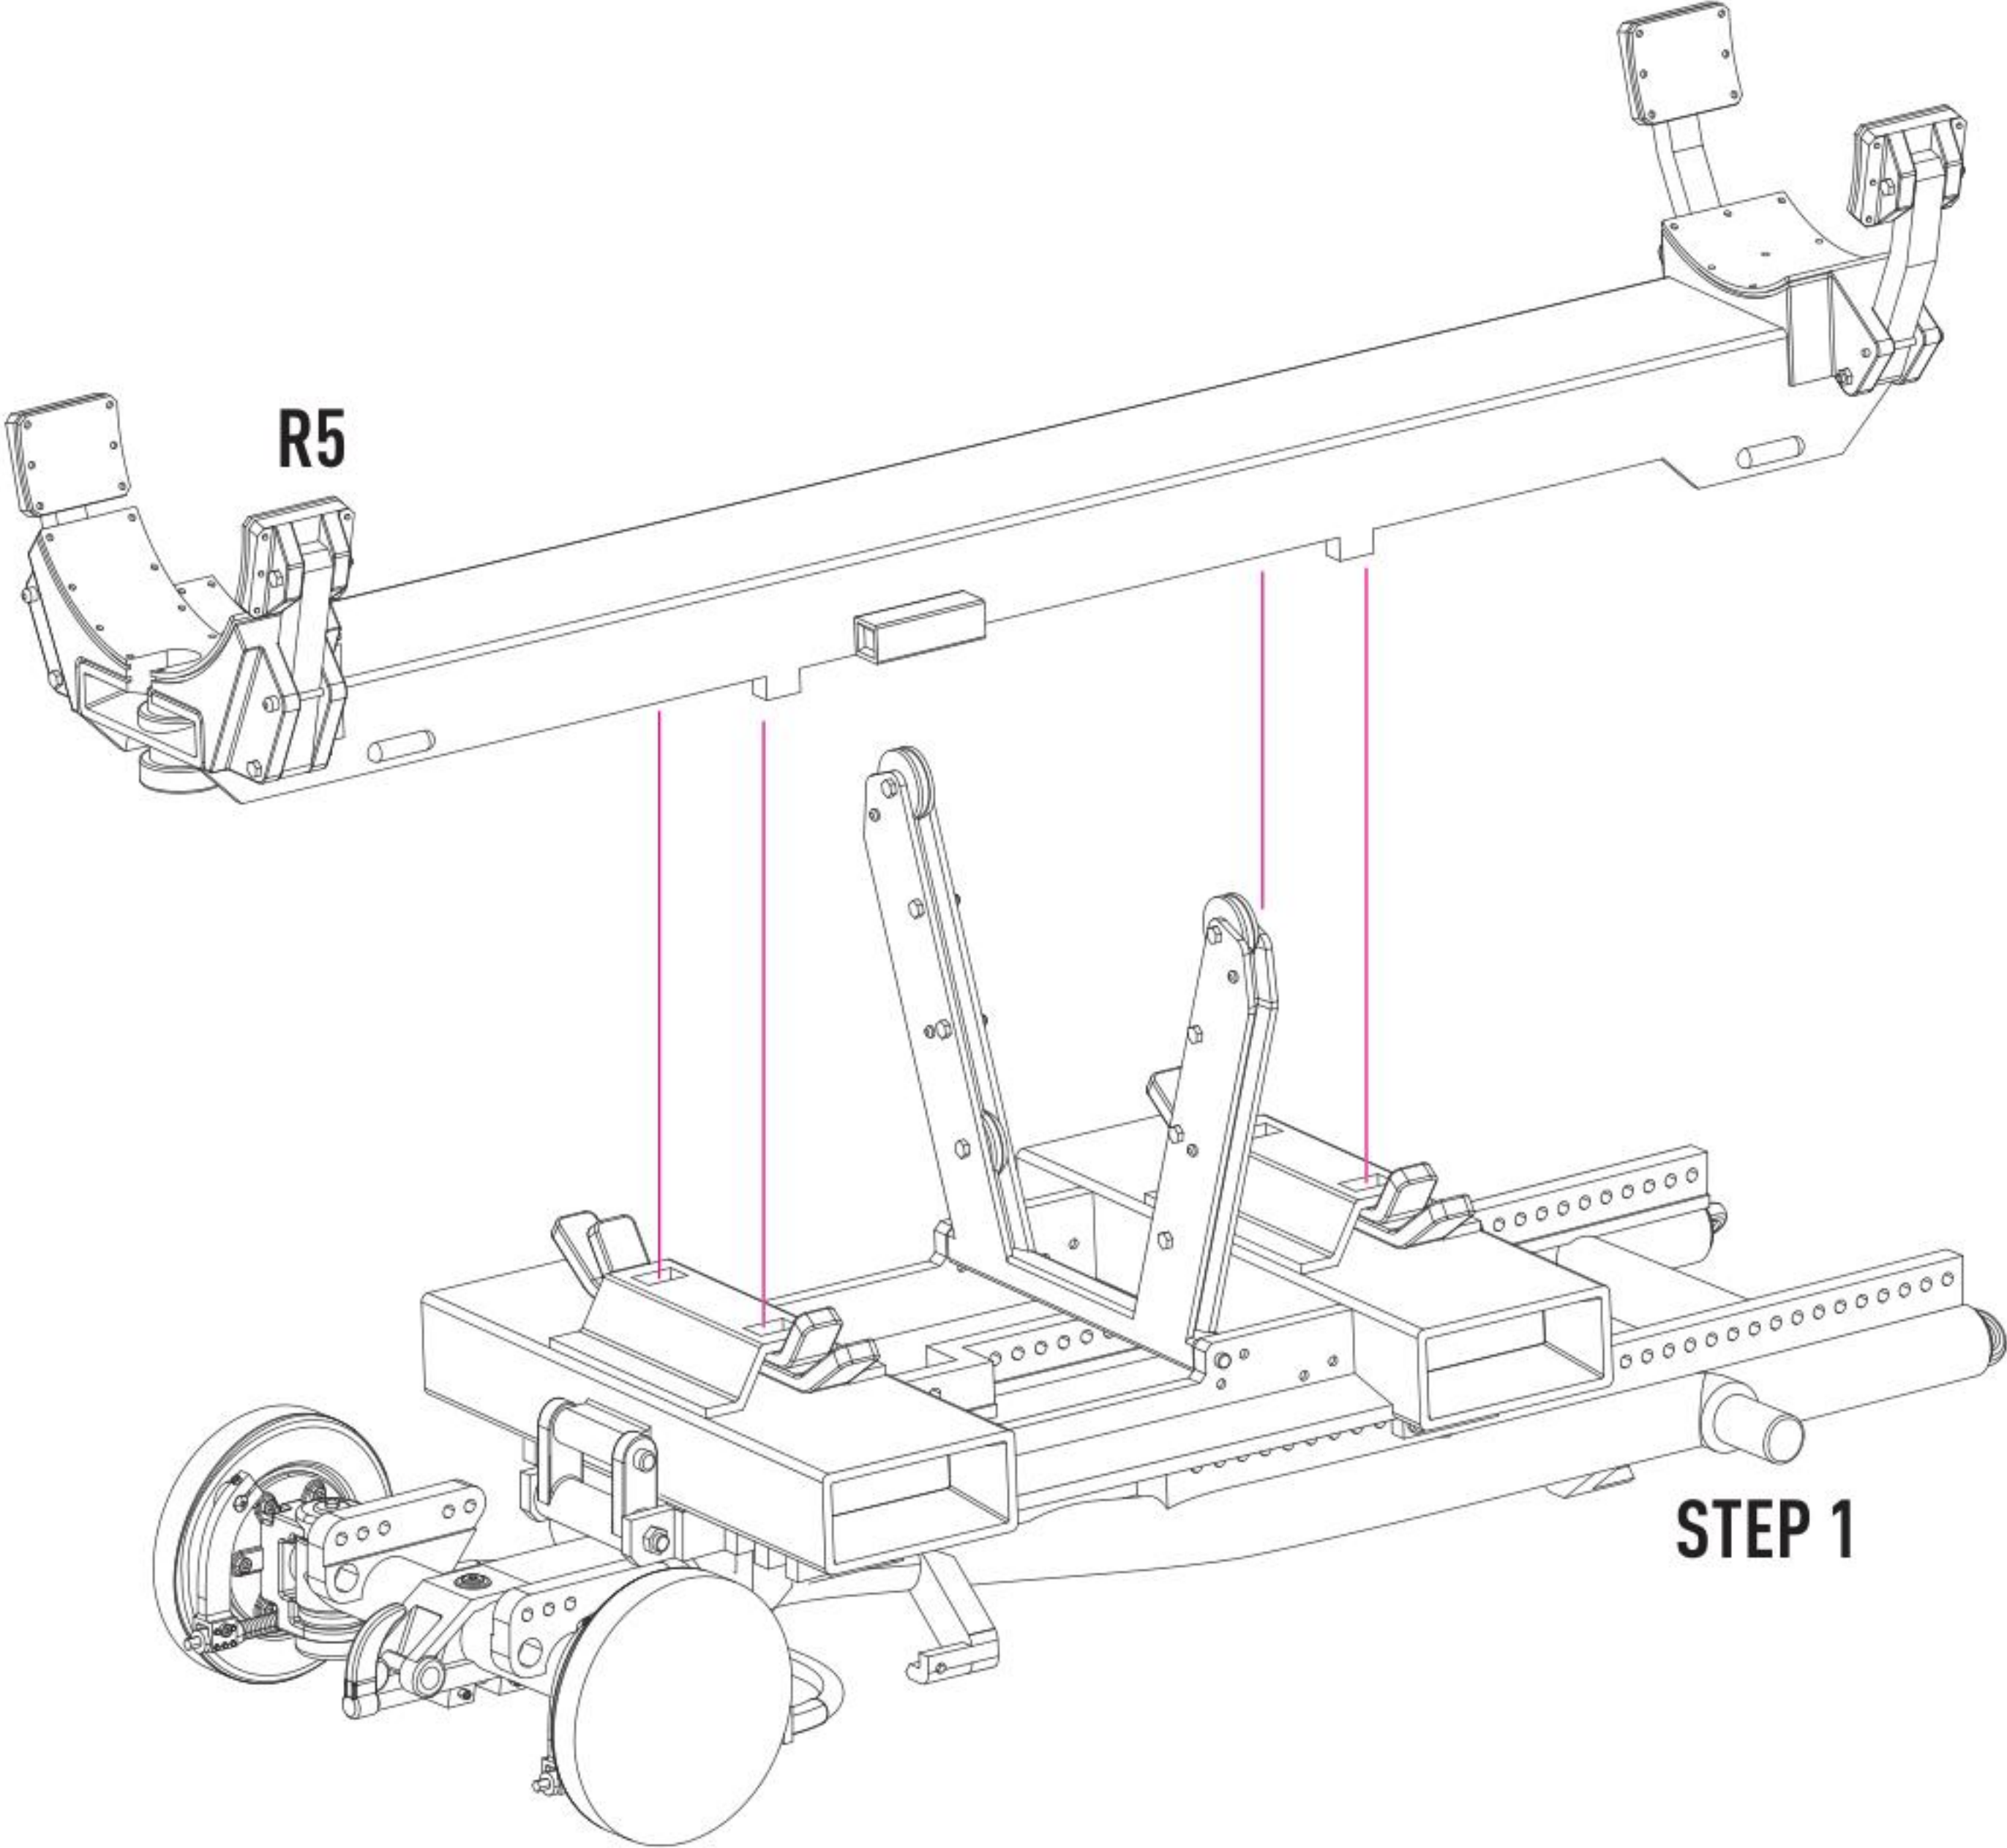


3



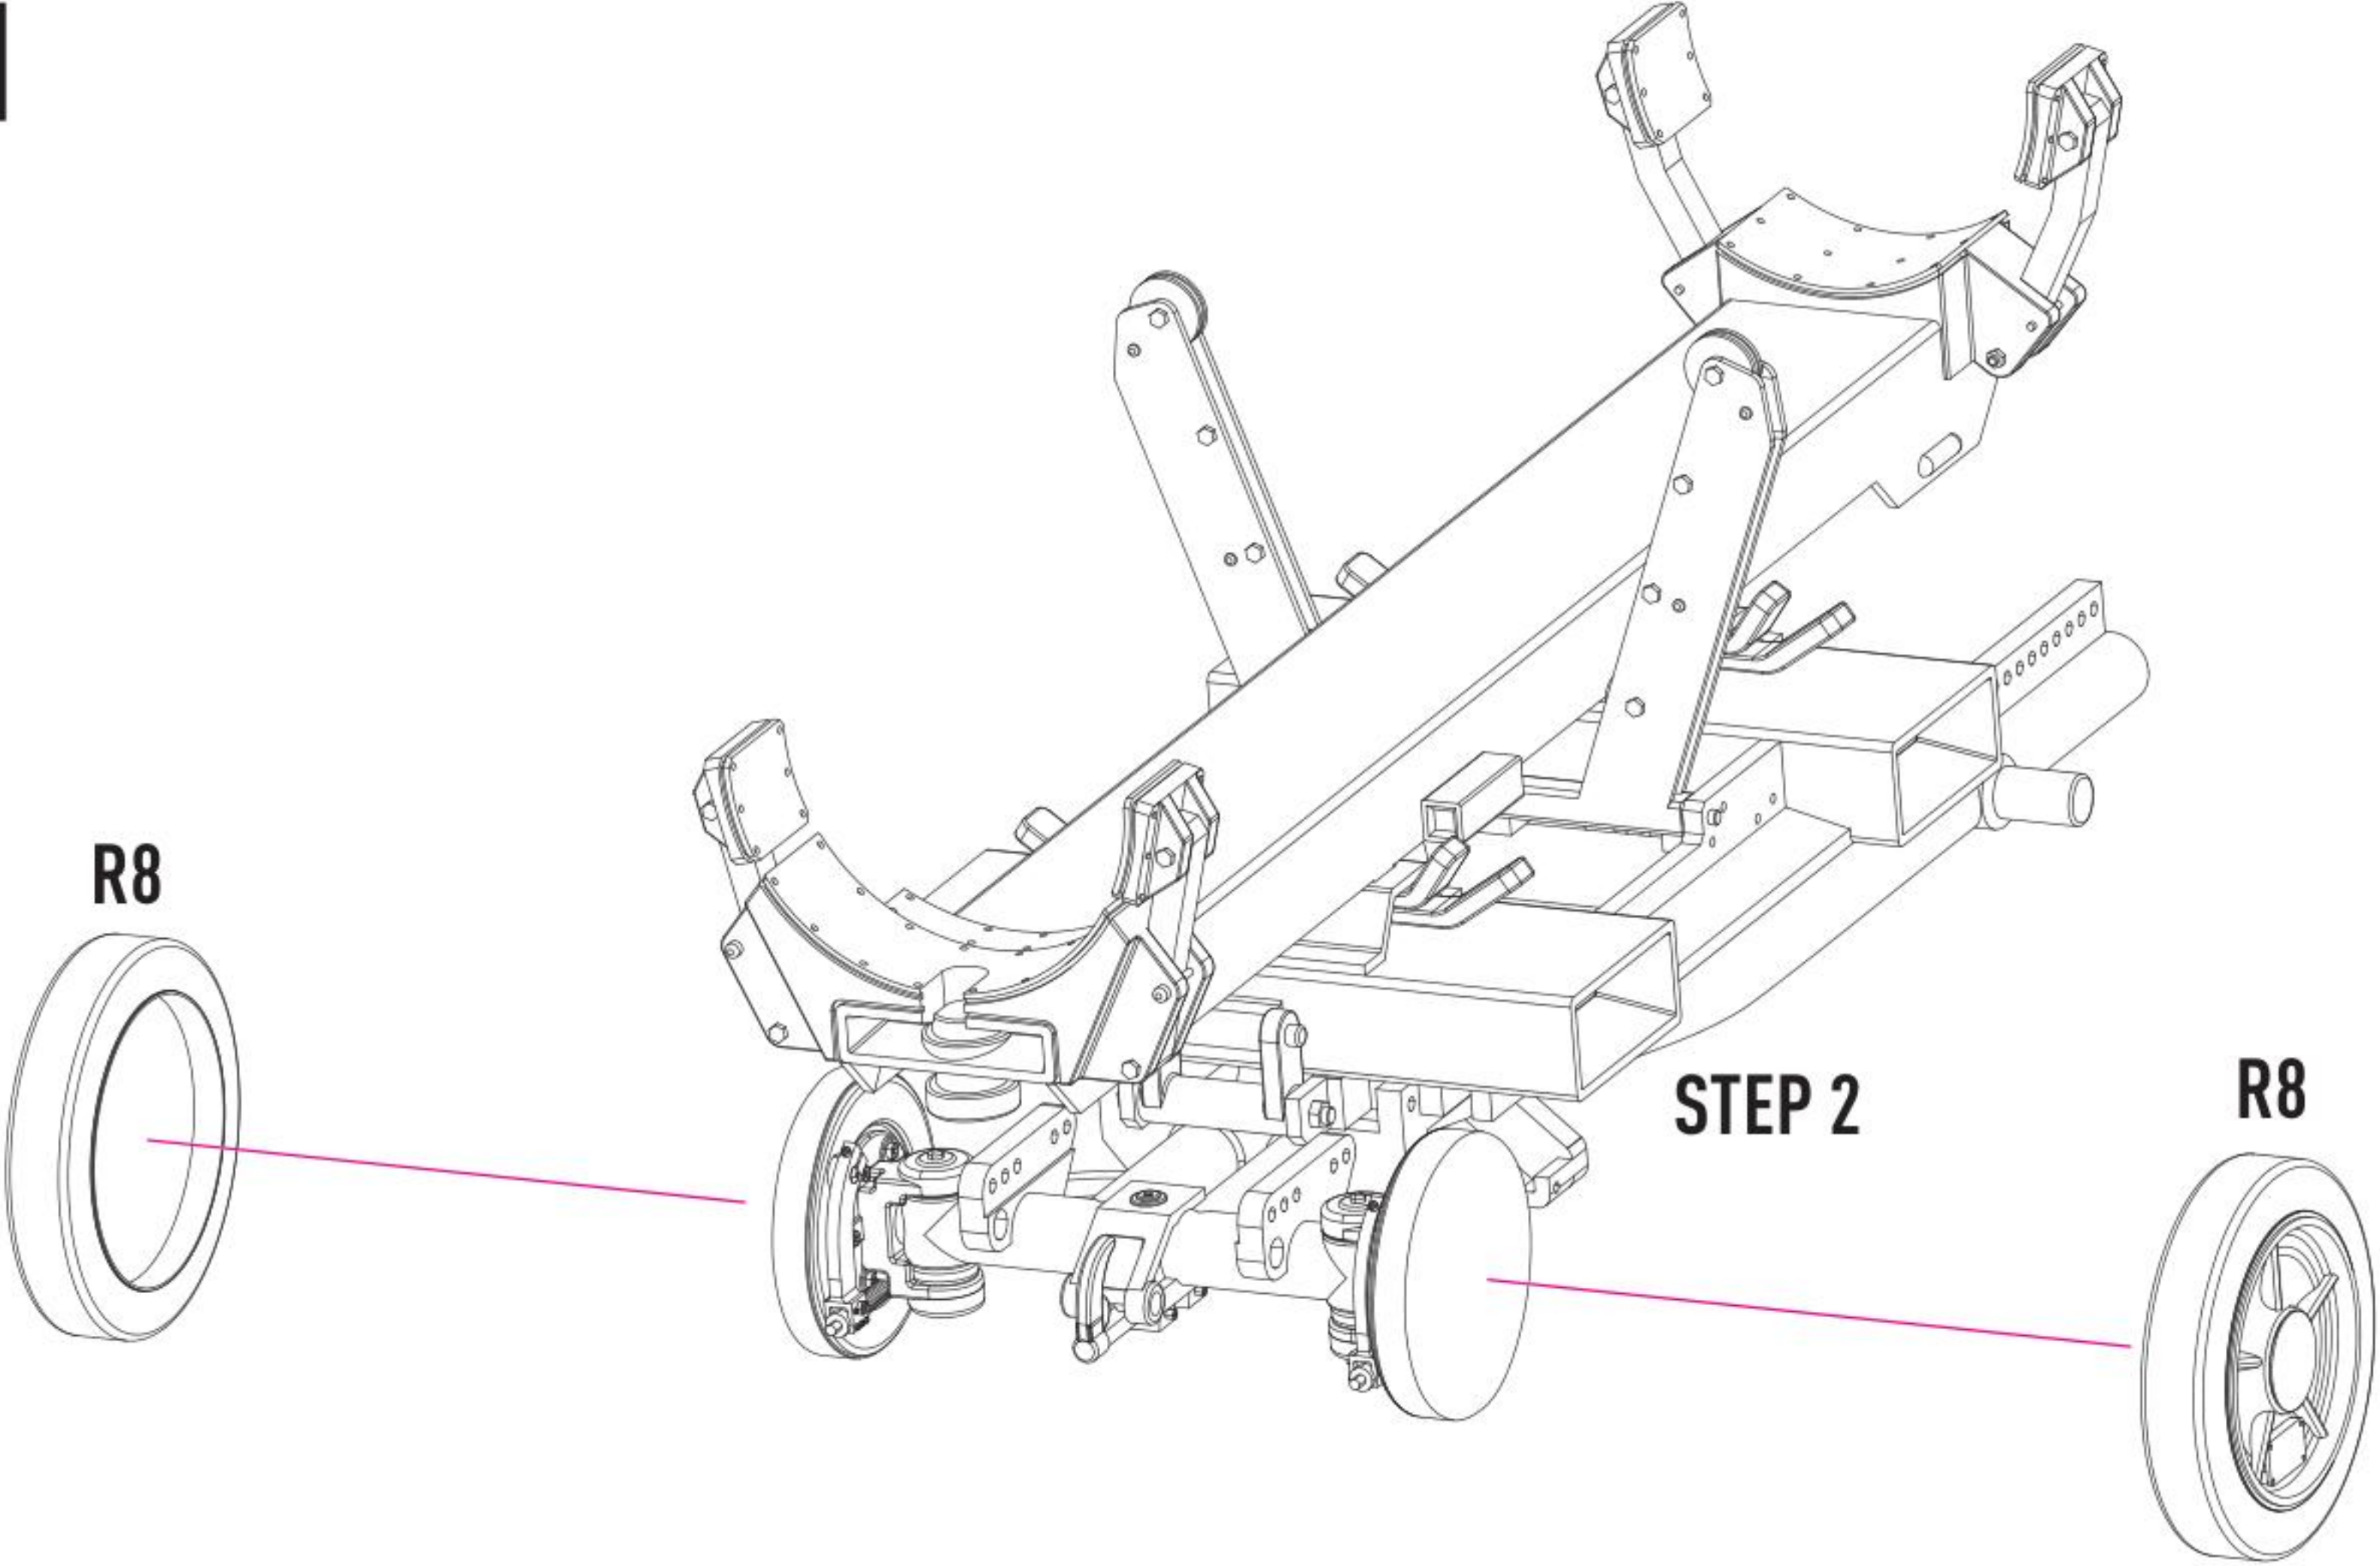


4

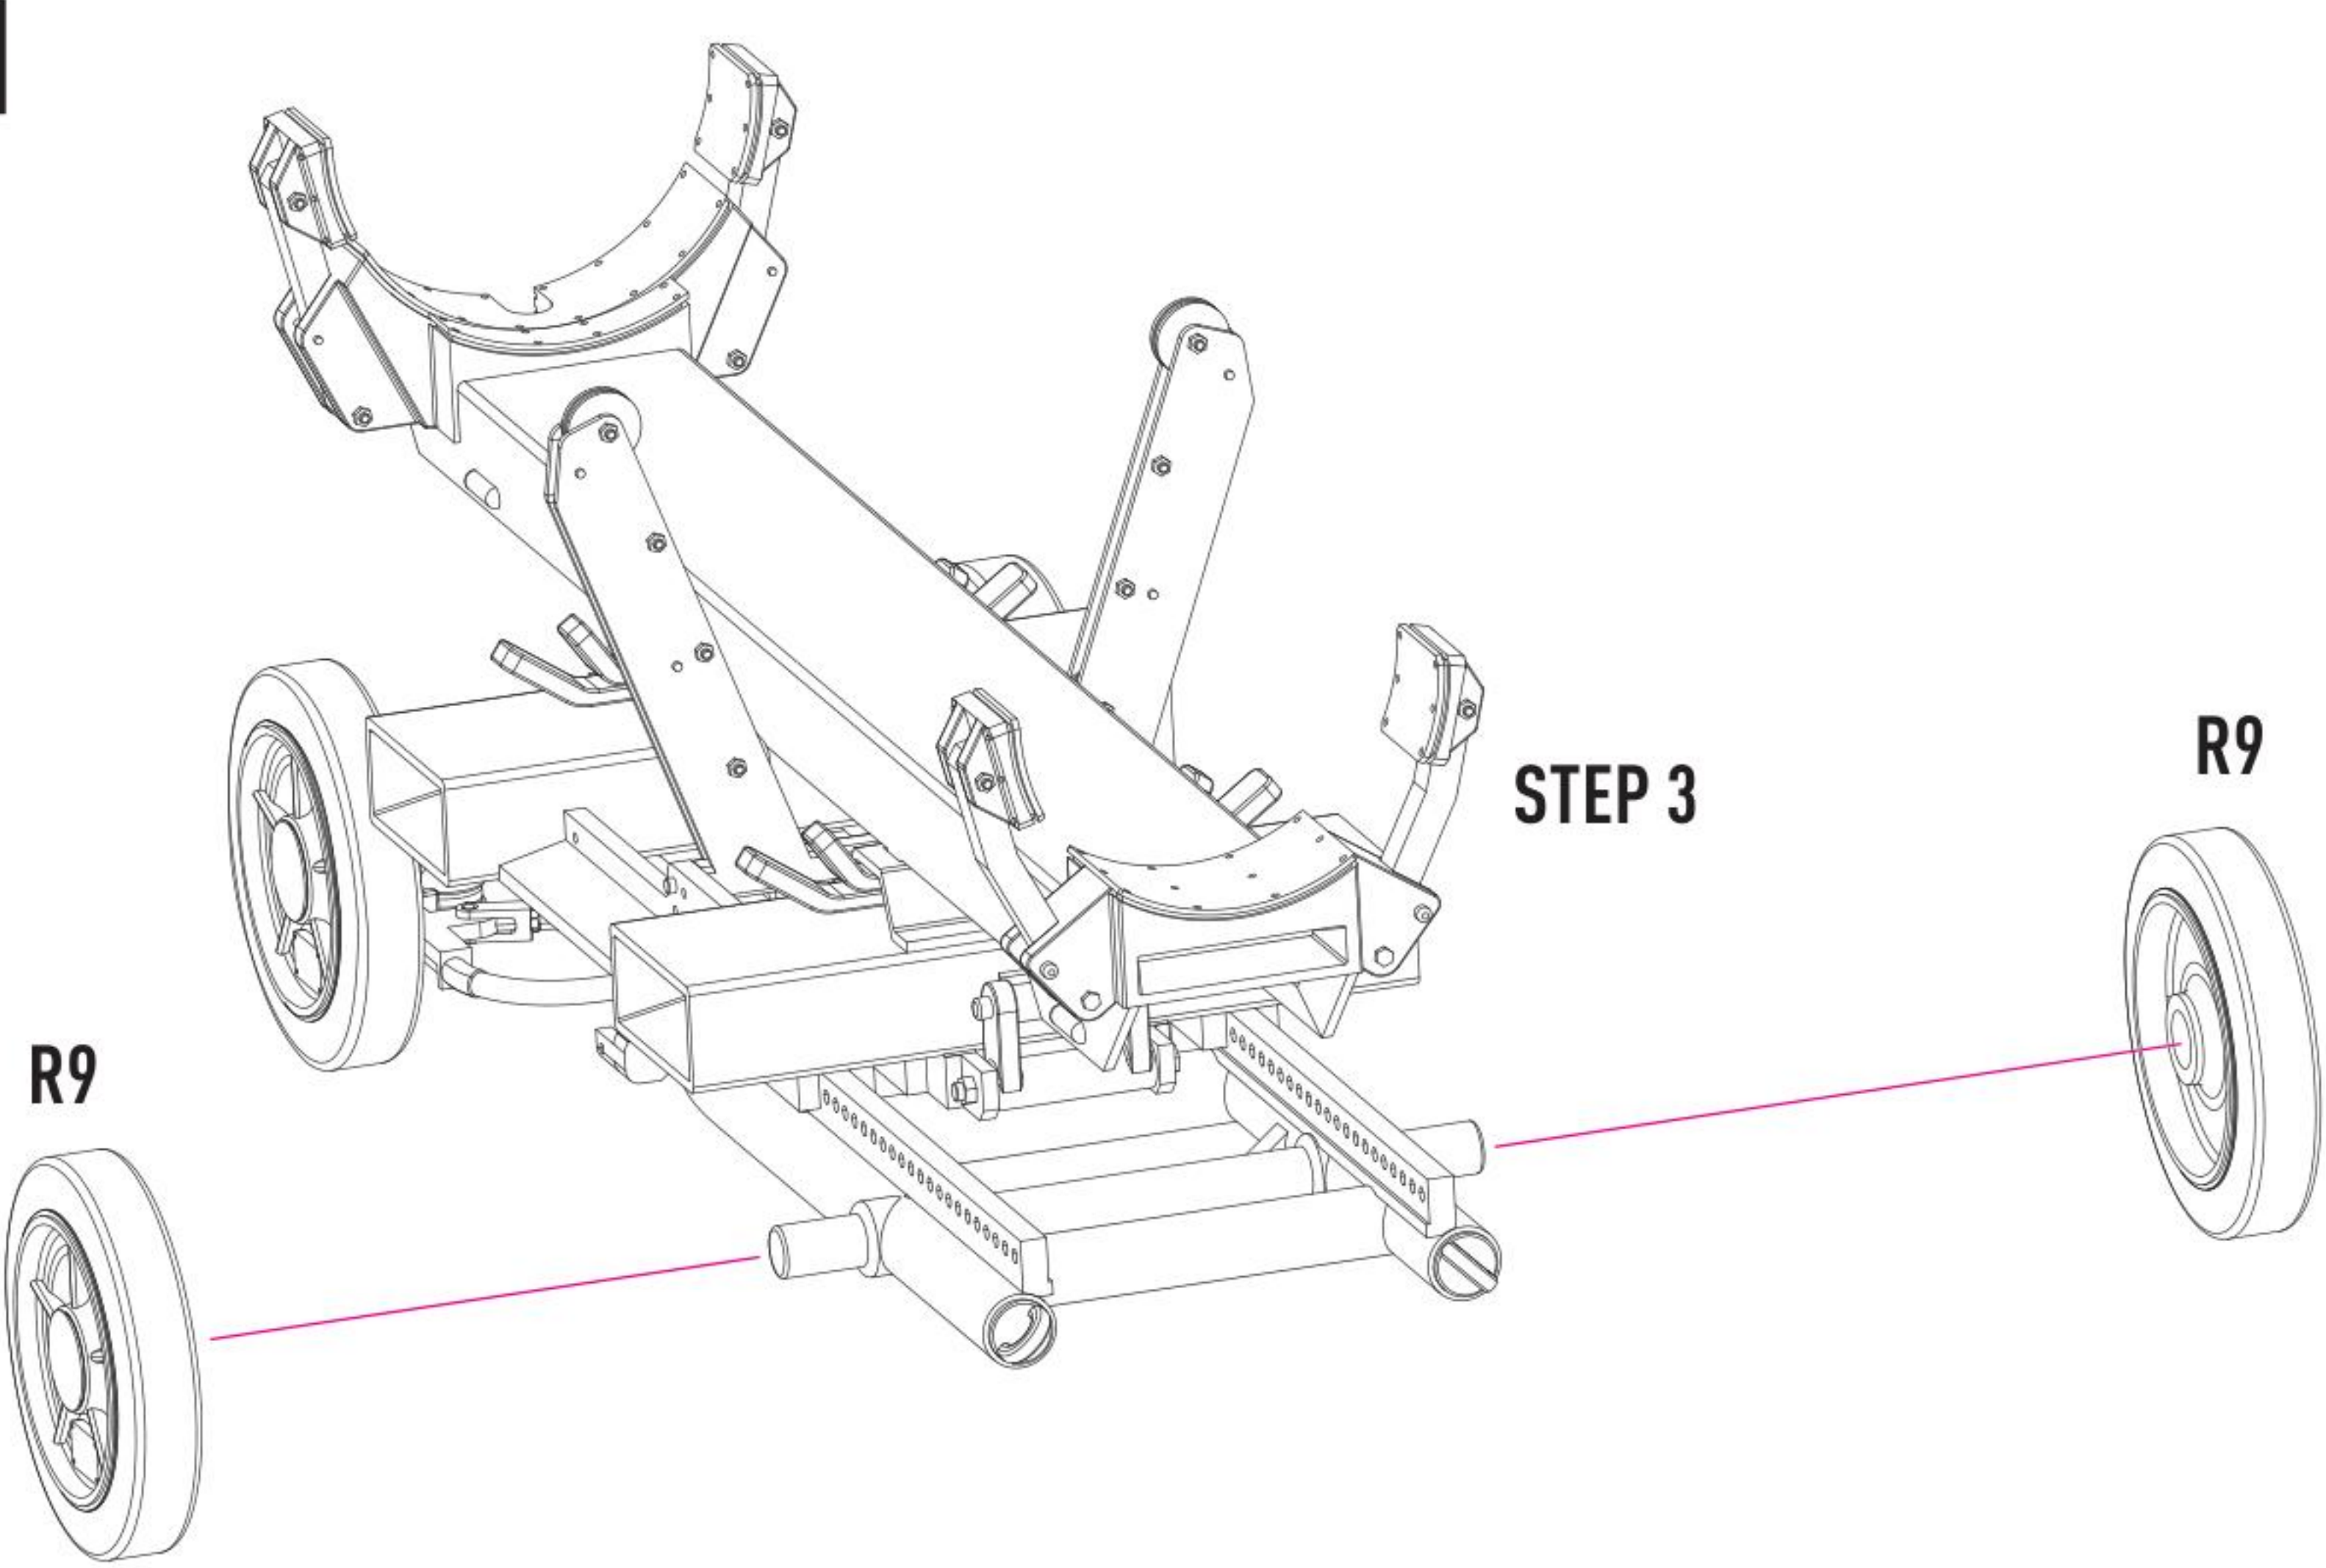


5

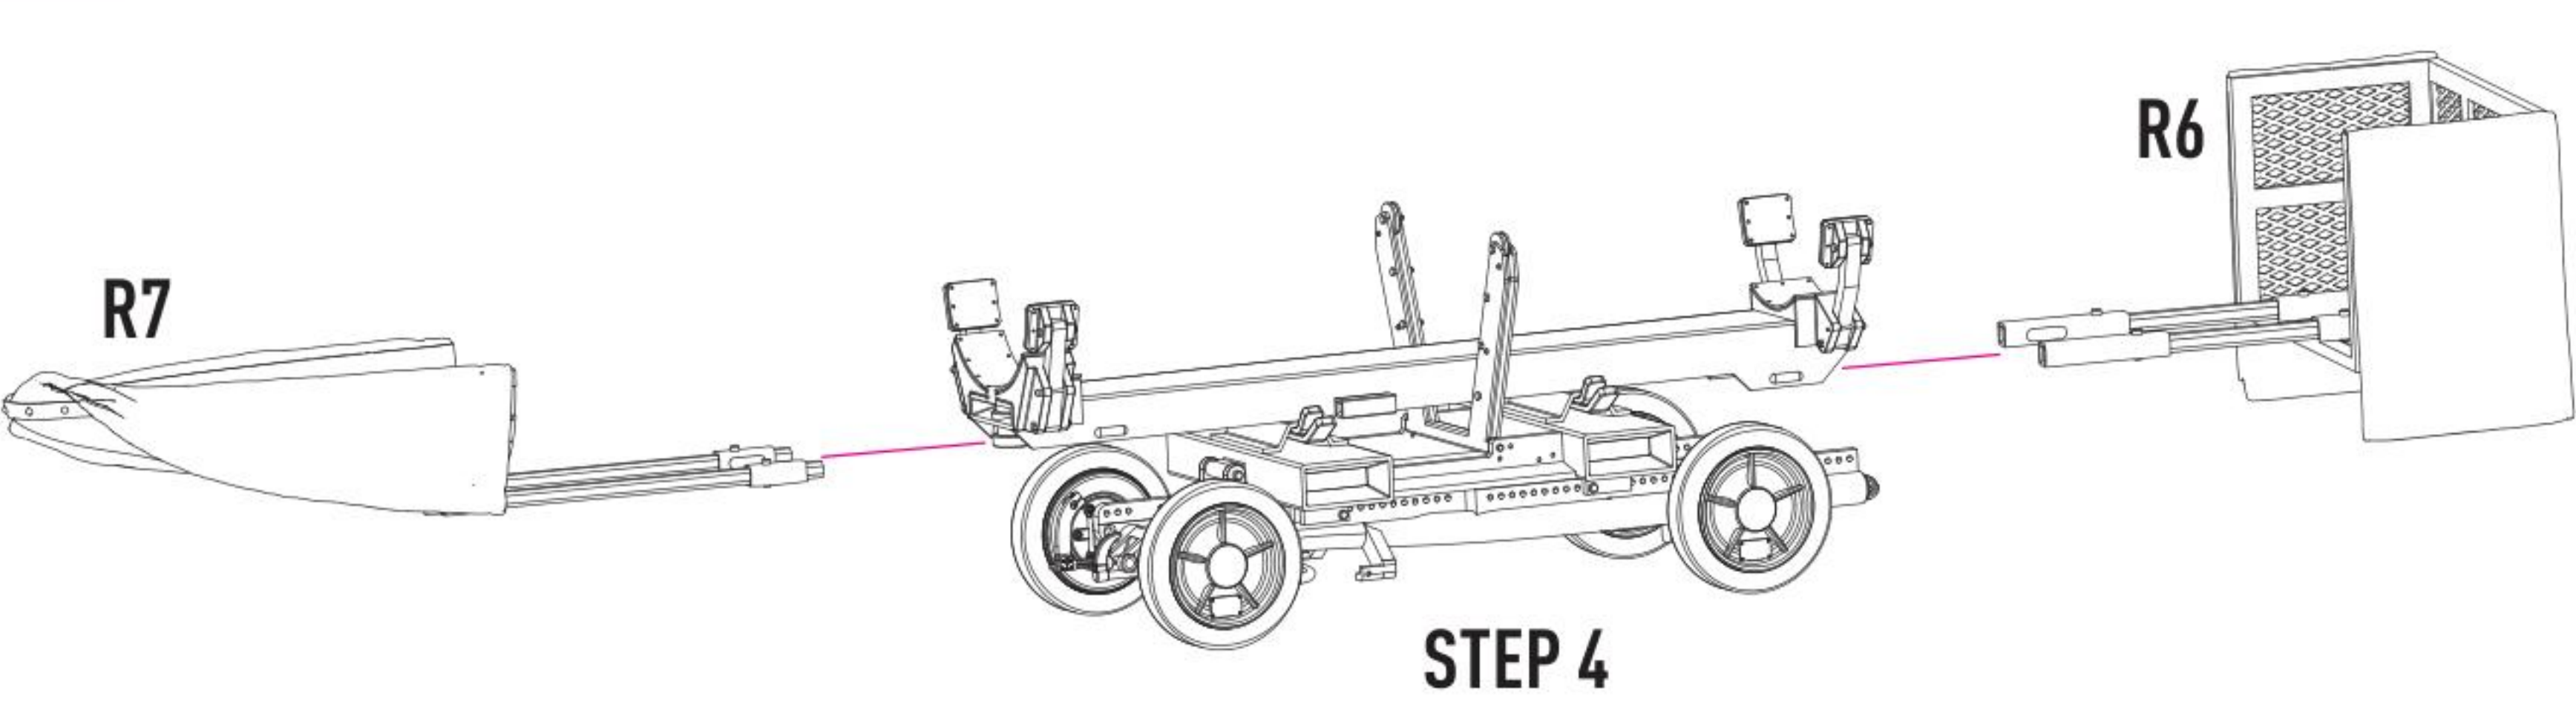


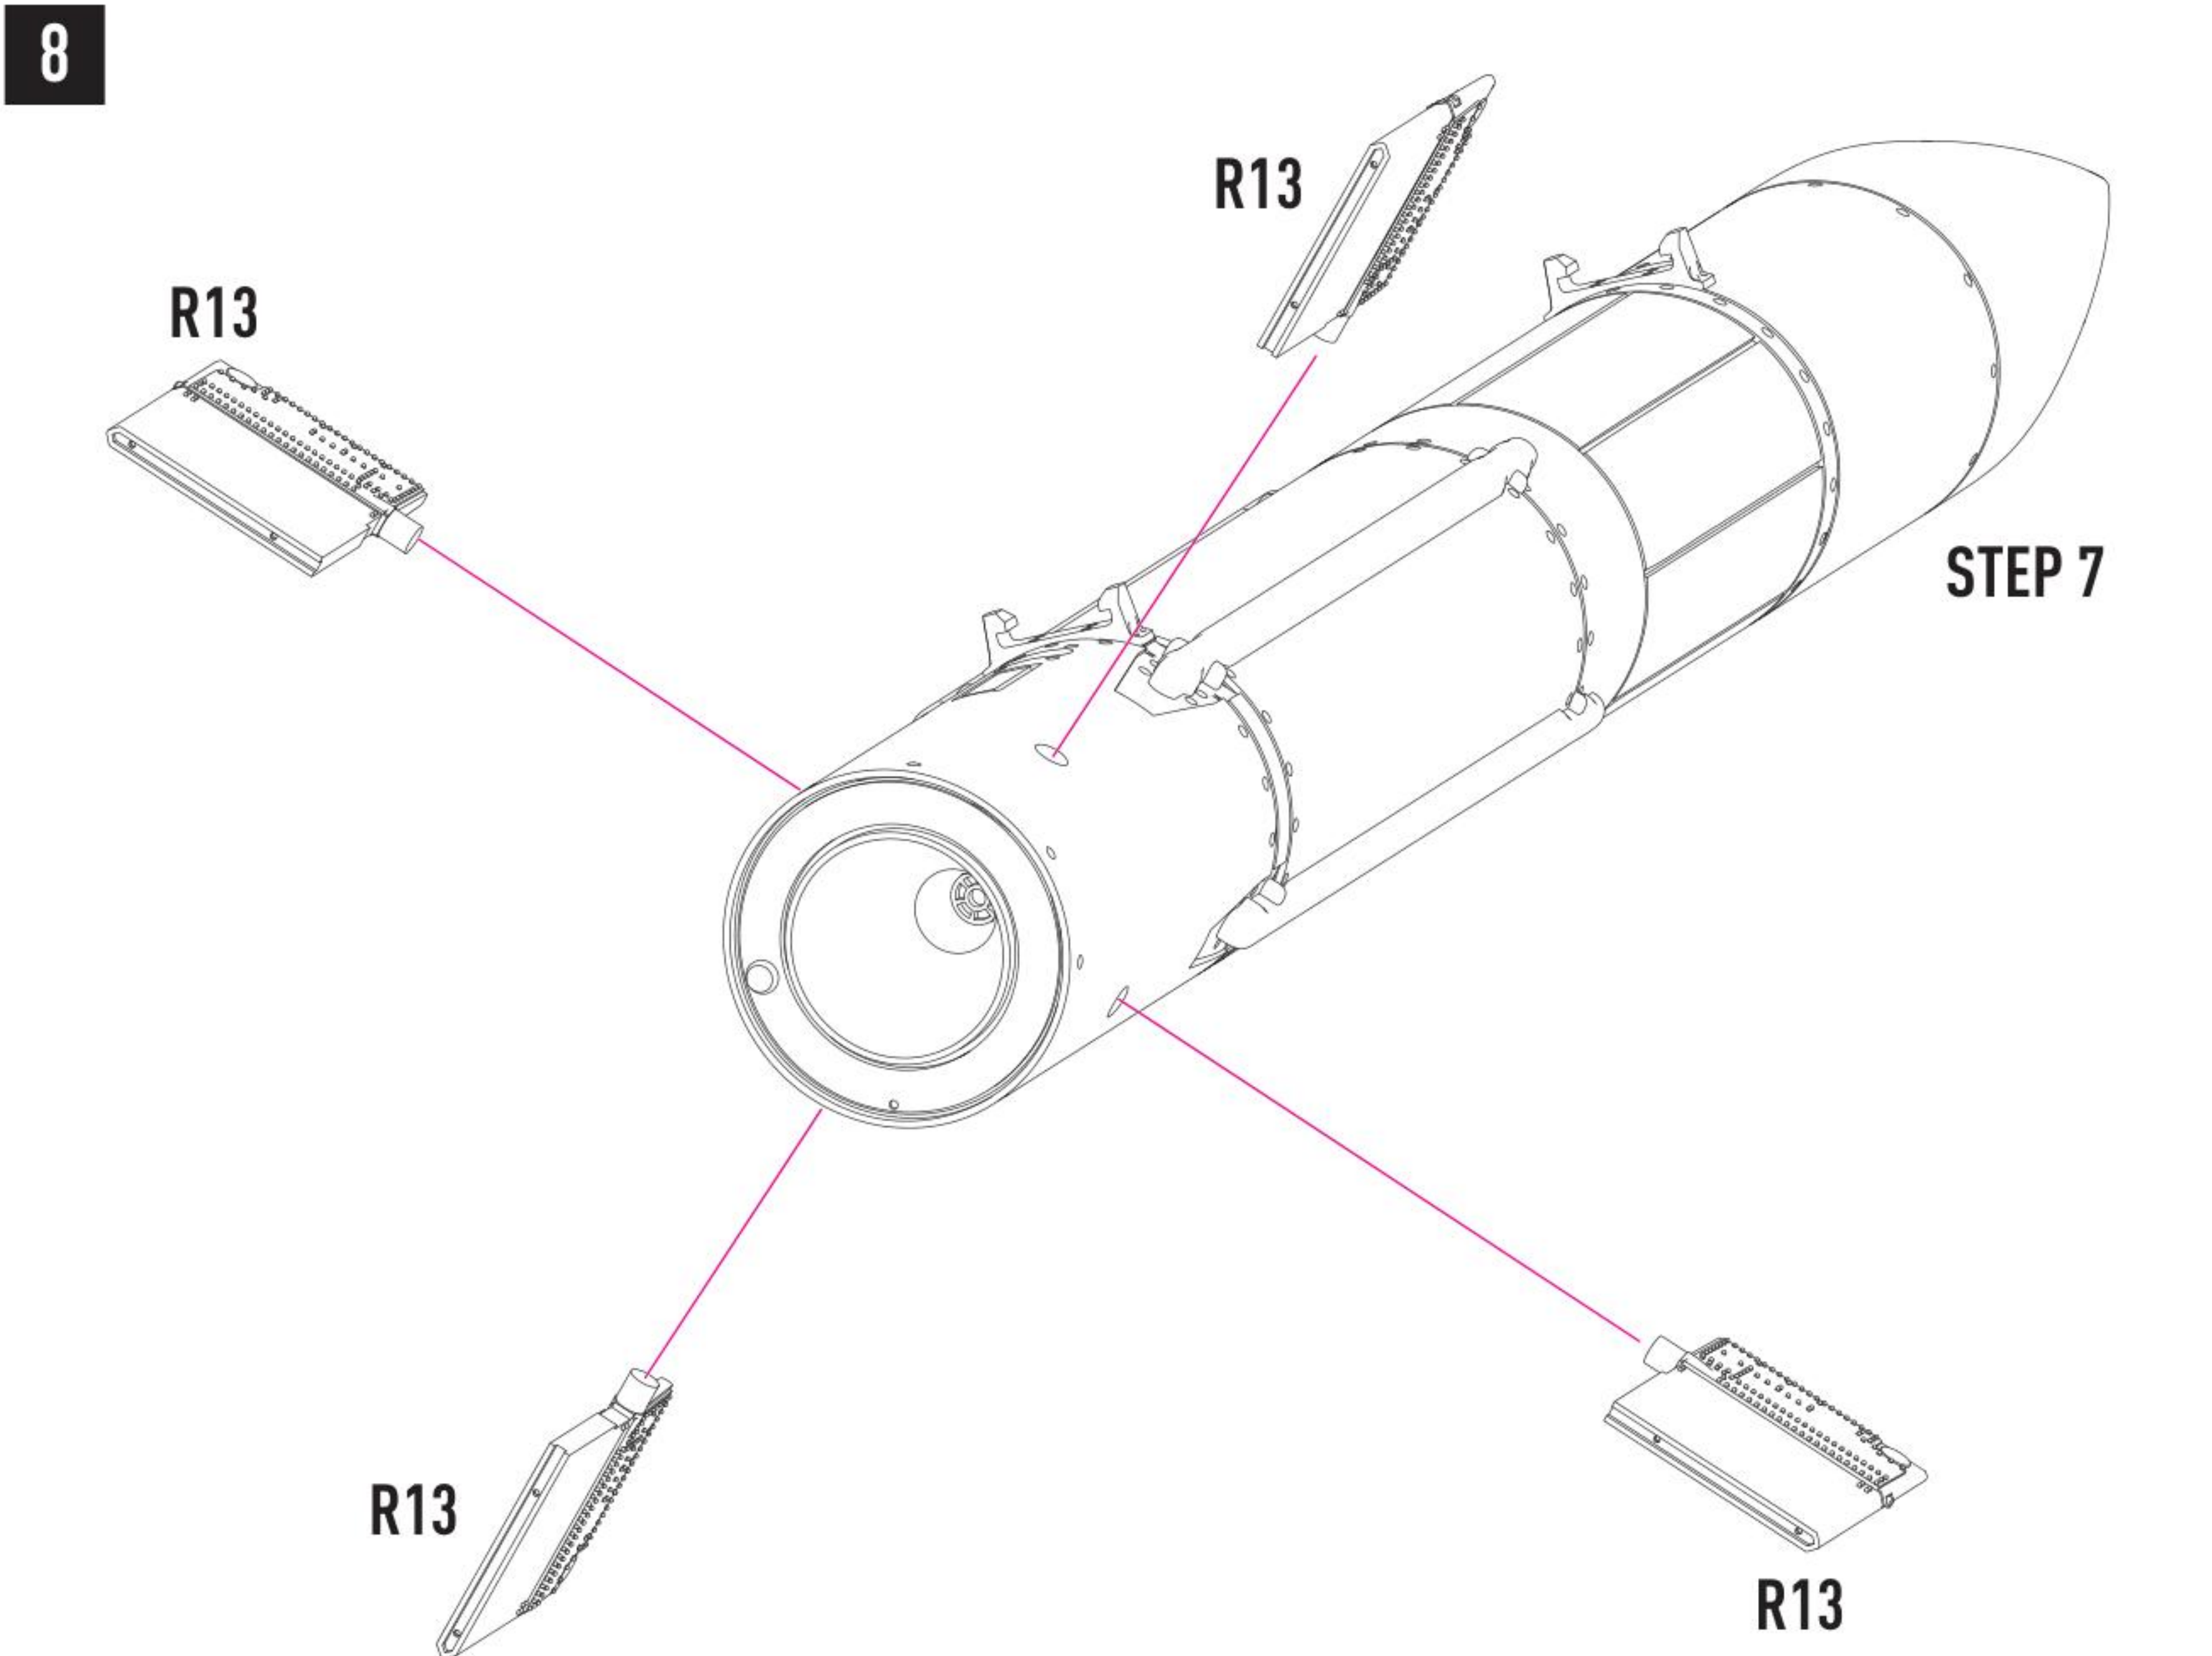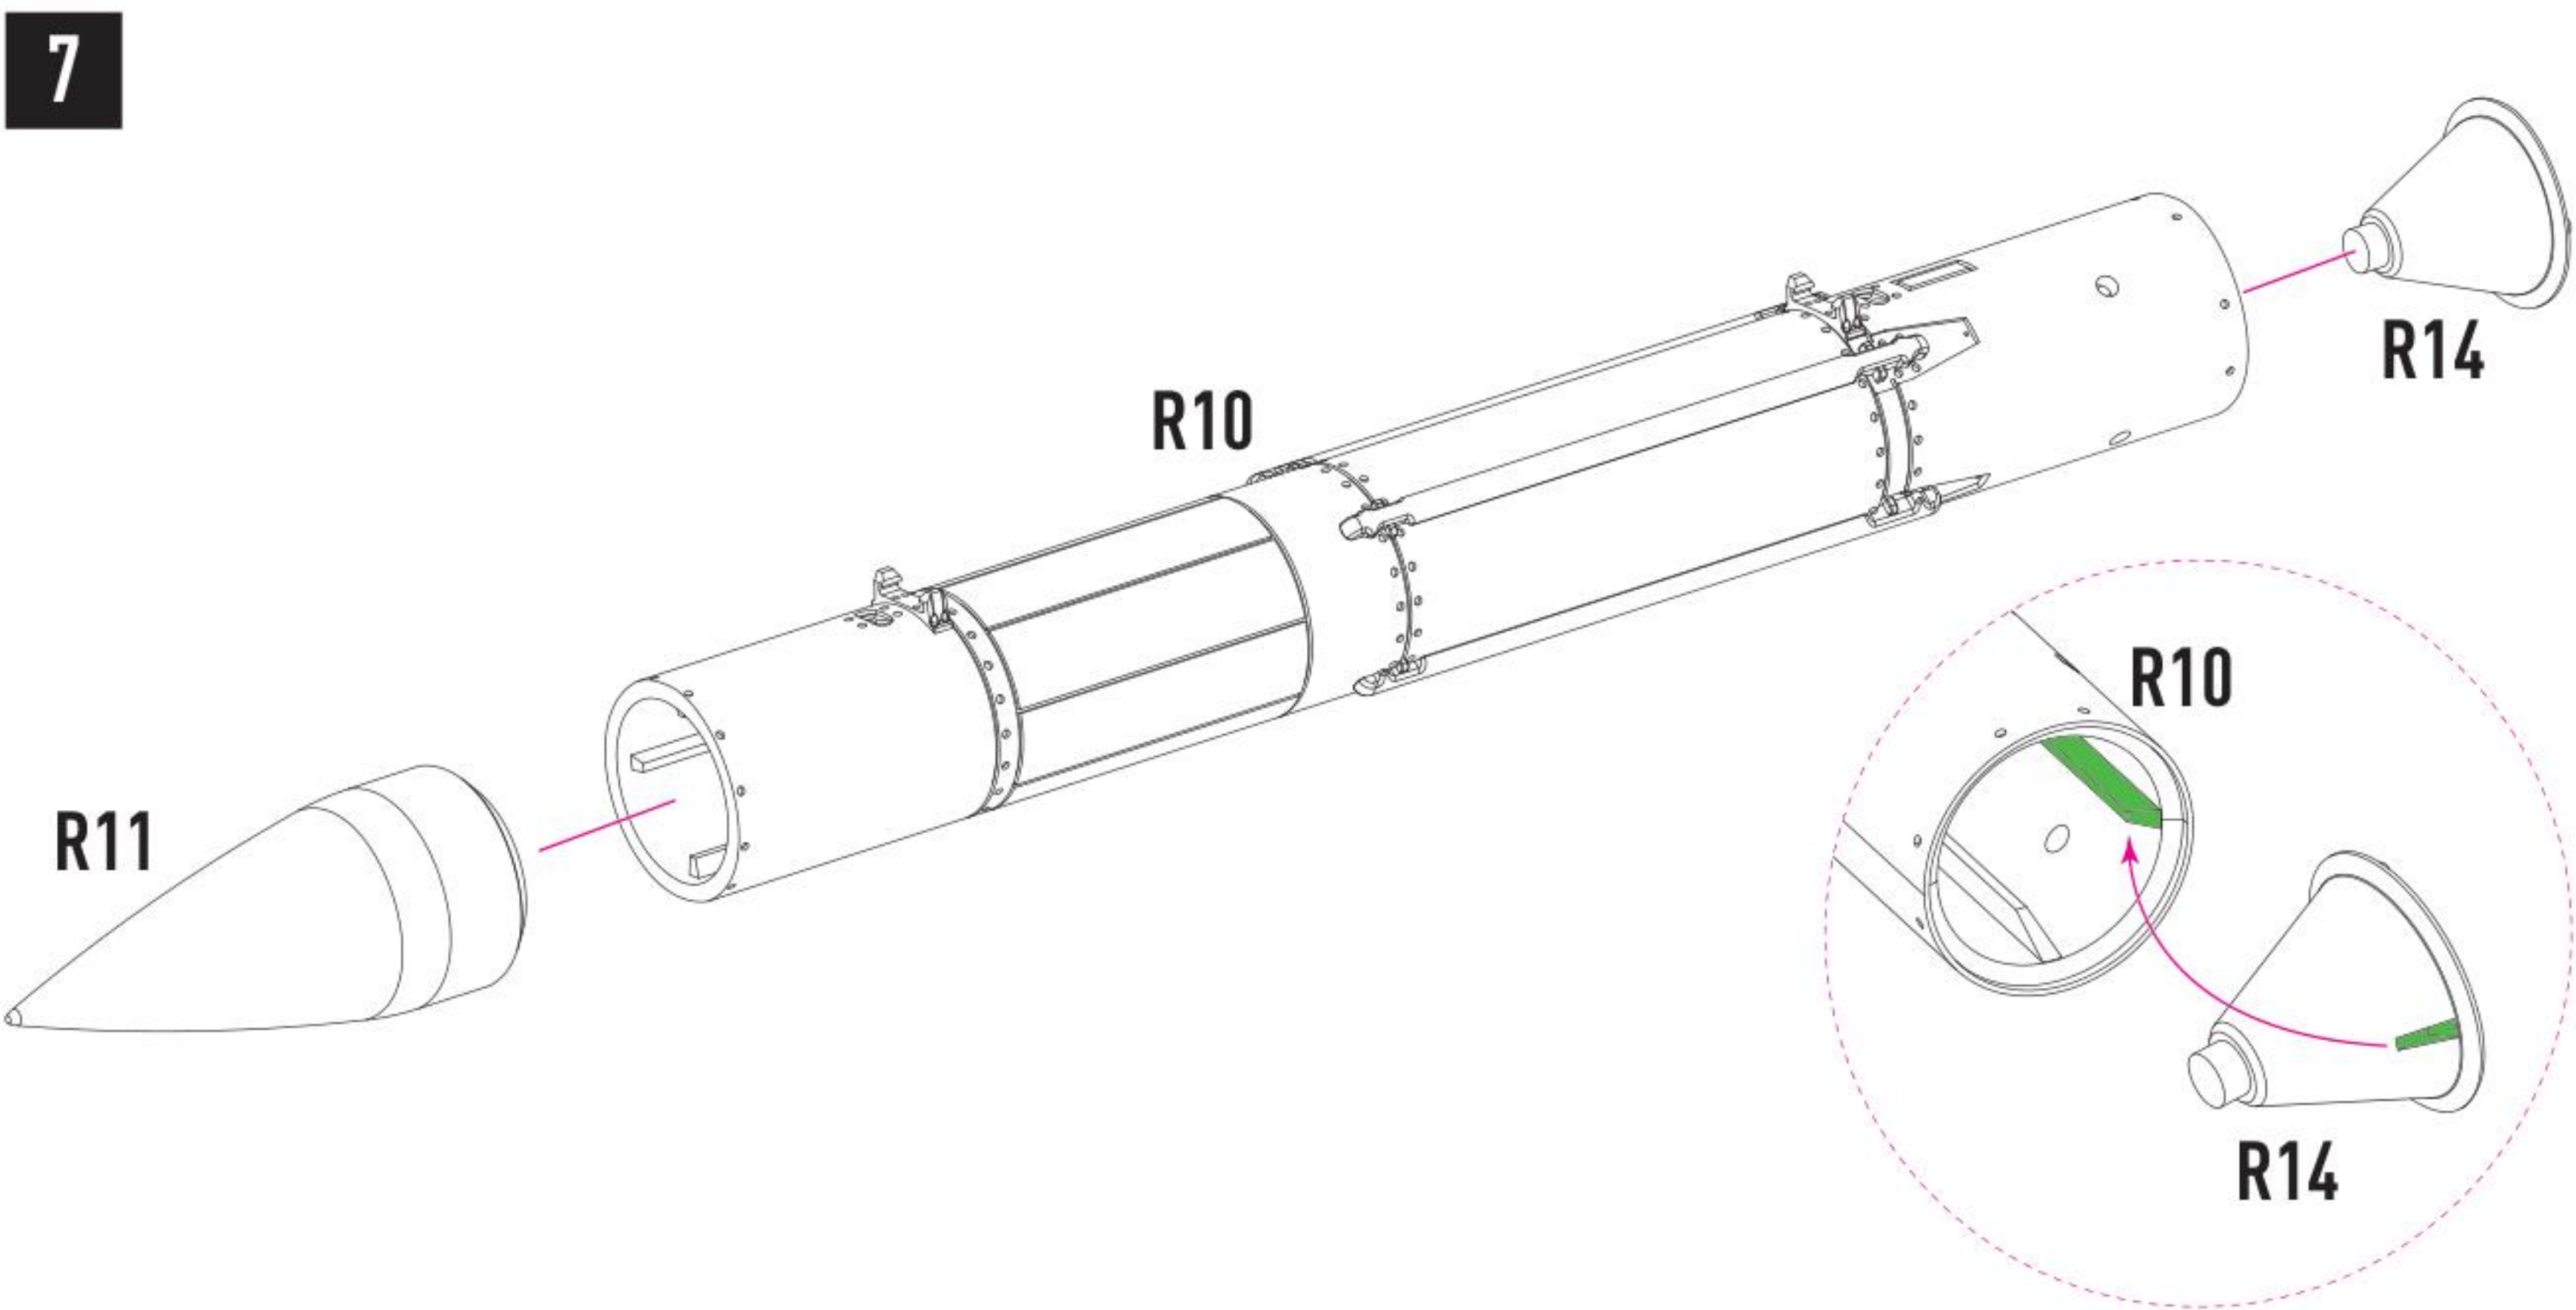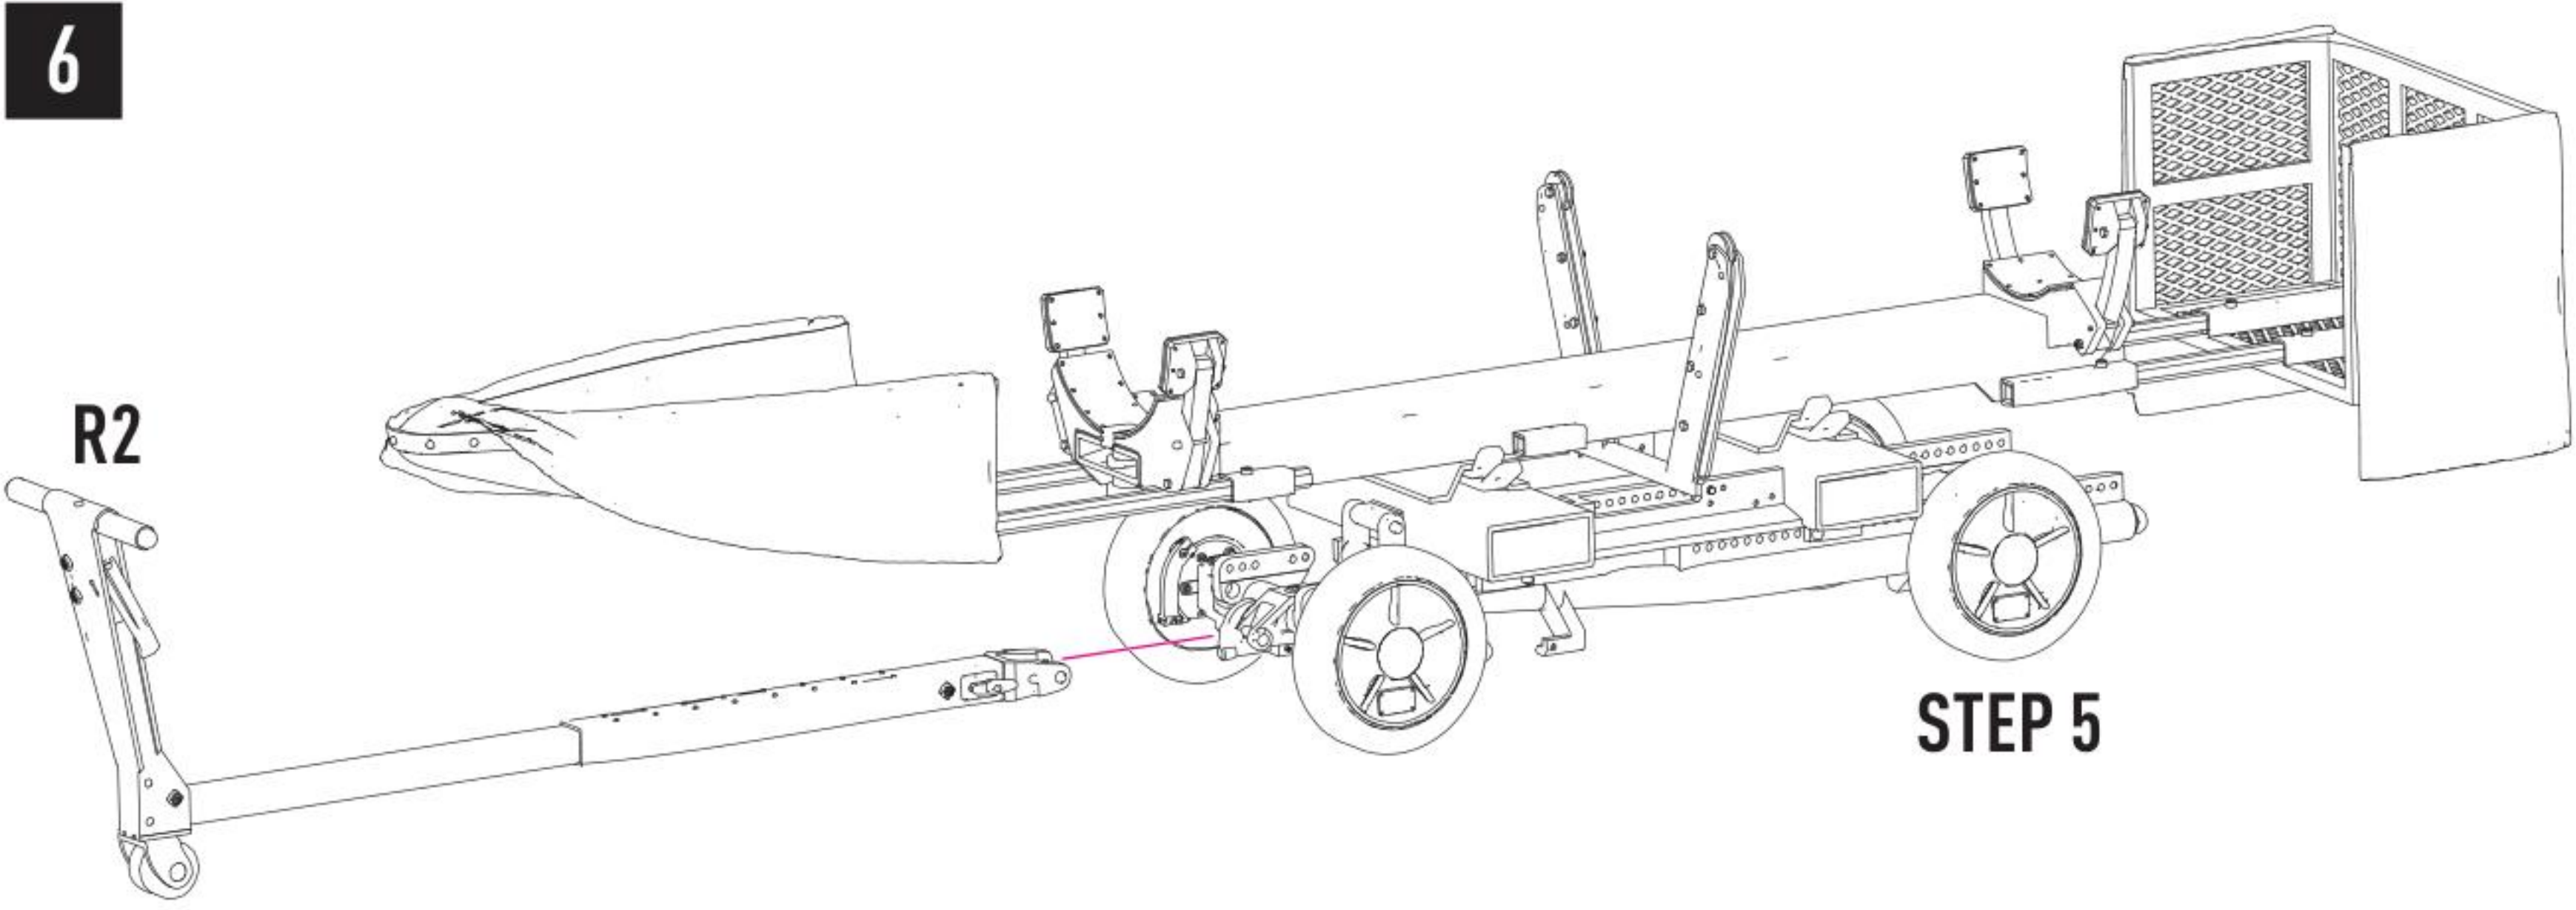


9

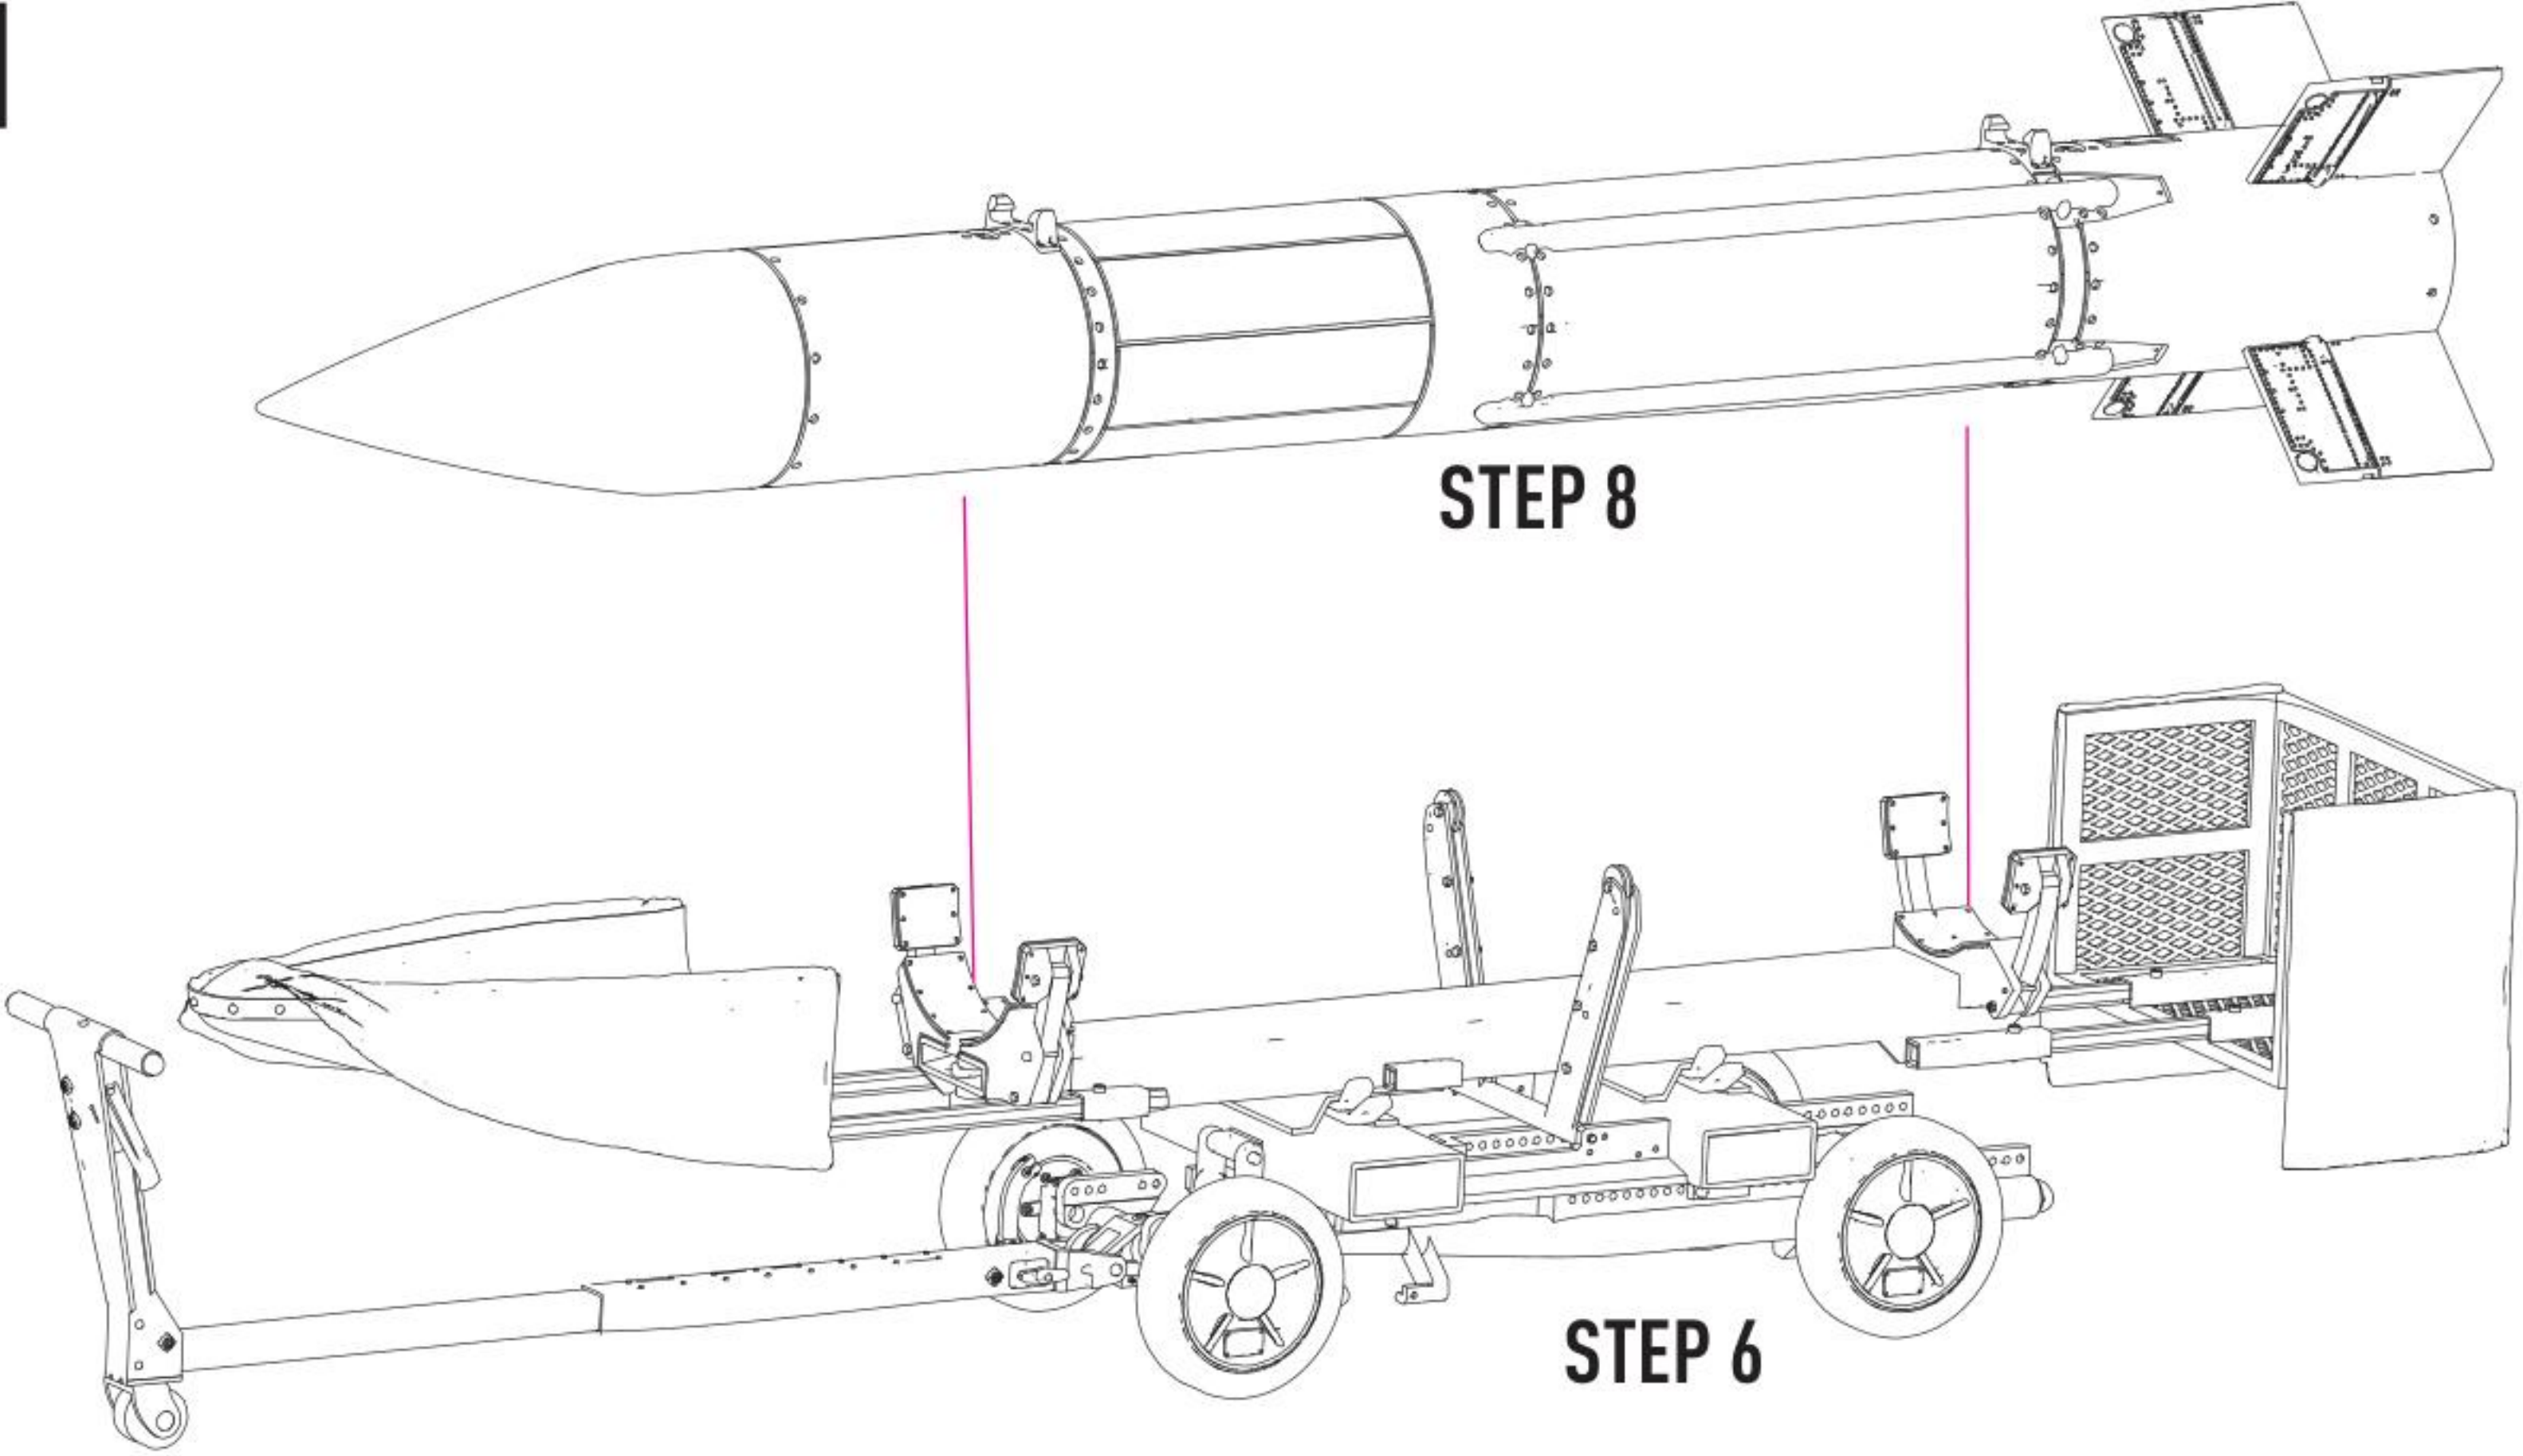


10

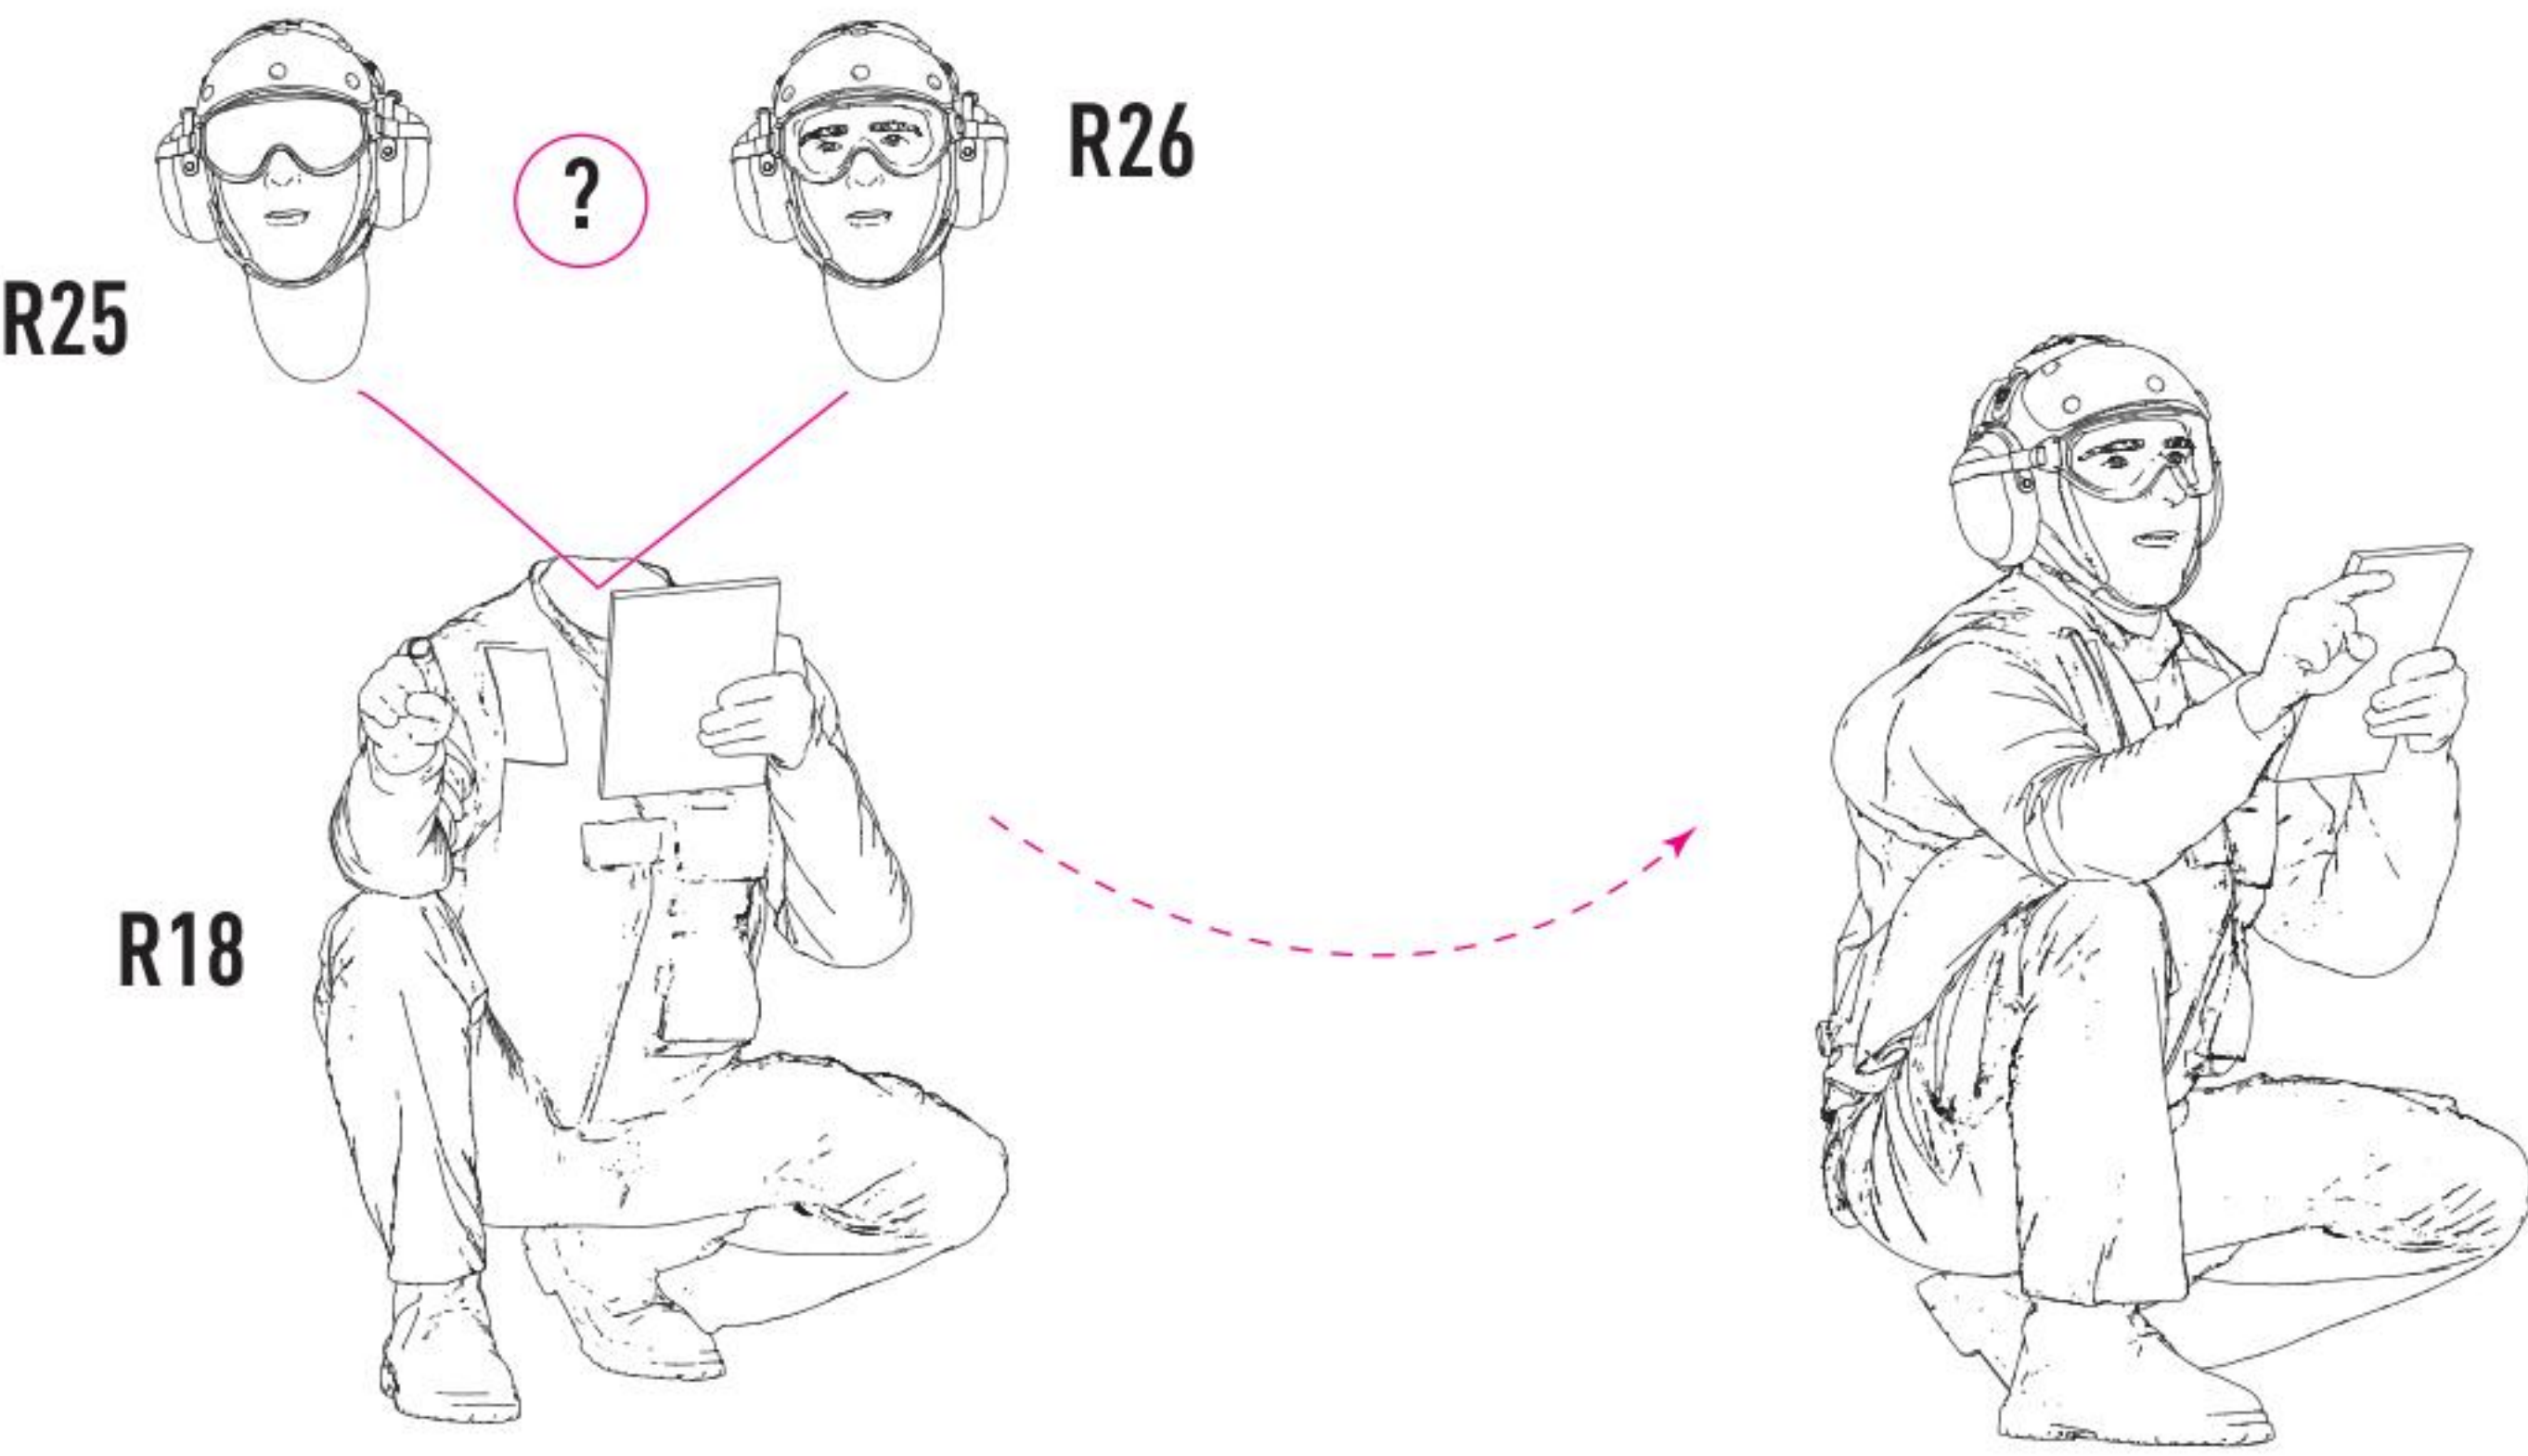


11

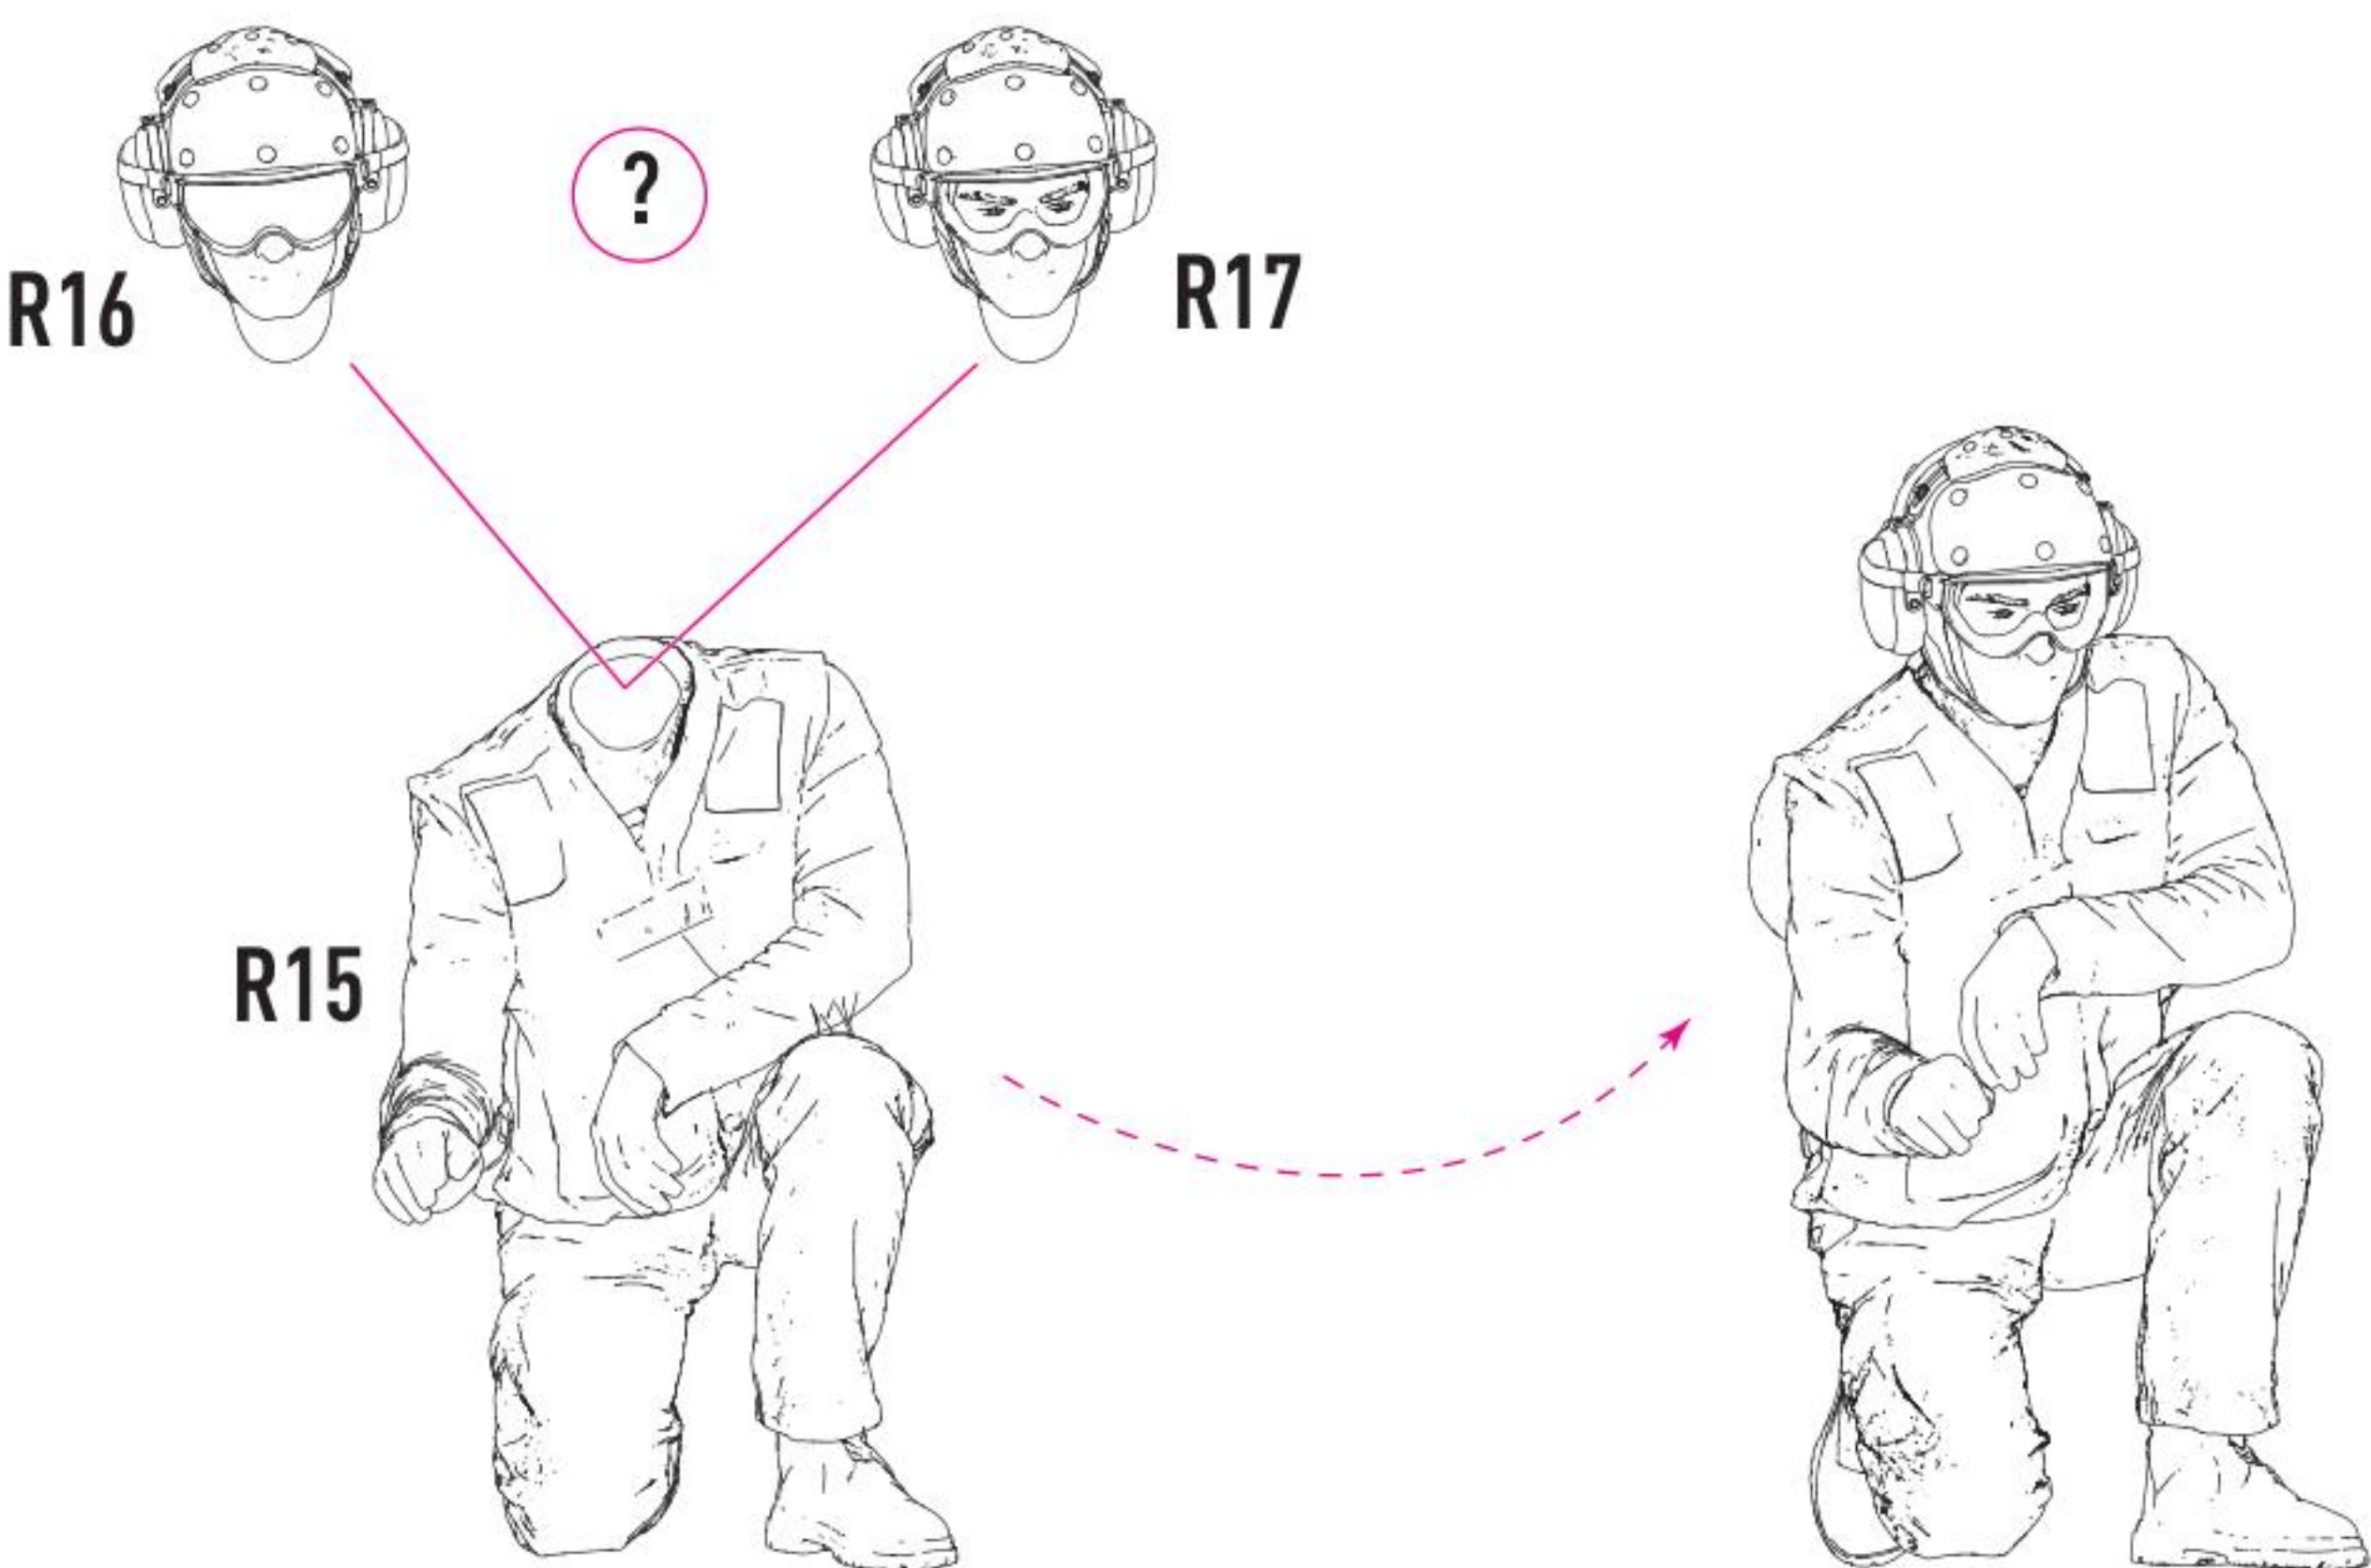


12




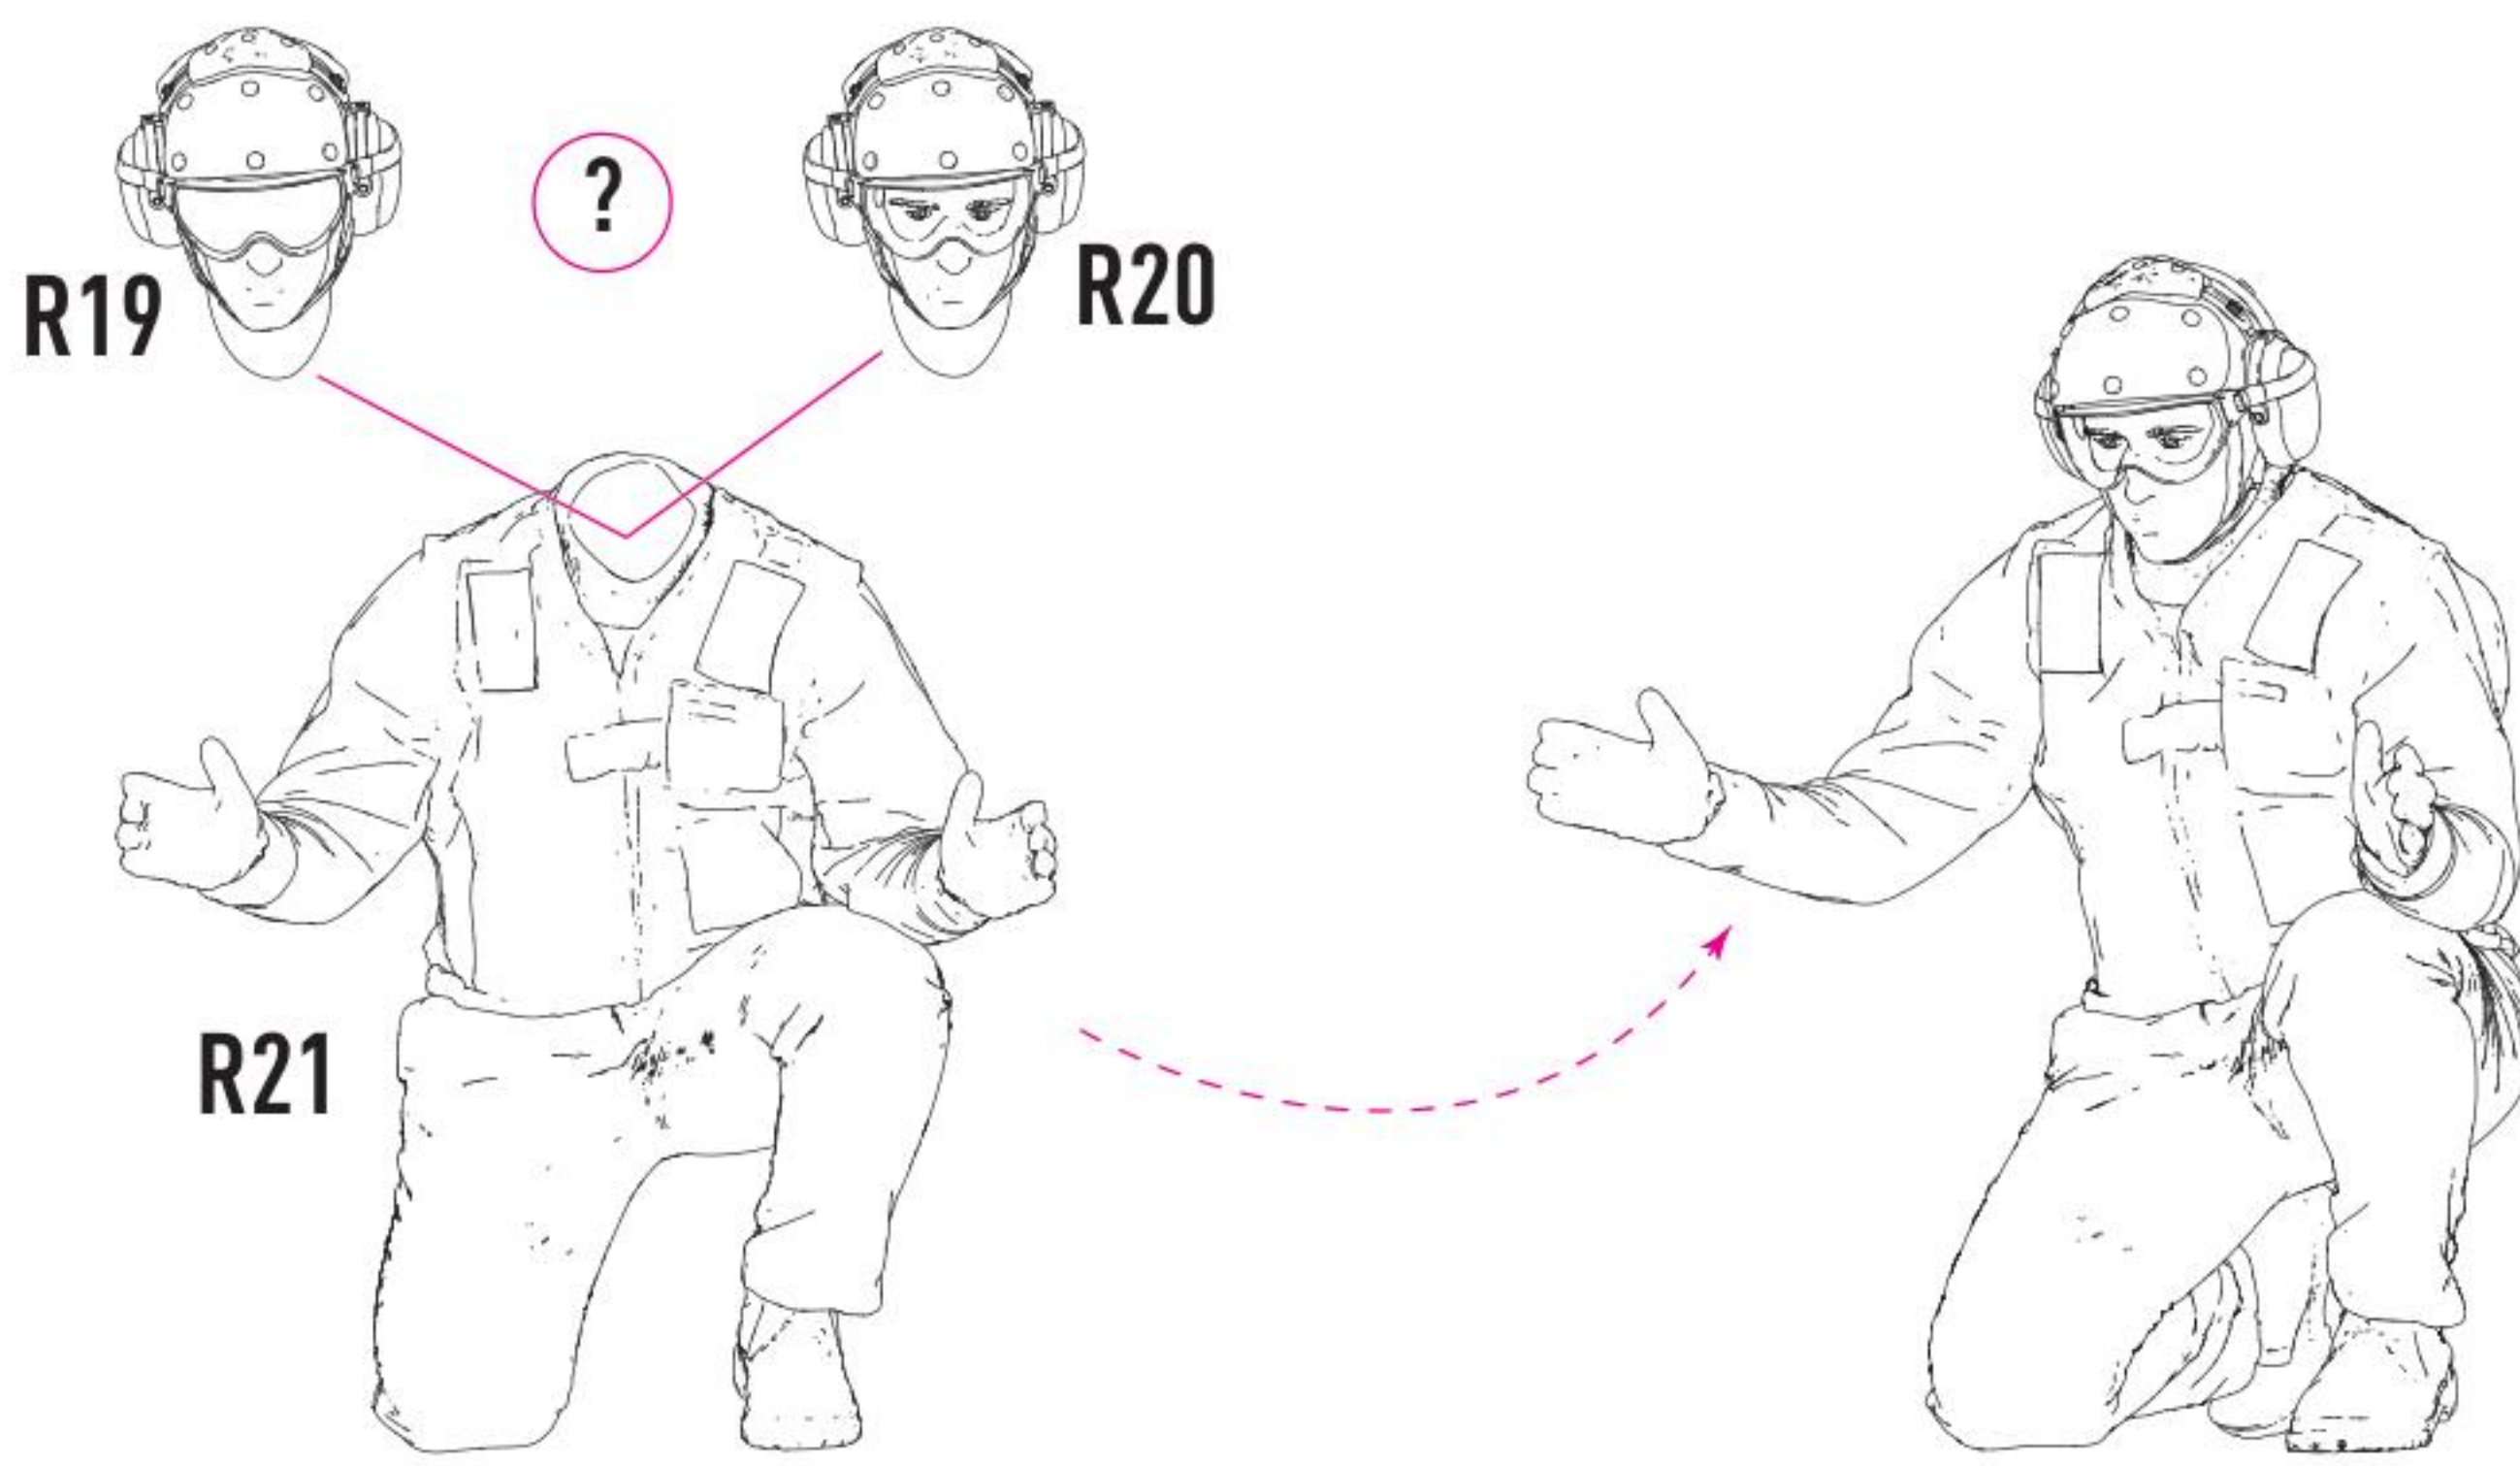


13

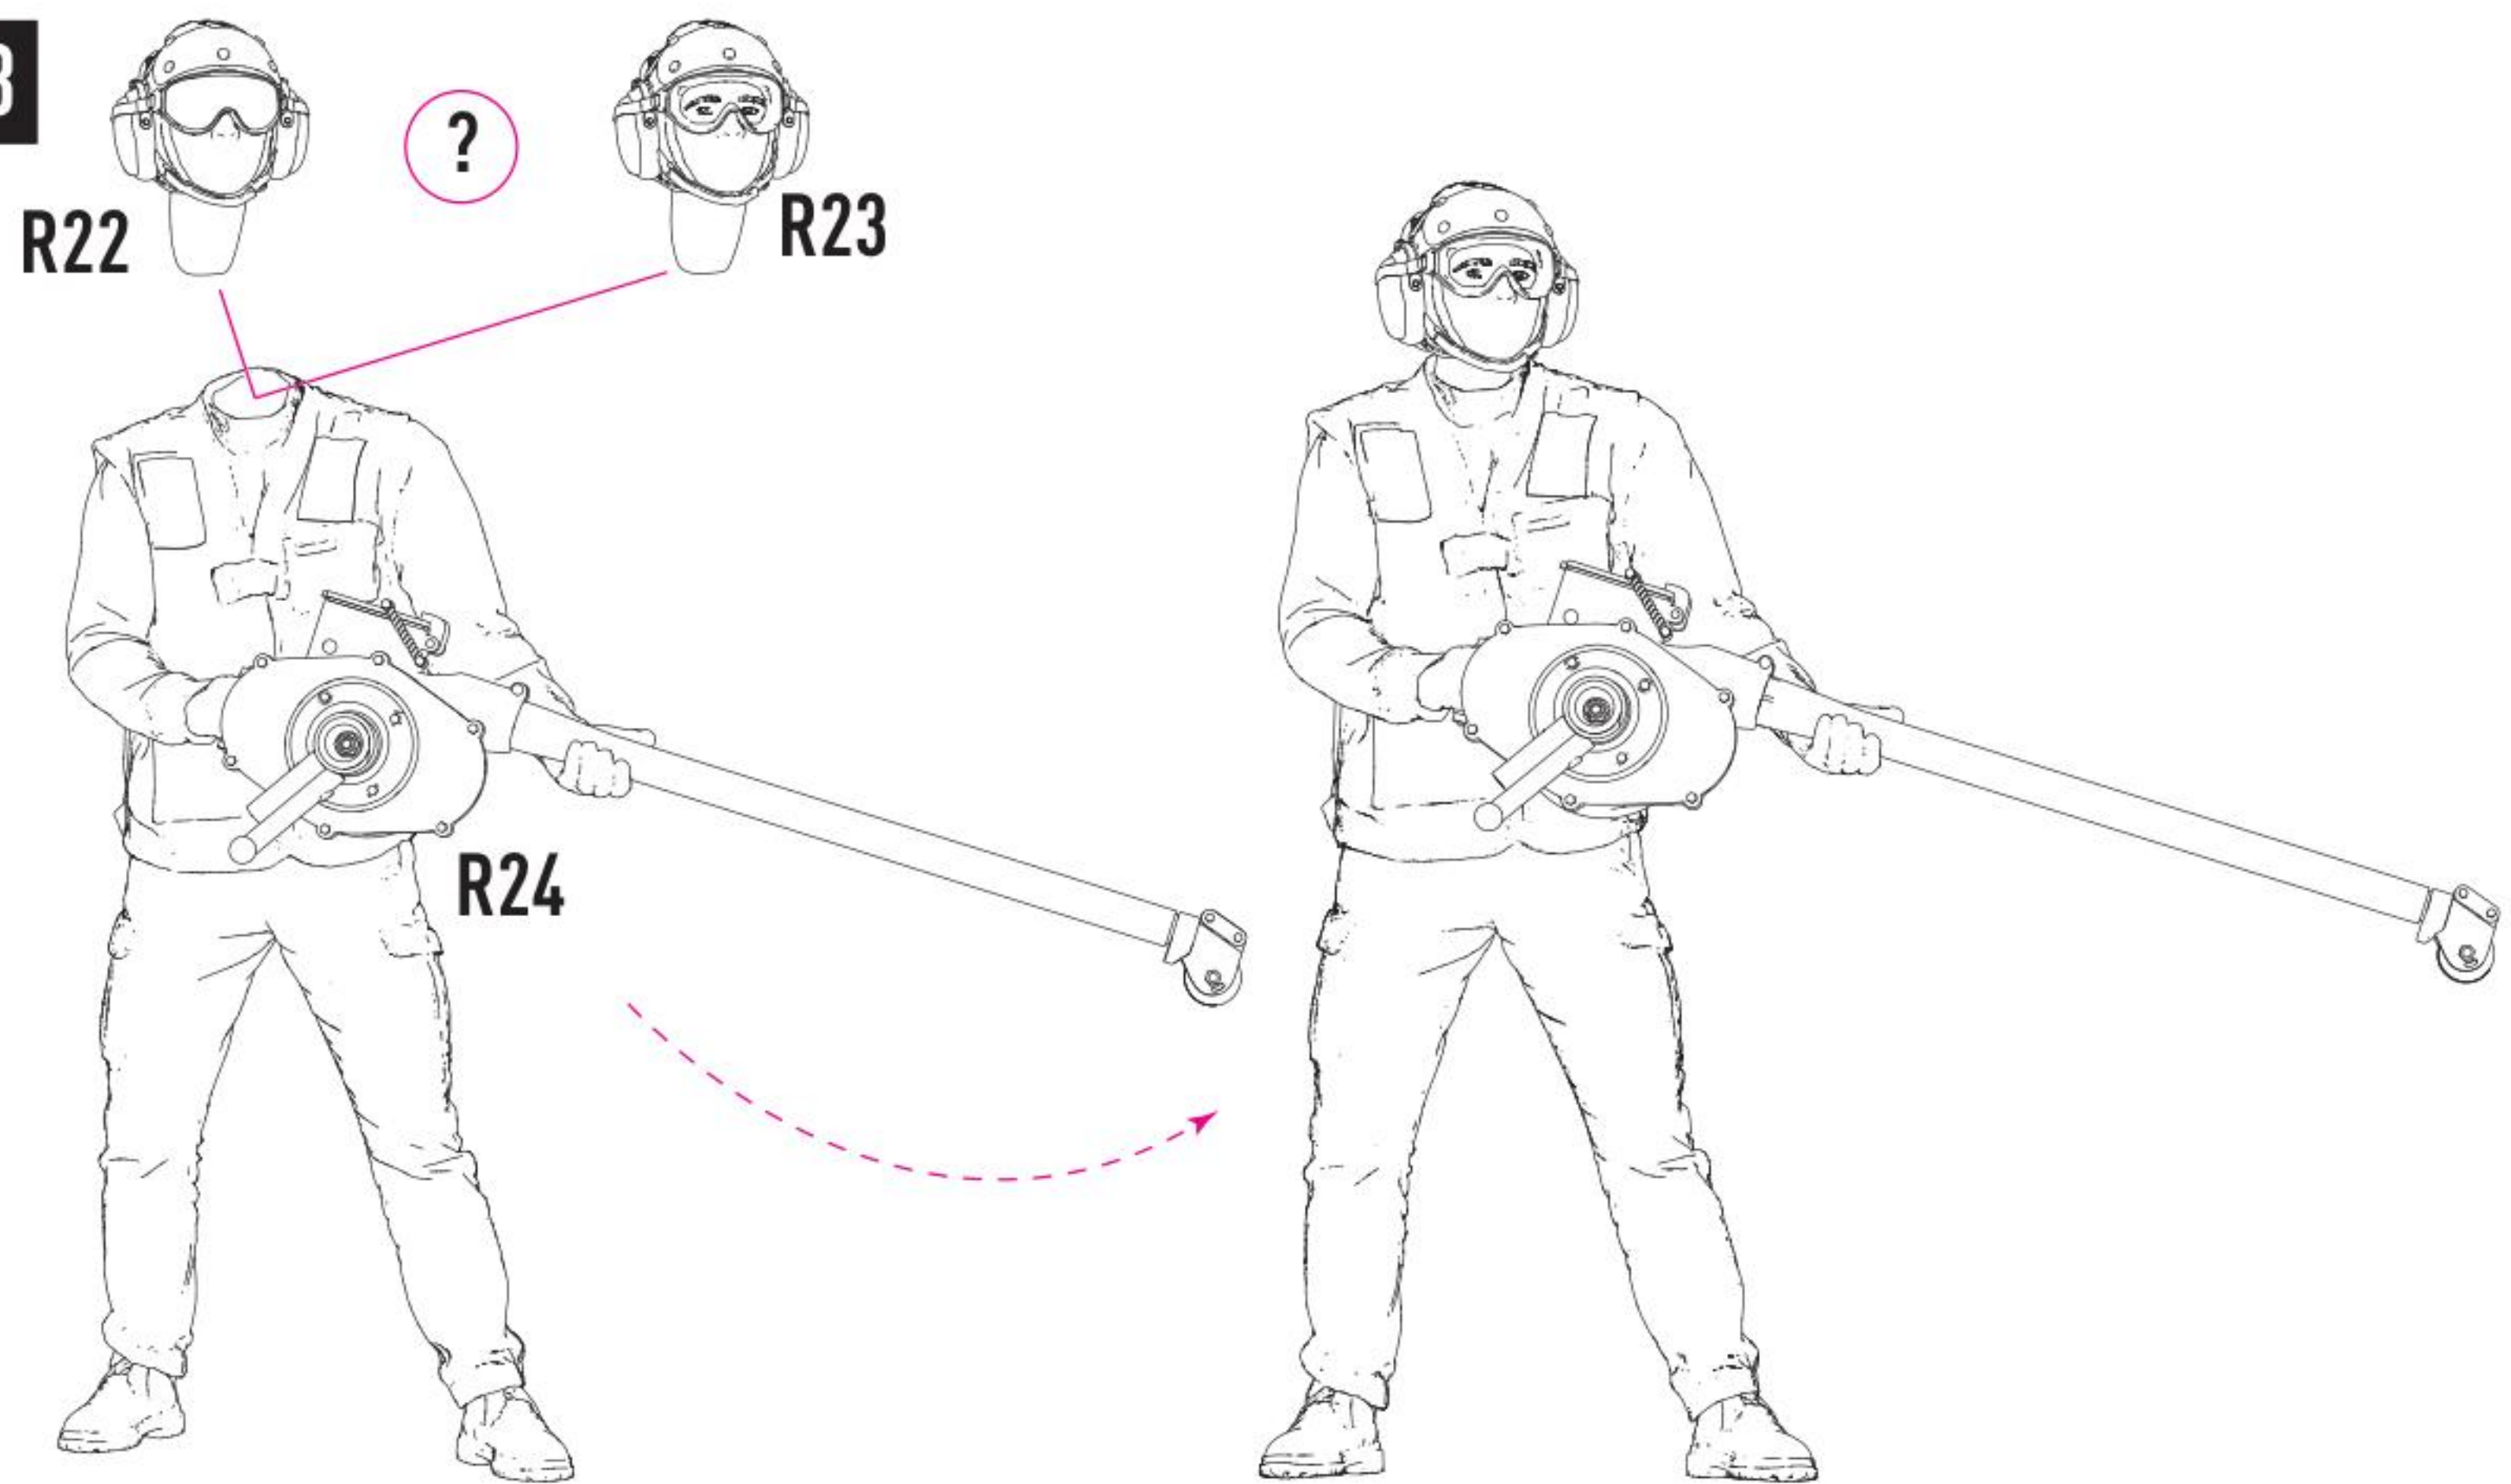

14

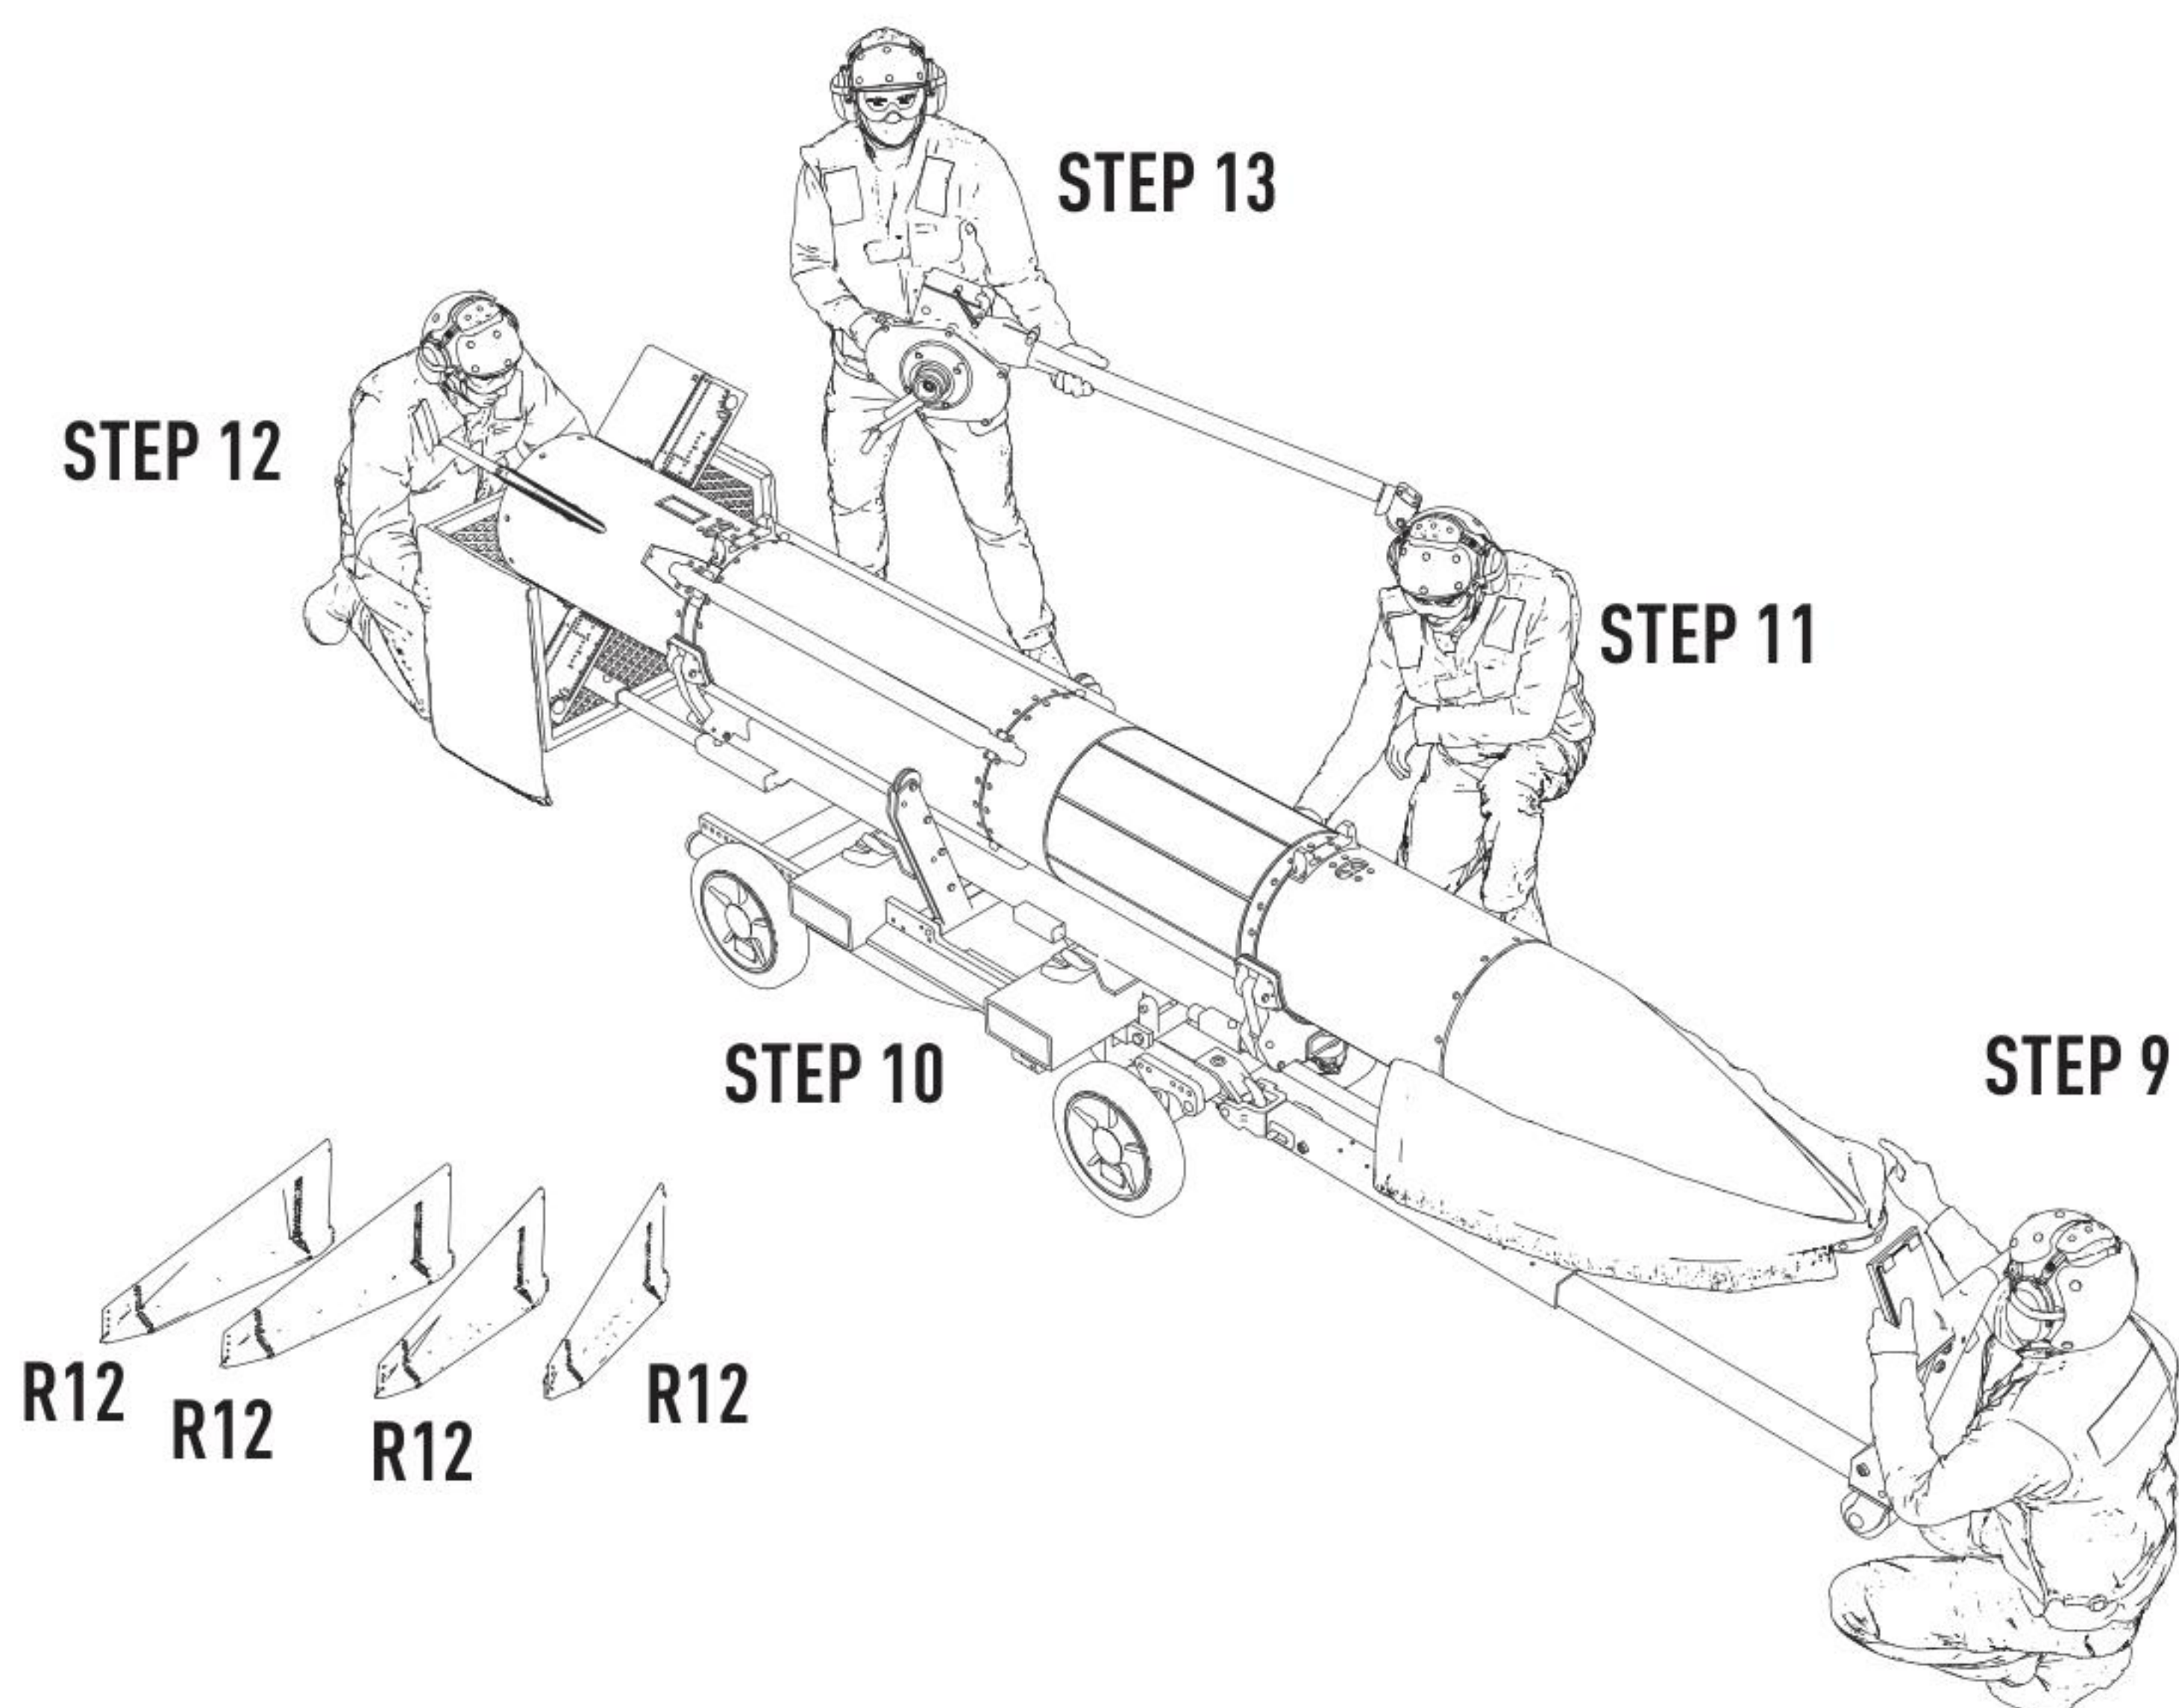

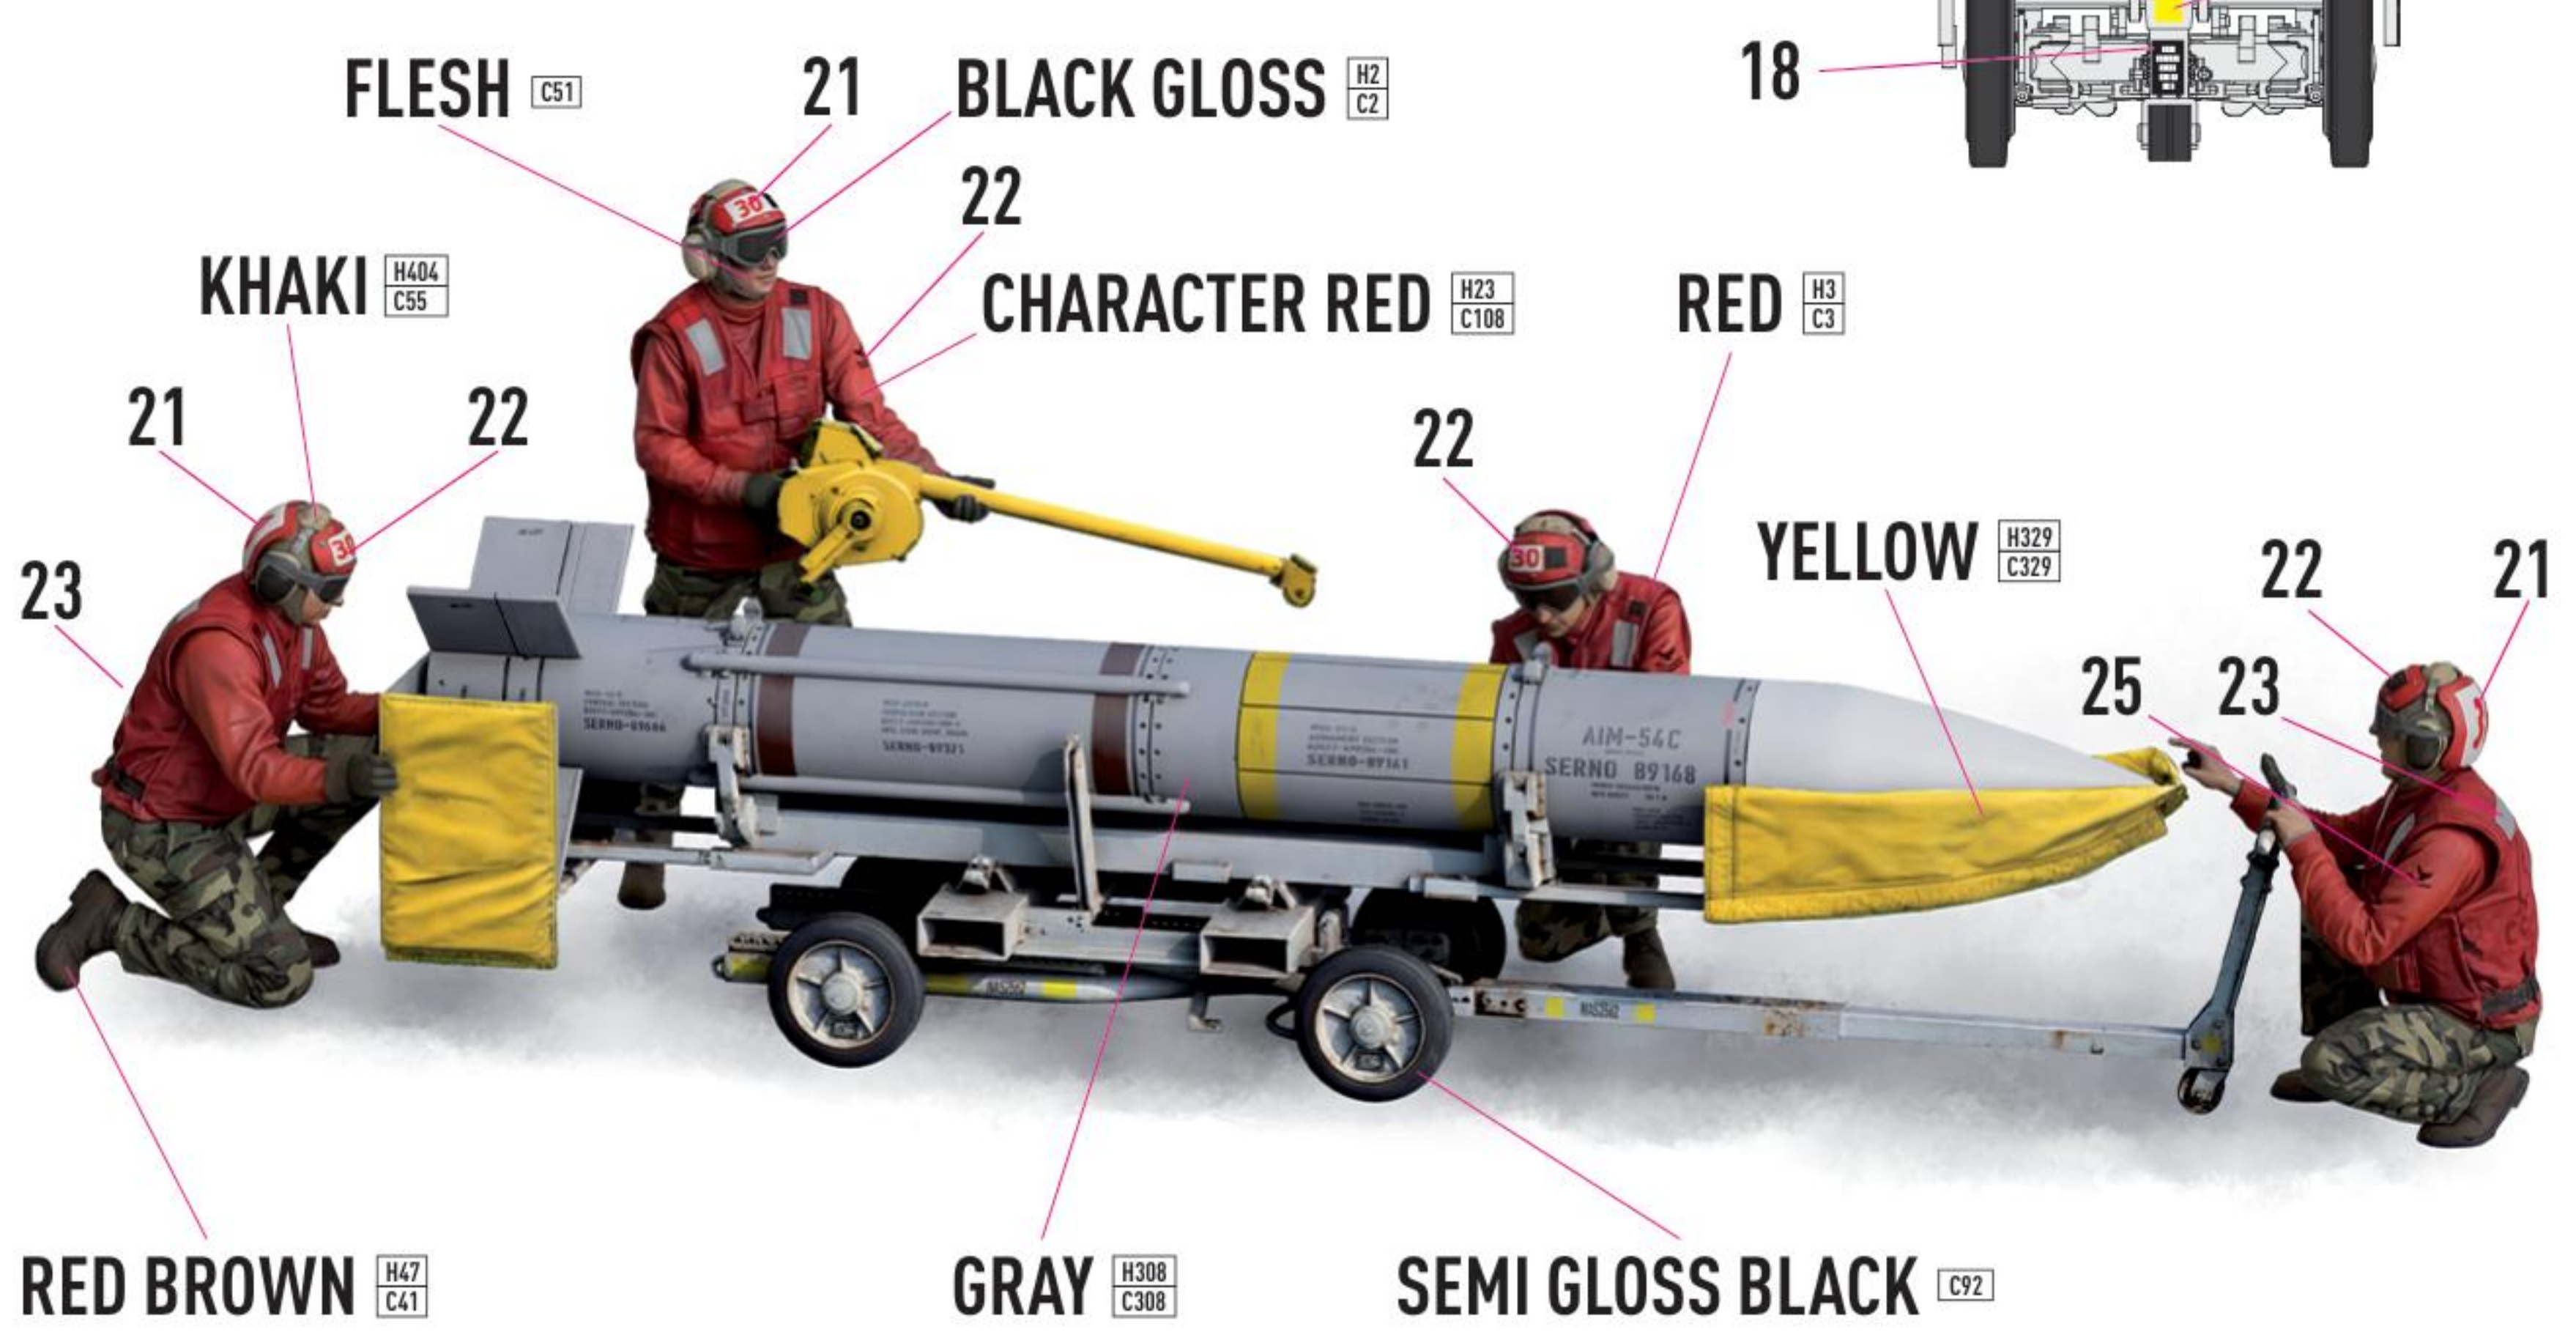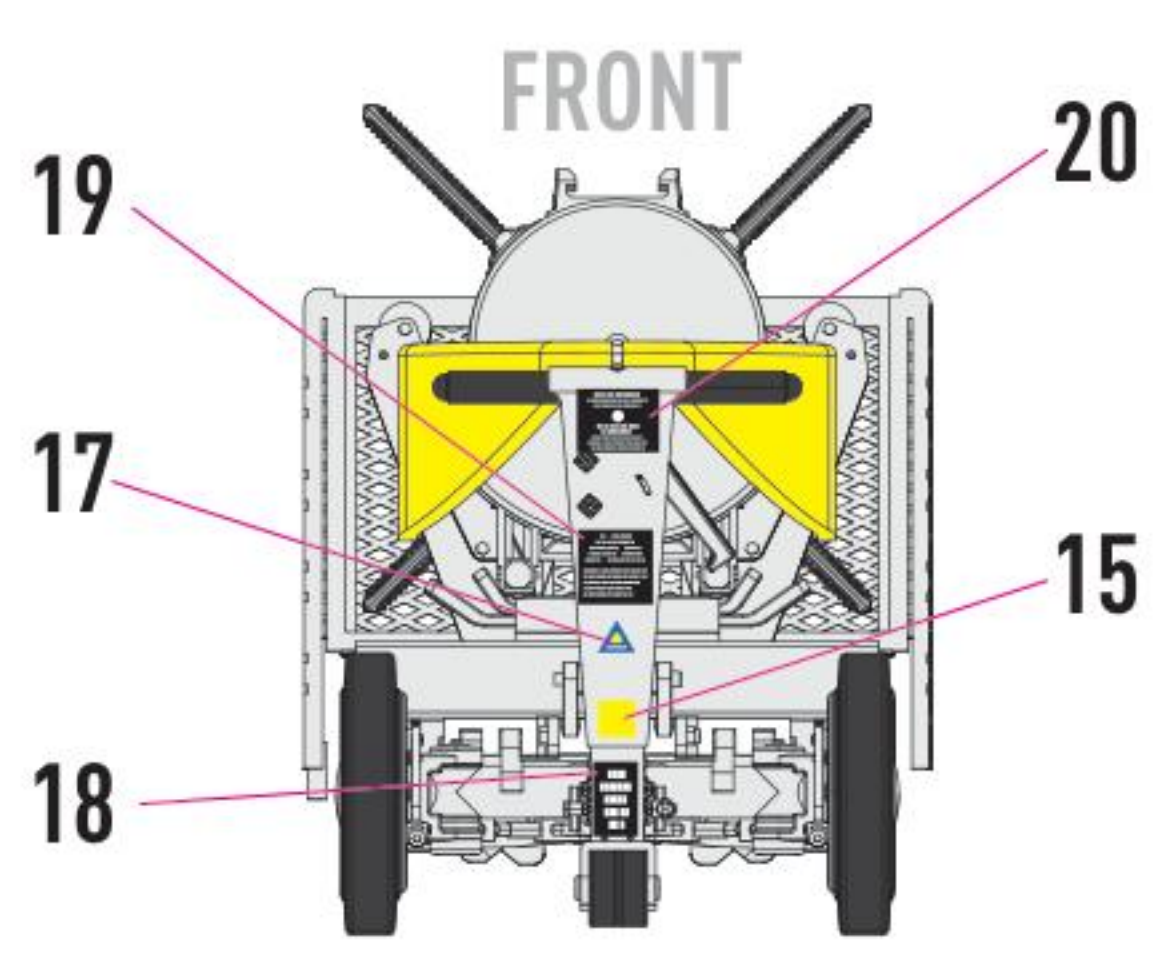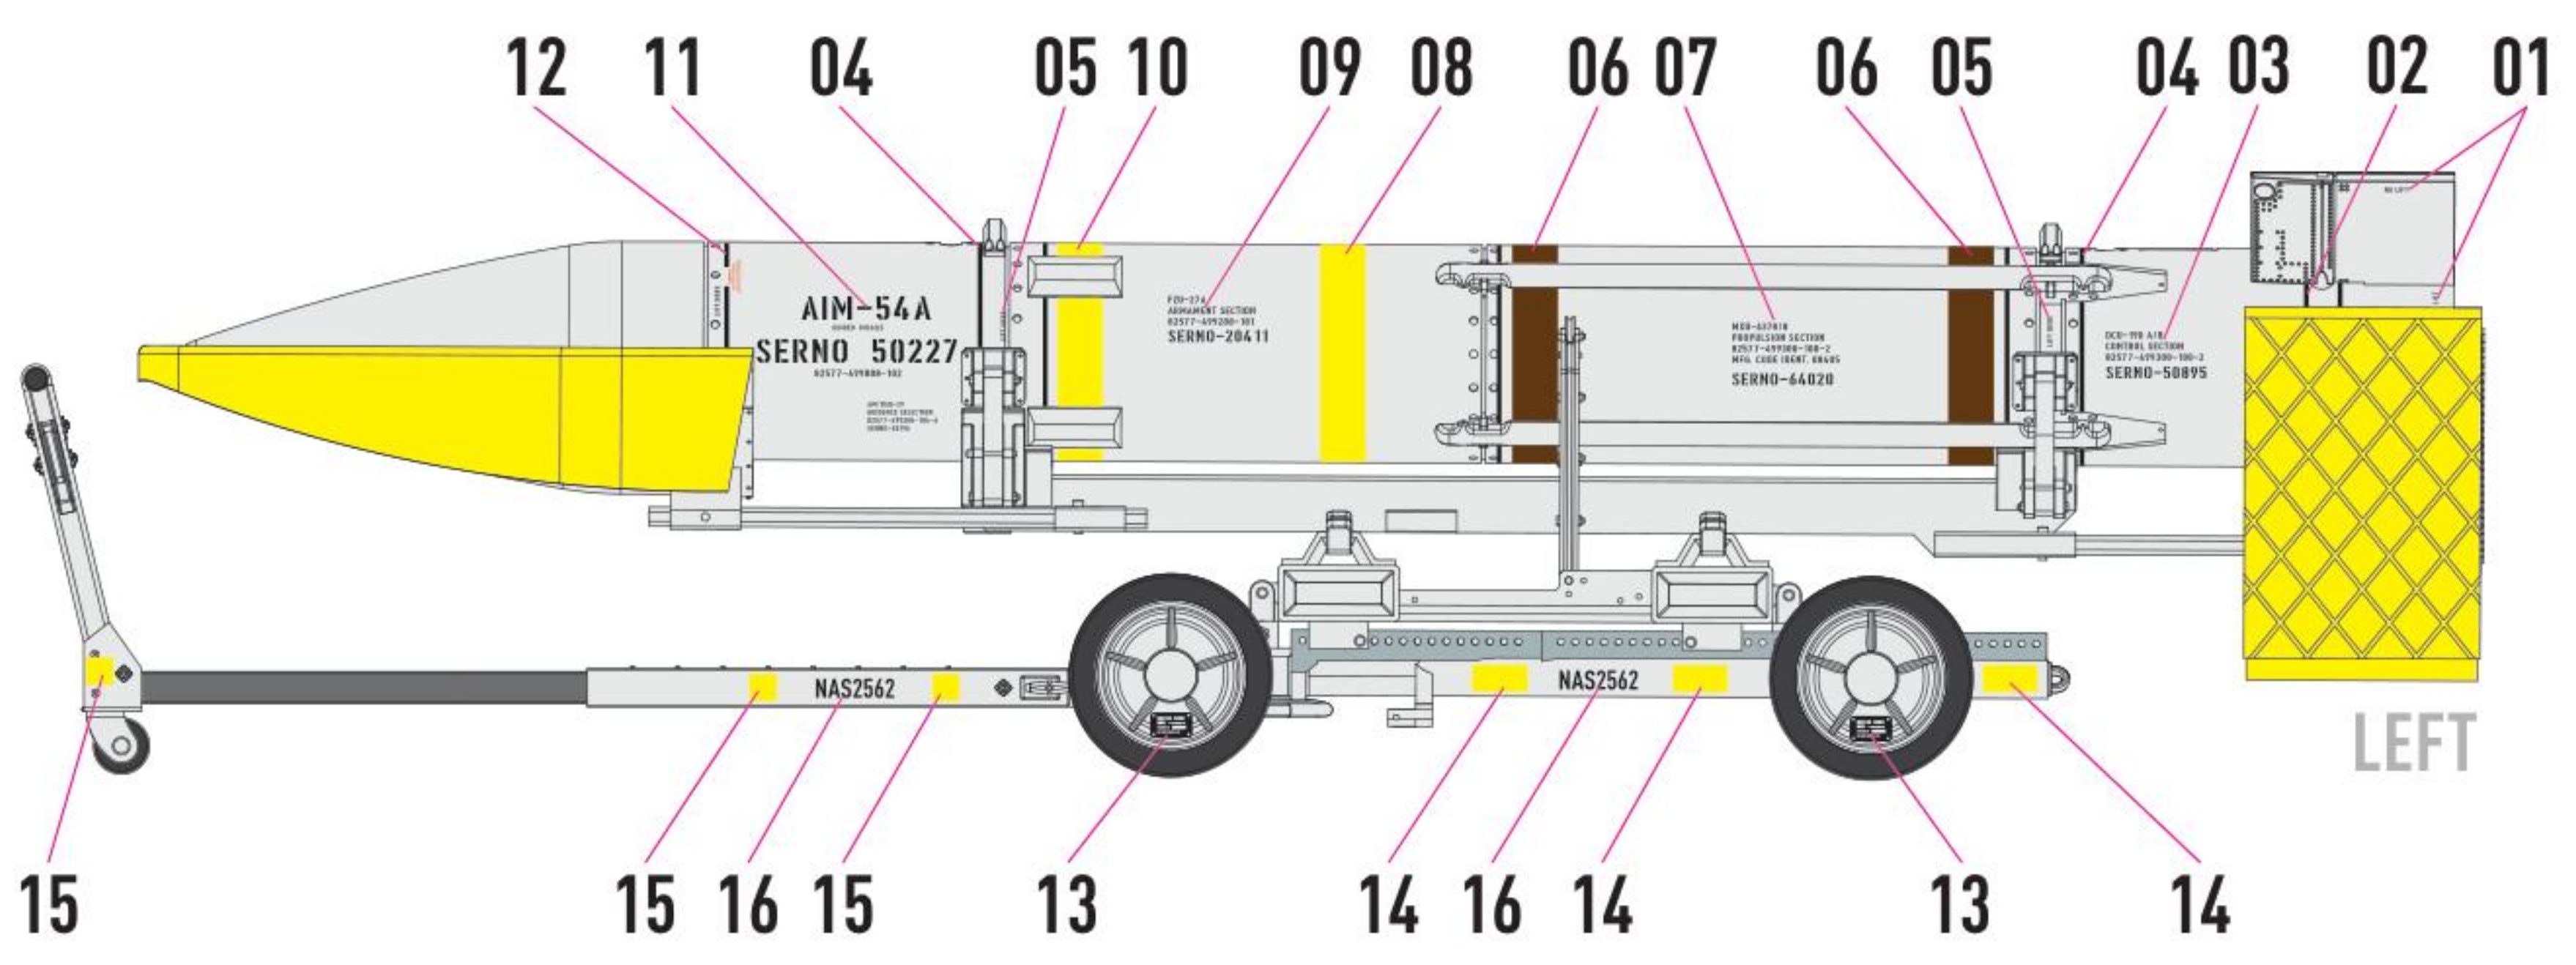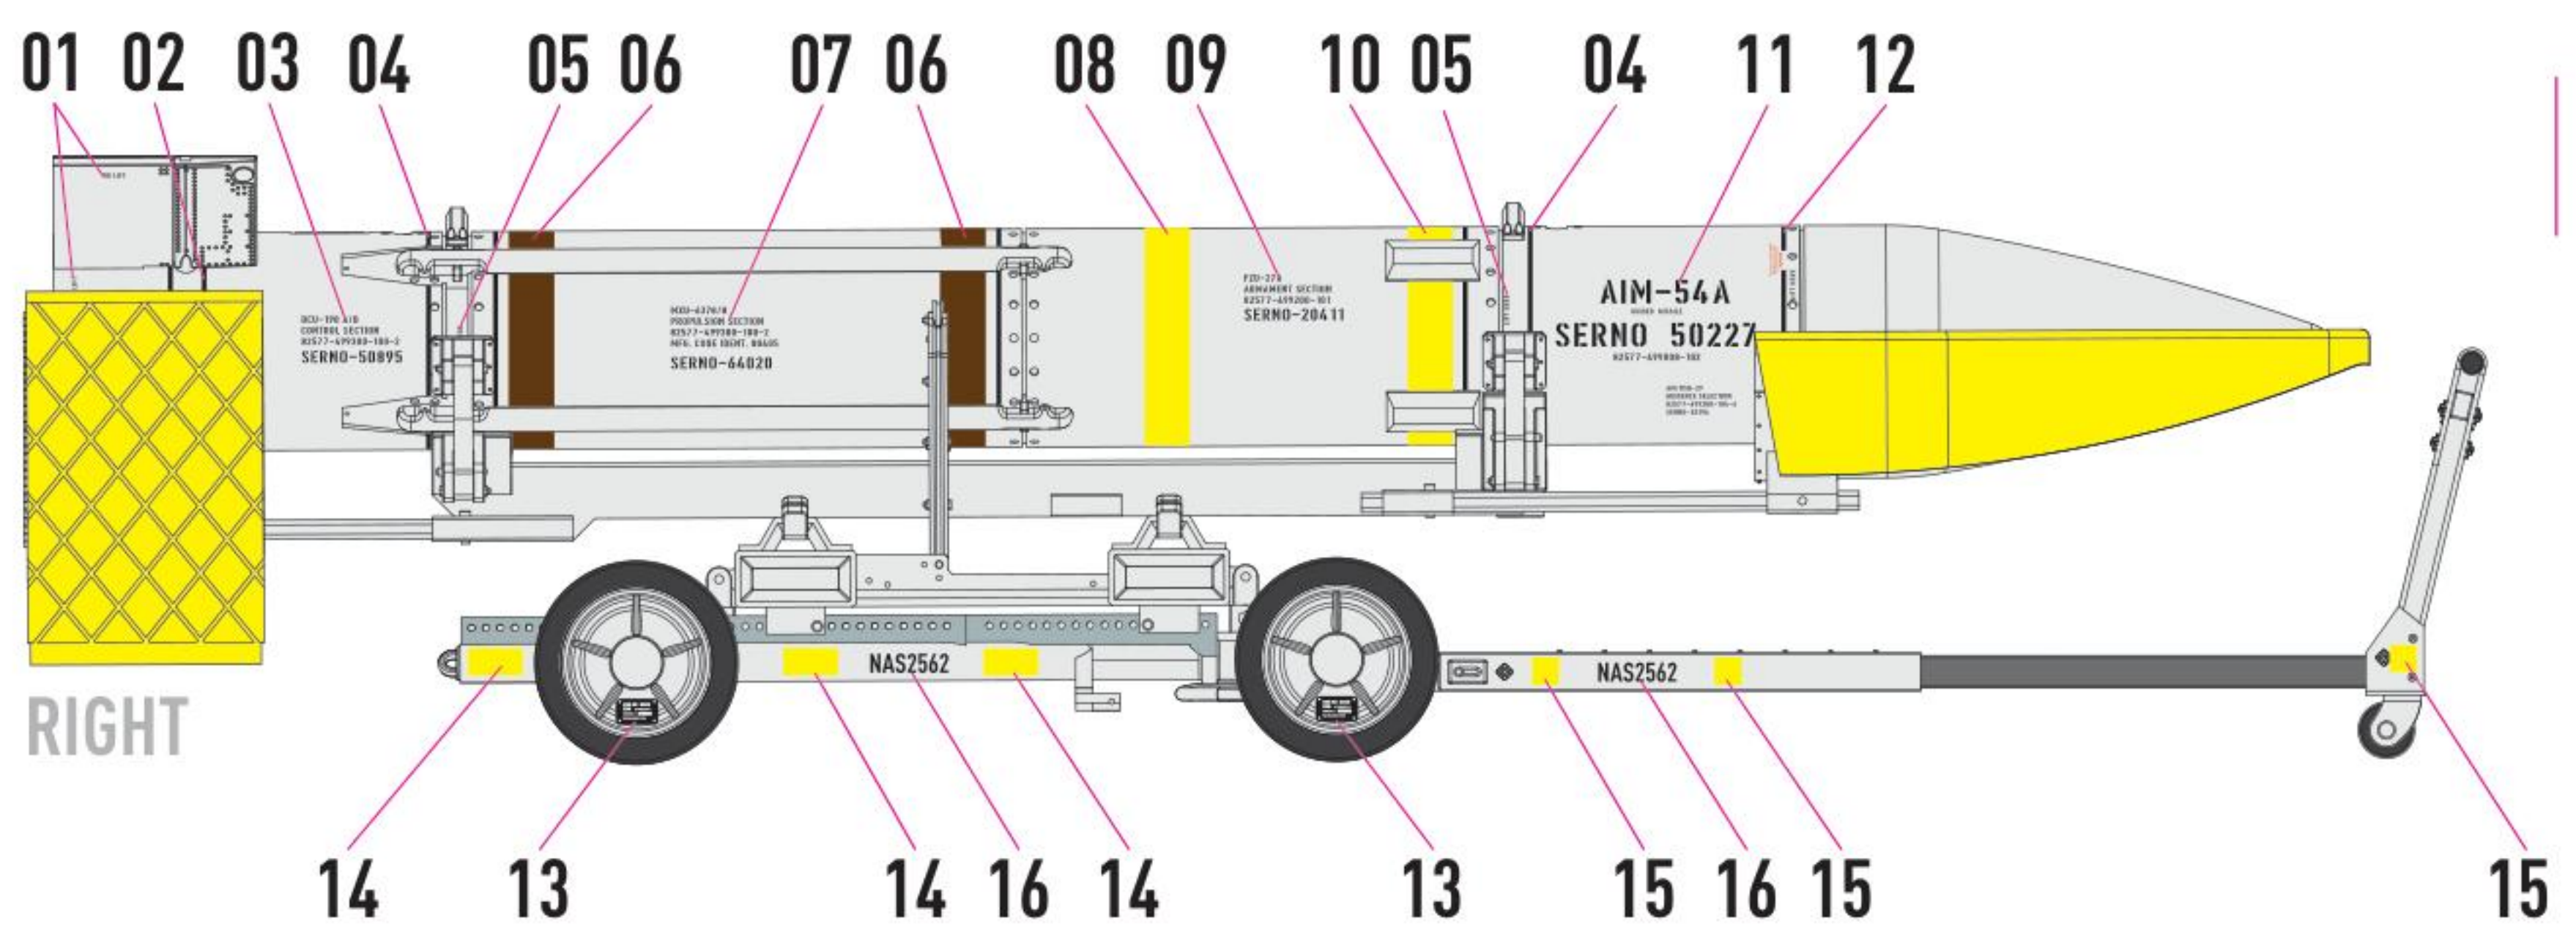

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
FLESH		C51
BLACK GLOSS	H2	C2
GRAY	H308	C308
SEMI GLOSS BLACK		C92

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
CHARACTER RED	H23	C108
RED	H3	C3
KHAKI	H404	C55
YELLOW	H329	C329
RED BROWN	H47	C41

**YOU CAN FIND INSTRUCTIONS
IN PDF FORMAT ON THE WEBSITE**

RESKIT-MODELS.COM

General Issues: info@reskit.com.ua

Wholesales: sales@reskit.com.ua

Claim Resolution: claims@reskit.com.ua