




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


DETAILS AFTER REMOVAL FROM SUPPORTS

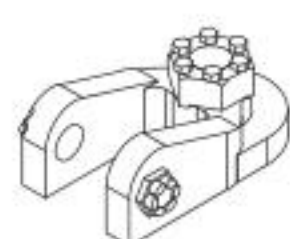

R2



R3

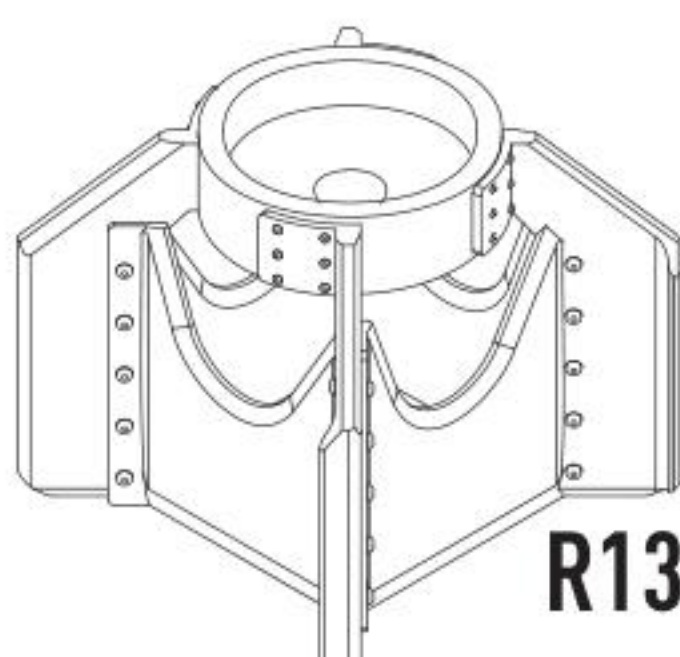


R13




R6 x3



R5

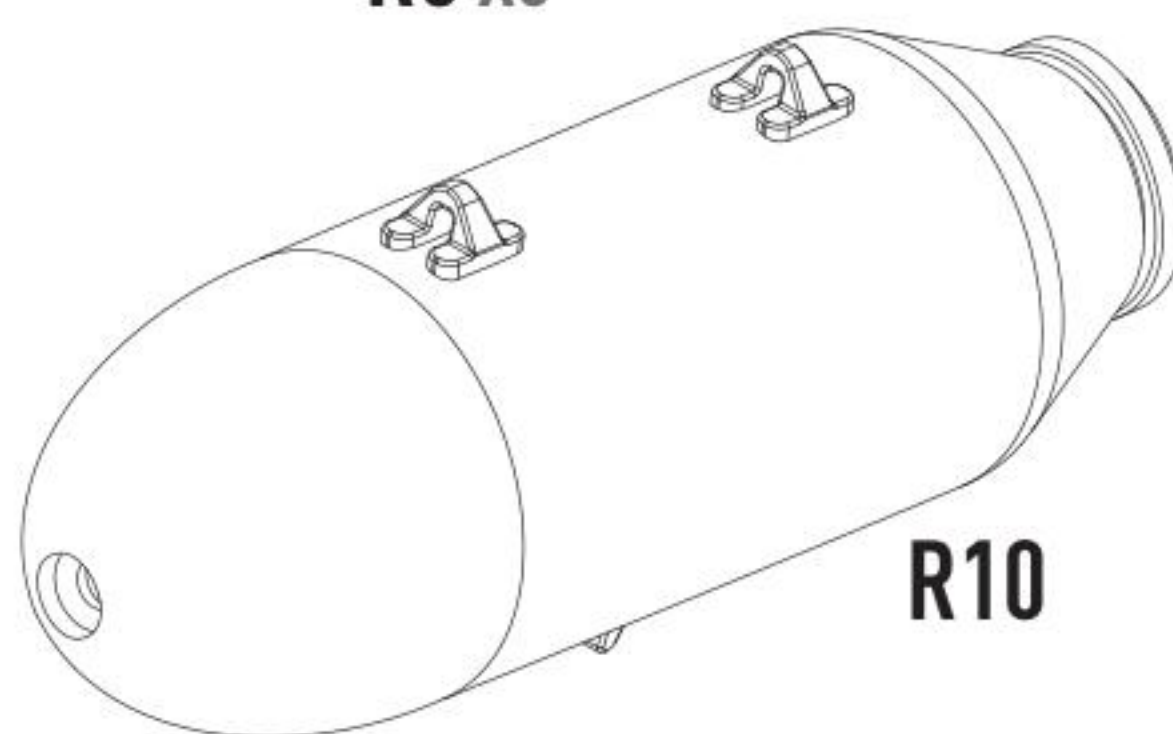


R10

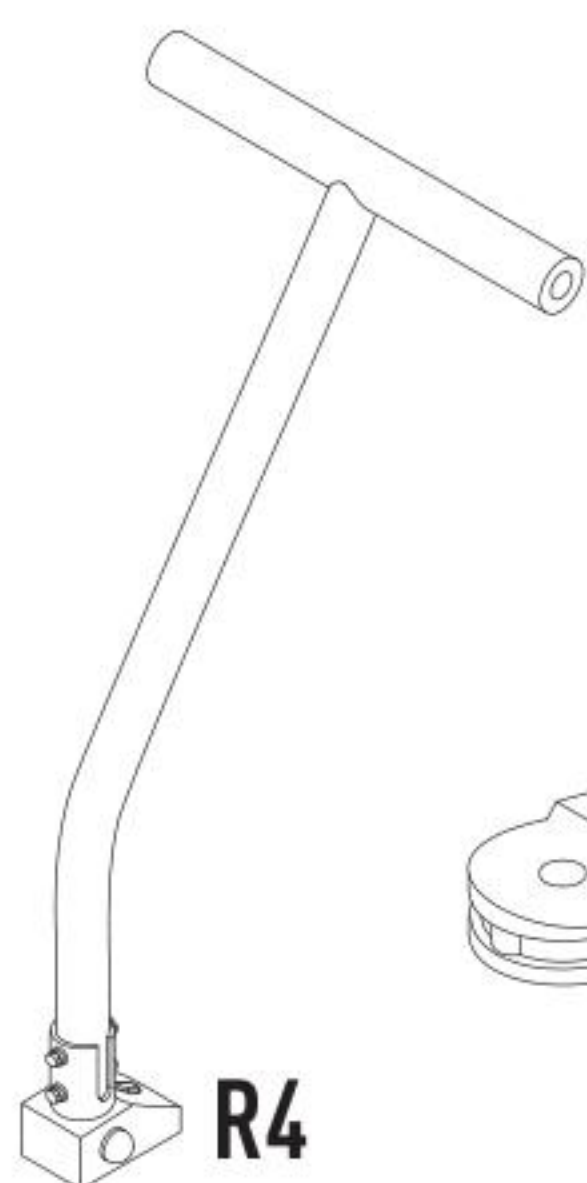

R4




R12

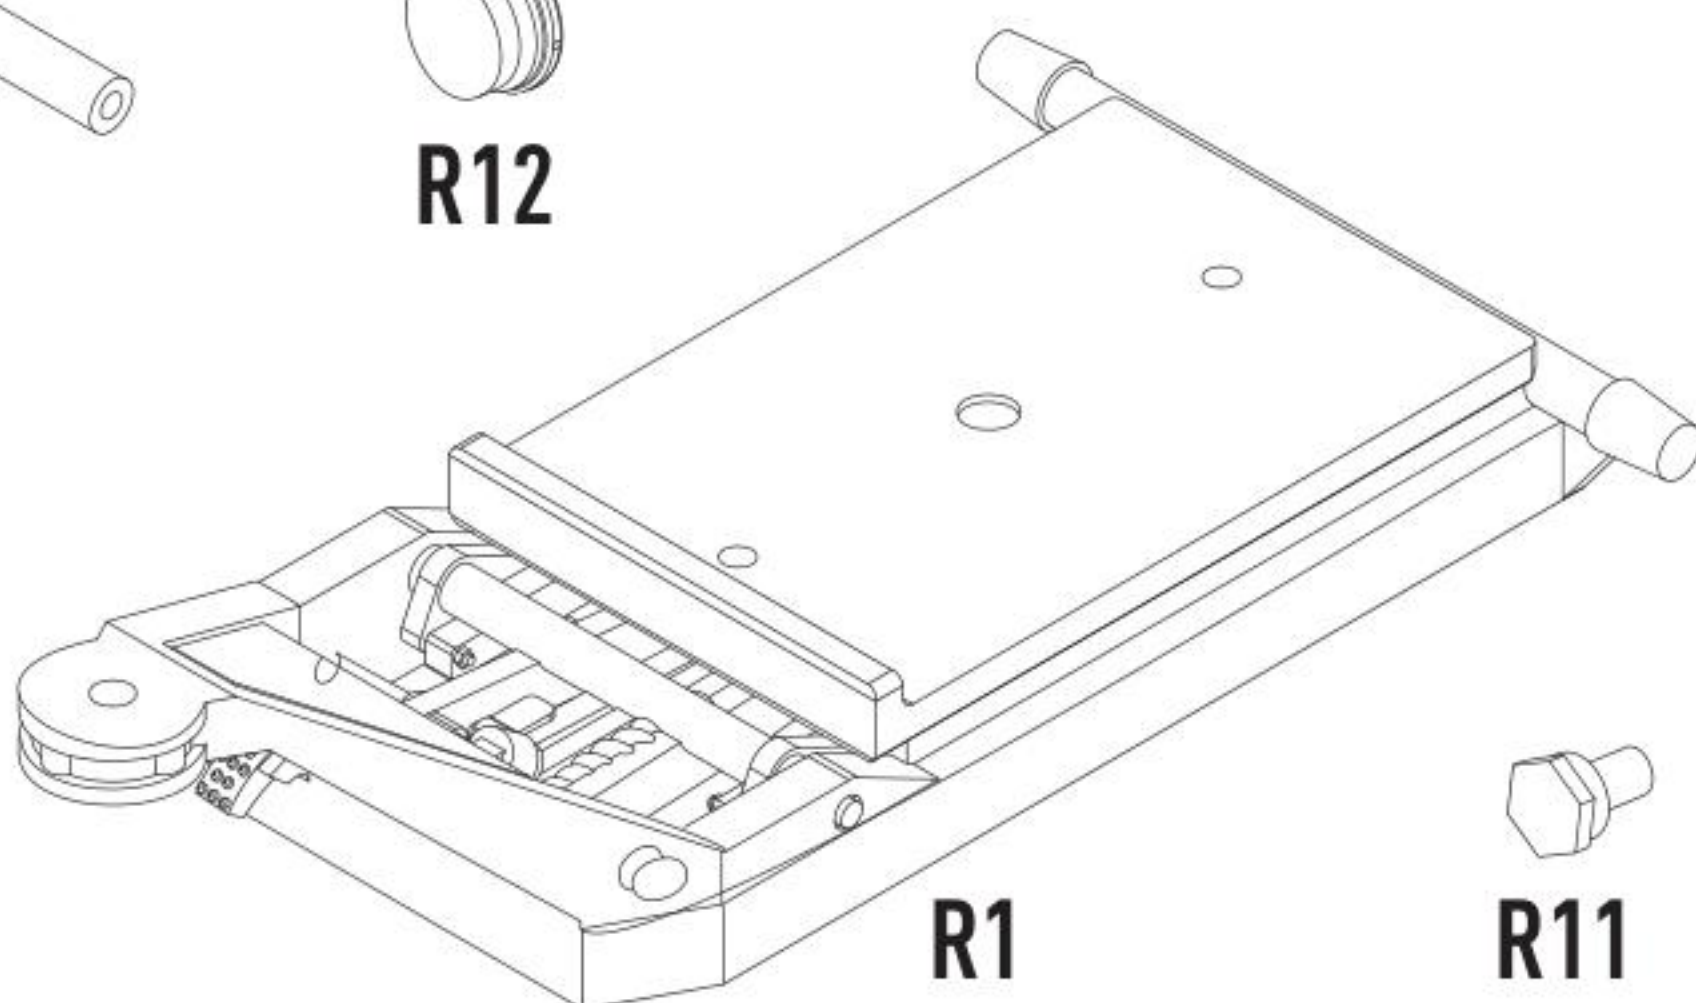

R1



R11

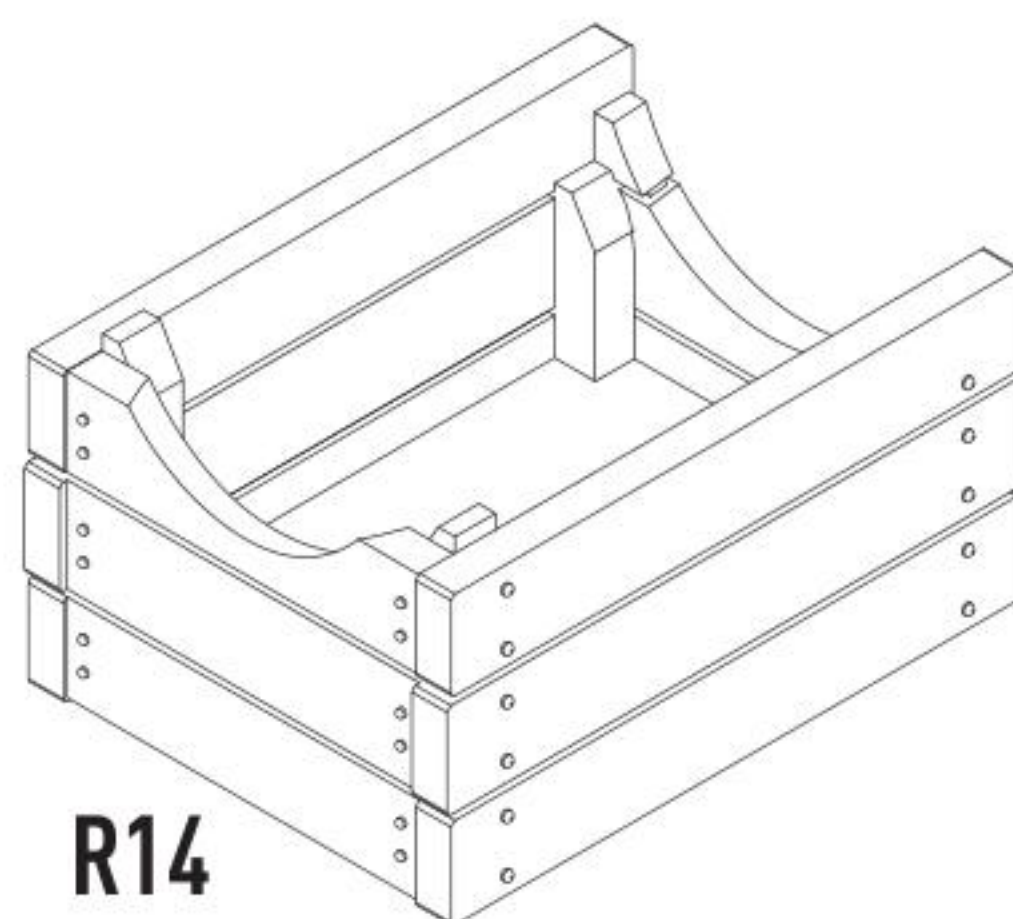



R14

R15




R16



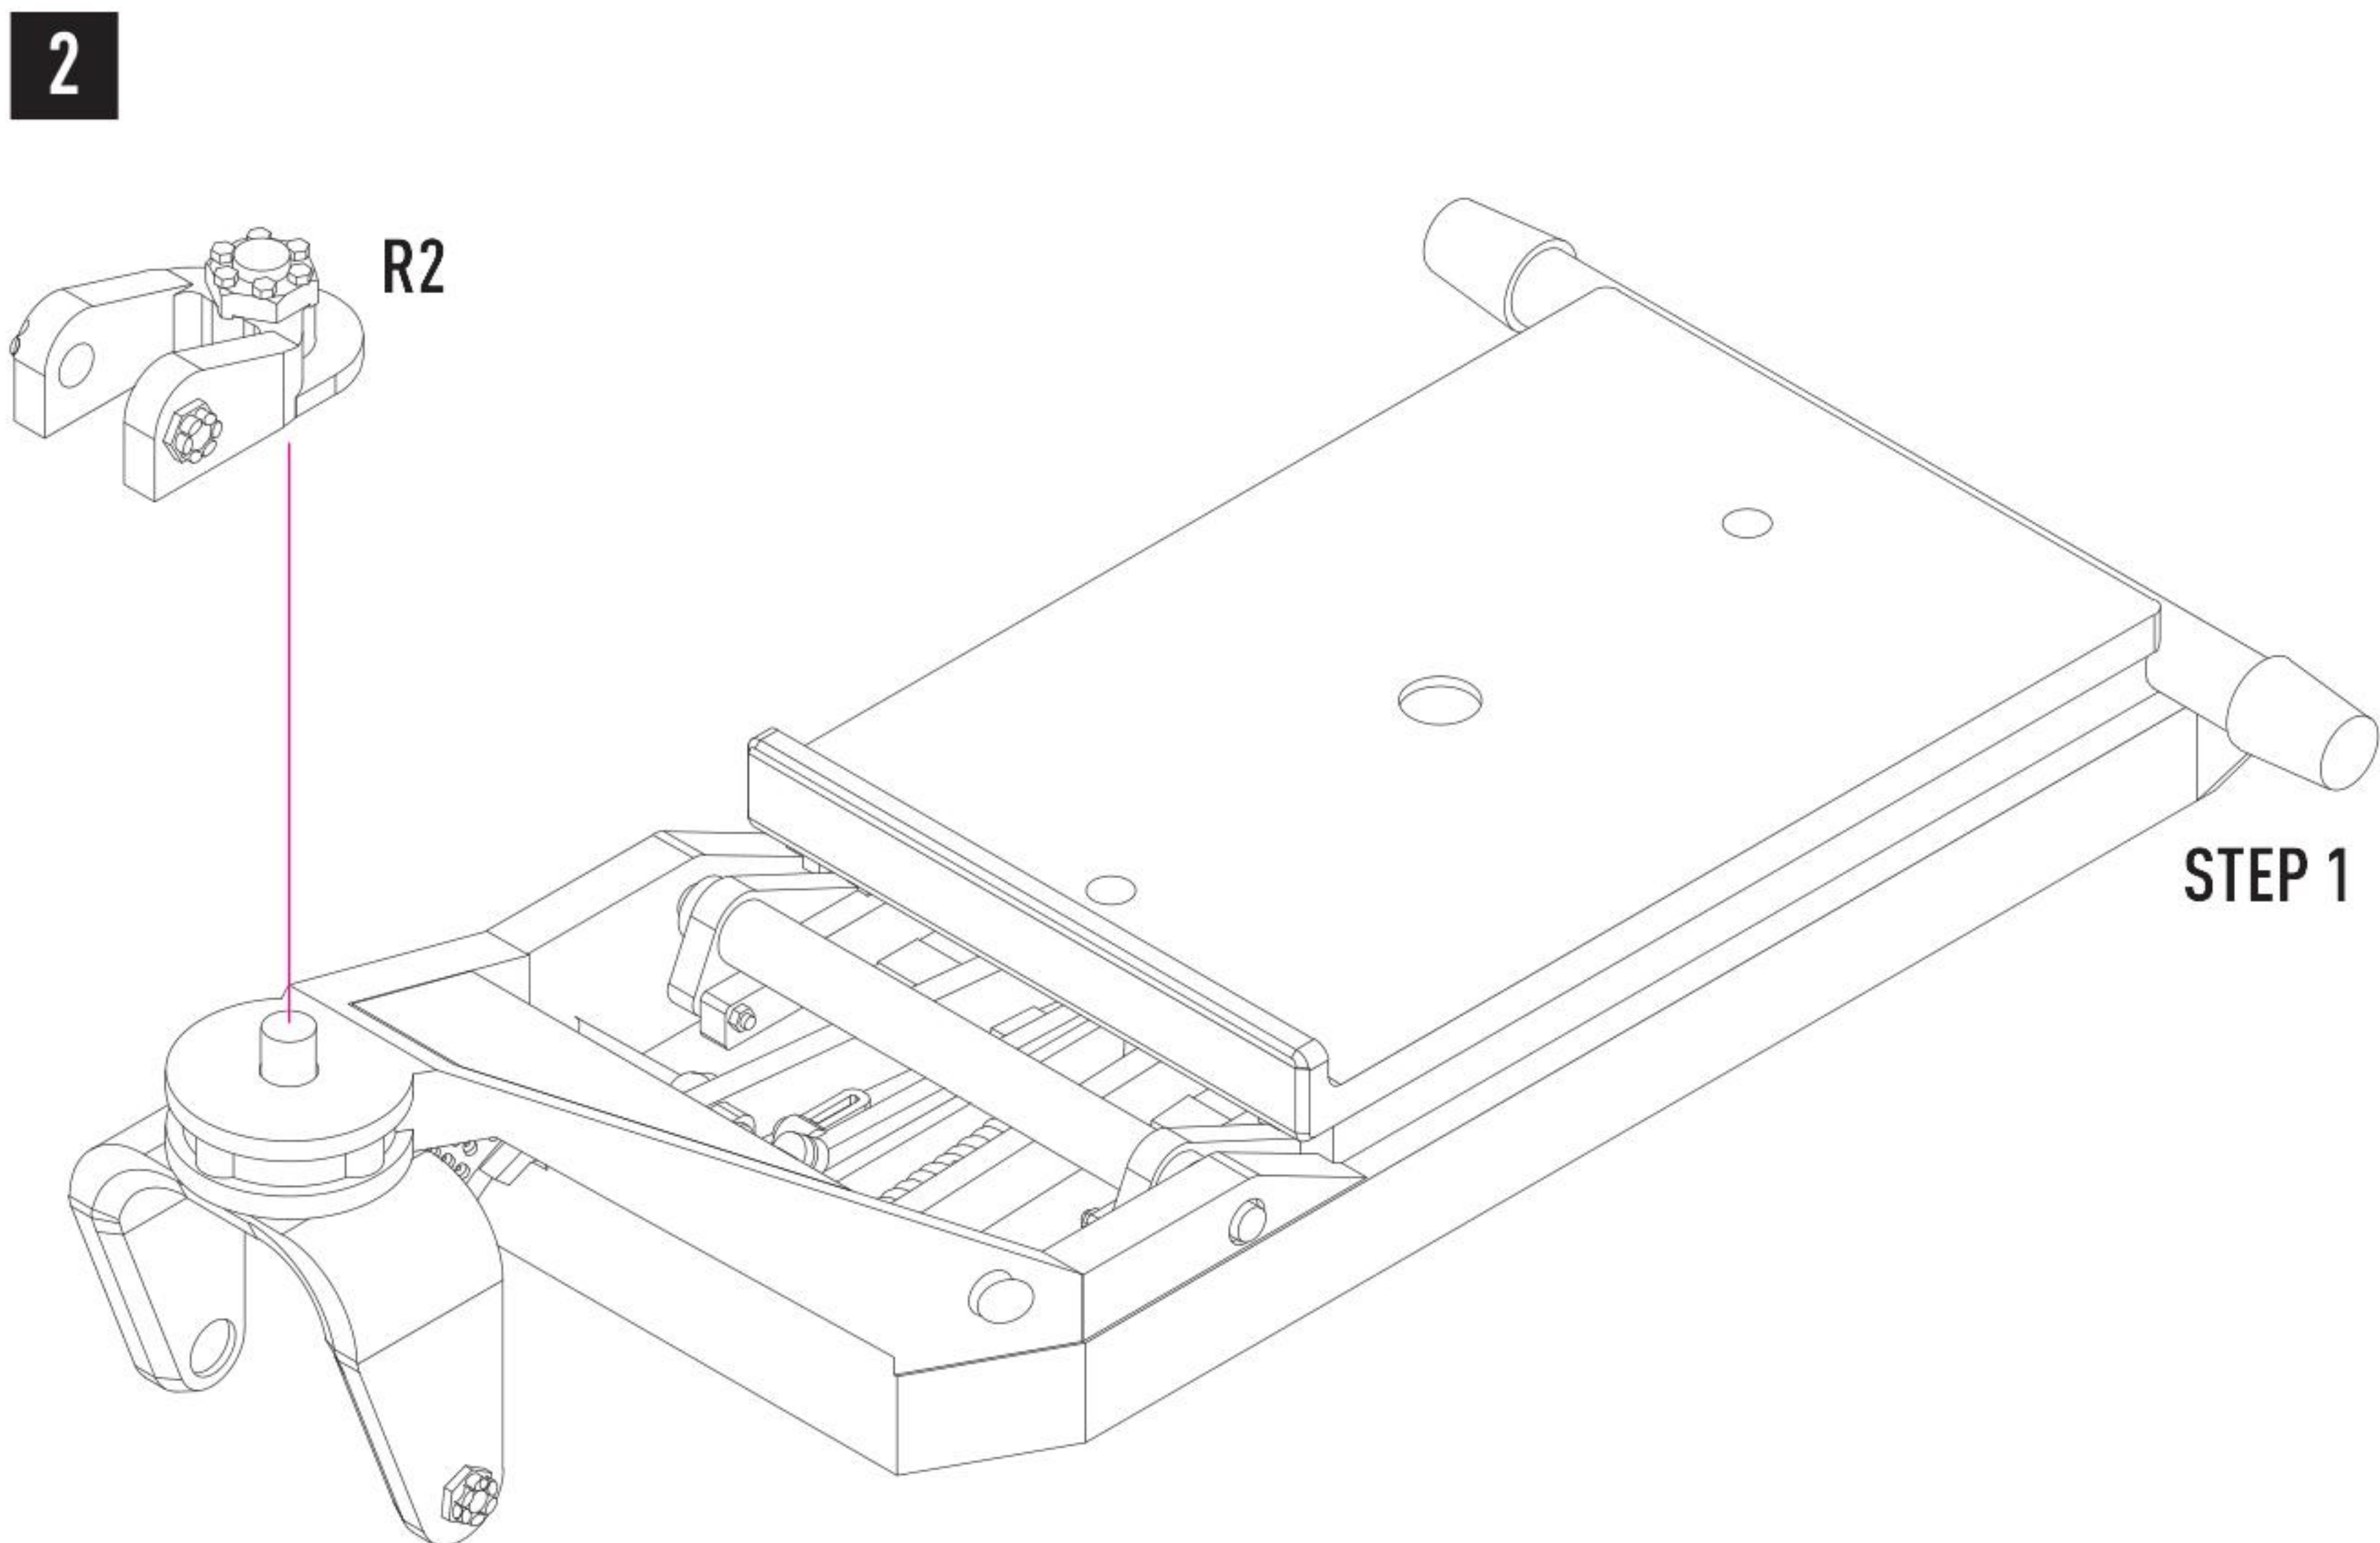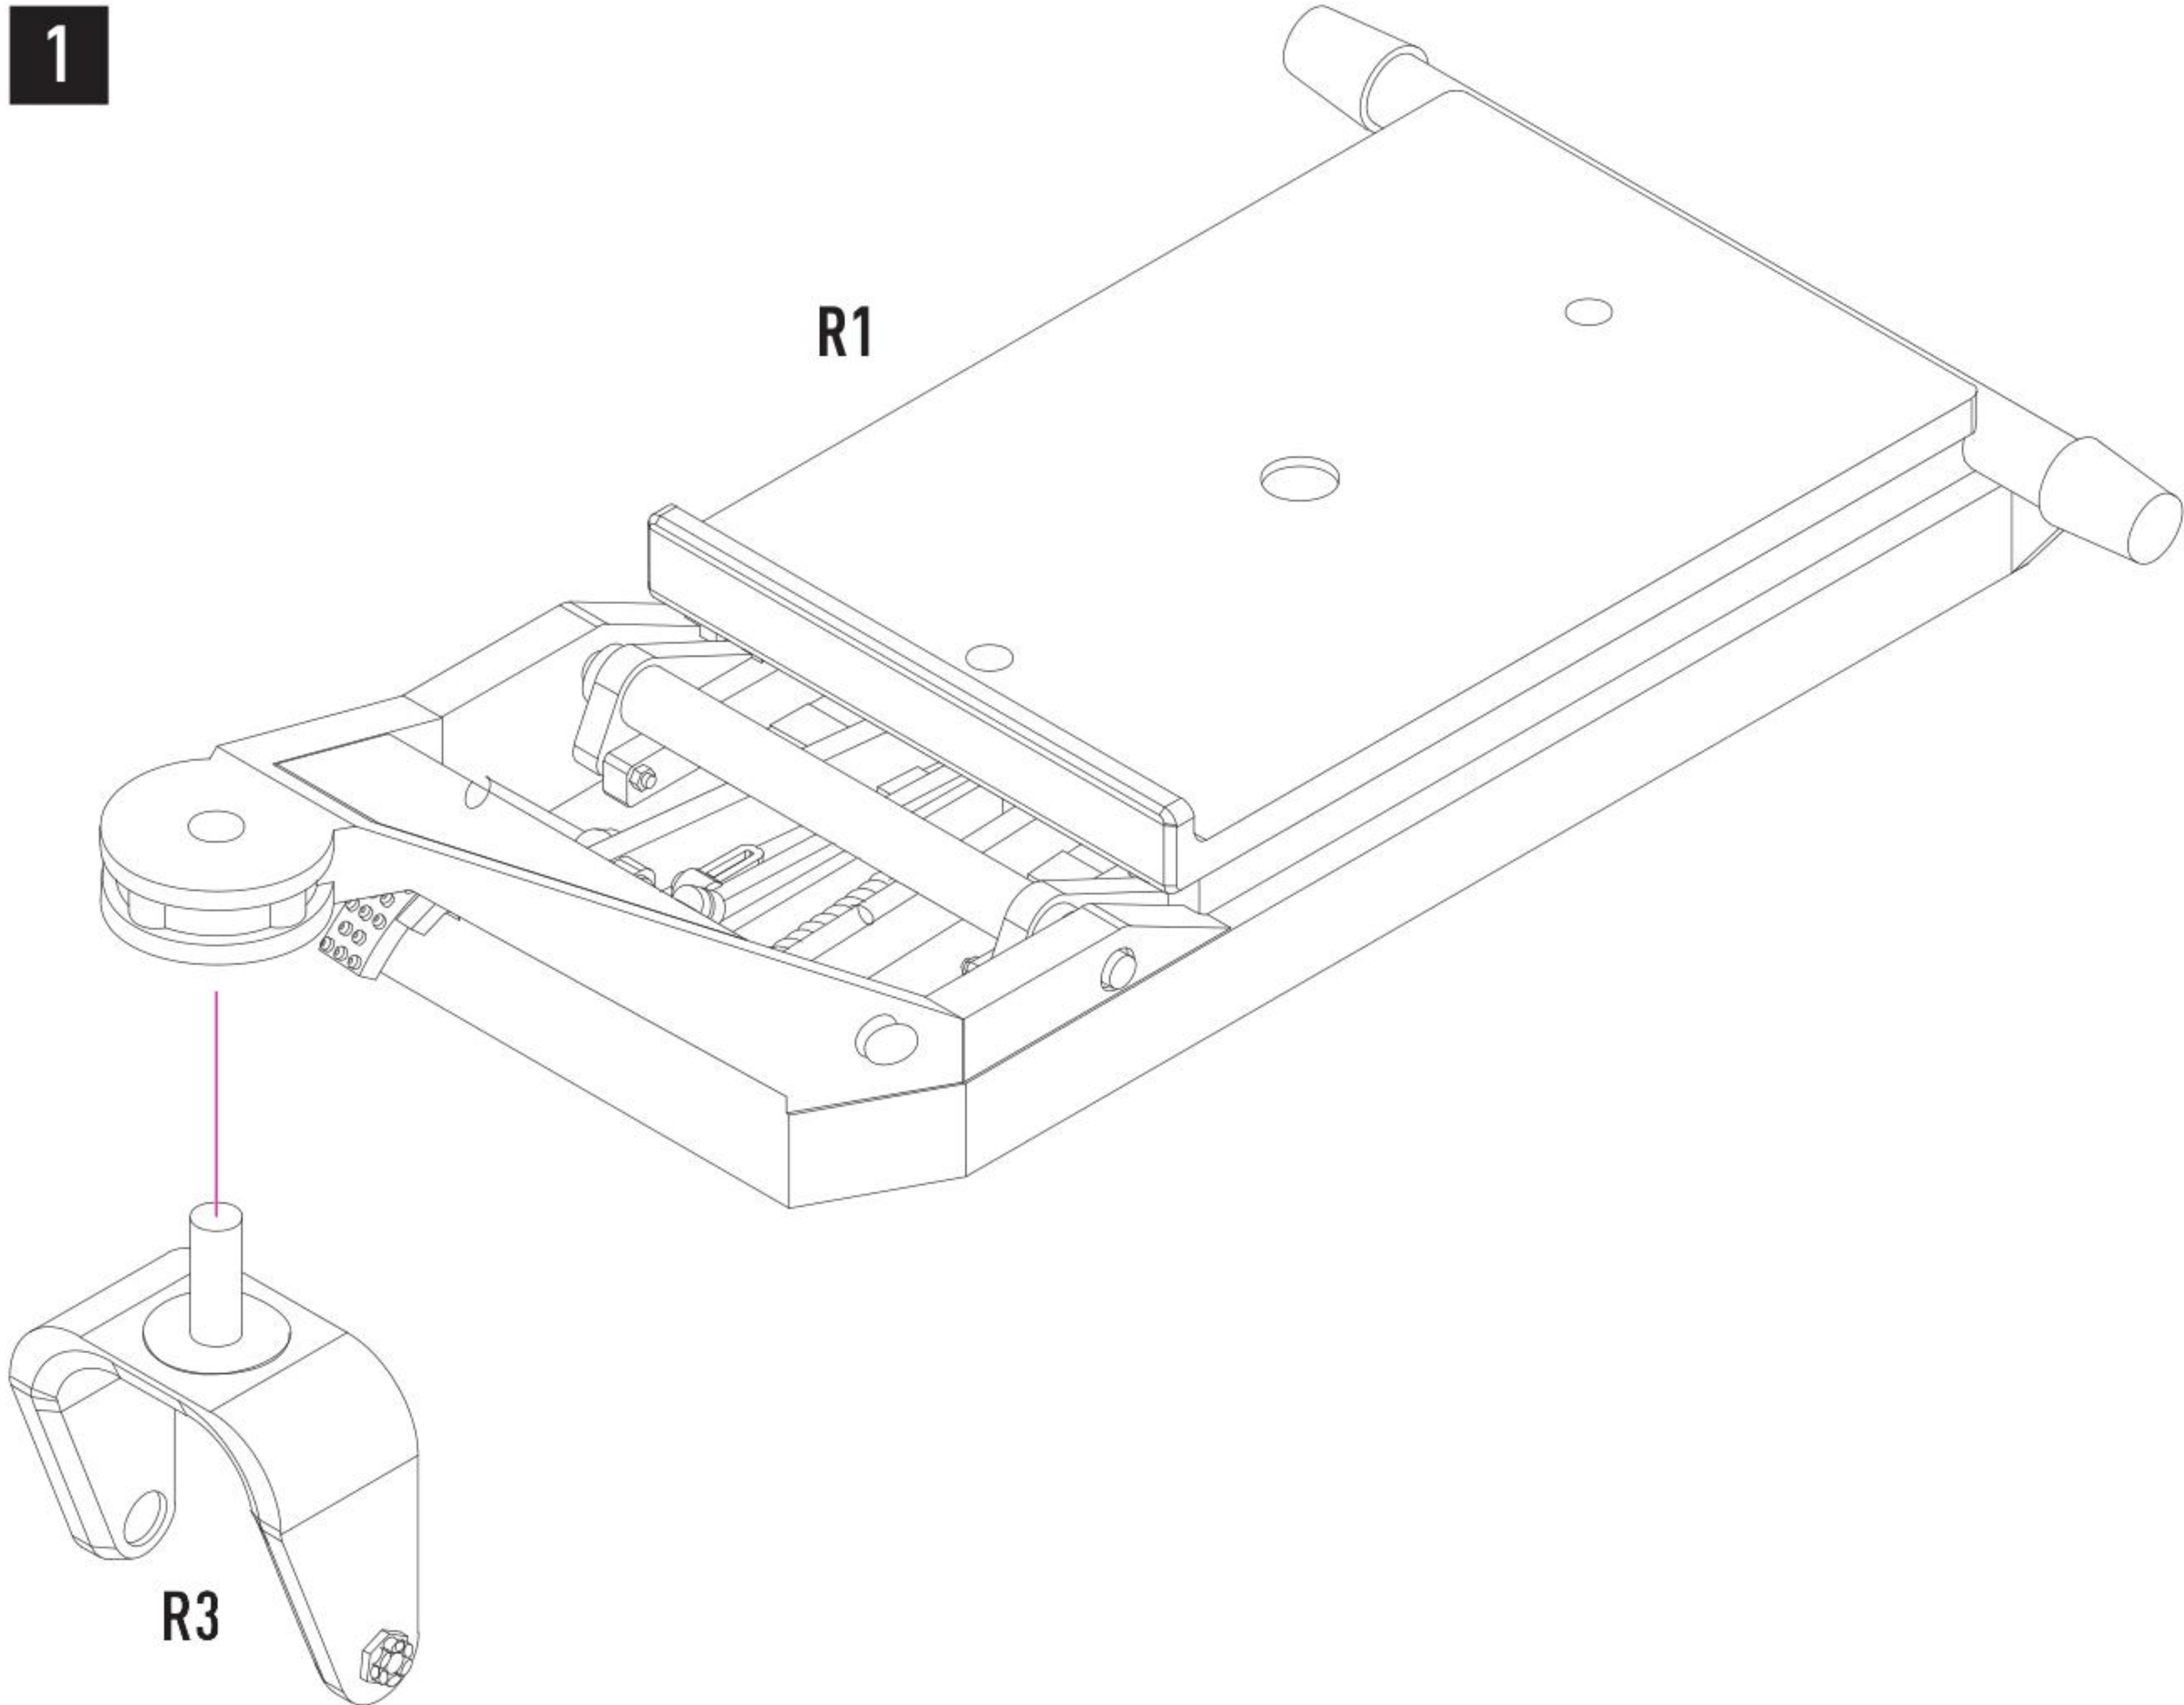


GLUE PART R2 TO PART R3


3

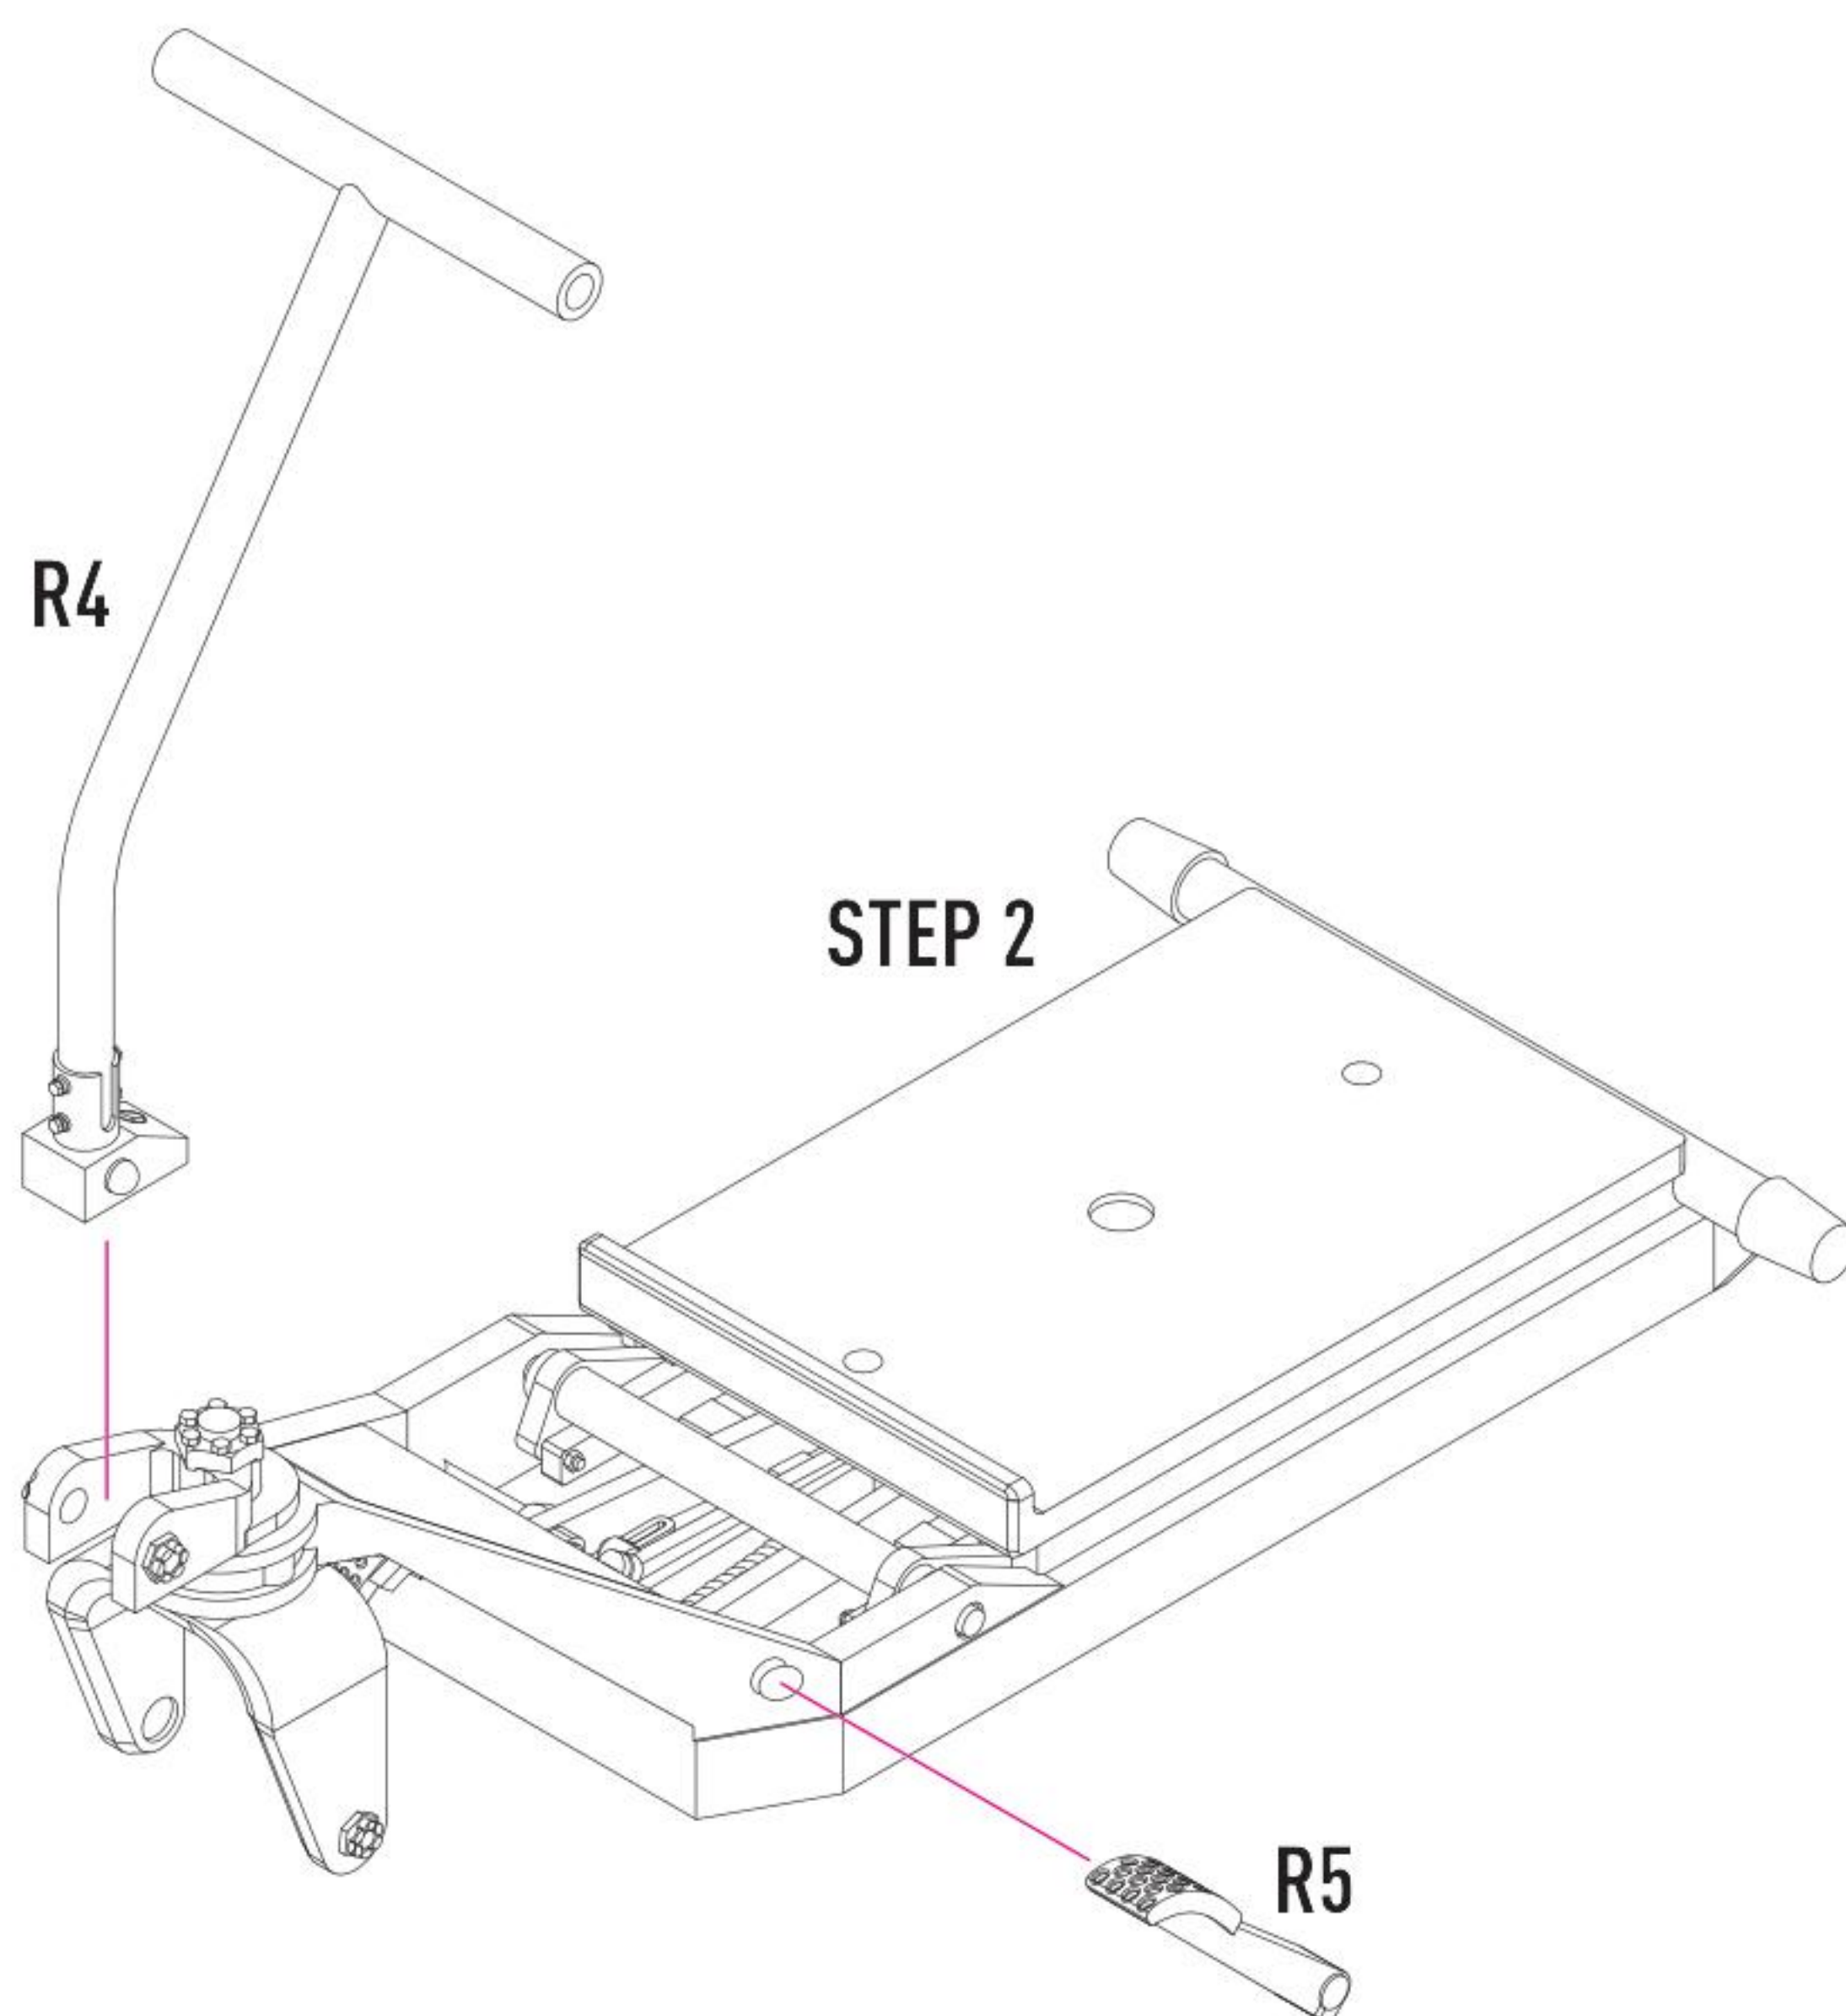


4

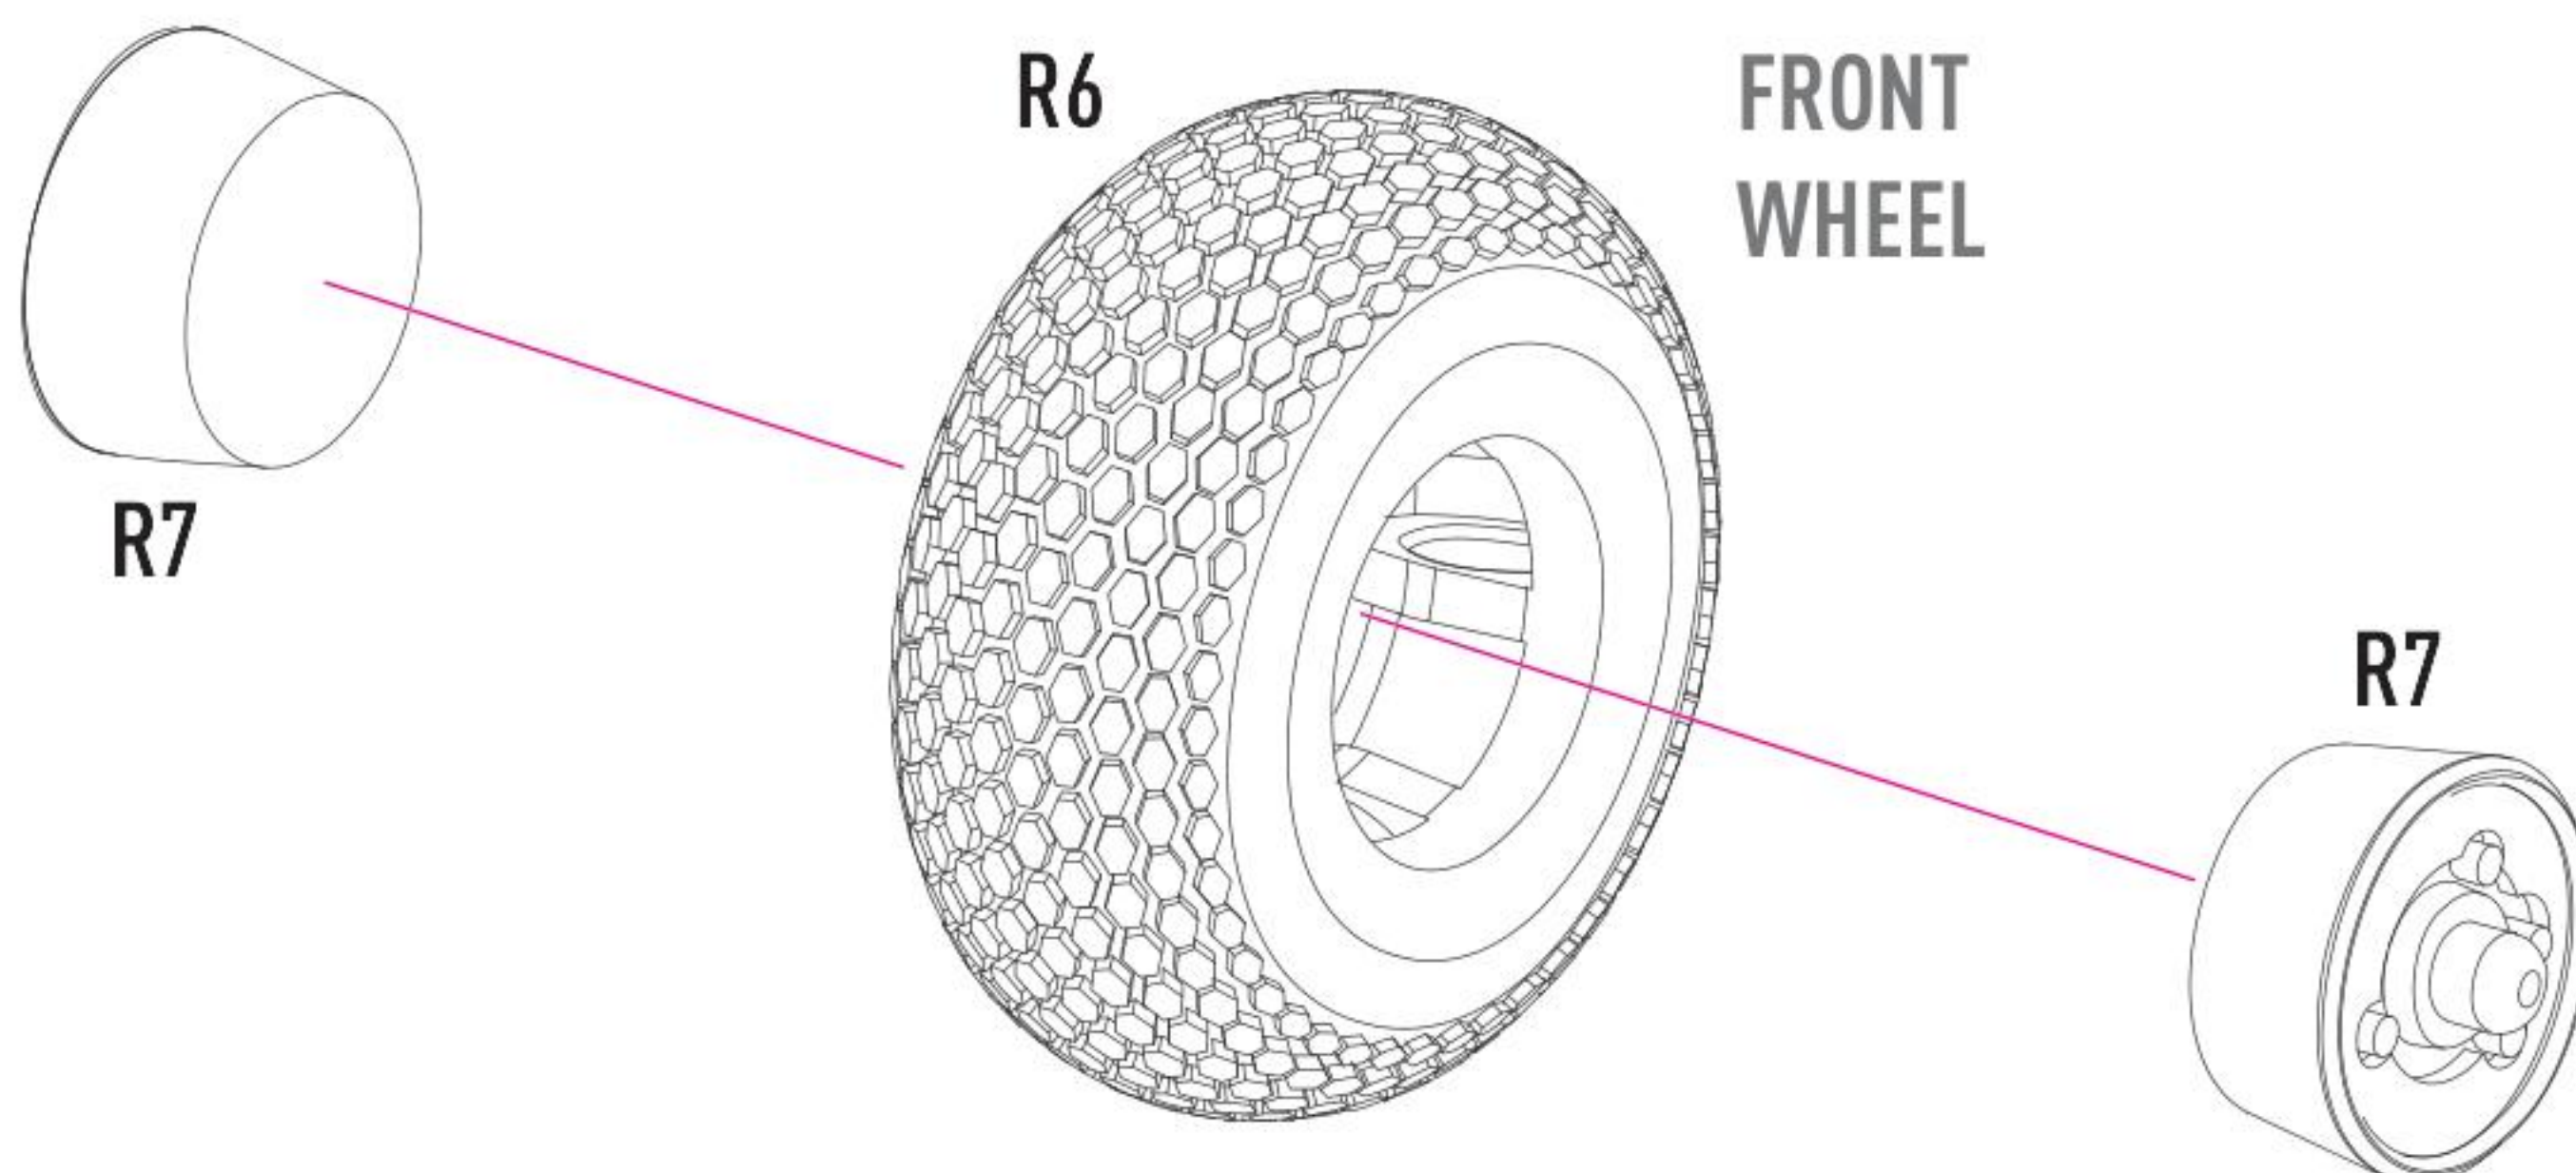


5 X2

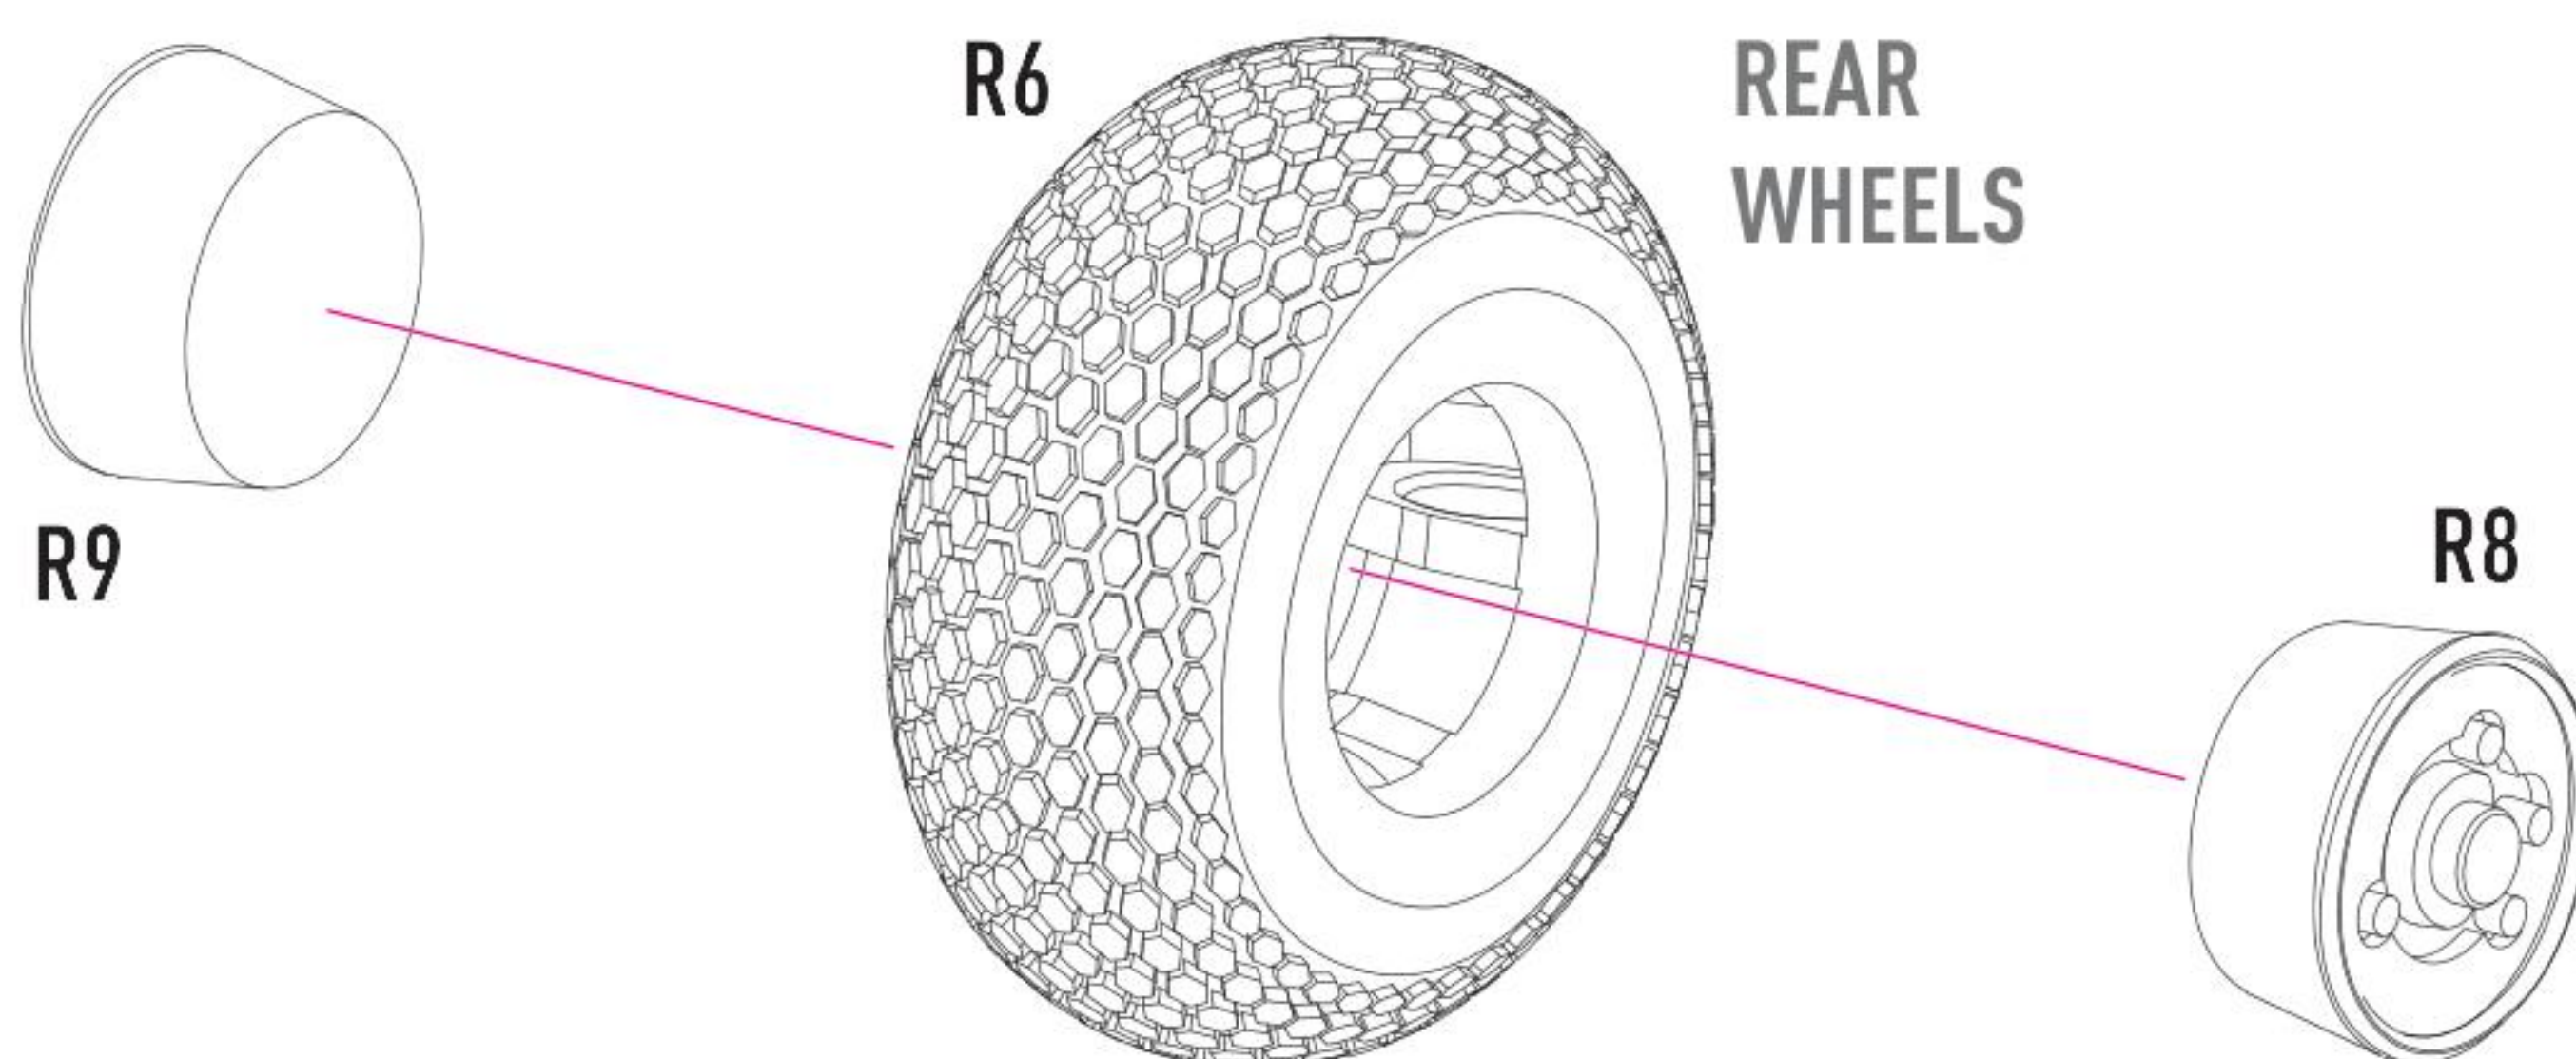


6


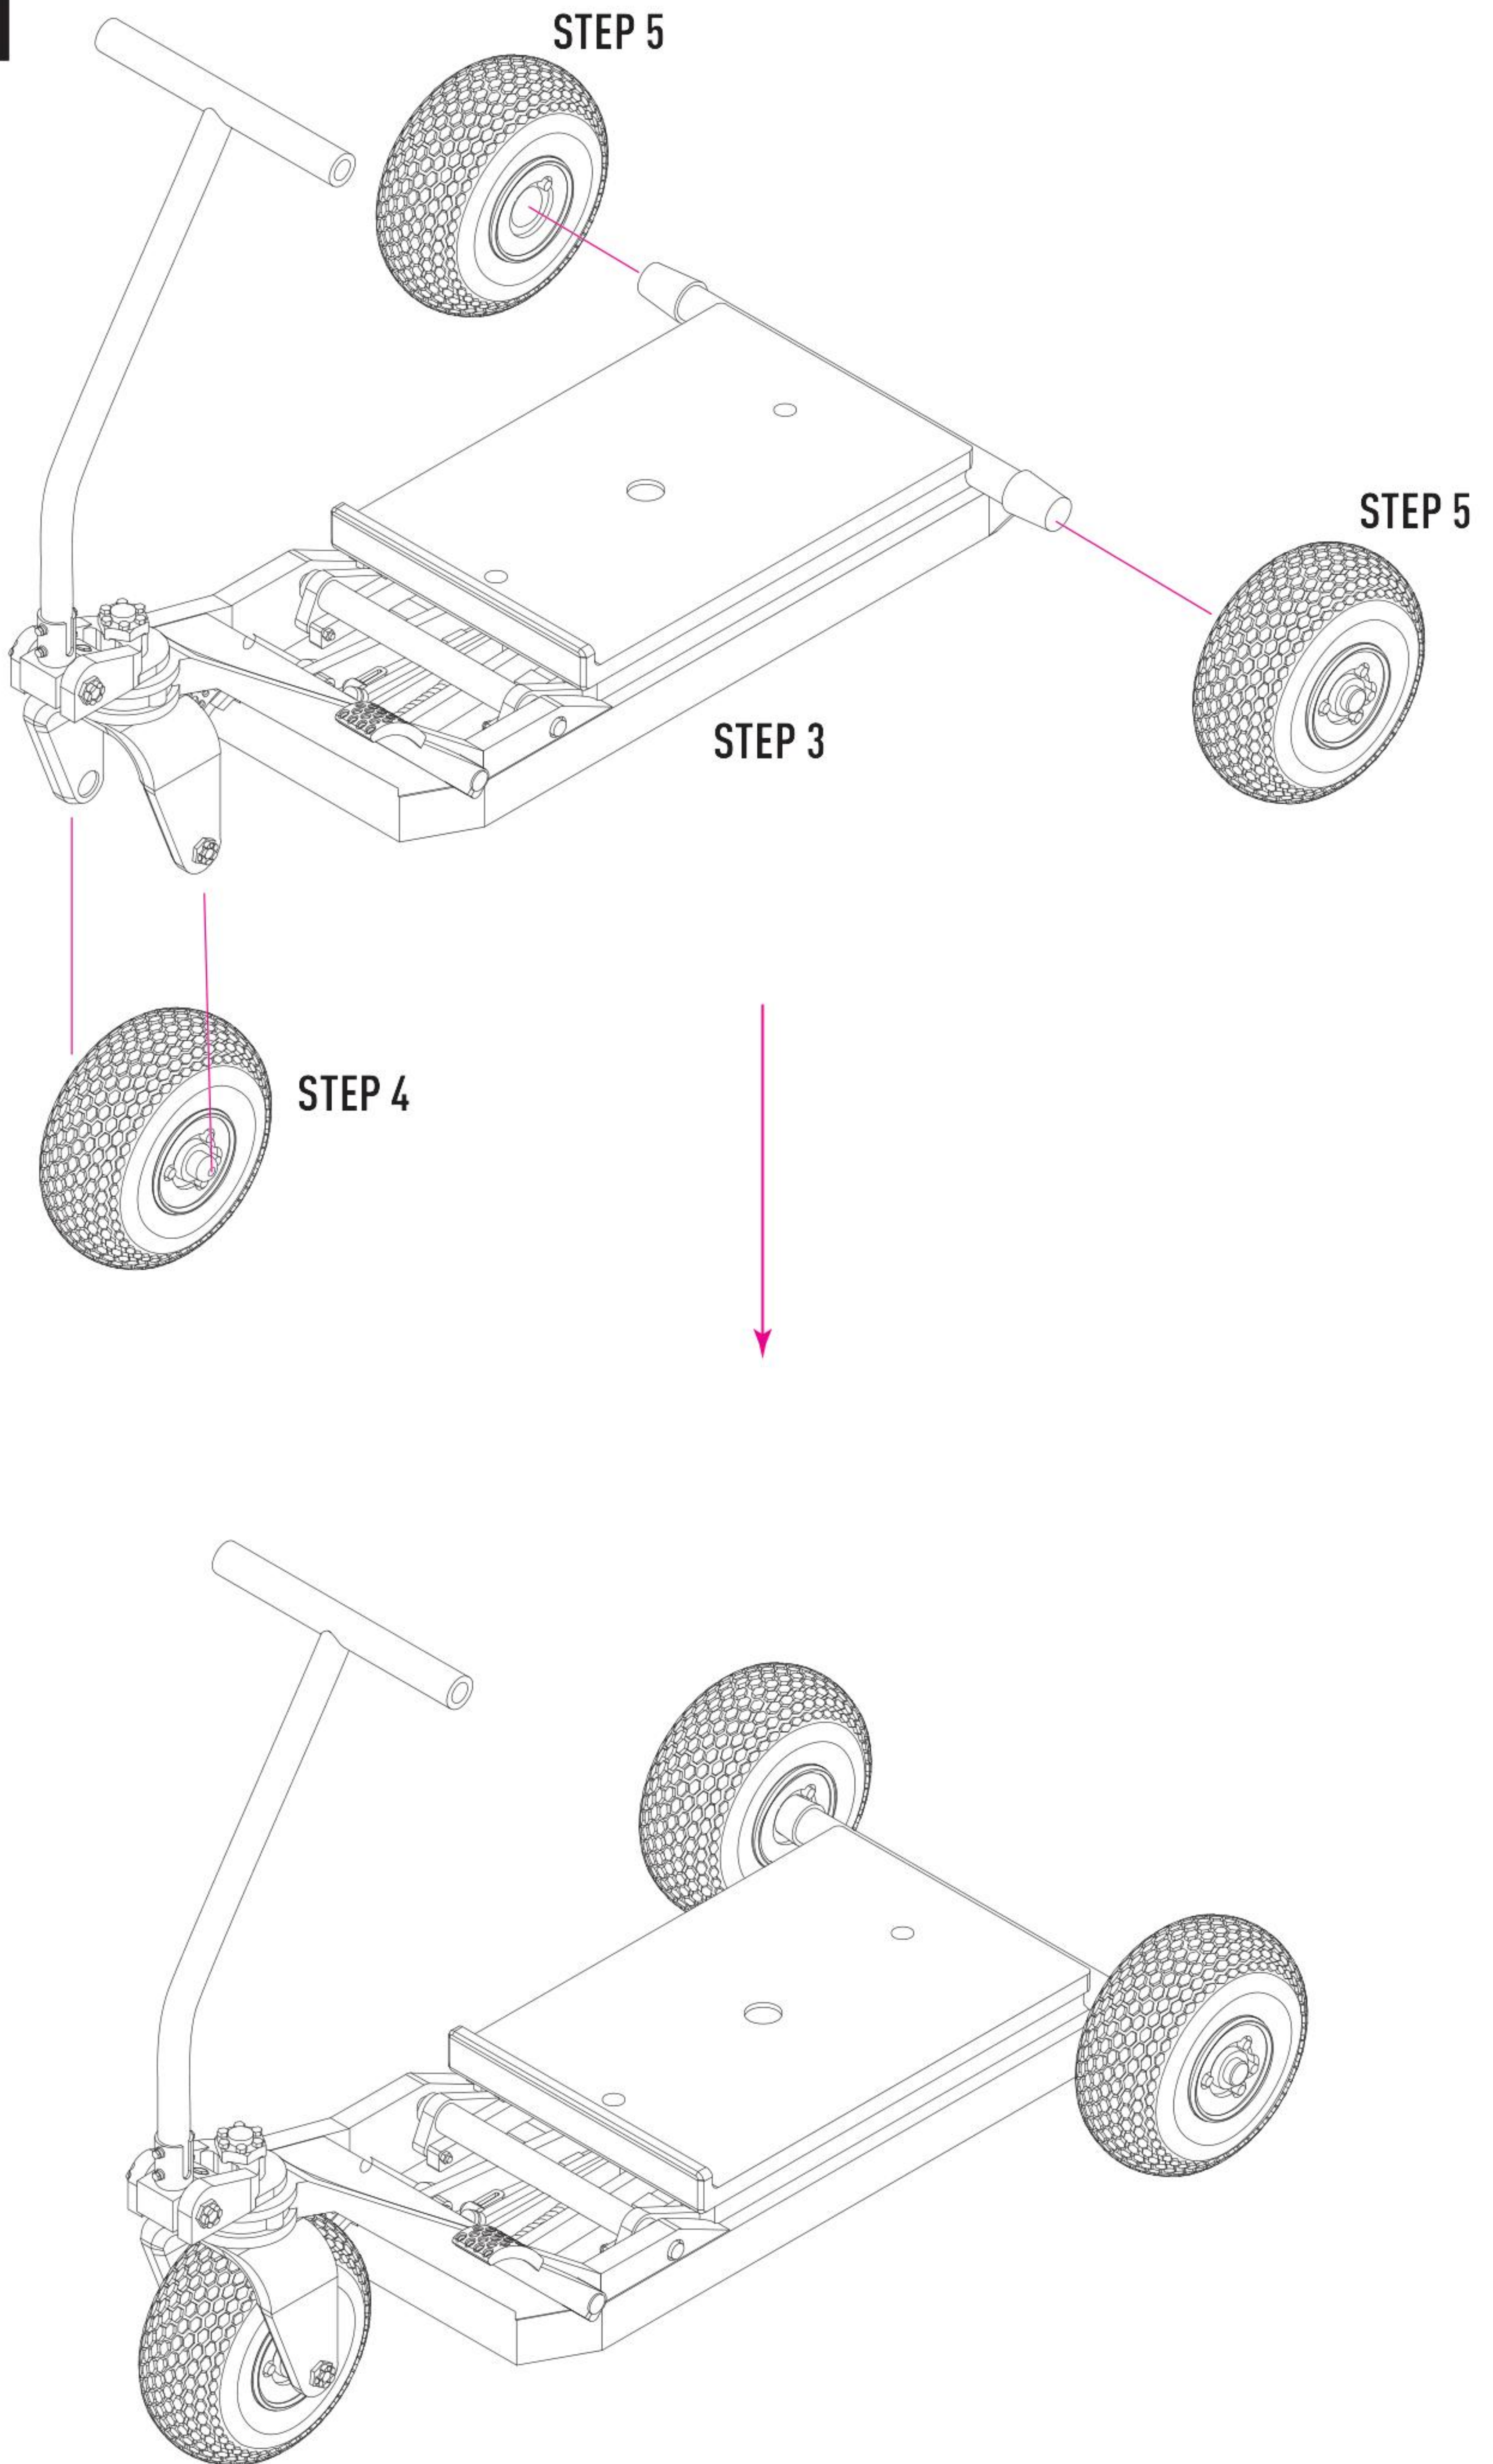


7

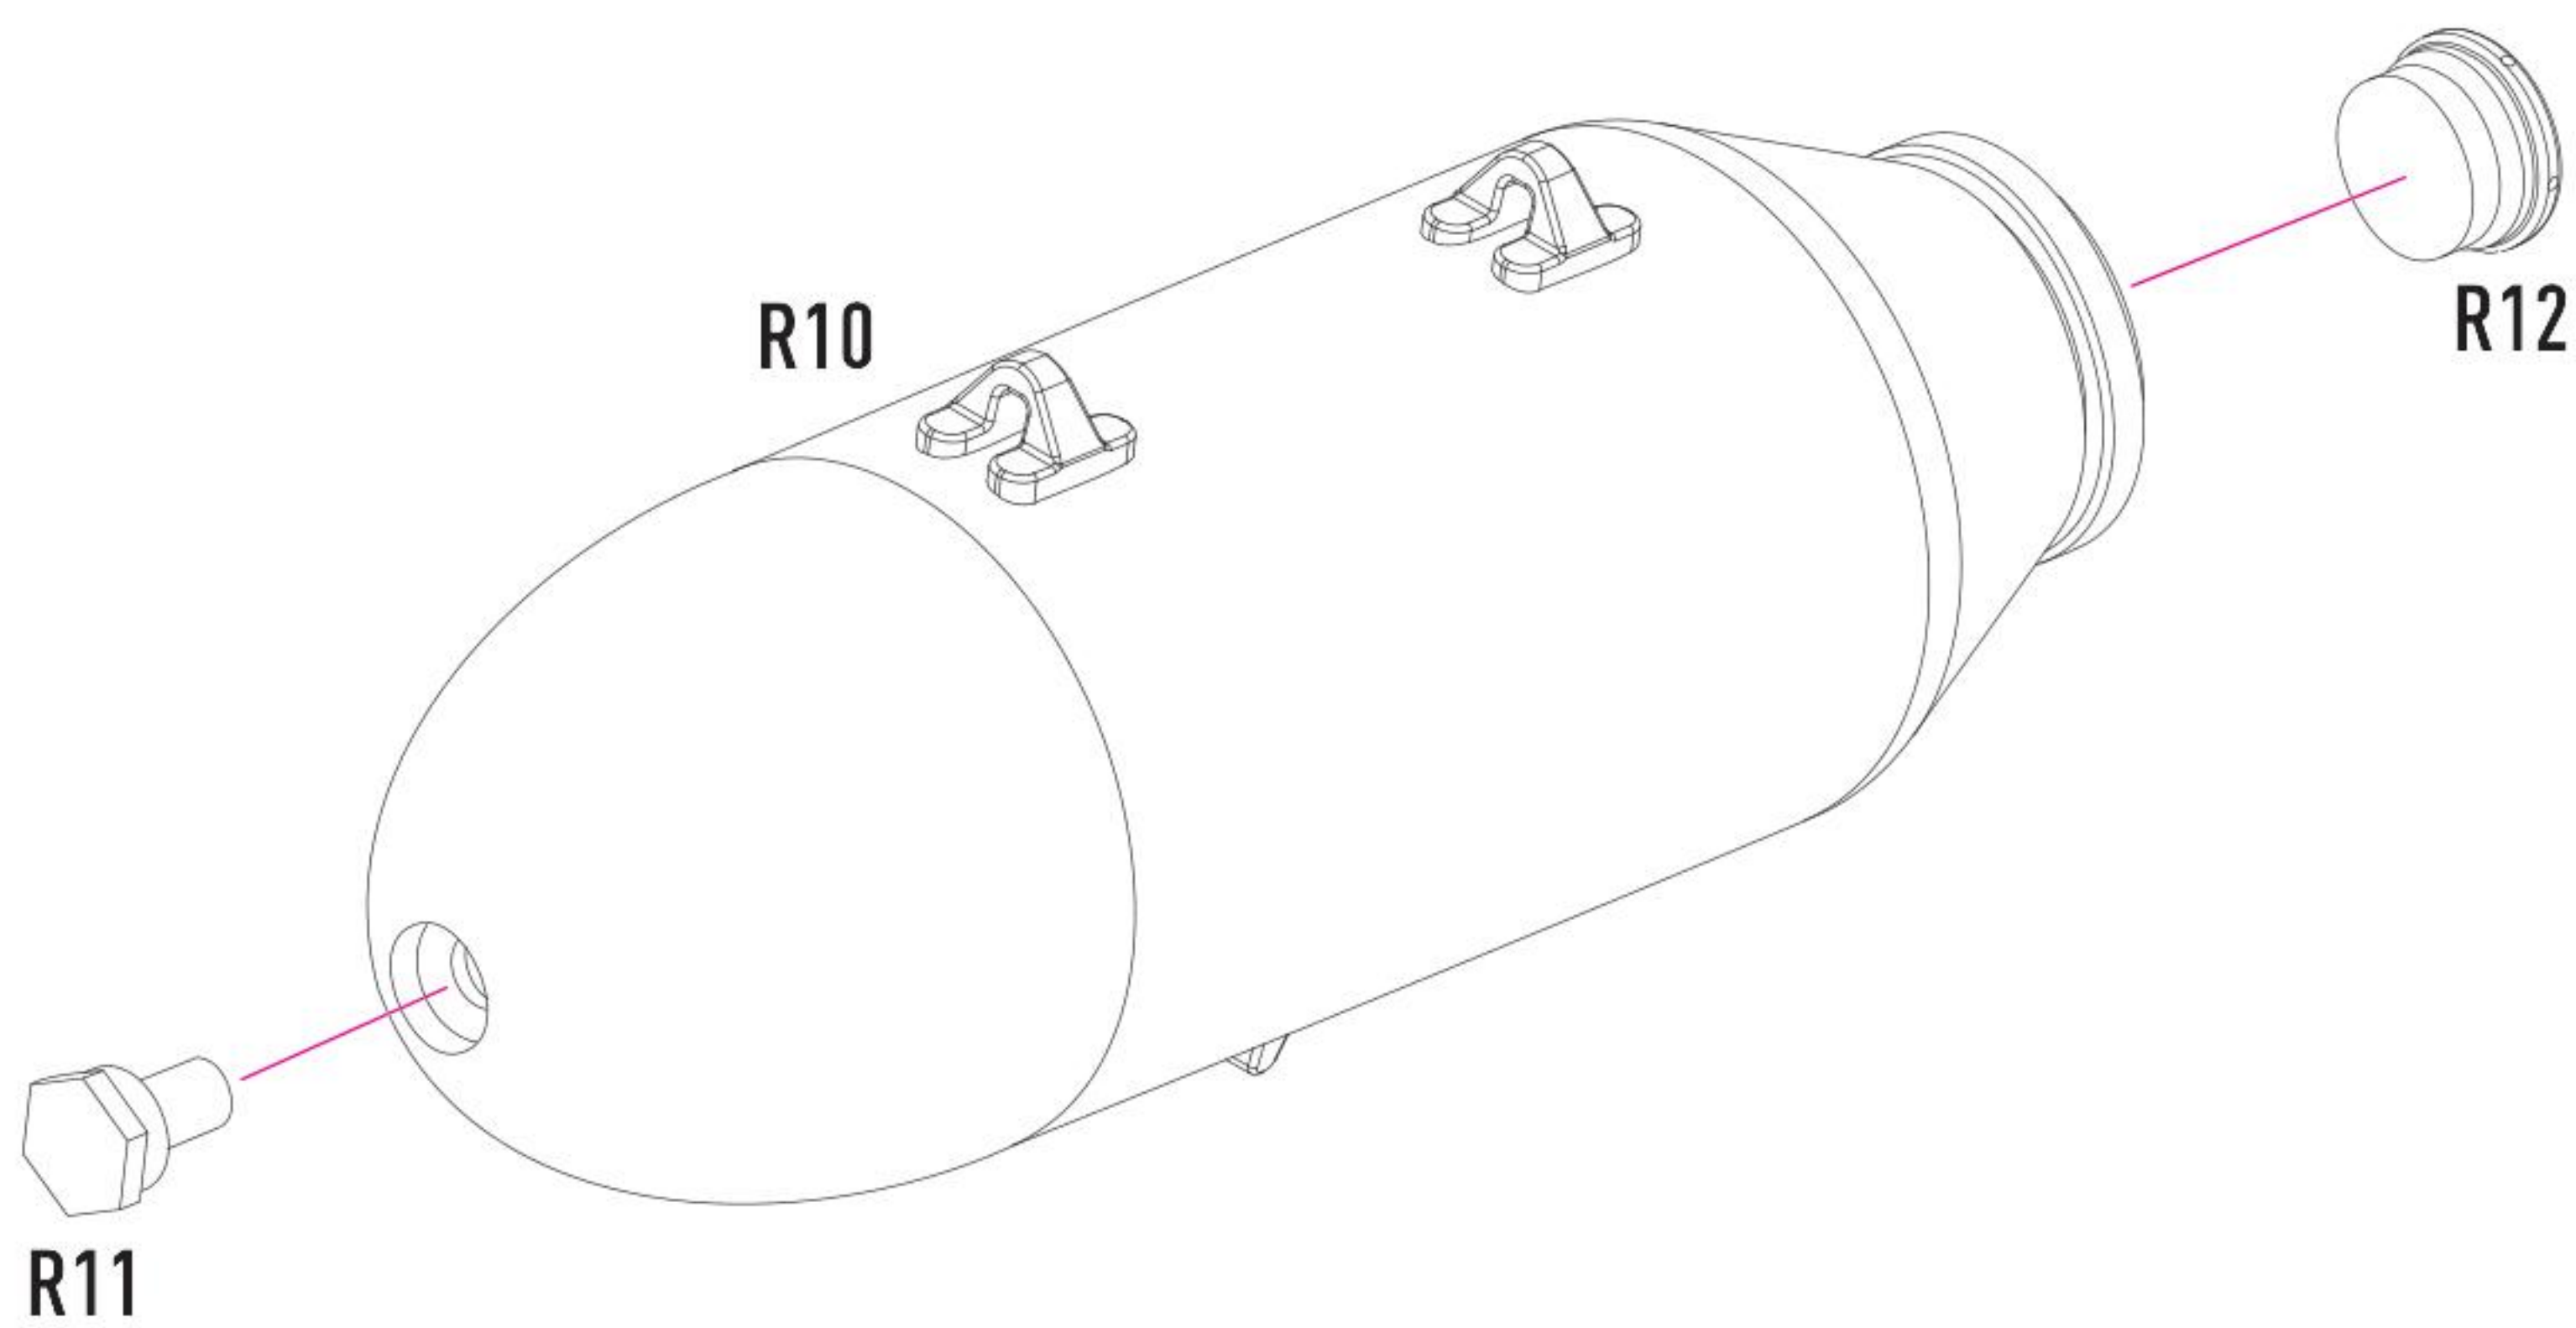


8

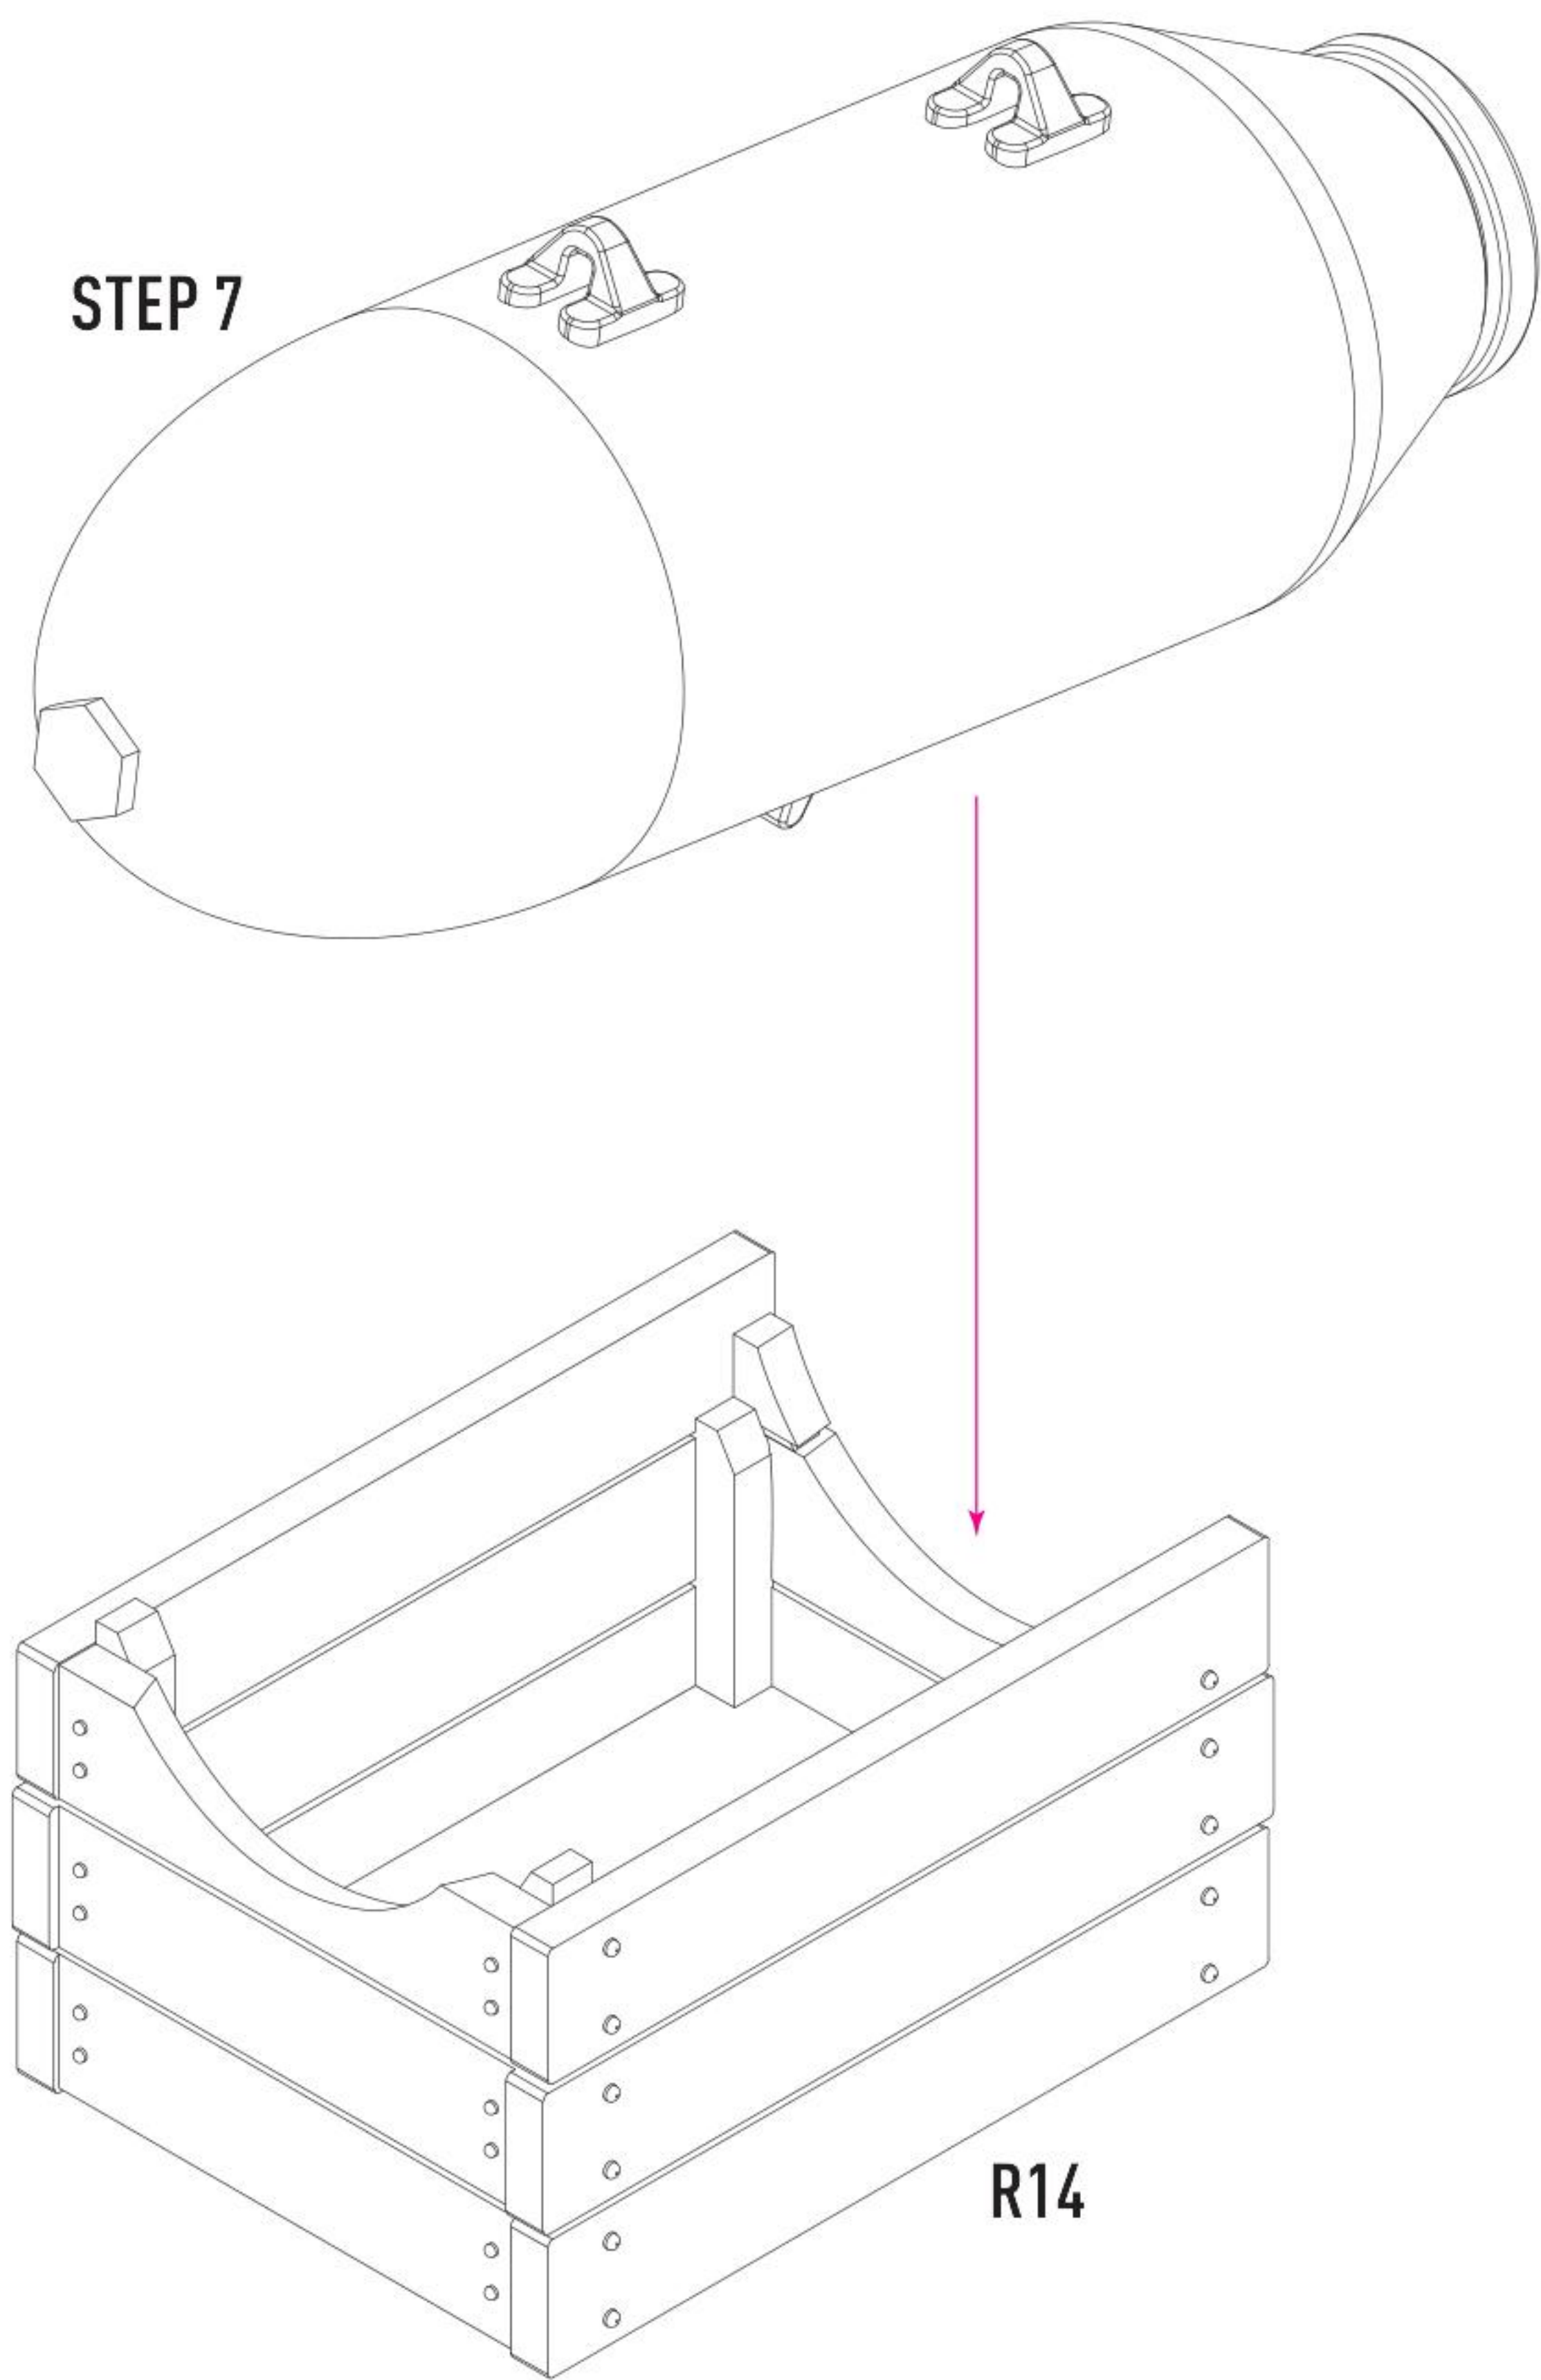

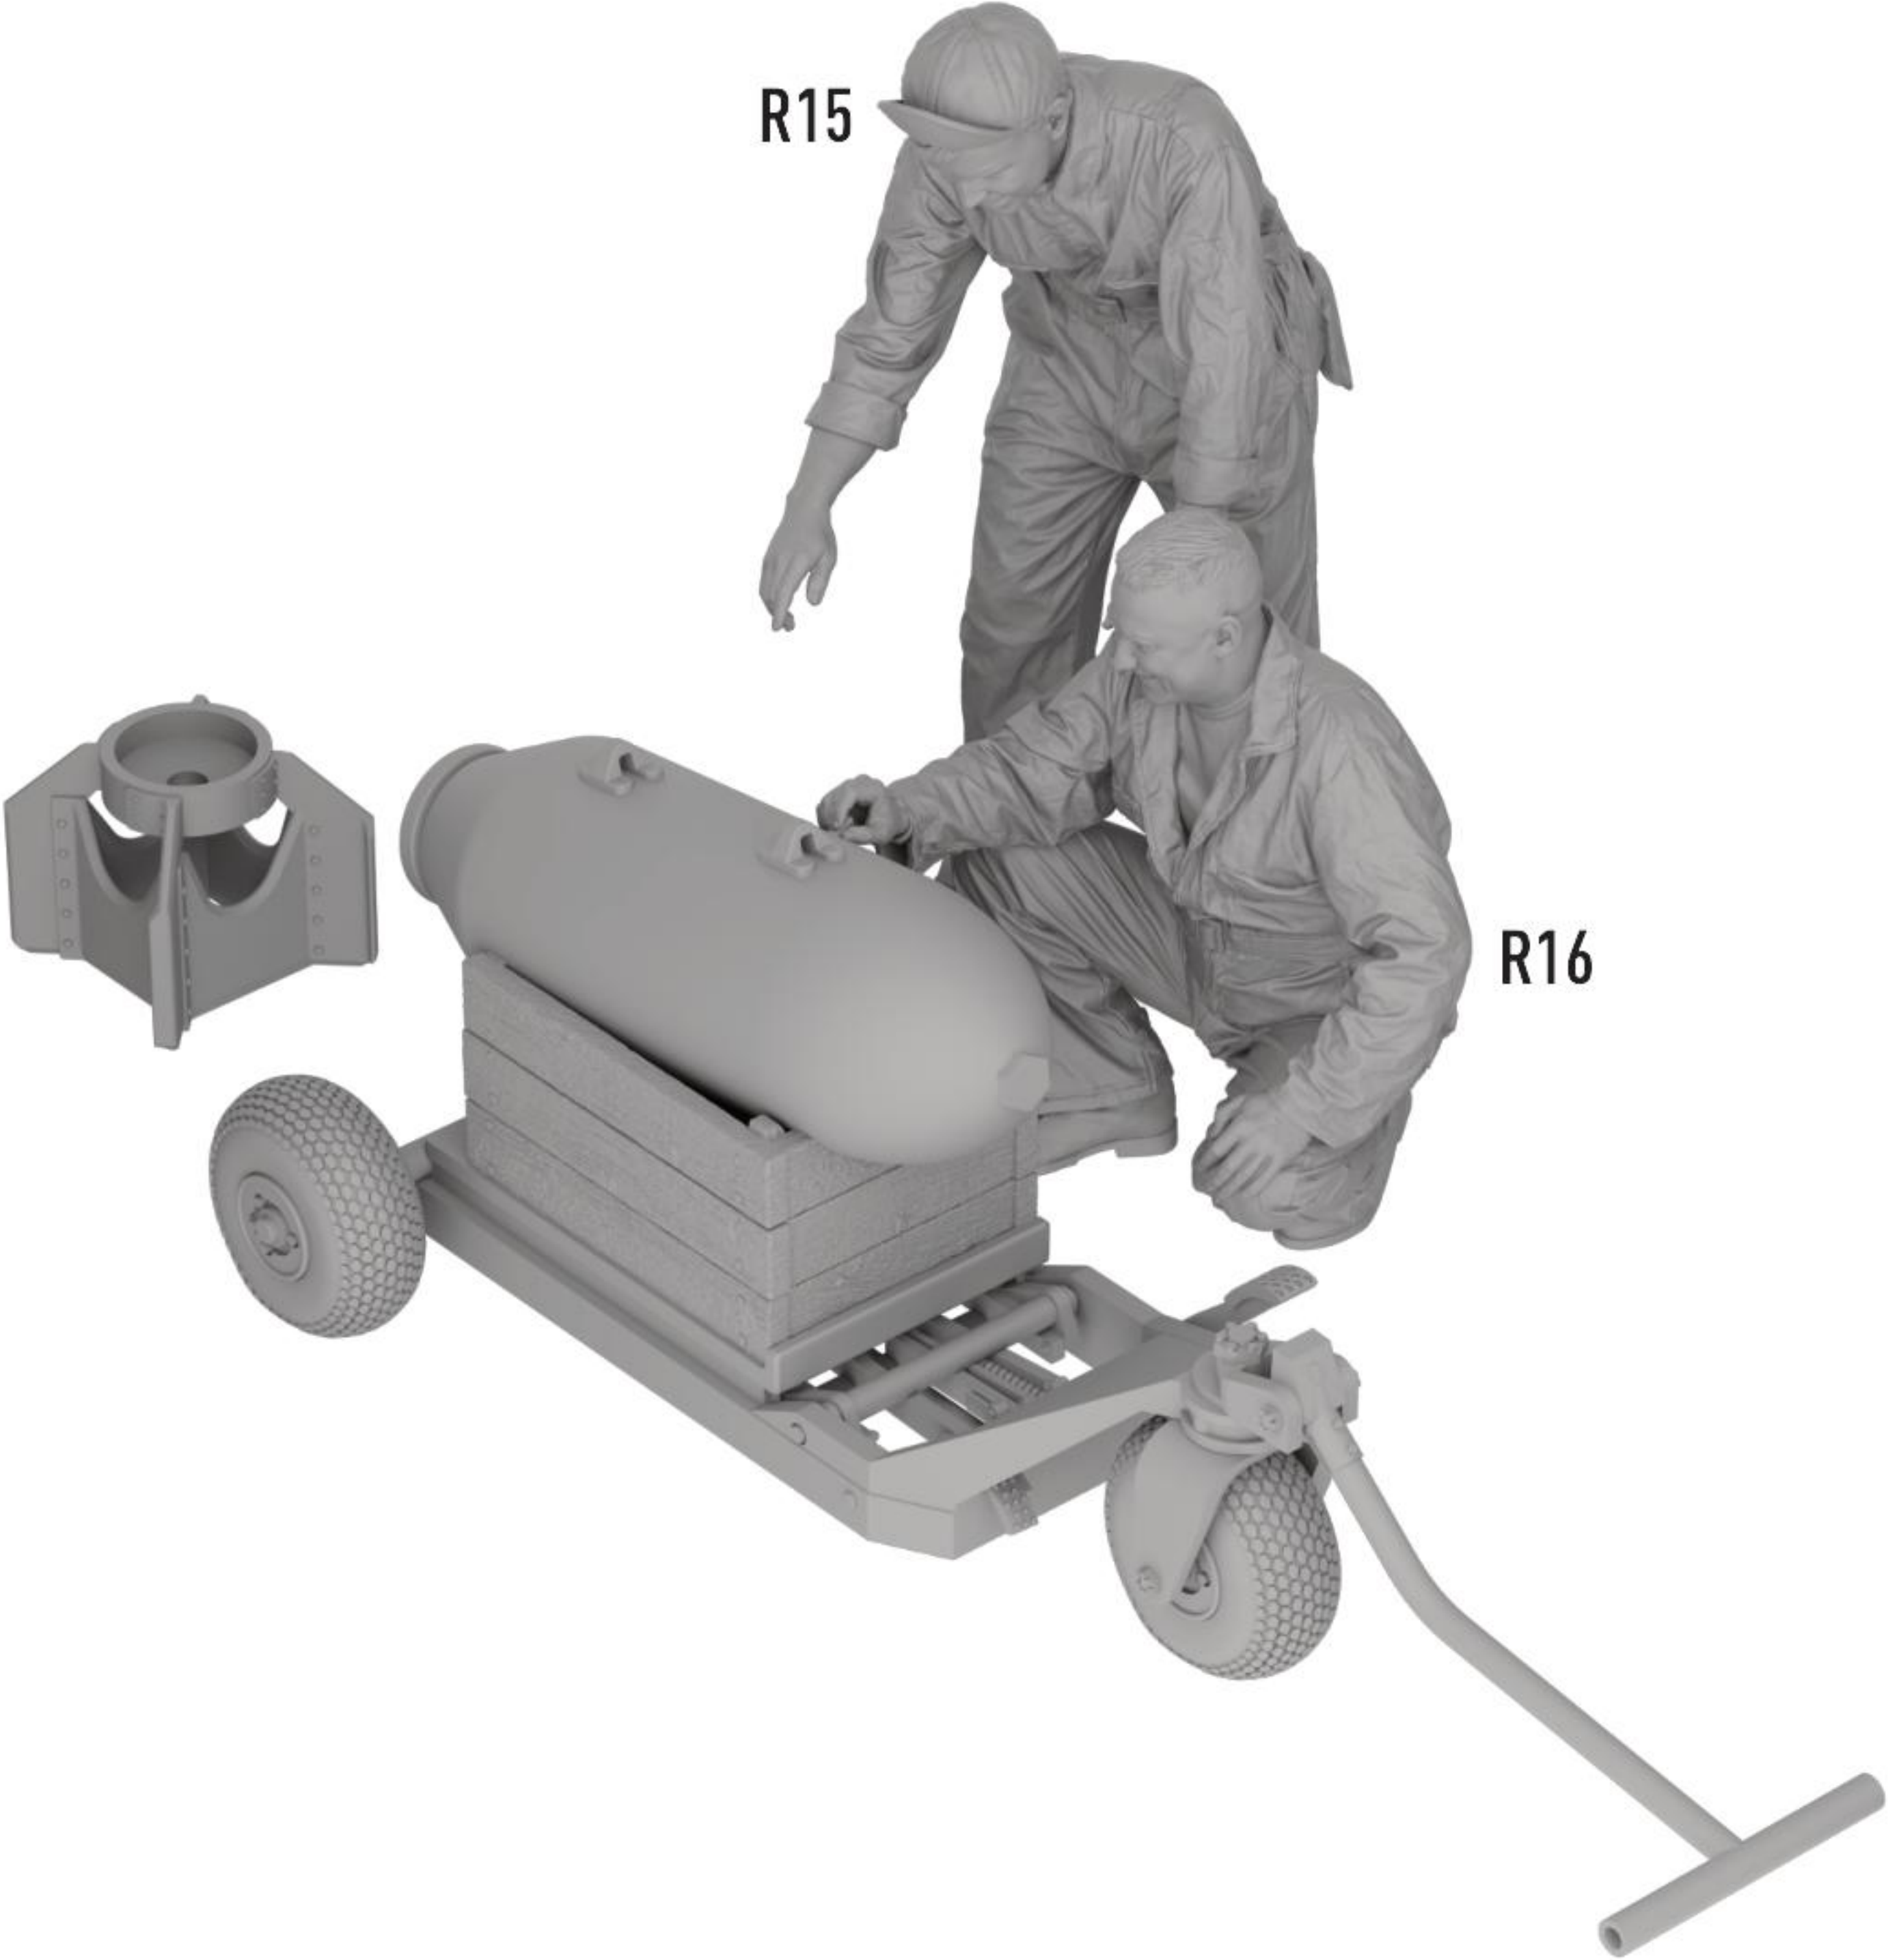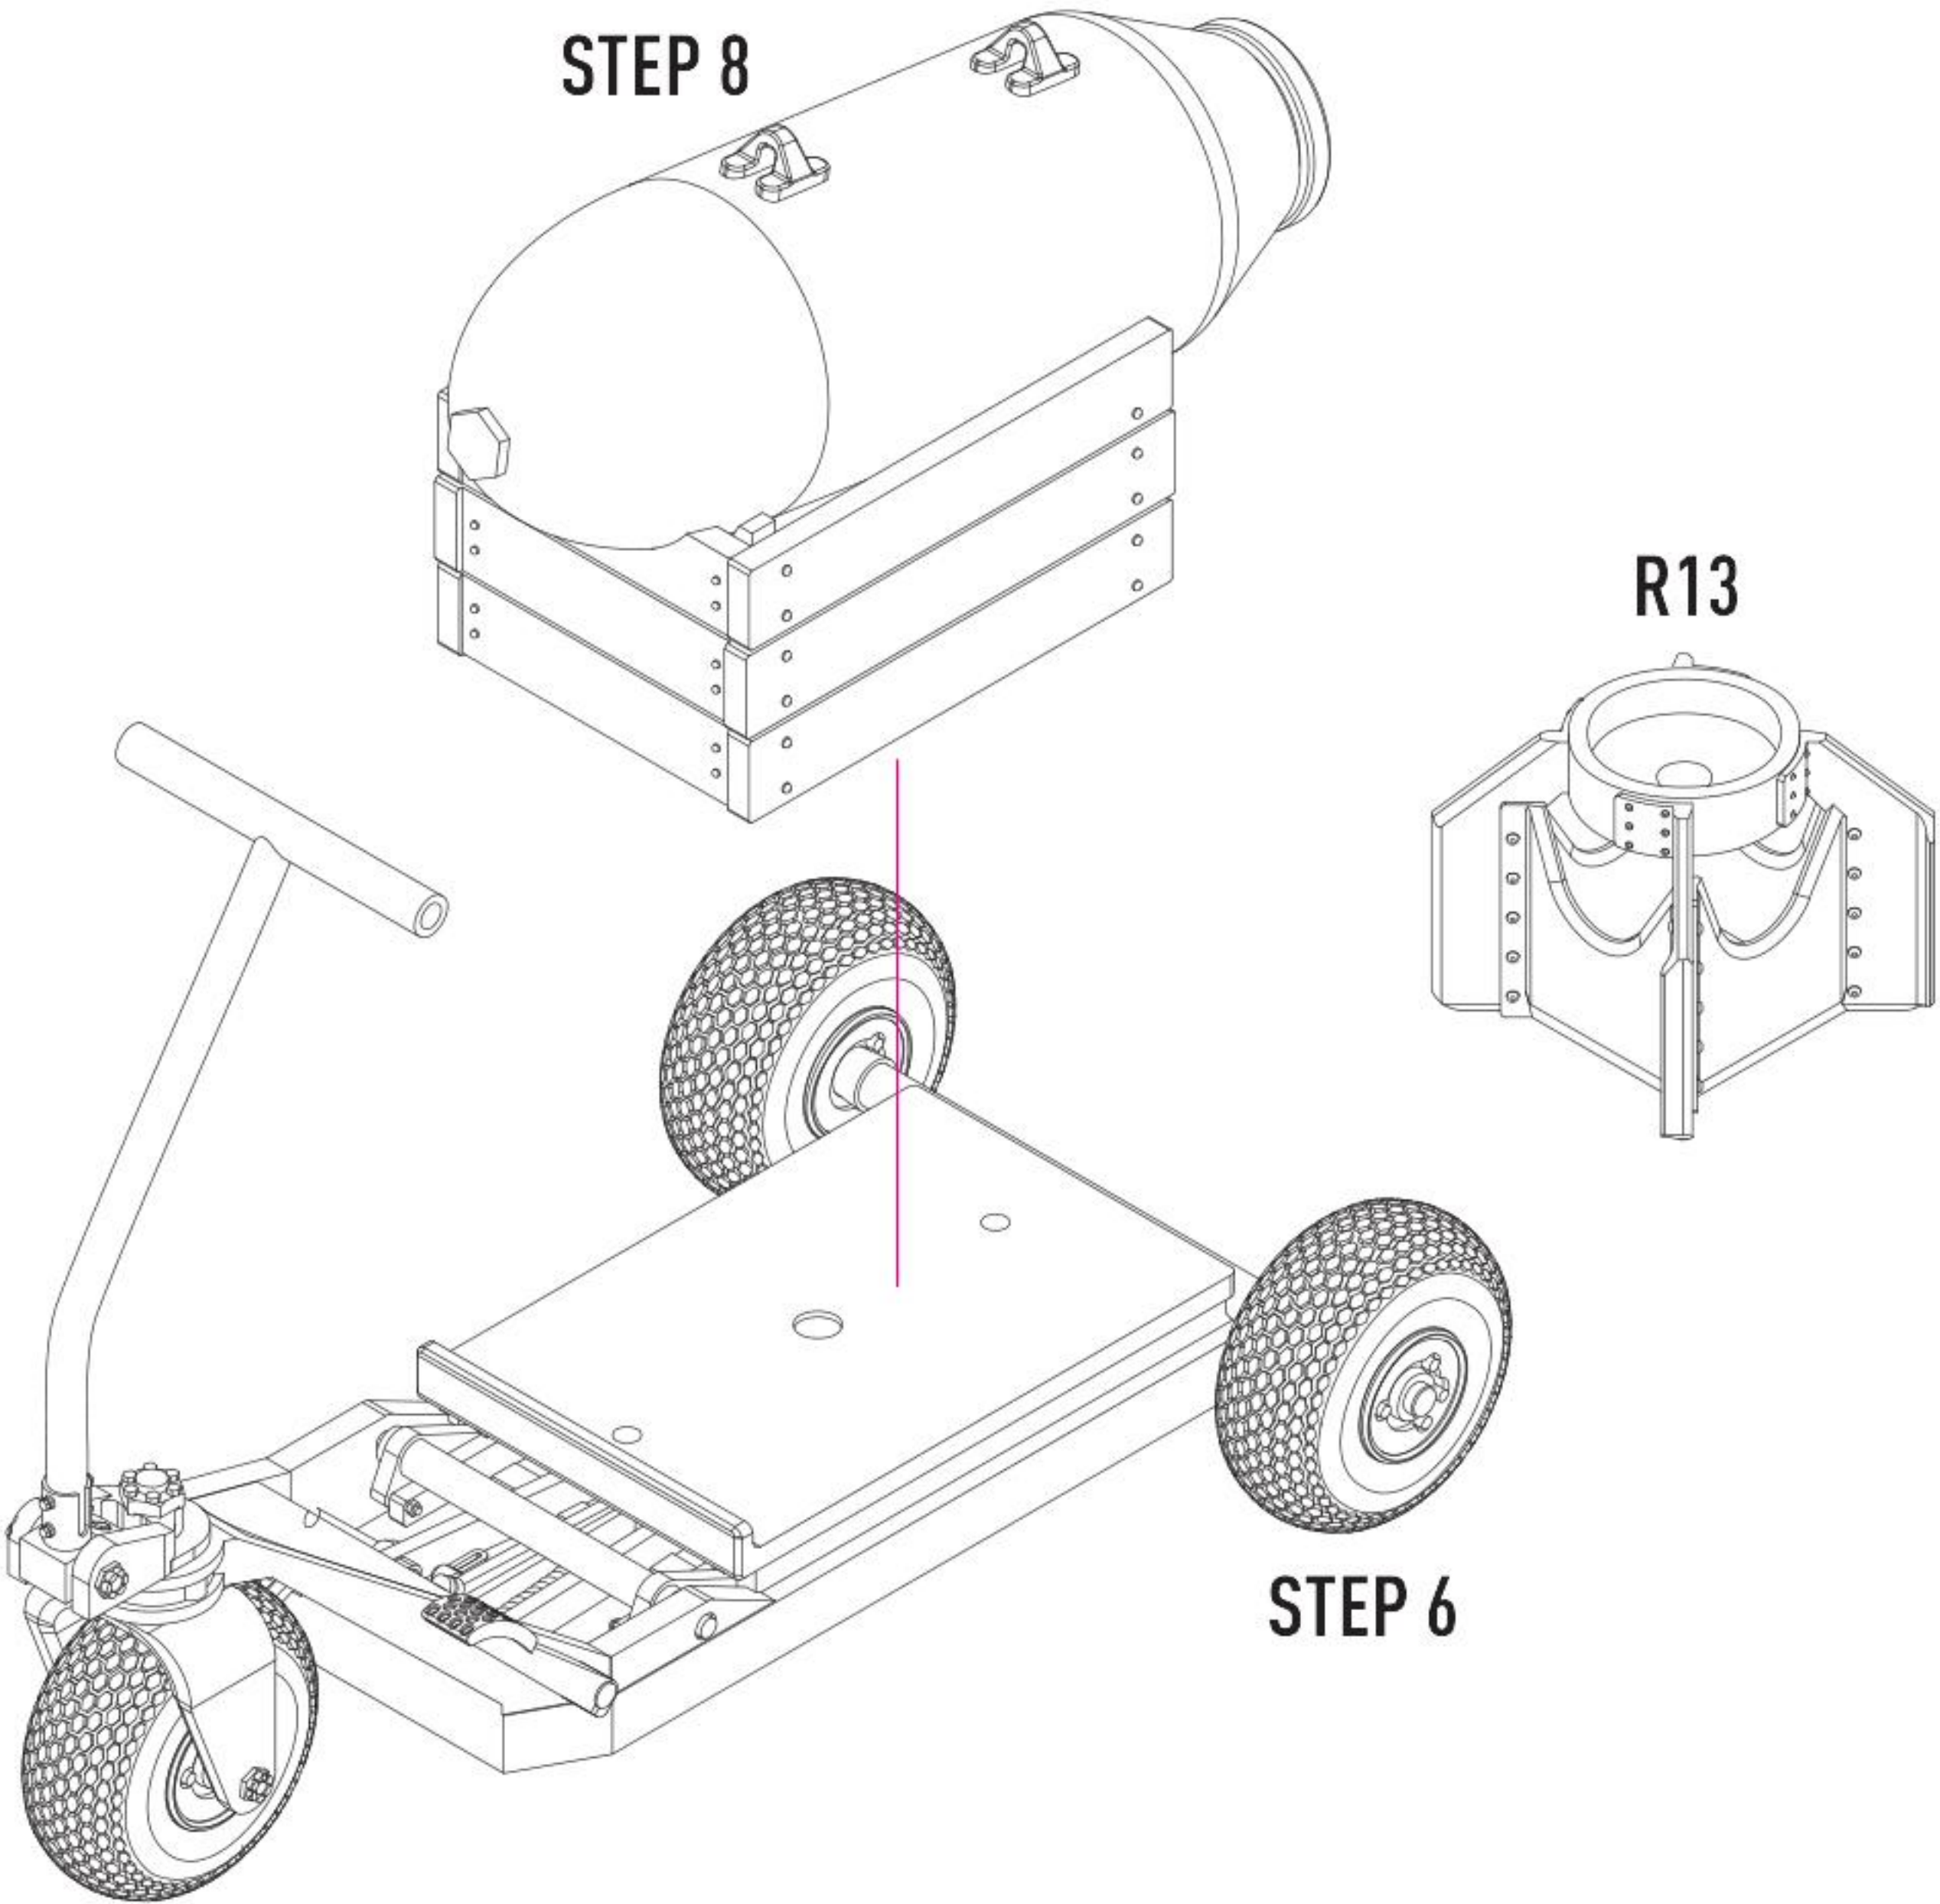


PAINT INSTRUCTION

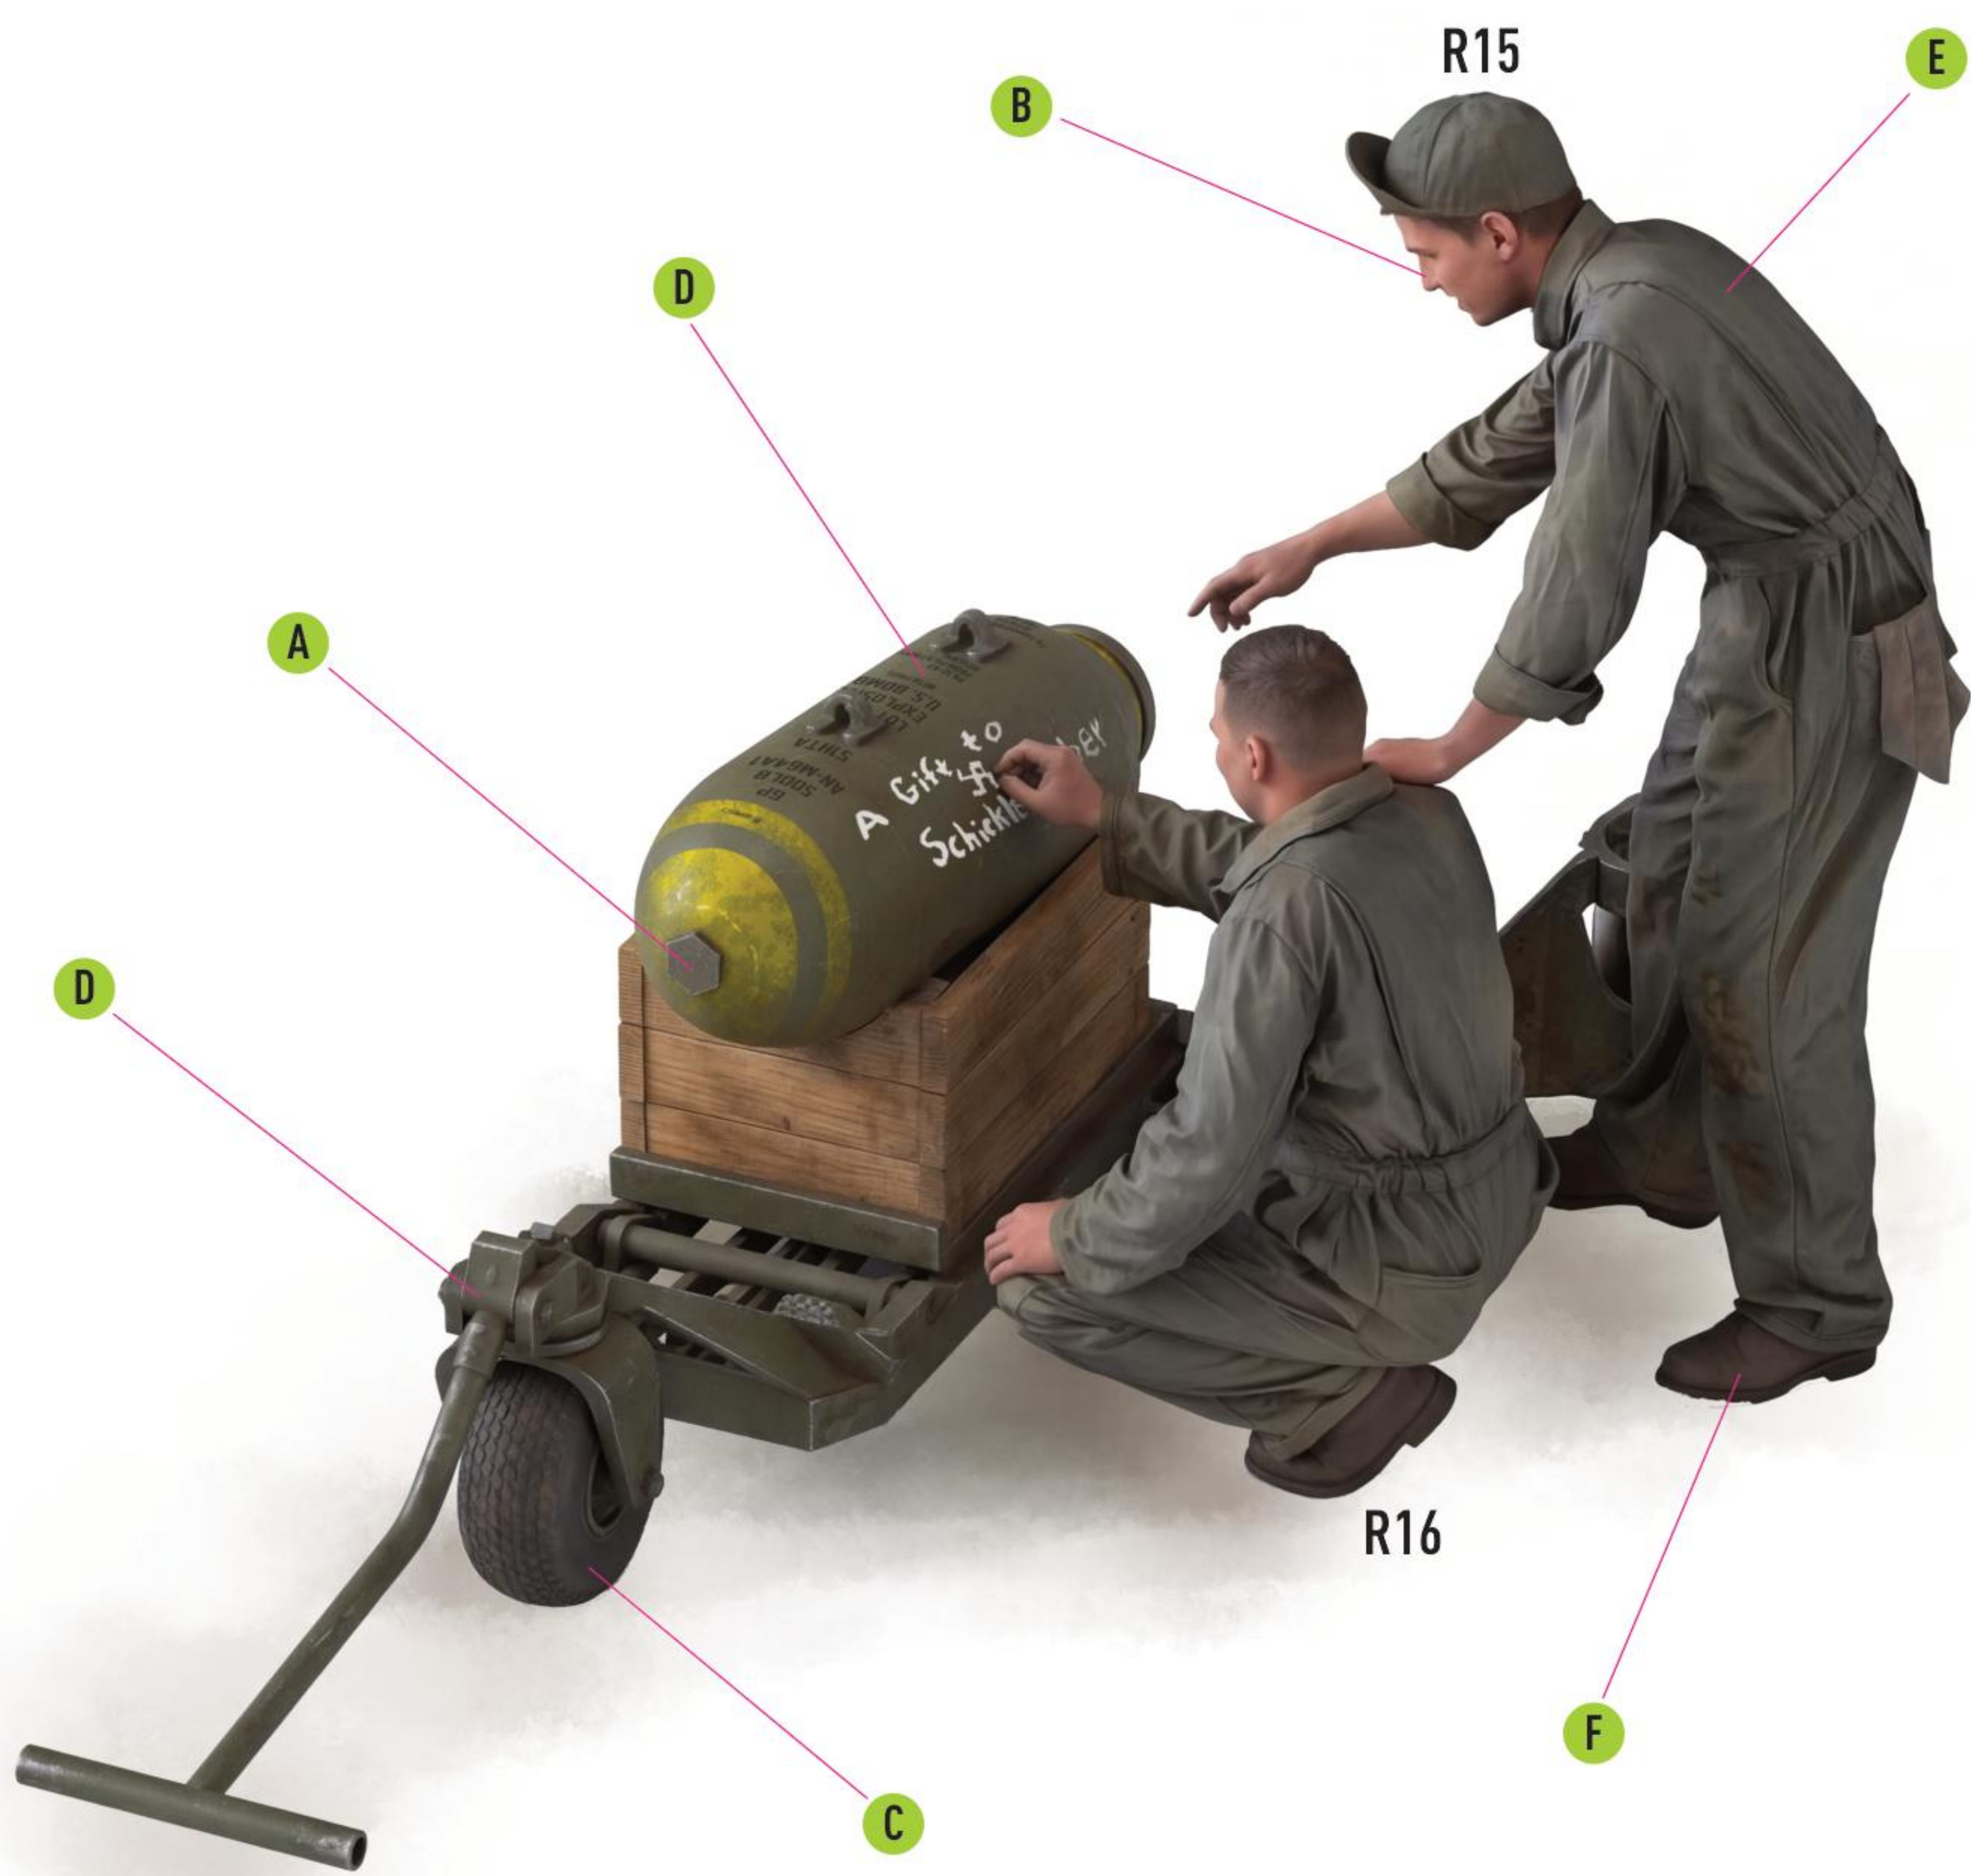

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
A	STEEL	H18	C28
B	FLESH	H51	C51
C	TIRE BLACK		C137
D	OLIVE DRAB	H304	C304
E	KHAKI	H55	C55
F	RED BROWN	H47	C41

DECAL INSTRUCTION

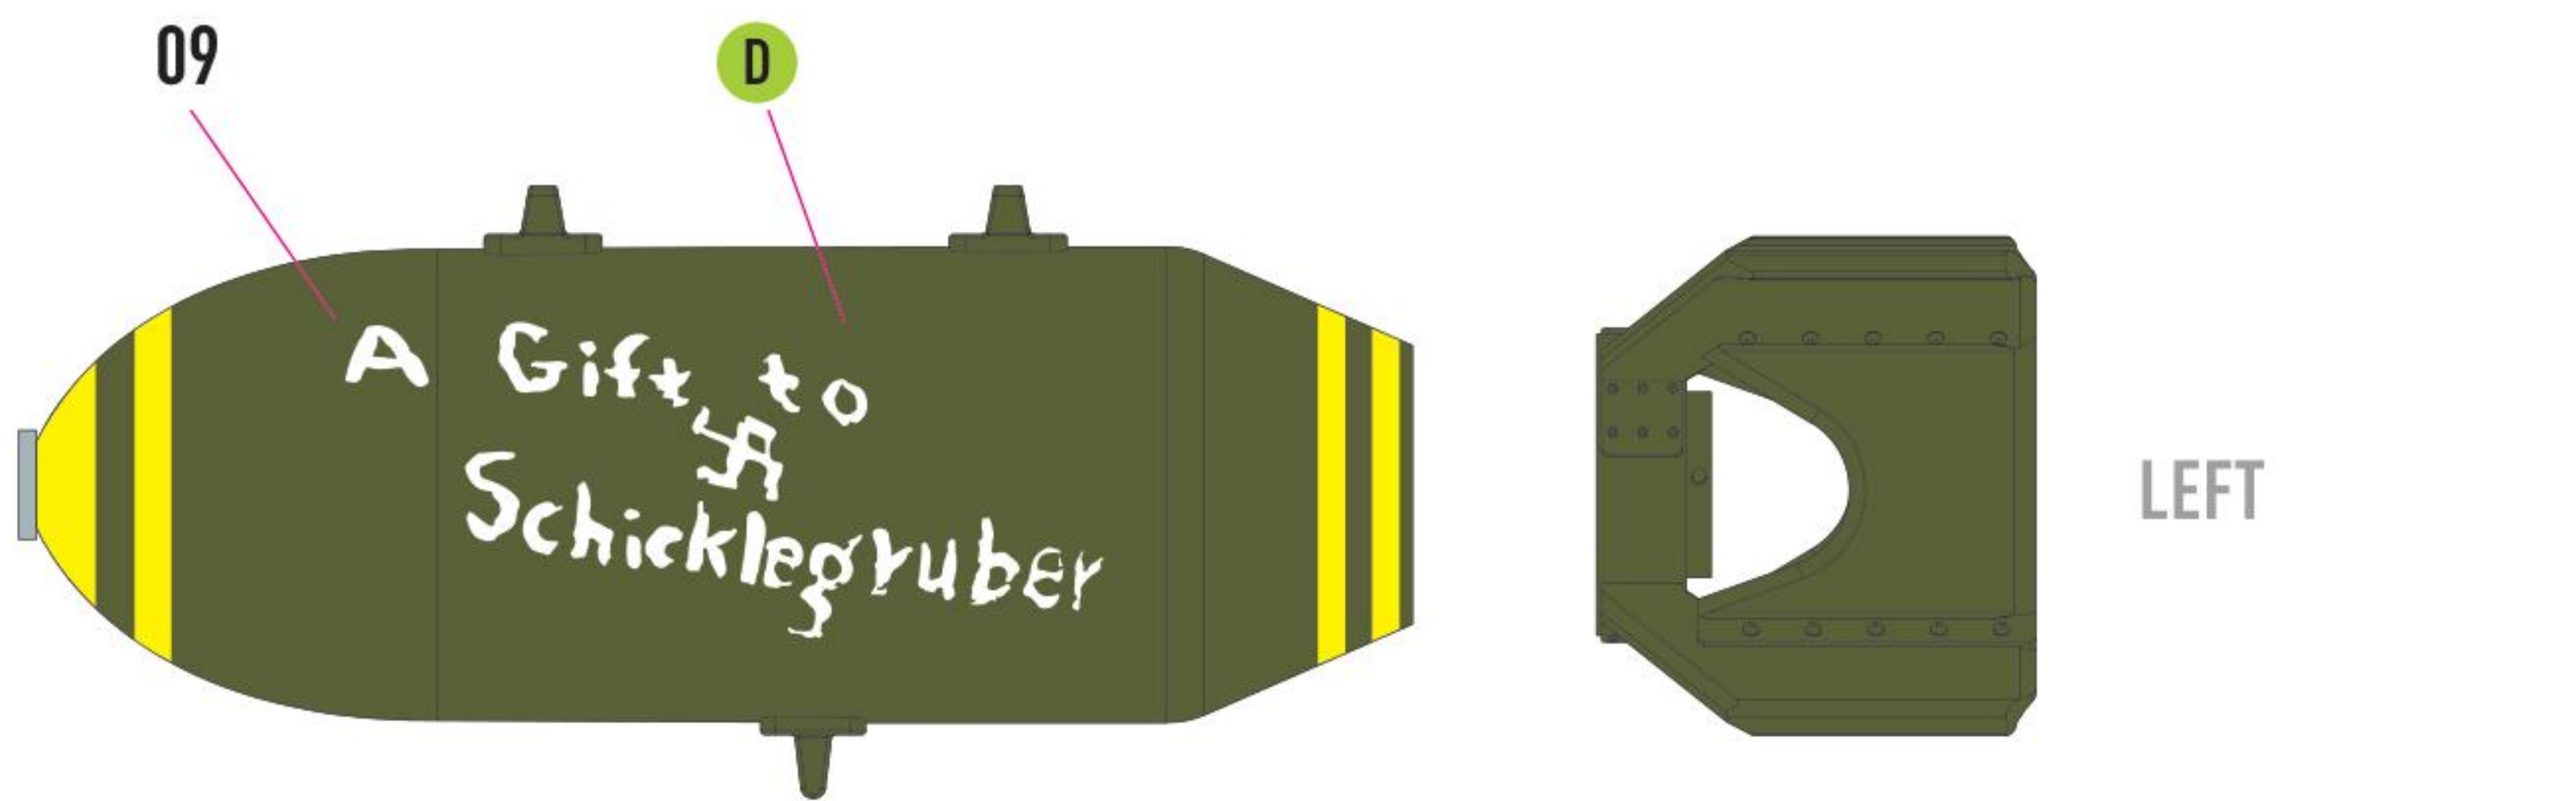

08/09 - TO CHOOSE FROM

