



USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**

R1



R2



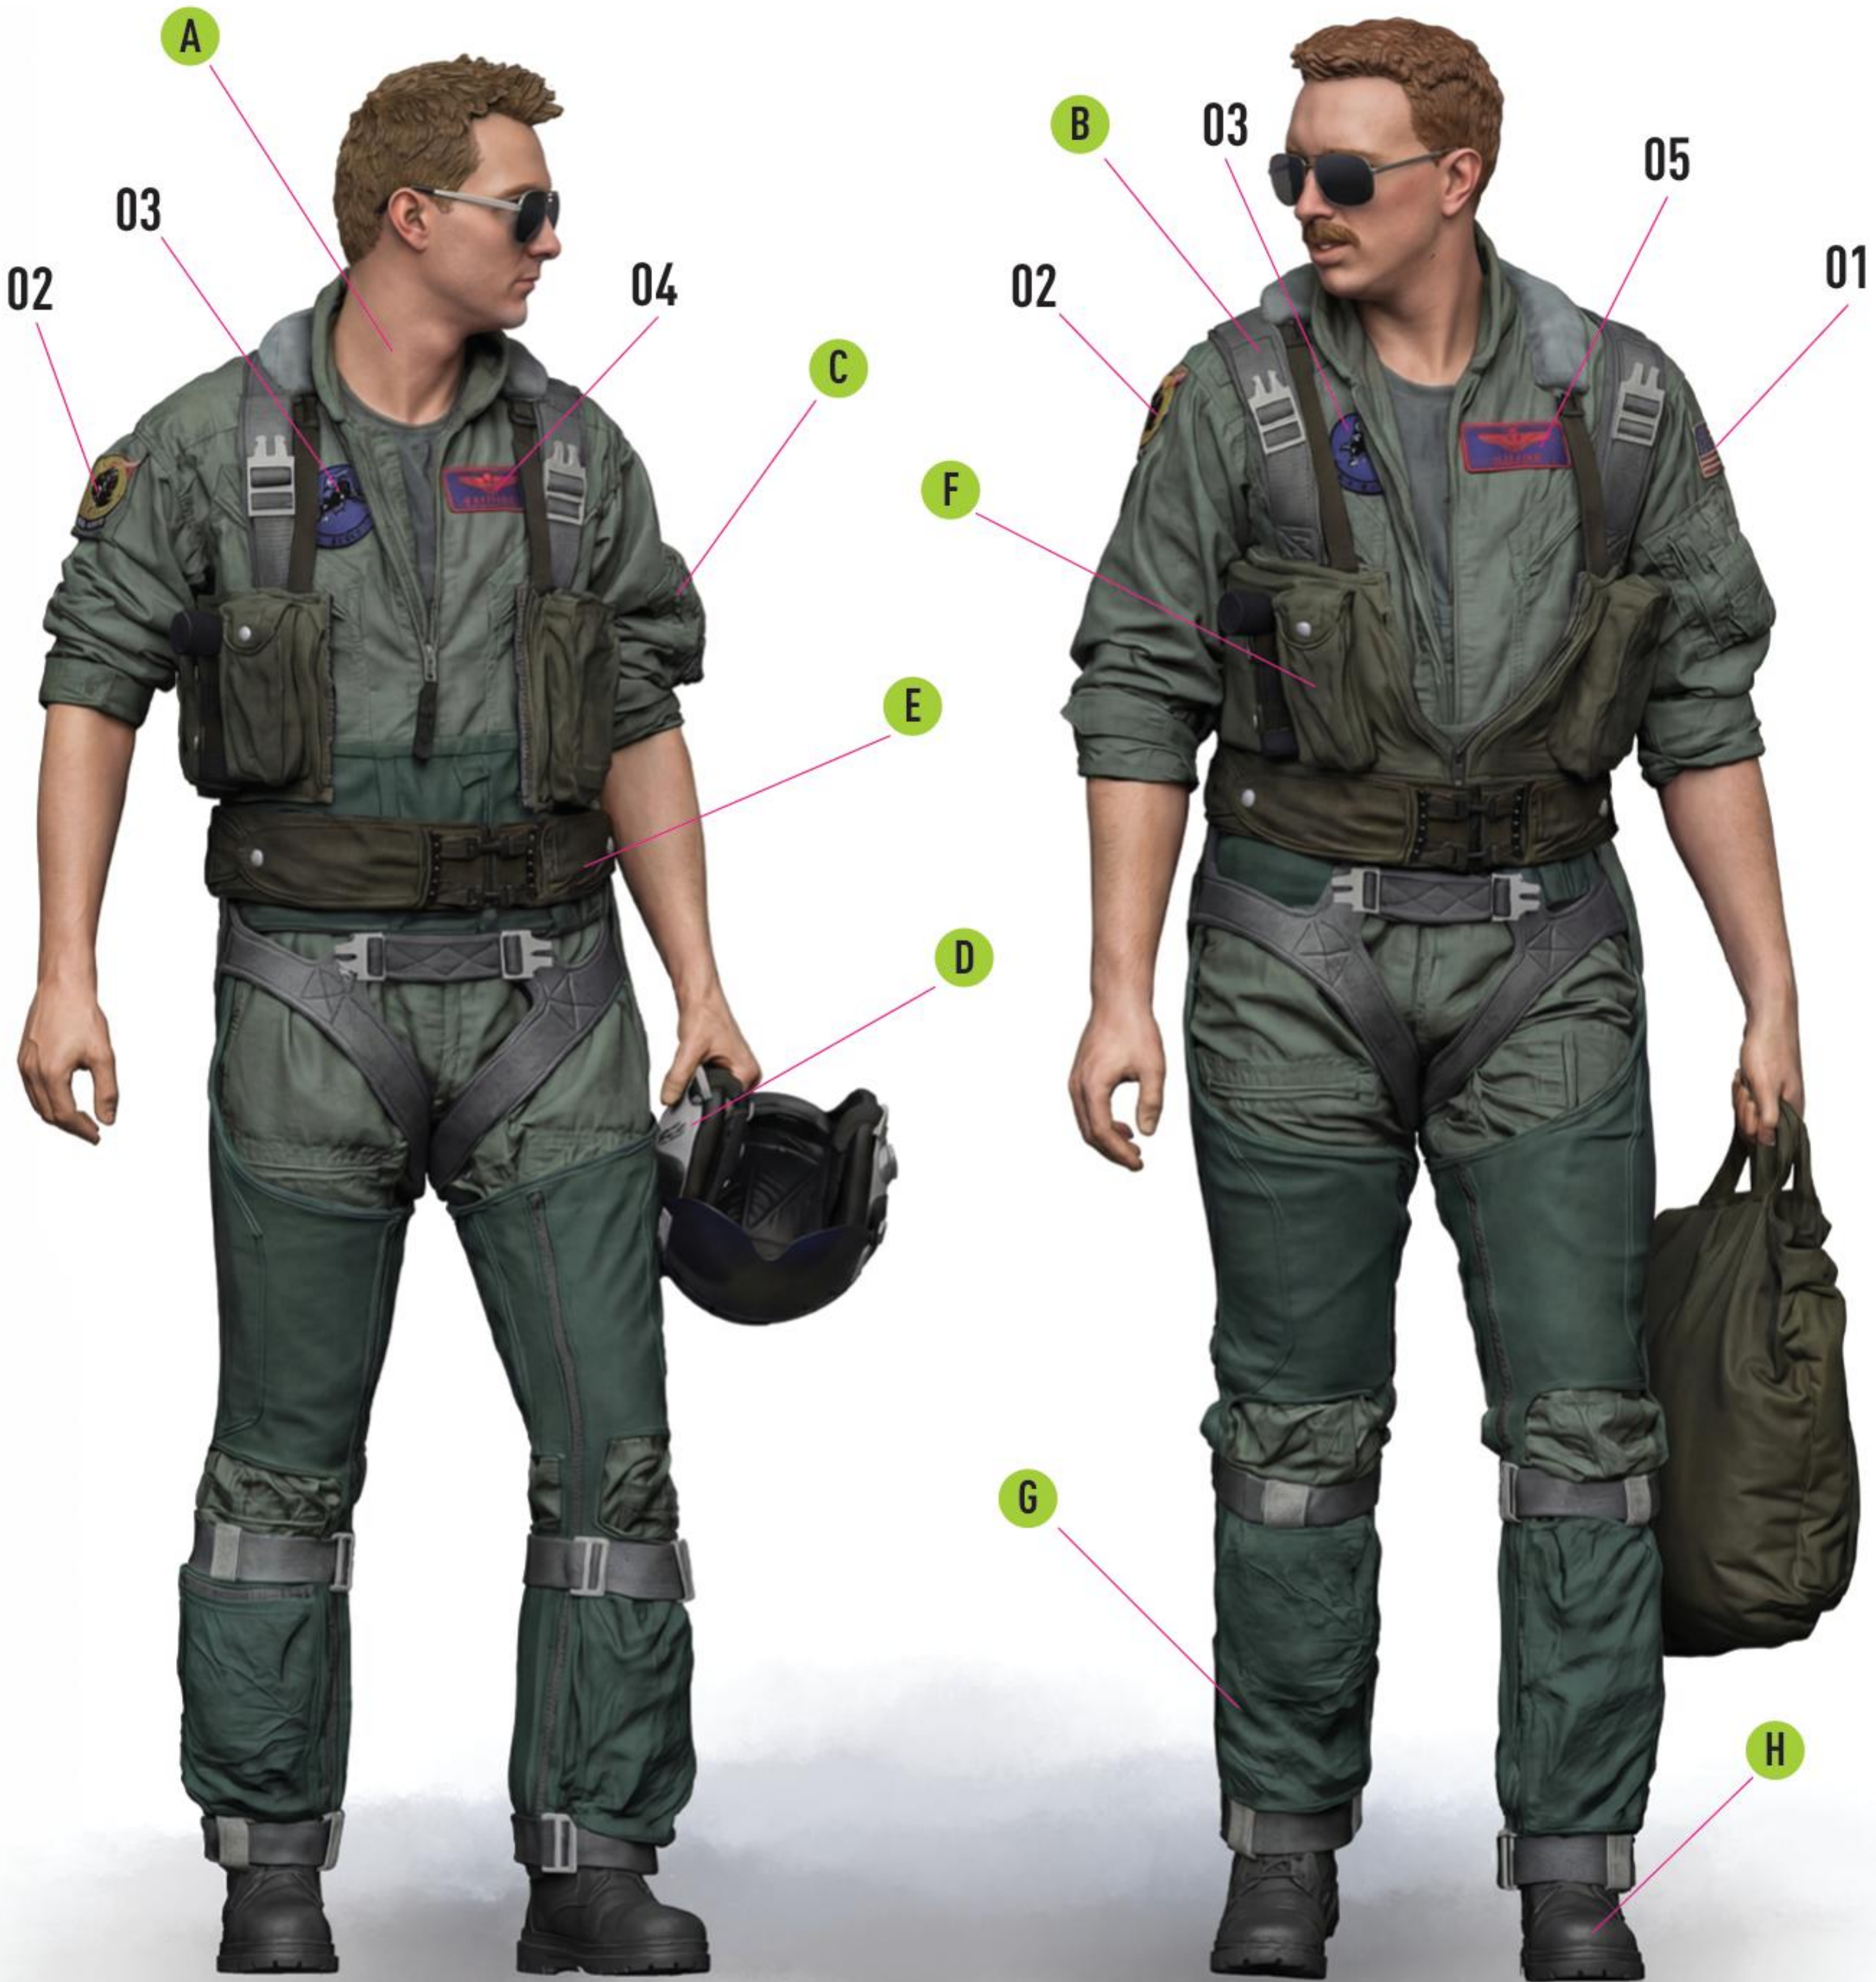

PAINT INSTRUCTION

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
A	FLESH	H51	C51
B	NEUTRAL GRAY	H53	C13
C	DARK SEAGRAY	H75	C25
D	CHARACTER WHITE	H107	C107

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
E	DARK GREEN	H303	C303
F	OLIVE DRAB	H304	C304
G	MEDIUM SEA GRAY		C335
H	SEMI GLOSS BLACK		C92