




 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

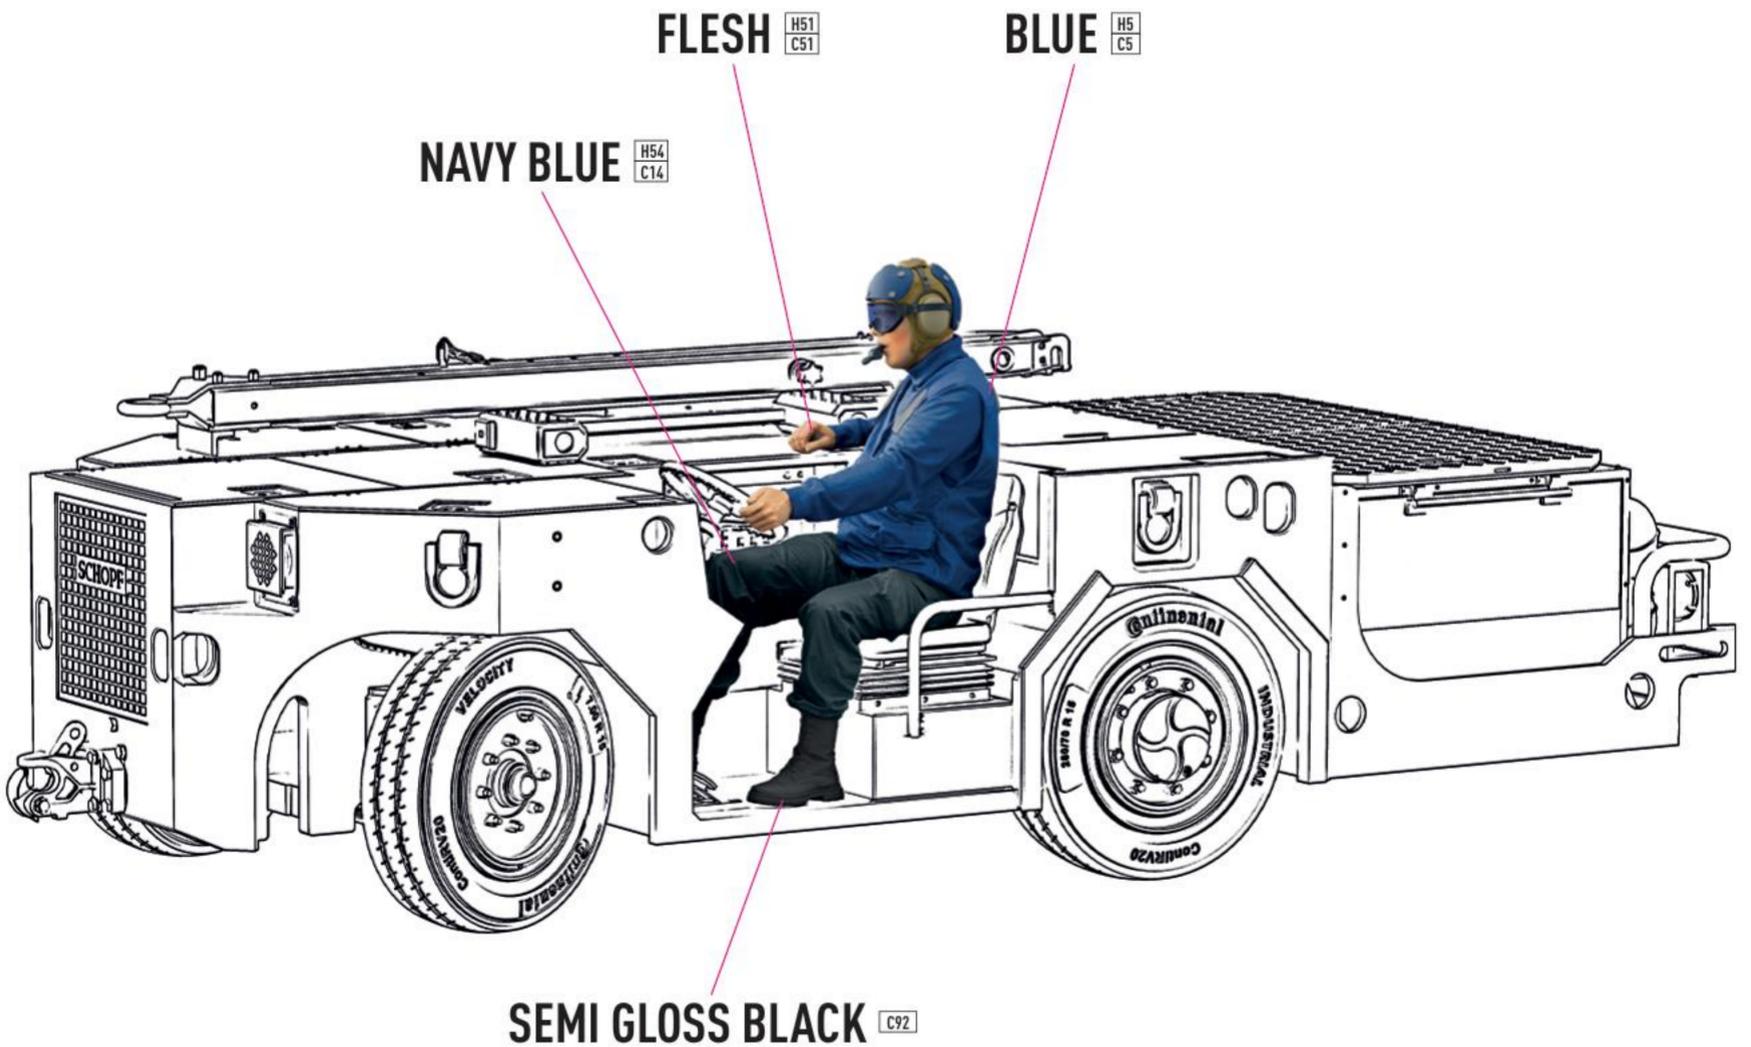

PAINT INSTRUCTION

| COLORS | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|--------|-----------------|------------------|
| BLUE | H5 | C5 |
| FLESH | H22 | C22 |

| COLORS | GUNZE / AQUEOUS | GUNZE / MR.COLOR |
|------------------|-----------------|------------------|
| NAVY BLUE | H54 | C14 |
| SEMI GLOSS BLACK | | C92 |