


R6

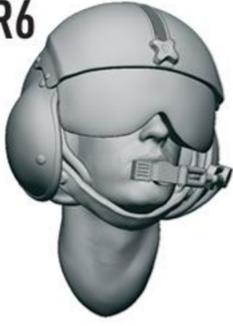

R7



R5



R4




R3



R1

R2



USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

**DETAIL AFTER REMOVAL  
FROM SPRUES**



R8



R9



R8



R13



R10



NEUTRAL GRAY H53 C13

DARK GREEN H64 C23

KHAKI H81 C55

FLESH H51 C51



SEMI GLOSS BLACK C92

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
DARK GREEN	H64	C23
NEUTRAL GRAY	H53	C13
KHAKI	H81	C55

**PAINT INSTRUCTION**

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
FLESH	H51	C51