 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

**DETAIL AFTER REMOVAL FROM SPRUES**






**FLESH** H51  
C51

**PAINT INSTRUCTION**

COLORS	GUNZE / AOEIUS	GUNZE / MR.COLOR
<b>DARK GREEN</b>	H64	C23
<b>SEMI GLOSS BLACK</b>		C92
<b>FLESH</b>	H51	C51

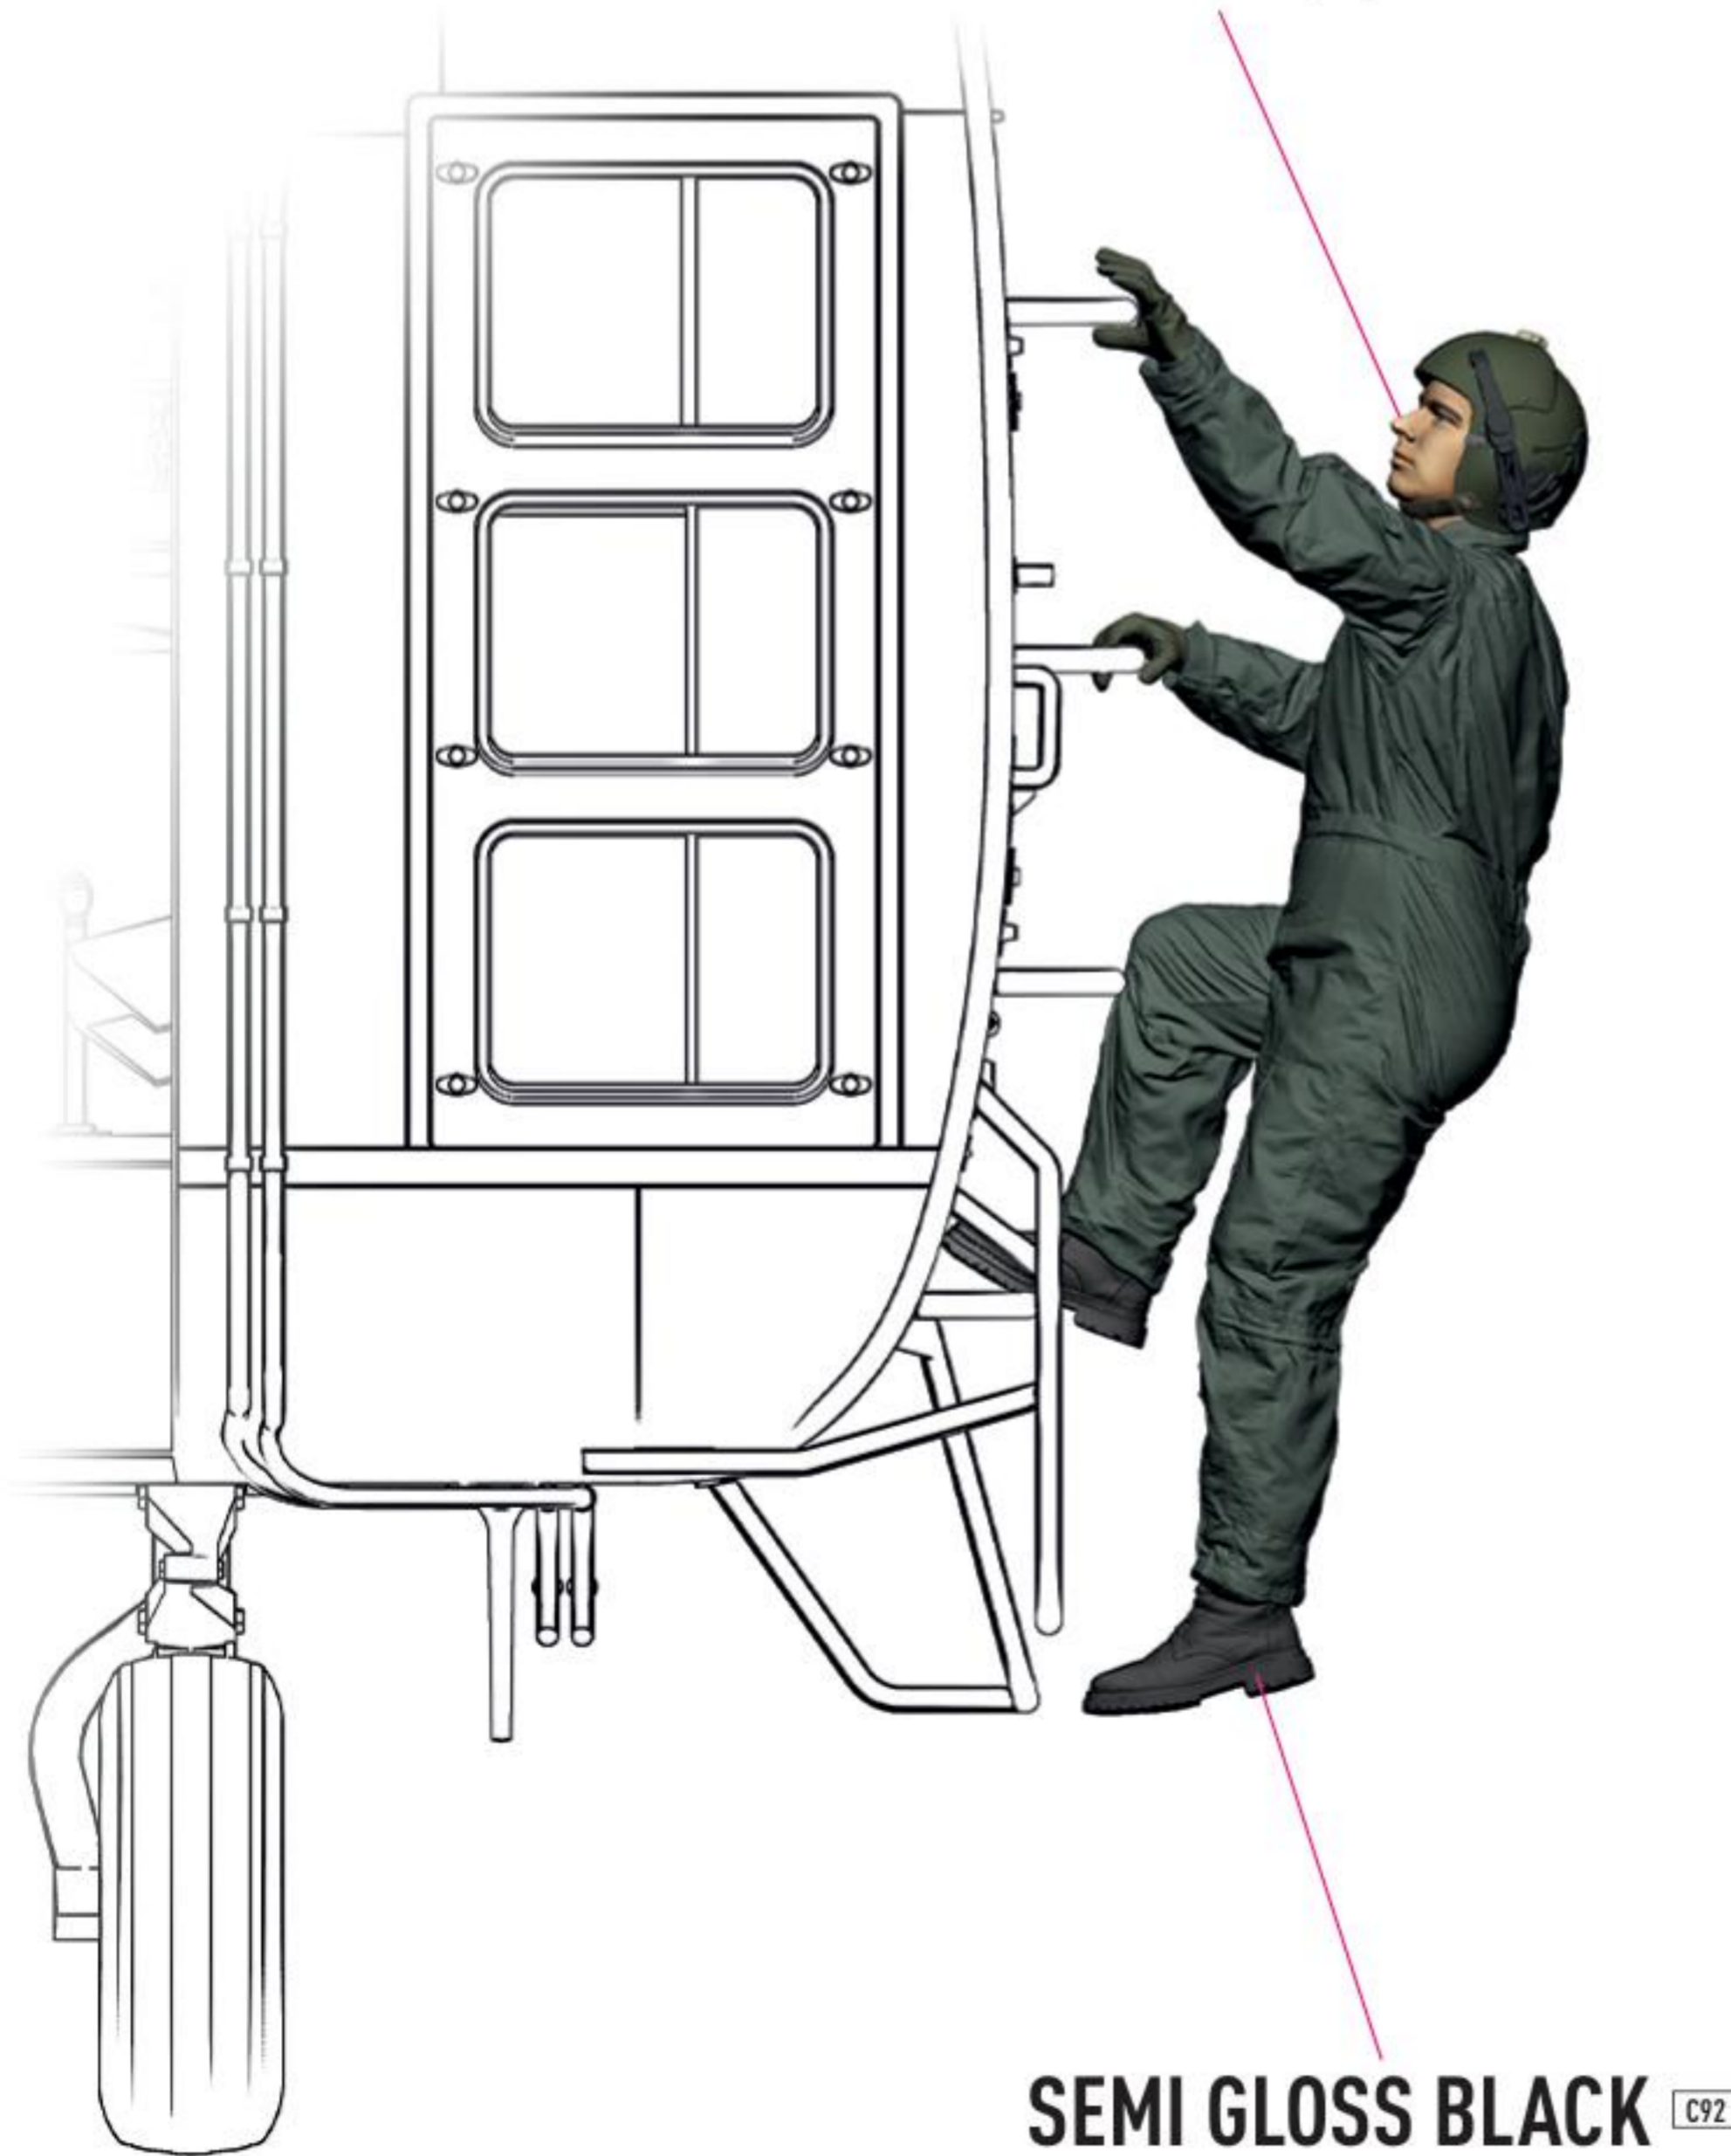

**DARK GREEN** H64  
C23

