

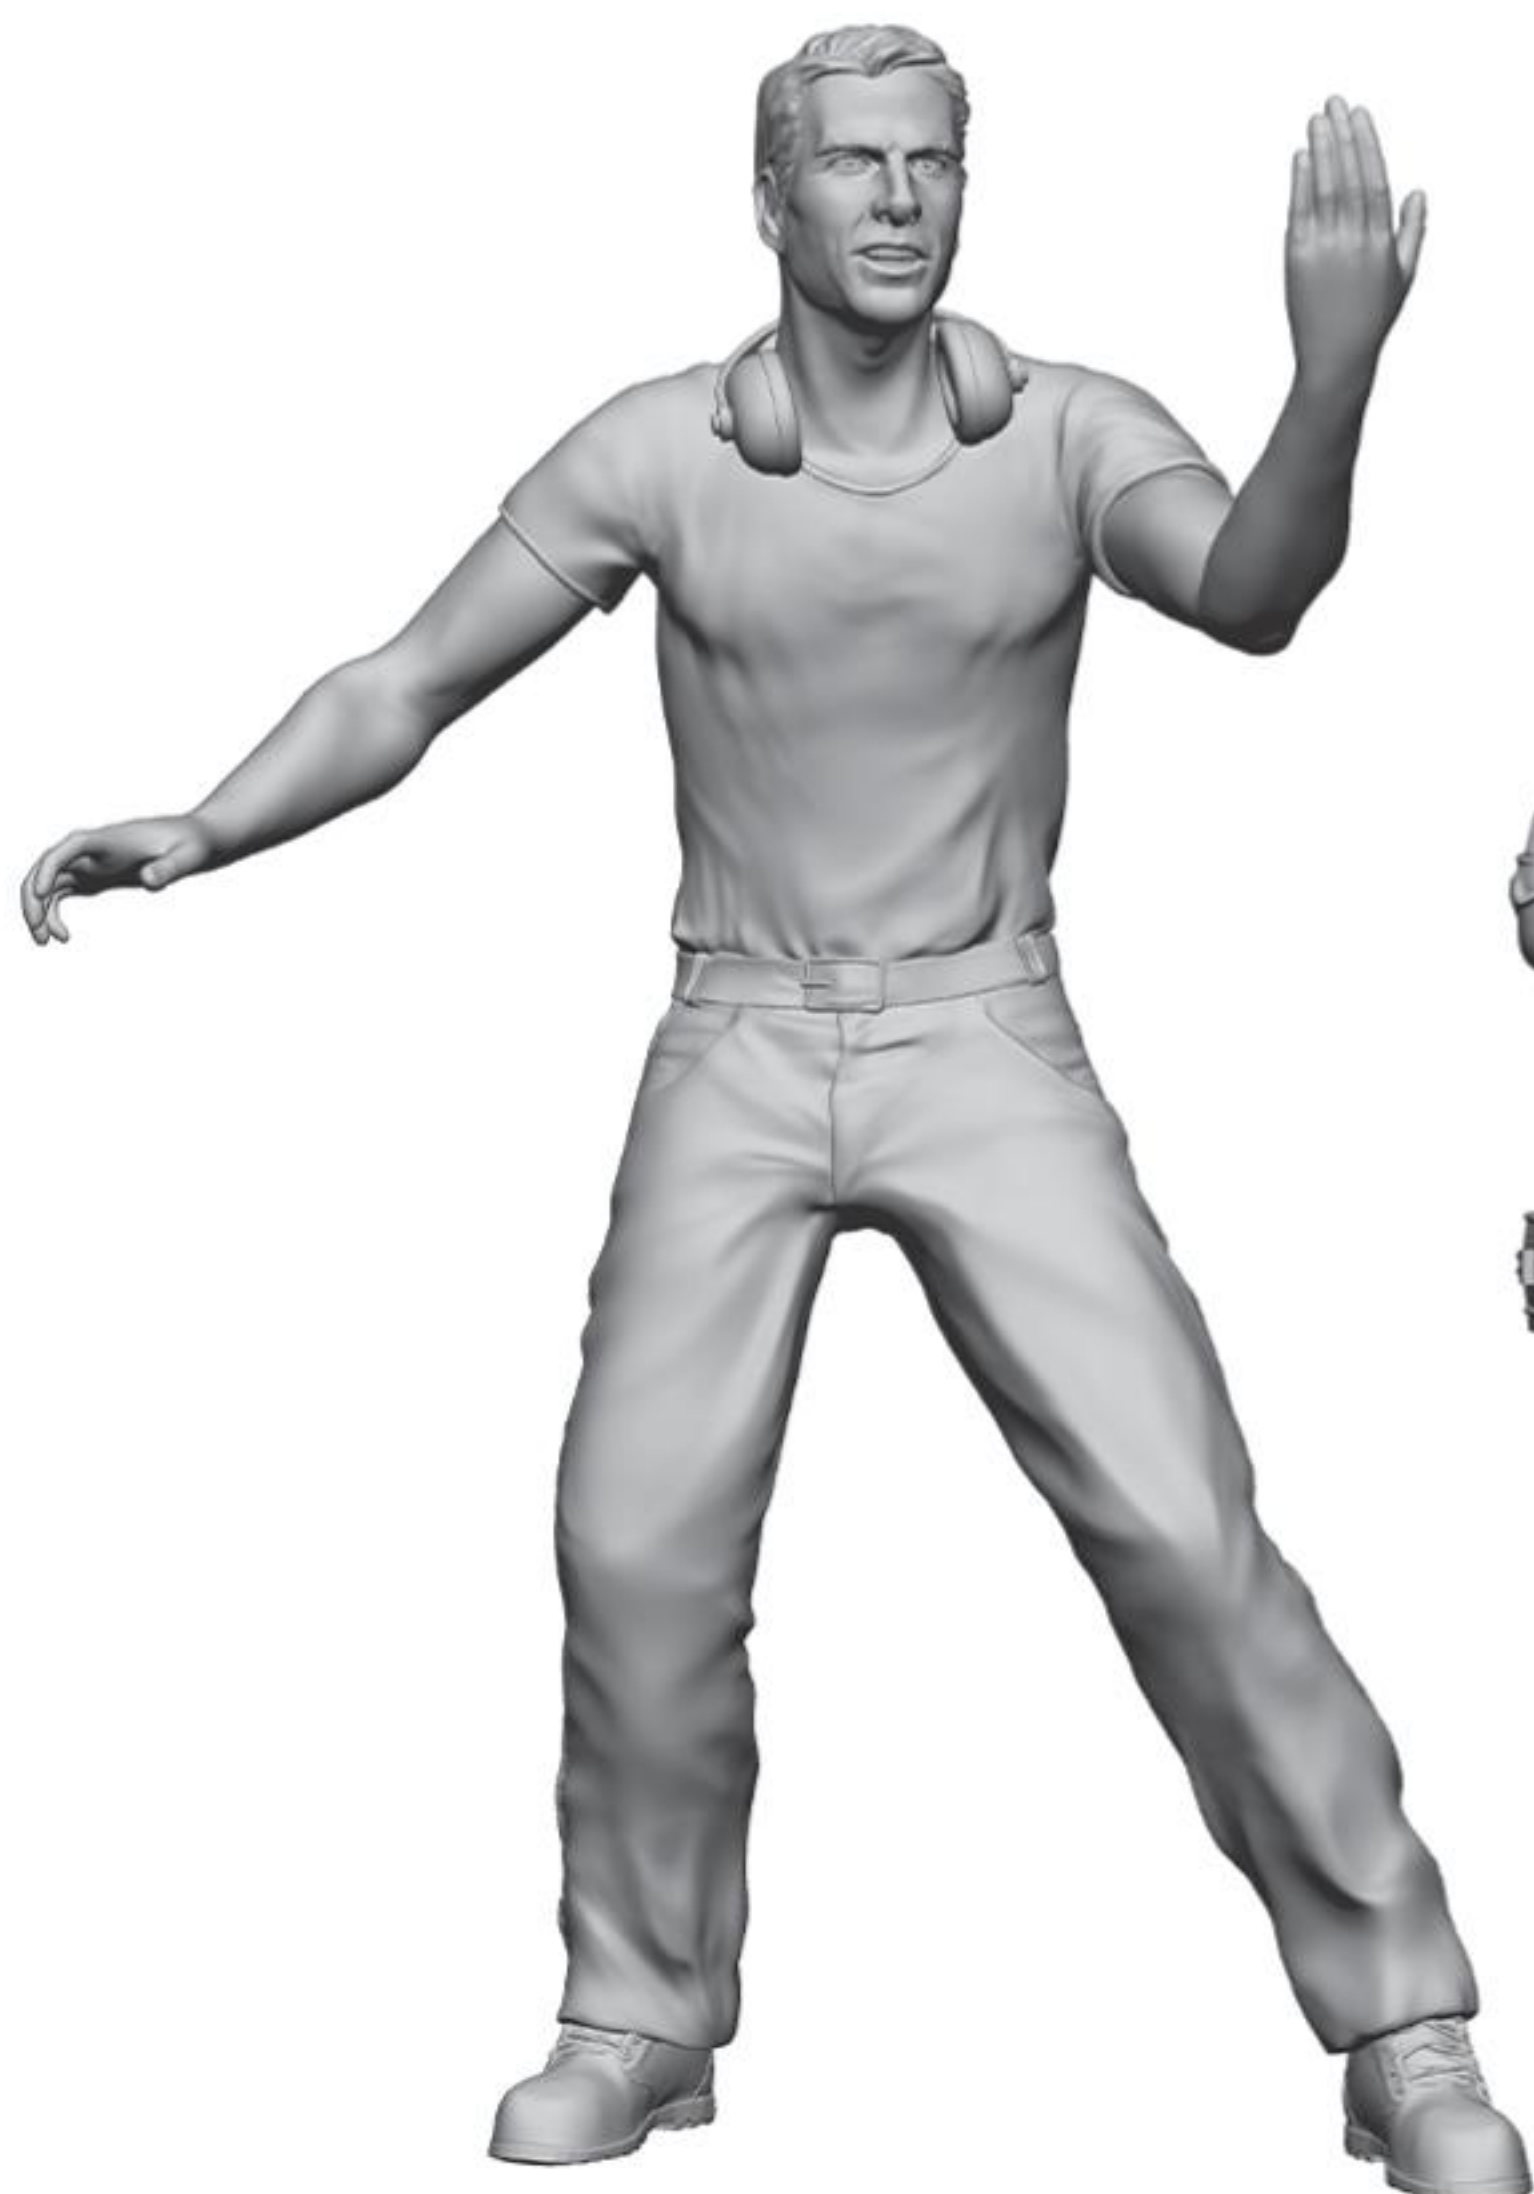
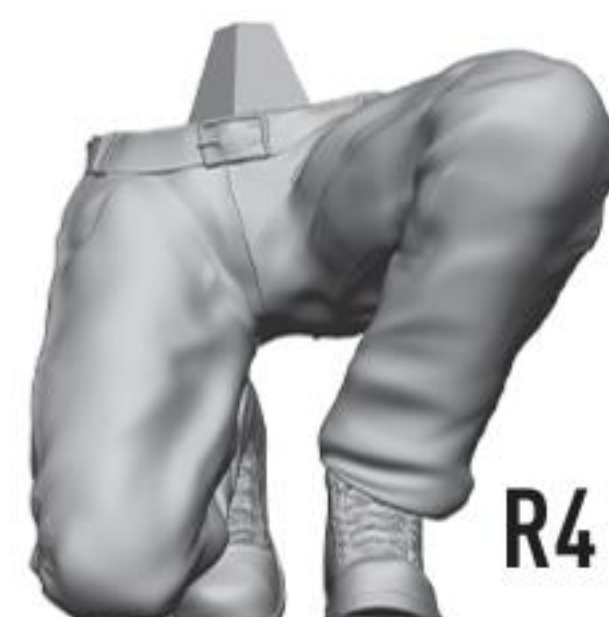
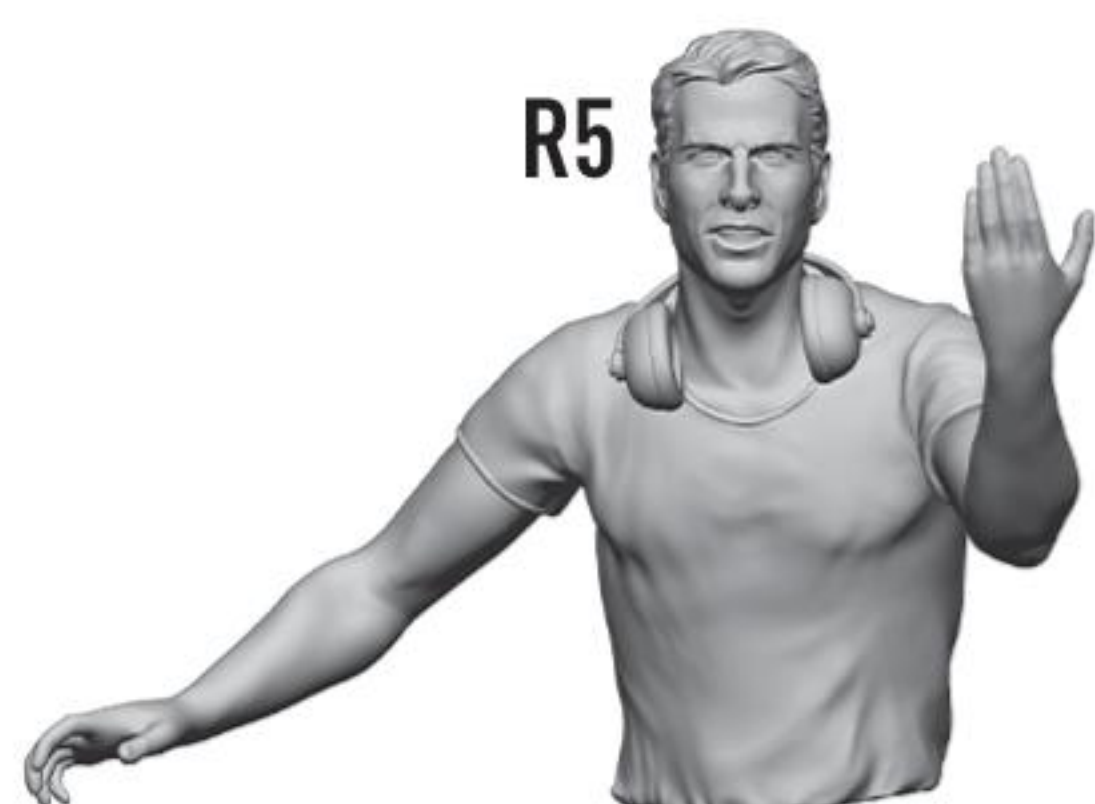


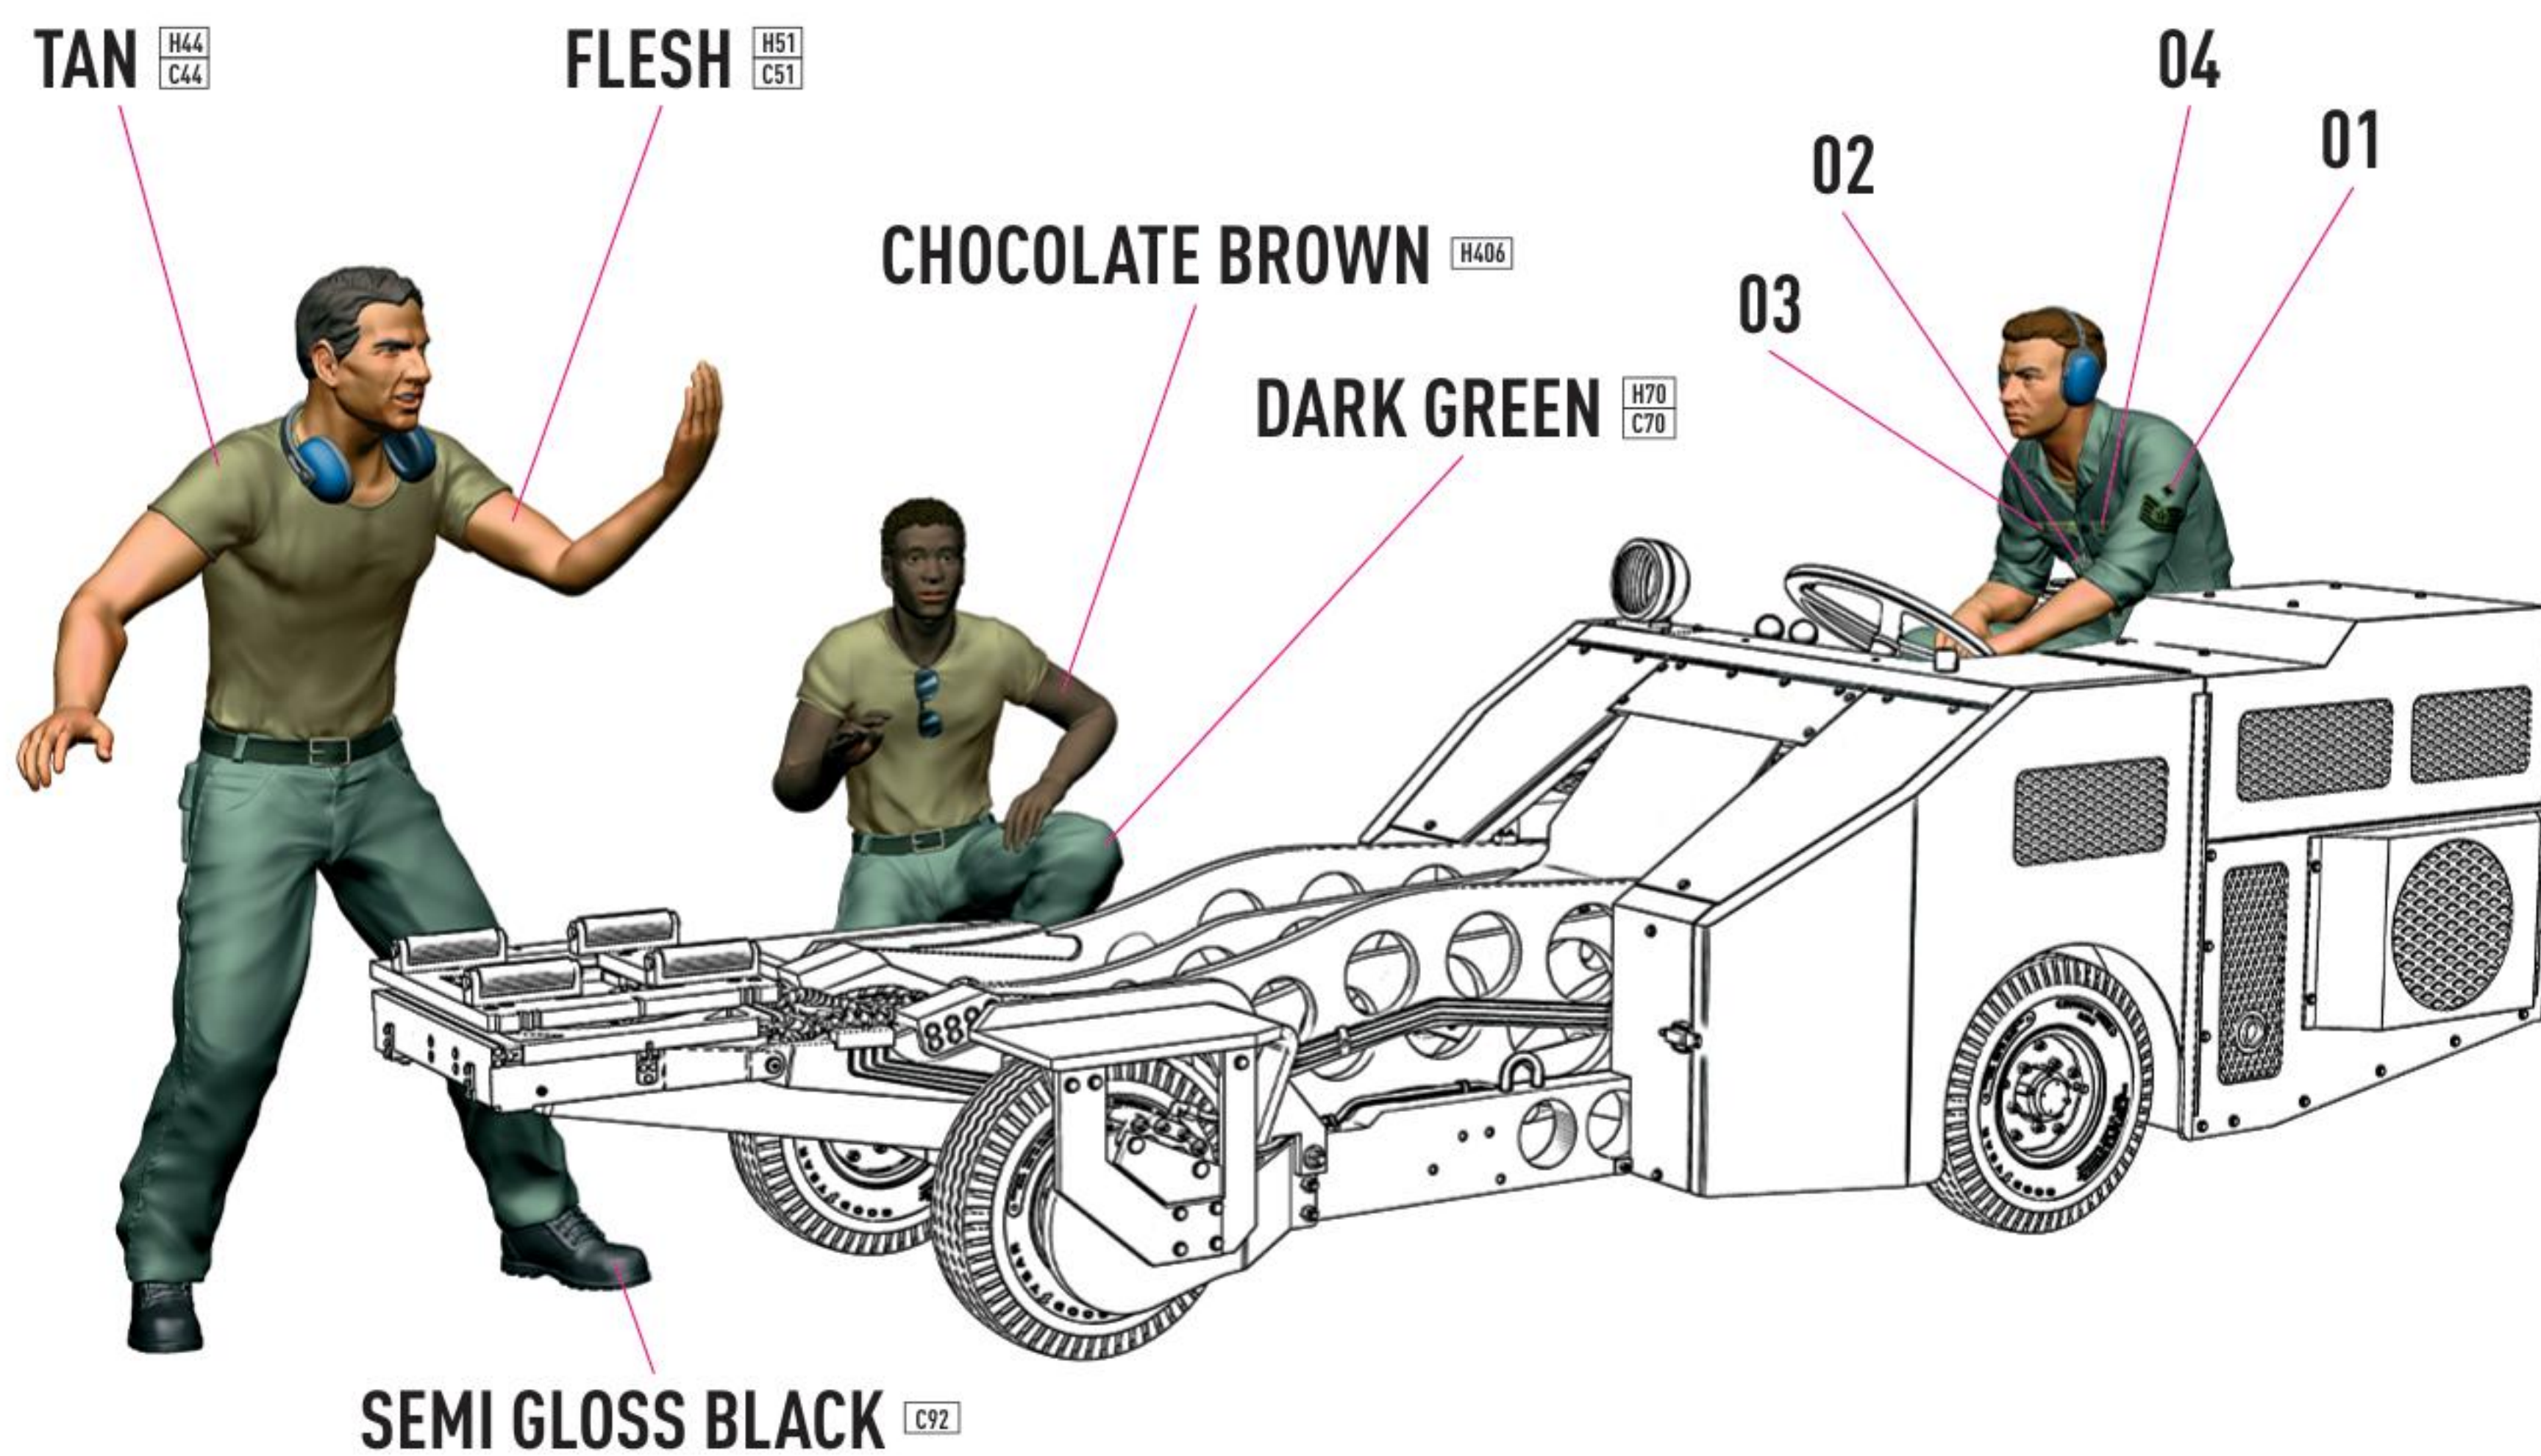

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

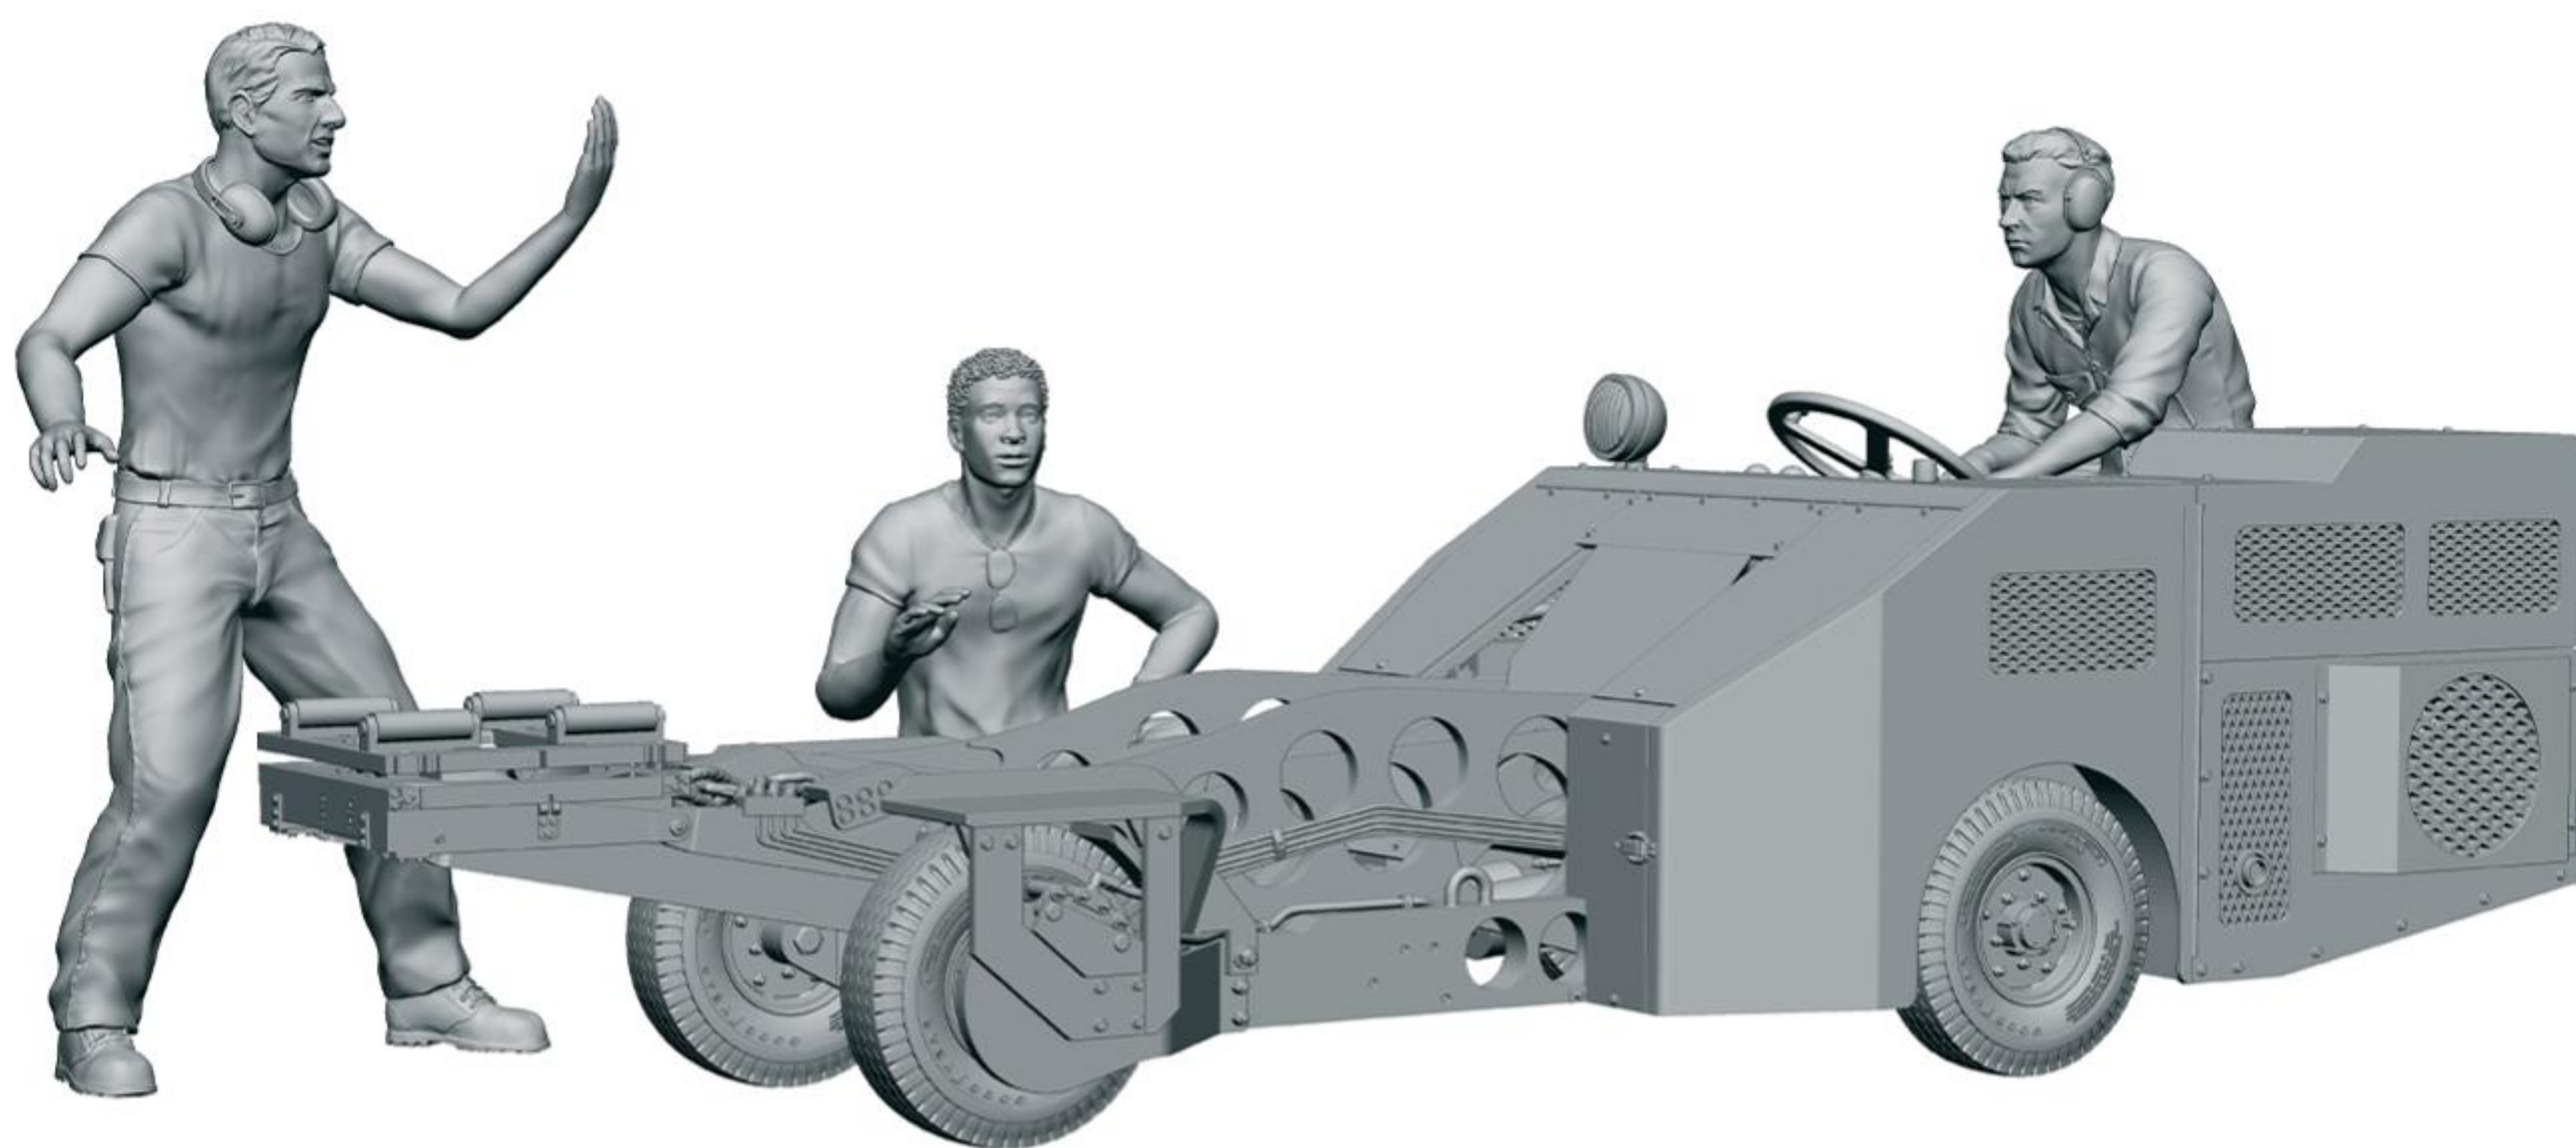

PAINT INSTRUCTION

	COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
	CHOCOLATE BROWN	H406	
	TAN	H44	C44
	FLESH	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
DARK GREEN	H70	C70