



 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

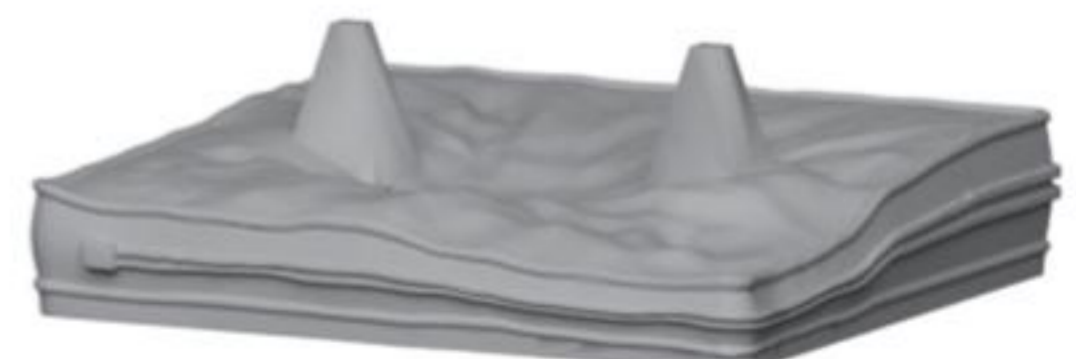

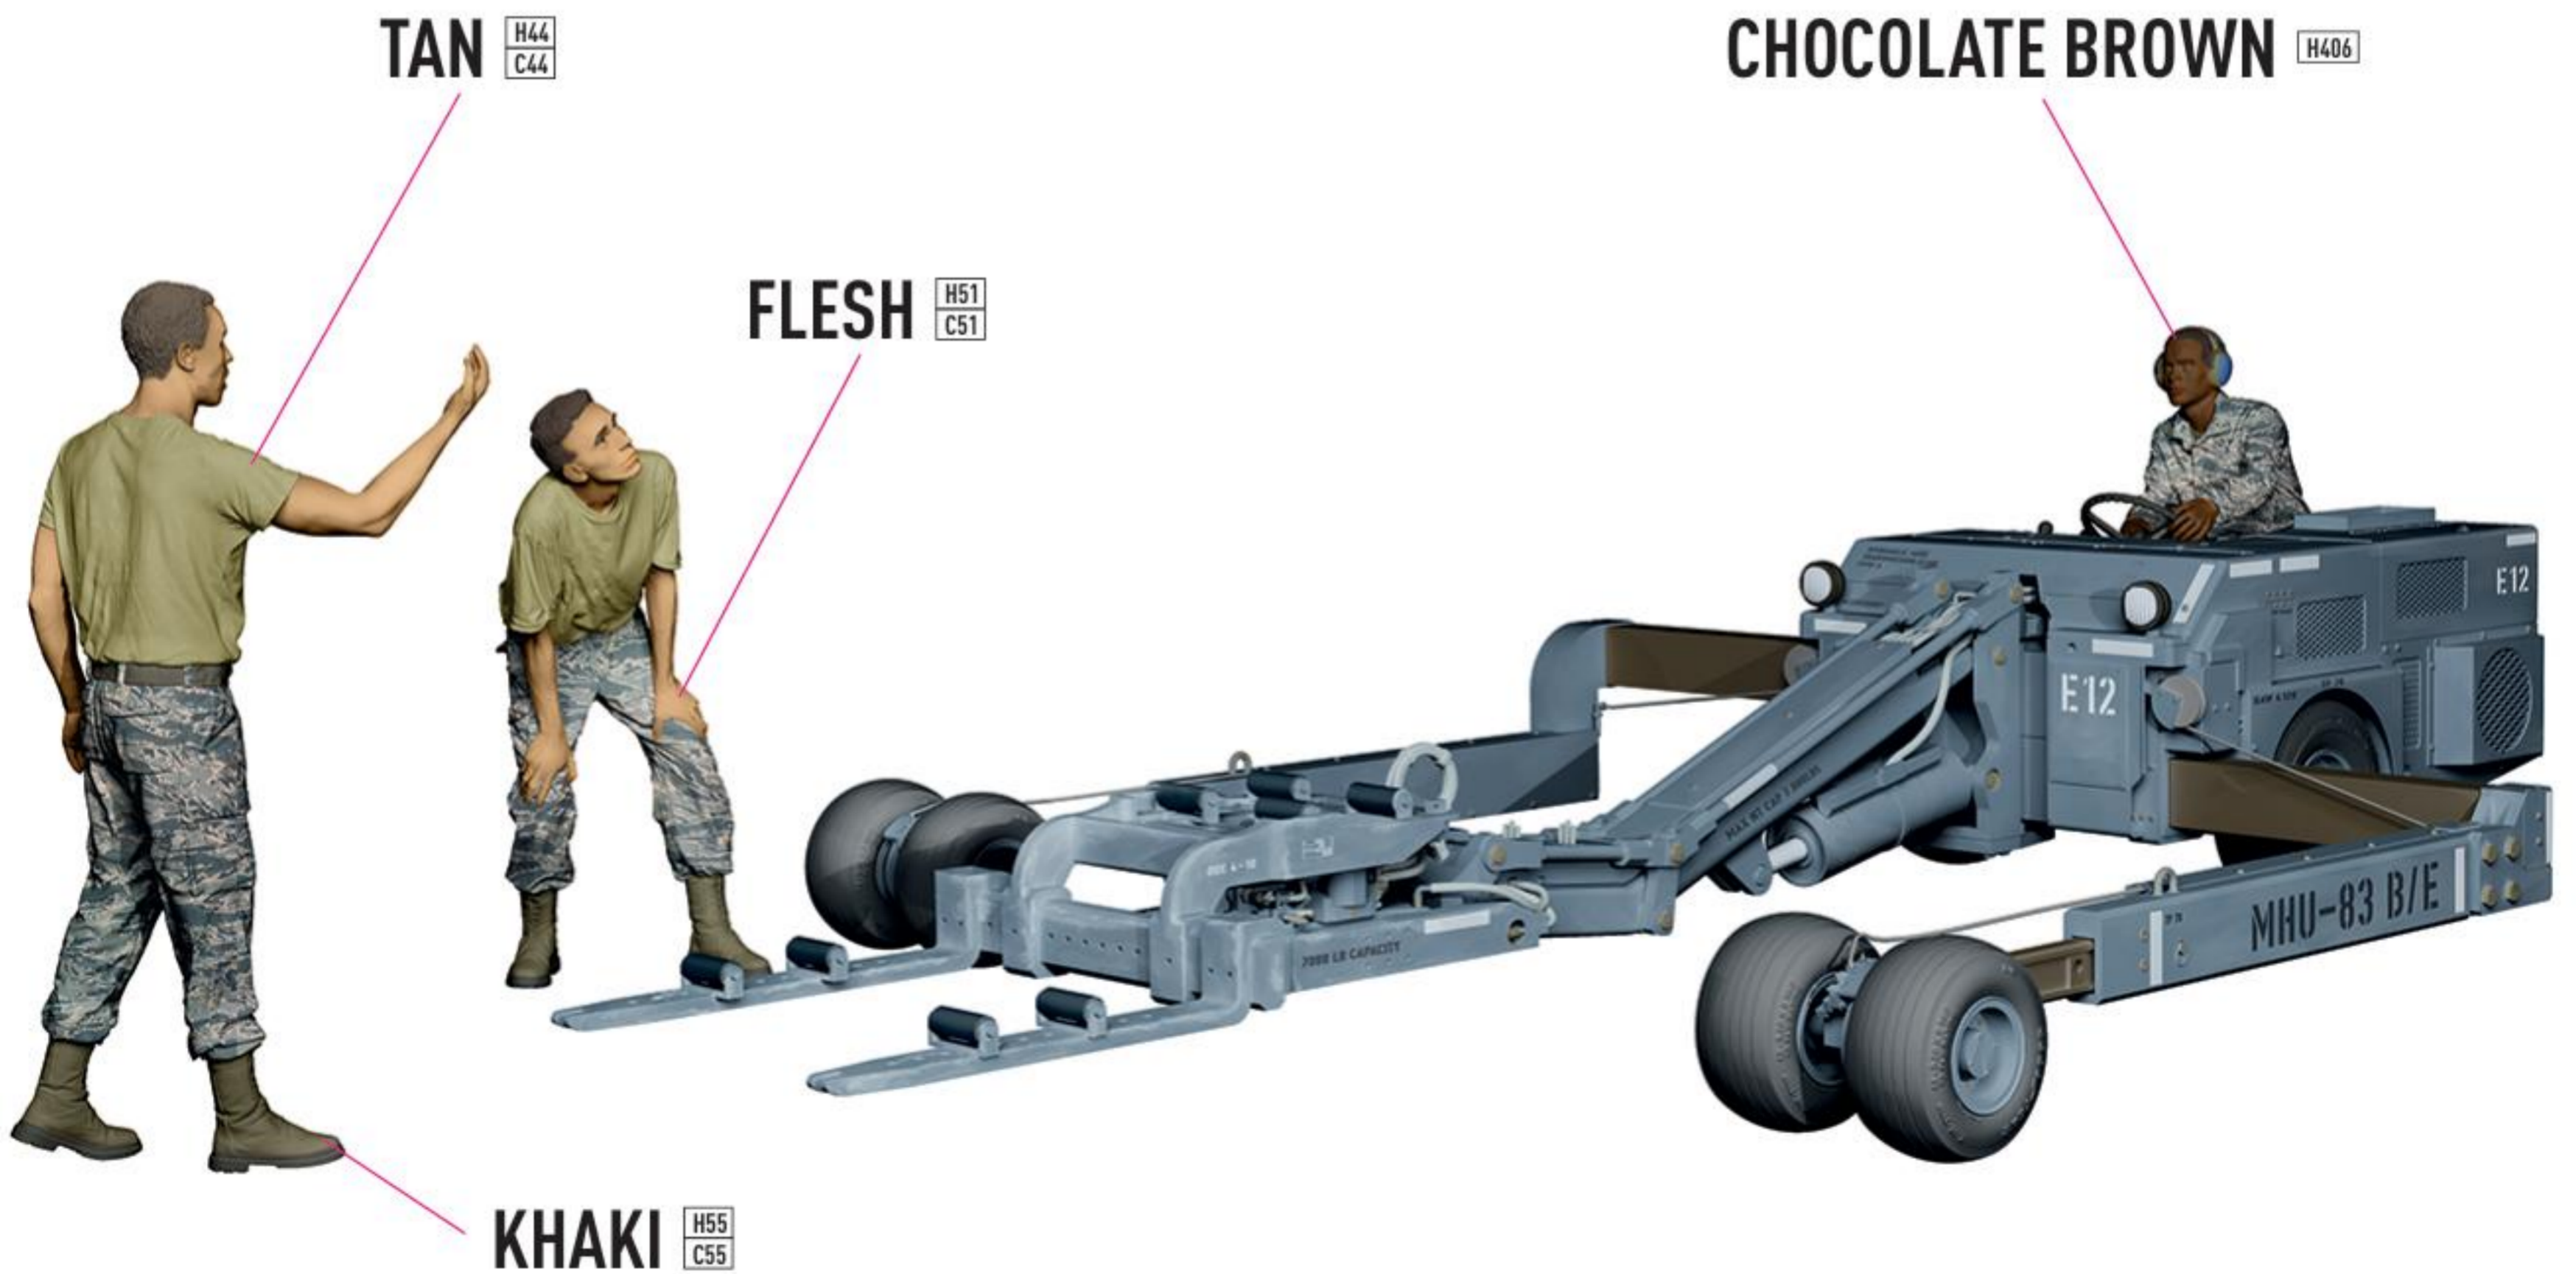

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
KHAKI	H55	C55
CHOCOLATE BROWN	H406	

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
TAN	H44	C44
FLESH	H22	C22