


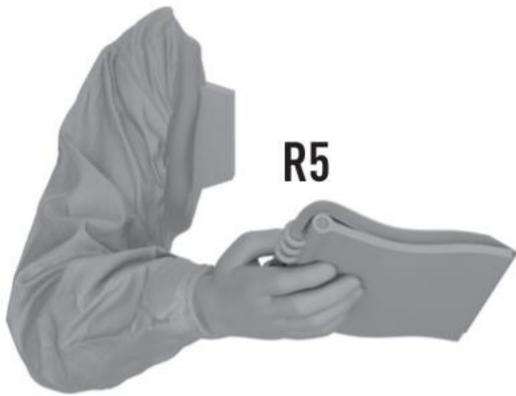
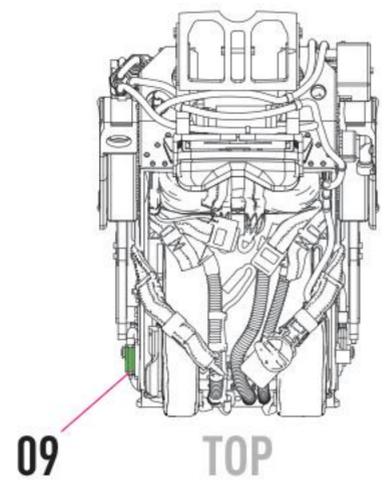


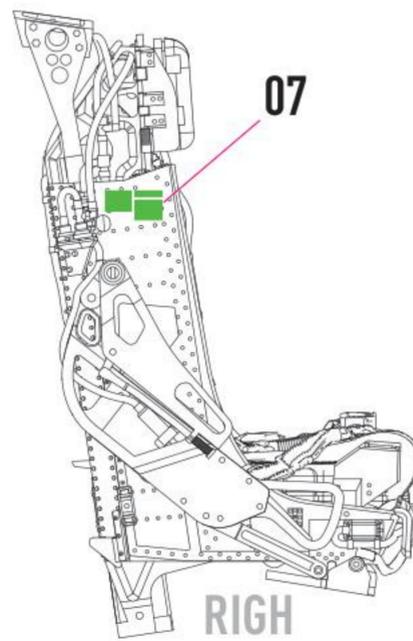

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

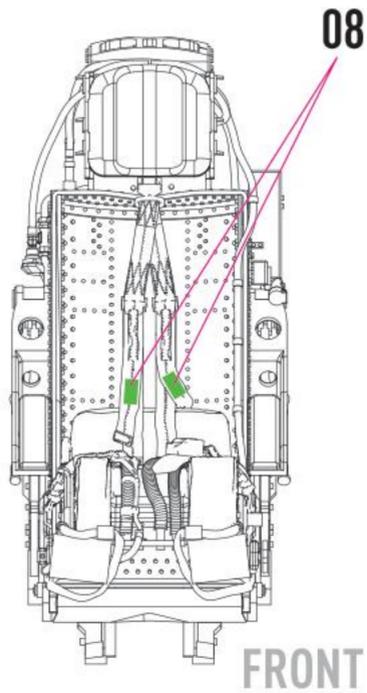

**DECALS
INSTRUCTION**

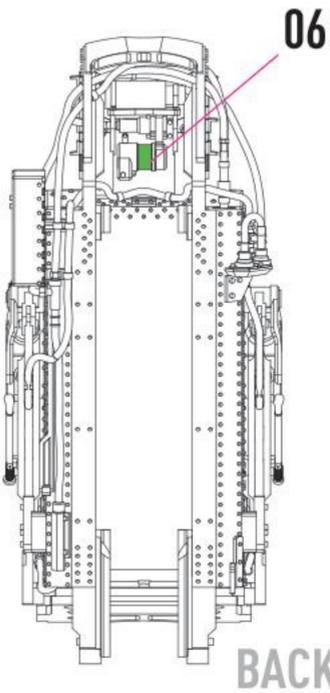



PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
MEDIUM SEA GRAY		C335
FLESH	H51	C51
YELLOW	H4	C4

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
DARK GREEN	H64	C23
FIELD GRAY	H48	C52
GRAY	H308	C308