


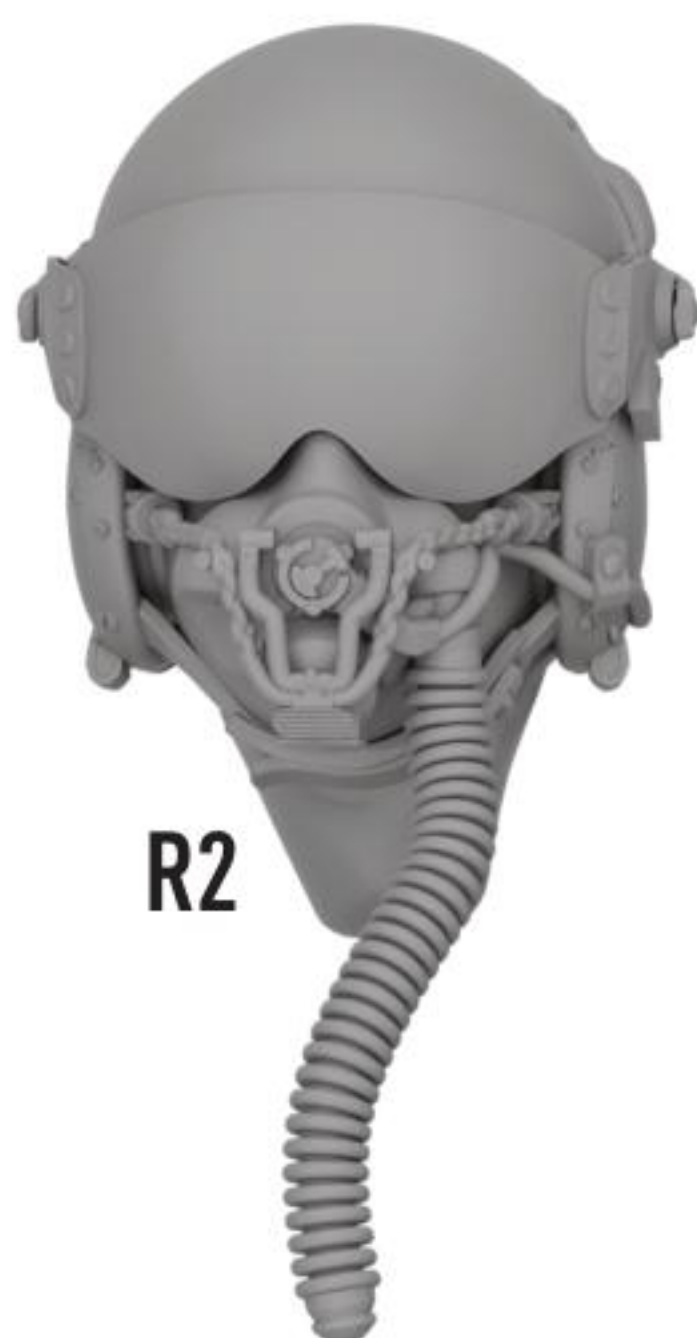

R2



USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**



R3

R1



R5




R7



R4



R6

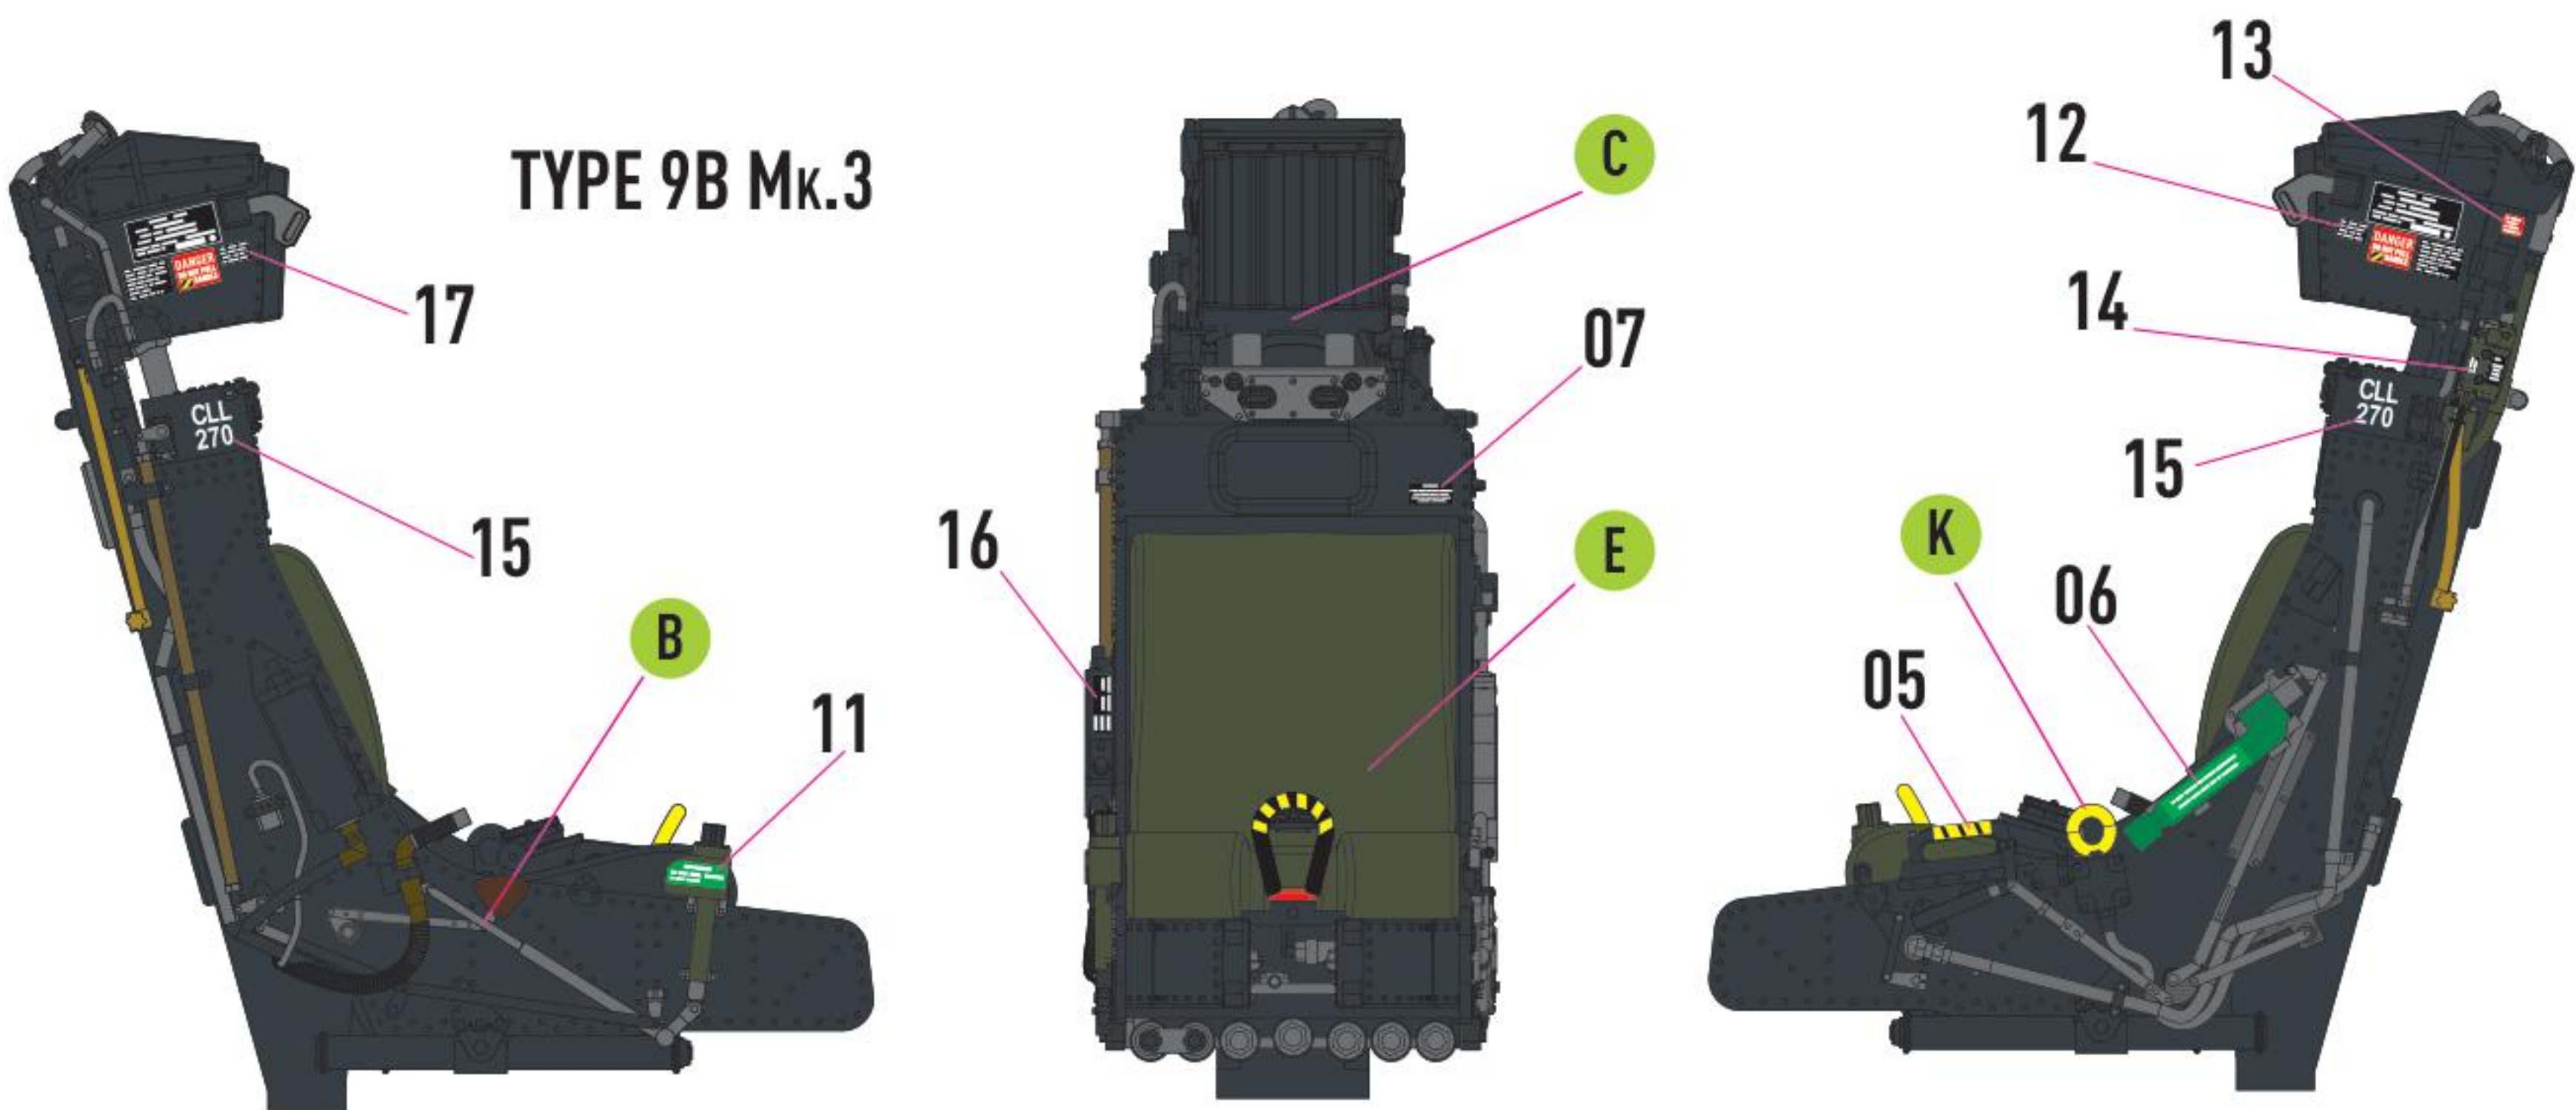

PAINT INSTRUCTION

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
A	NEUTRAL GRAY	H53	C13
B	ALUMINIUM		MC218
C	DARK IRON		MC214
D	SEMI GLOSS BLACK		C92
E	OLIVE DRAB	H304	C304
F	KHAKI	H55	C55

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
G	KHAKI GREEN		C54
H	FIELD GREEN	H340	C340
I	GREEN	H6	C6
J	NAVY BLUE	H54	C14
K	YELLOW	H329	C329
L	FLESH	H51	C51