



 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS


**DETAILS AFTER REMOVAL
FROM SUPPORTS**



SEMI GLOSS BLACK C92

DARK SEAGRAY H75
C25

YELLOW H329
C29

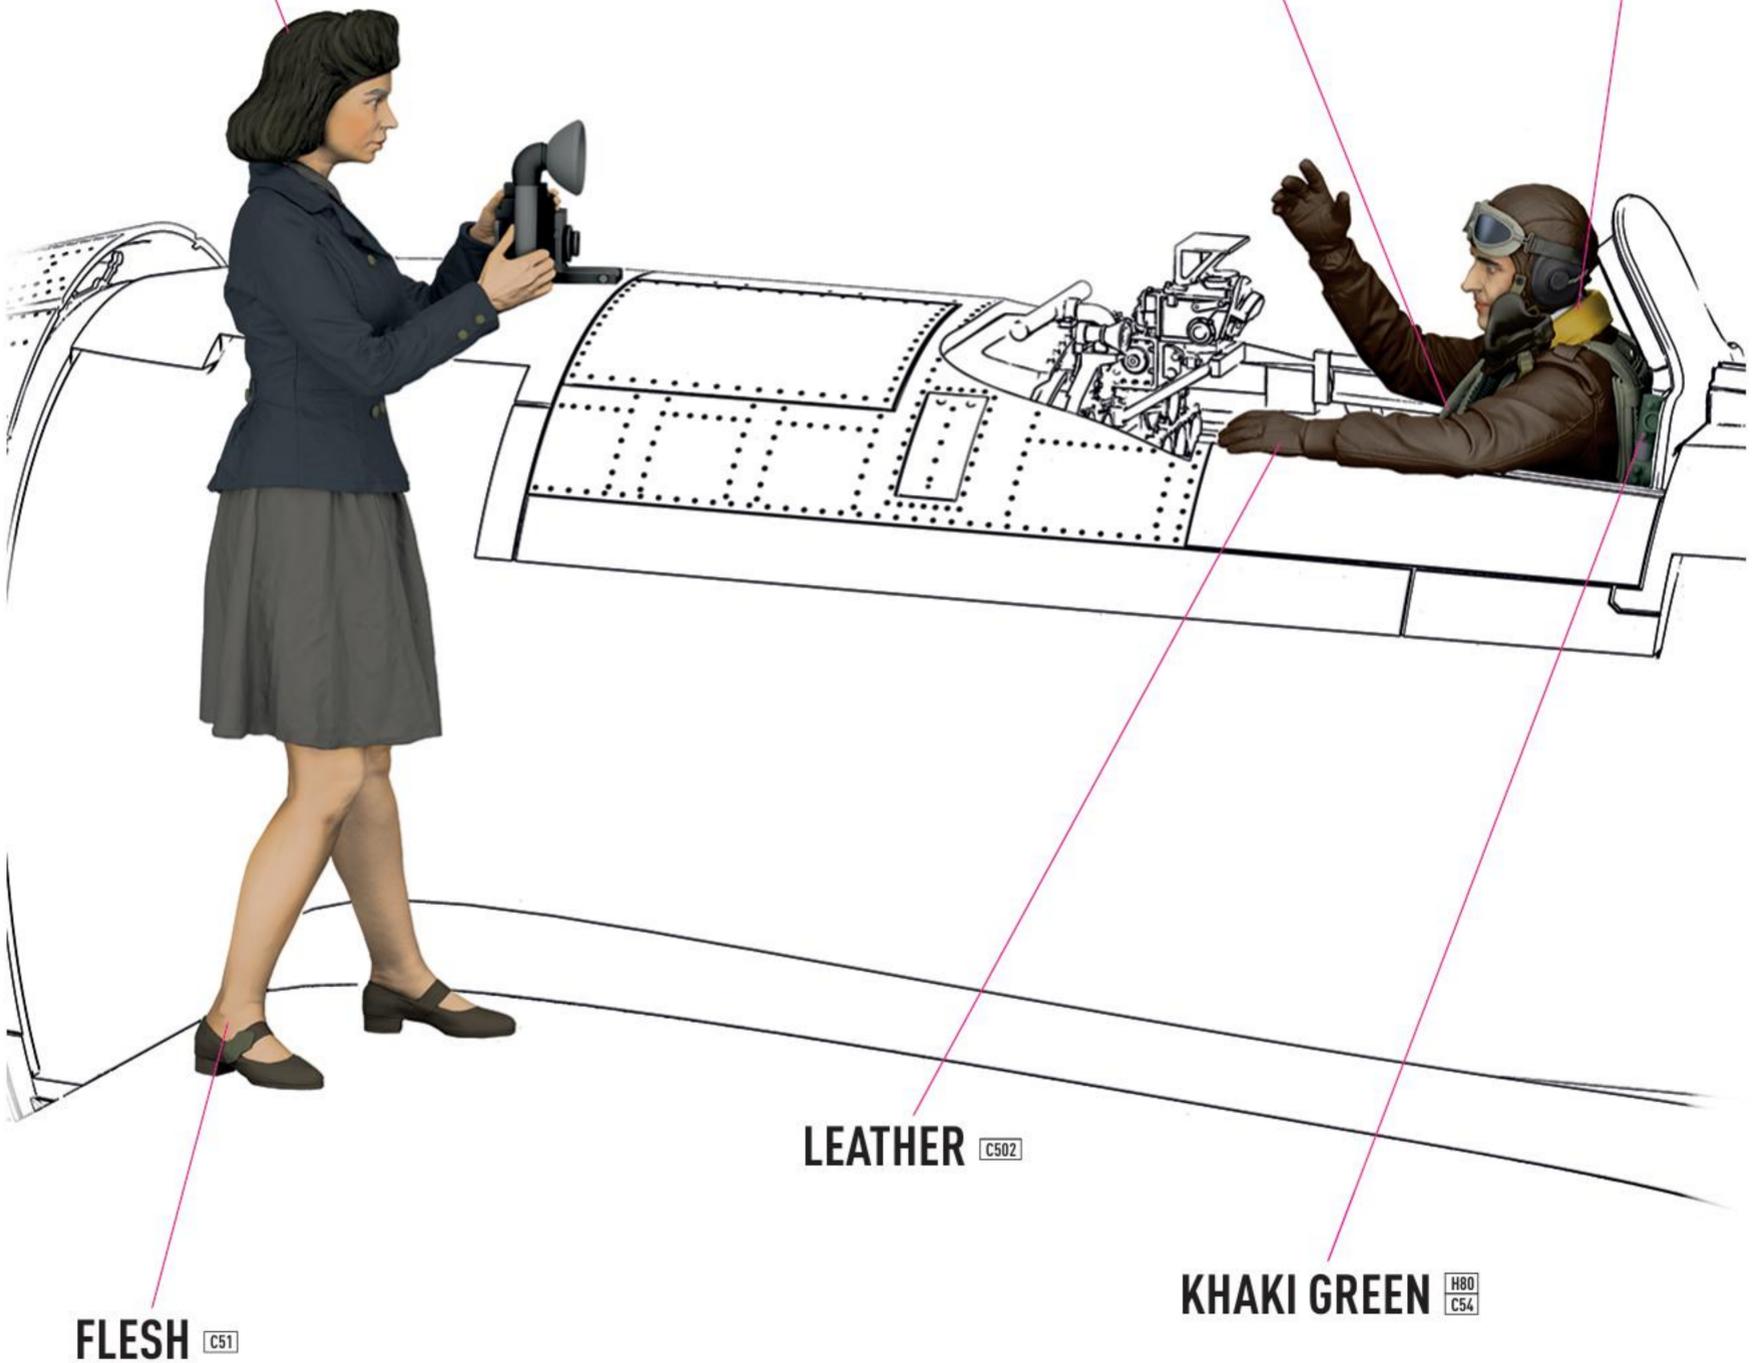

FLESH C51

LEATHER C502

KHAKI GREEN H80
C54

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
FLESH		C51
YELLOW	H329	C22
DARK SEAGRAY	H75	C25

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
LEATHER		C520
KHAKI GREEN	H51	C51
SEMI GLOSS BLACK		C92