





USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL  
FROM SUPPORTS**

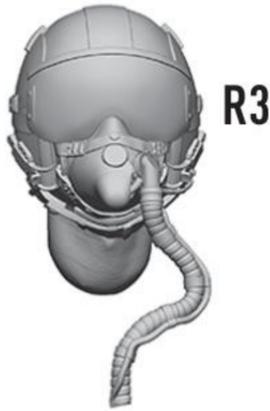

SECOND PILOT

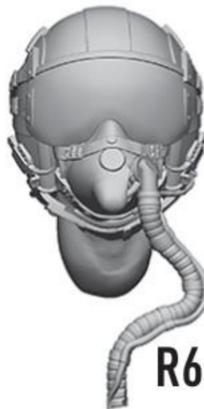

FIRST PILOT





## PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
INTERIOR GREEN	H27	C27
OLIVE DRAB	H38	C38
RLM02 GRAY	H60	C60

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
NEUTRAL GRAY	H13	C13
TAN	H44	C44

