




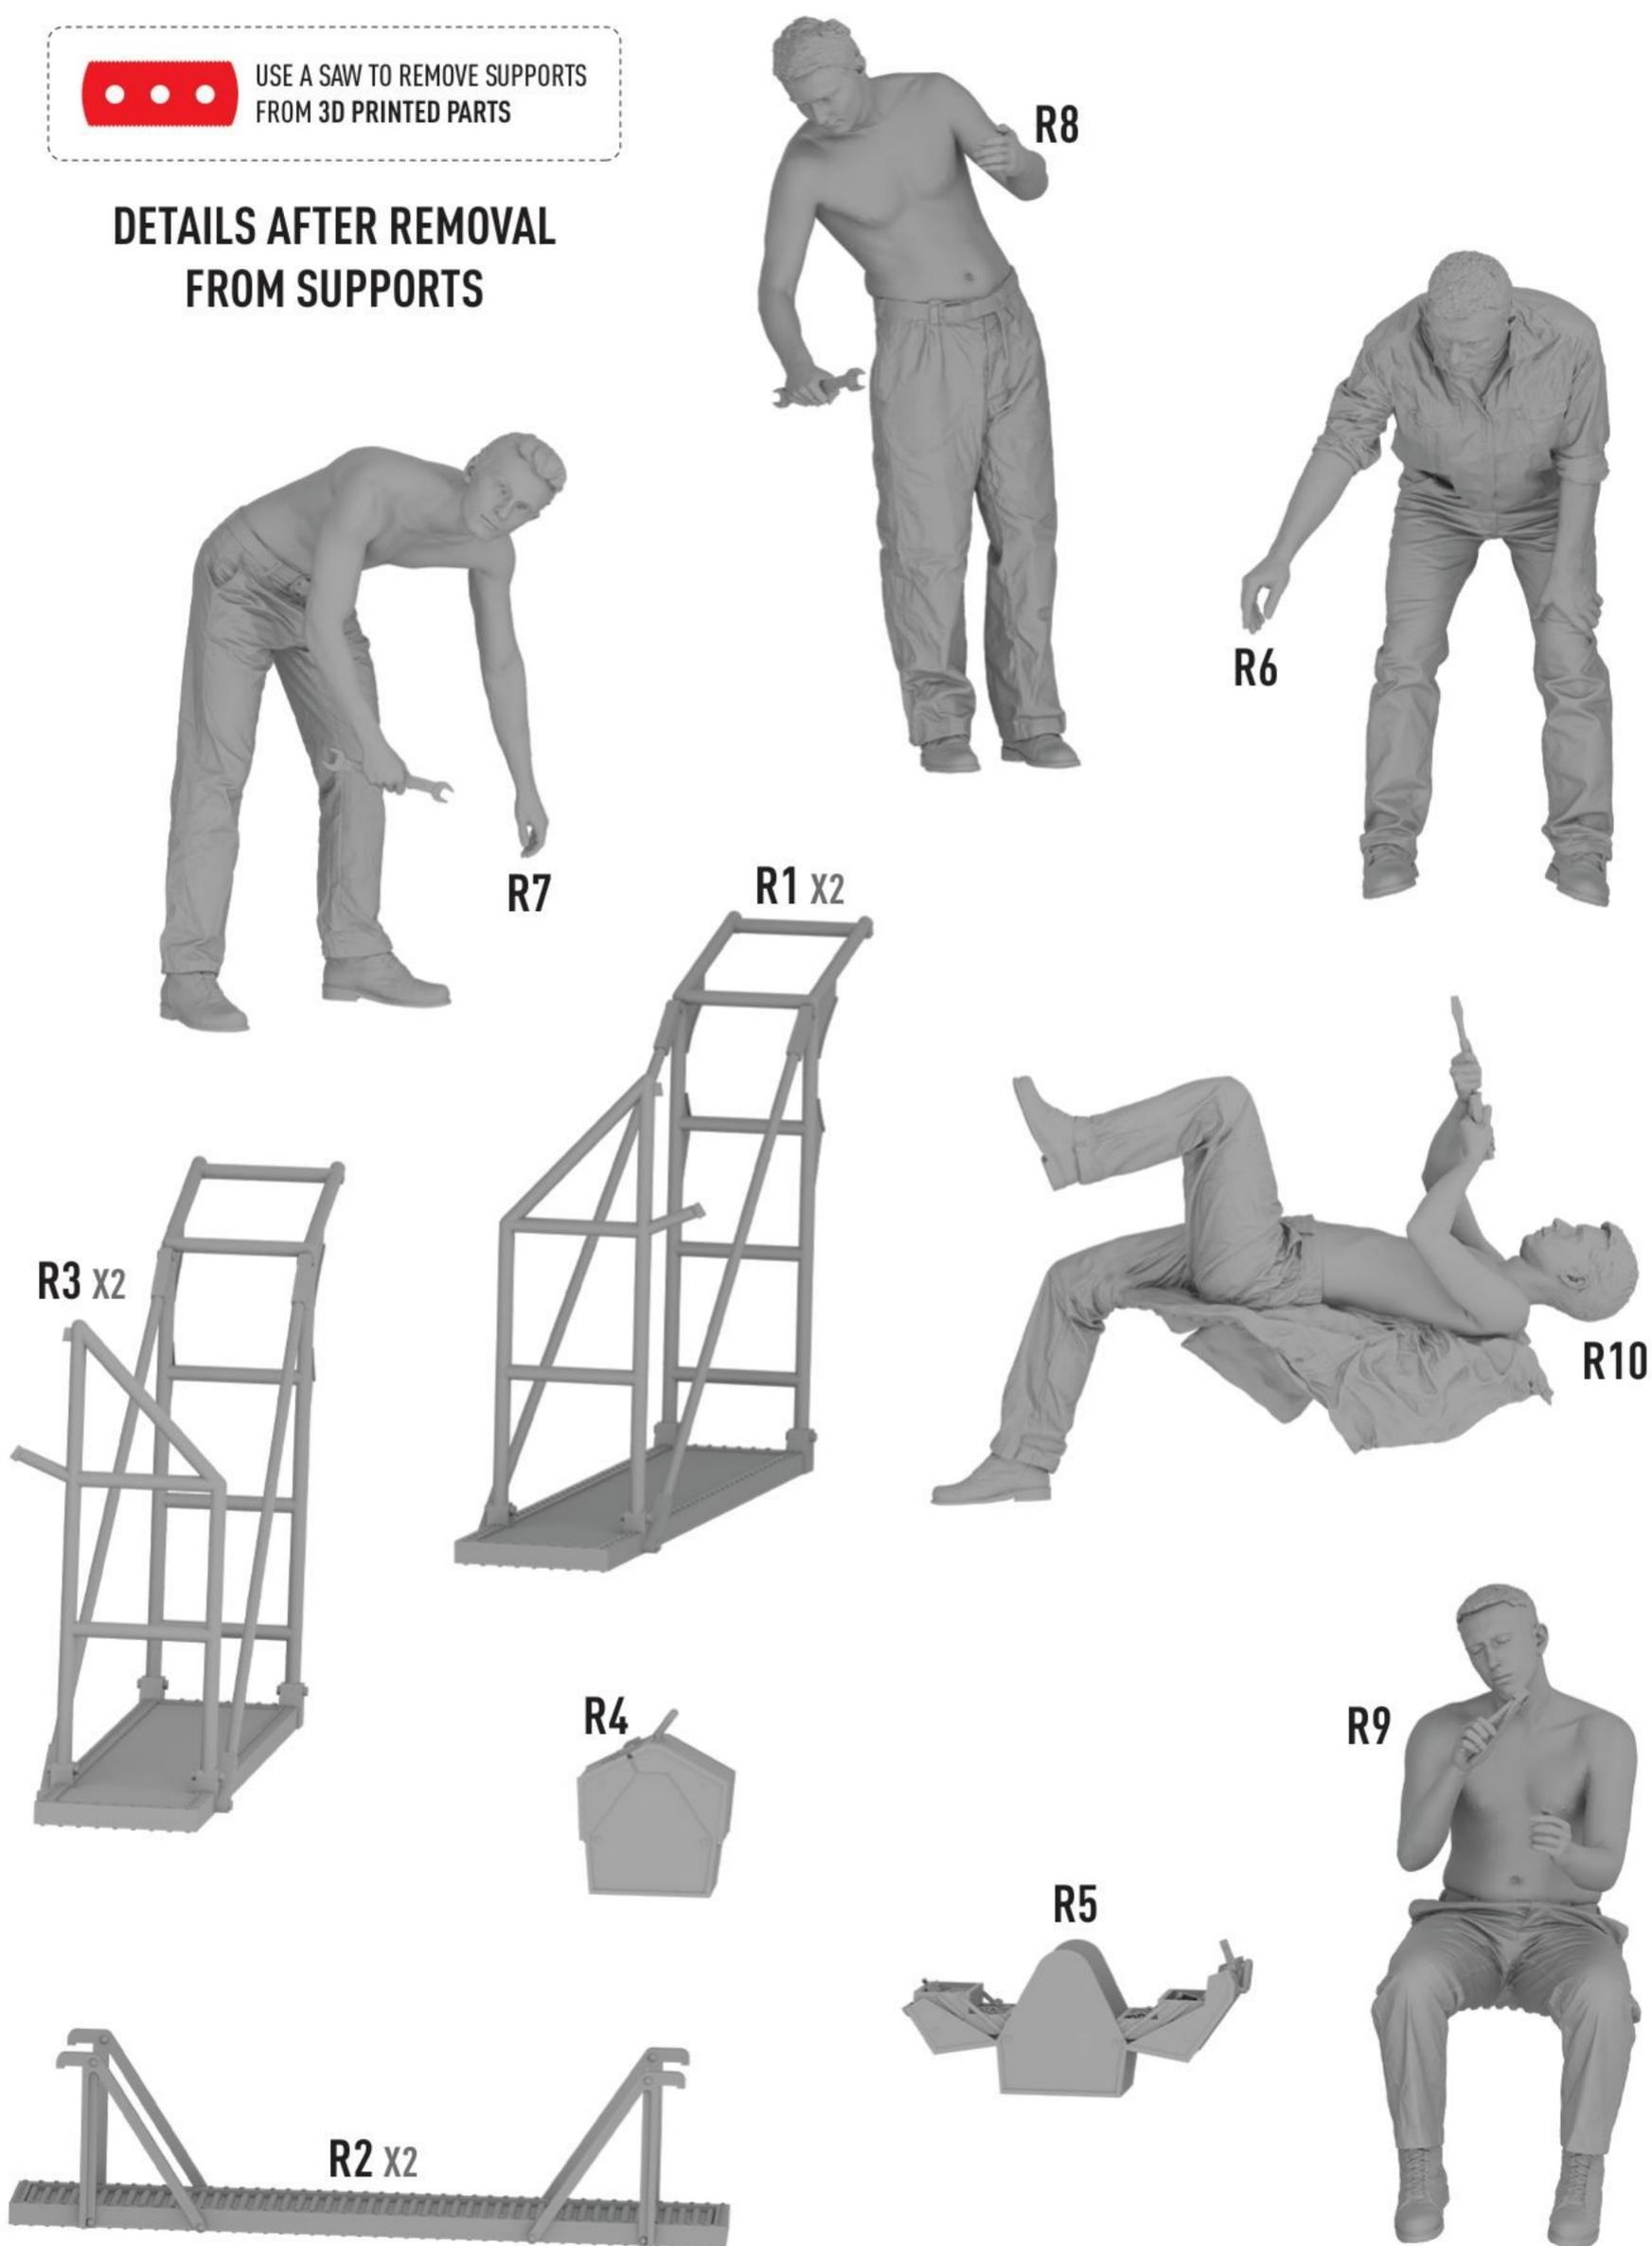

USE A SAW TO REMOVE SUPPORTS  
 FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL  
 FROM SUPPORTS**

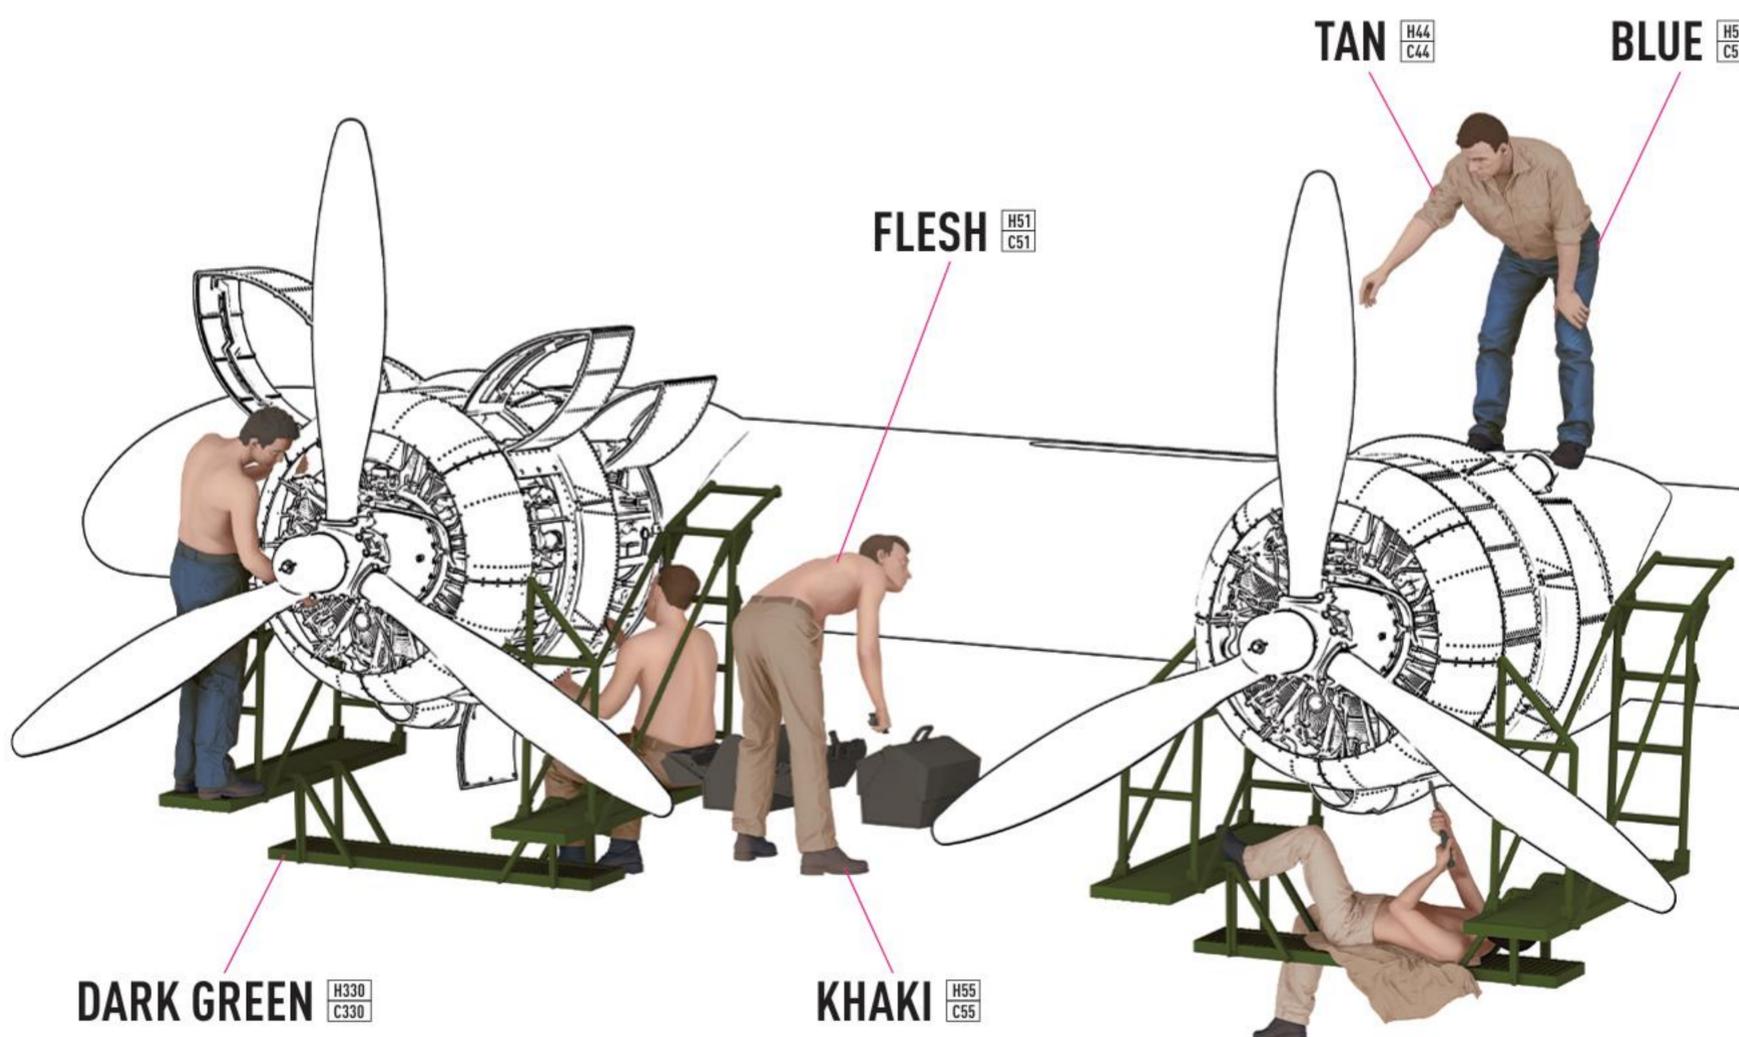

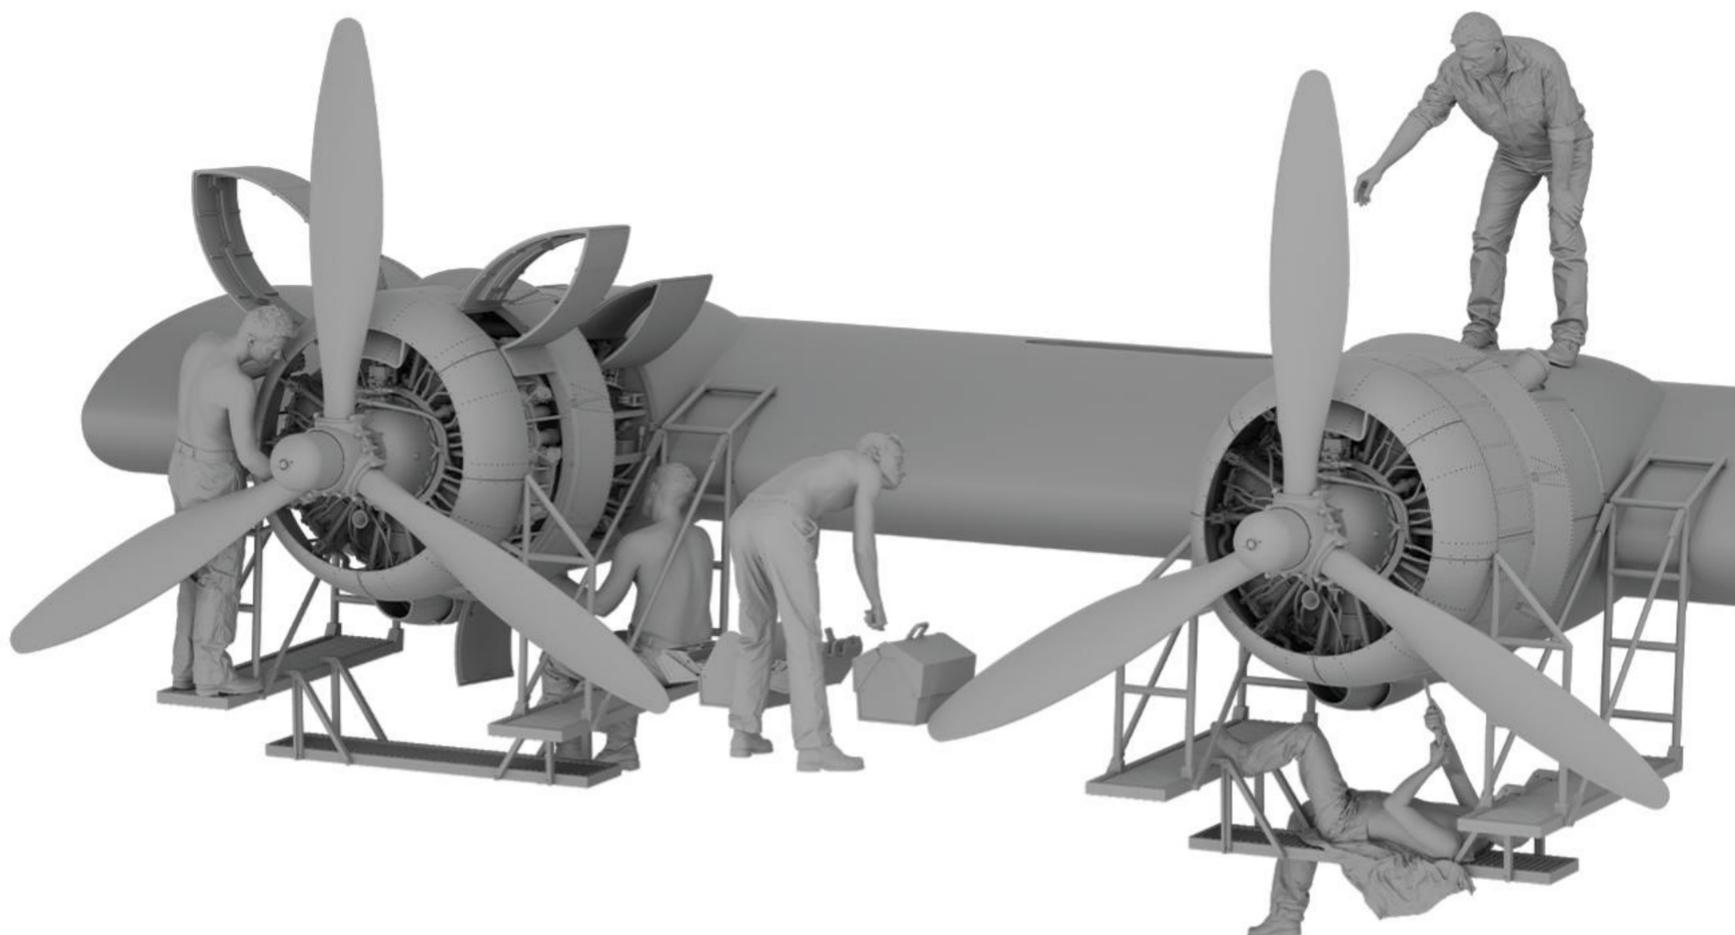

**DARK GREEN** H330  
C330

**KHAKI** H55  
C55

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
BLUE	H5	C5
FLESH	H51	C51
KHAKI	H55	C55

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
DARK GREEN	H330	C330
TAN	H44	C44