



 USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

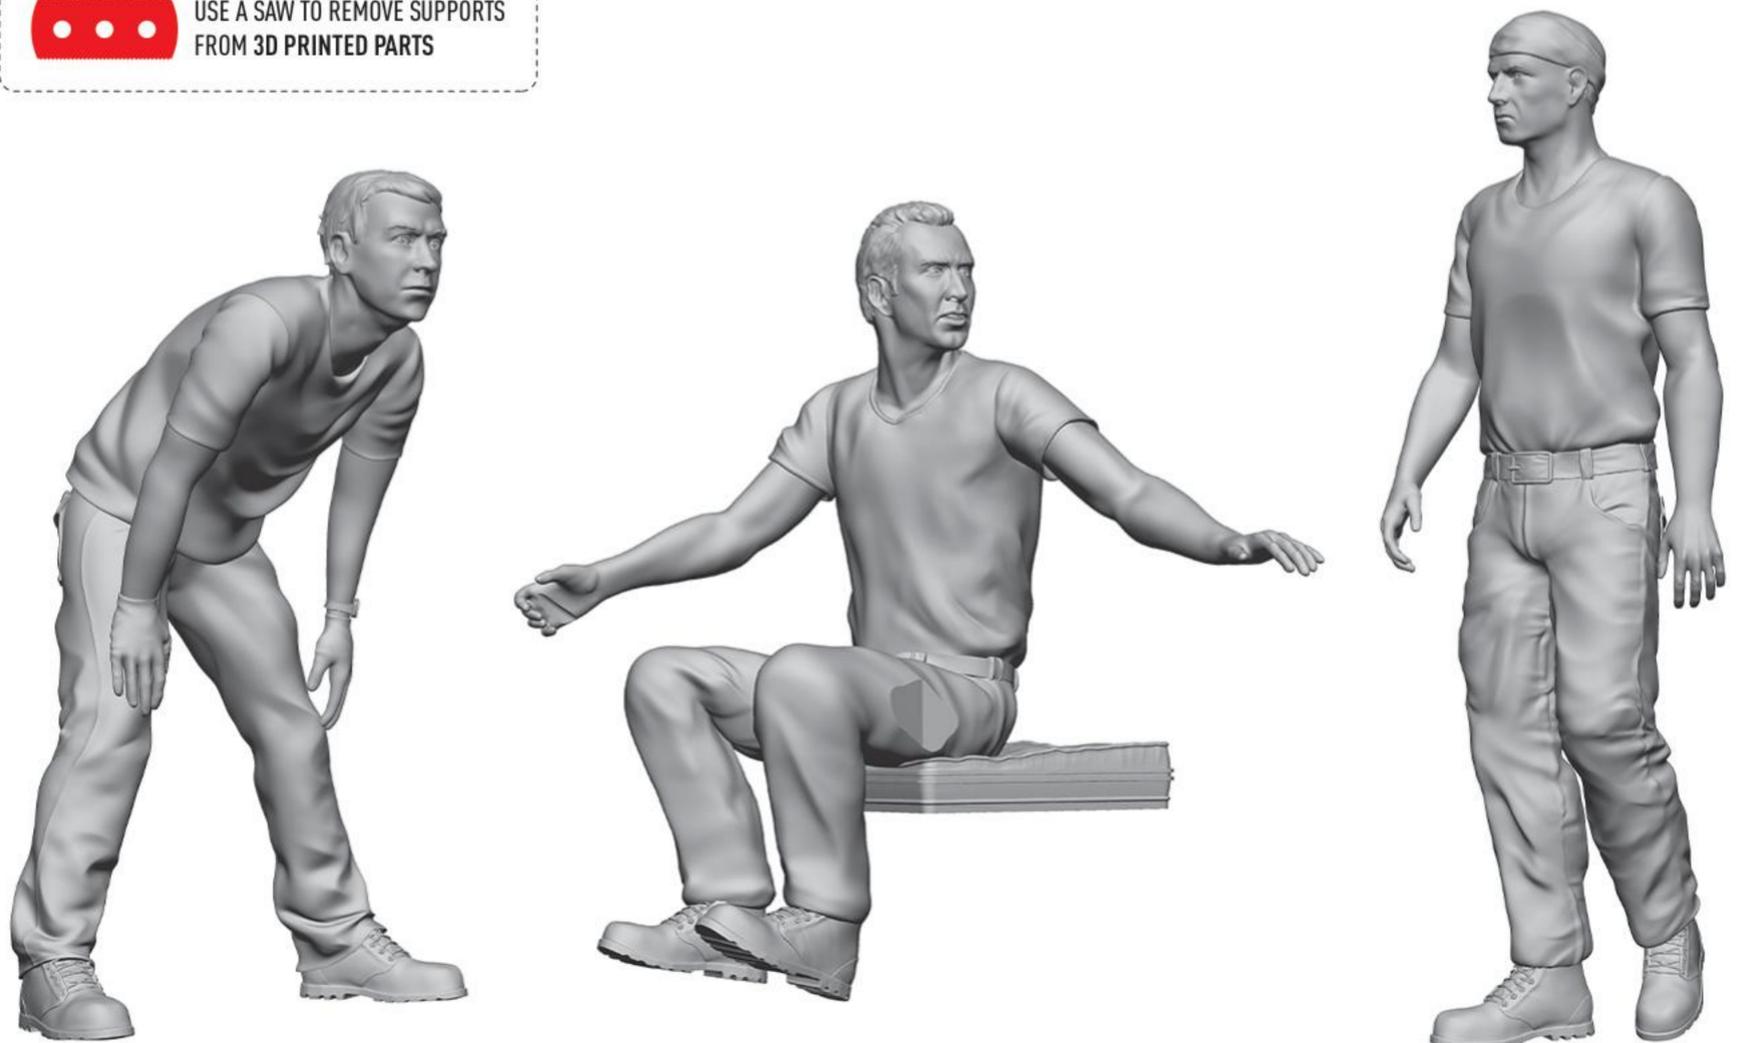


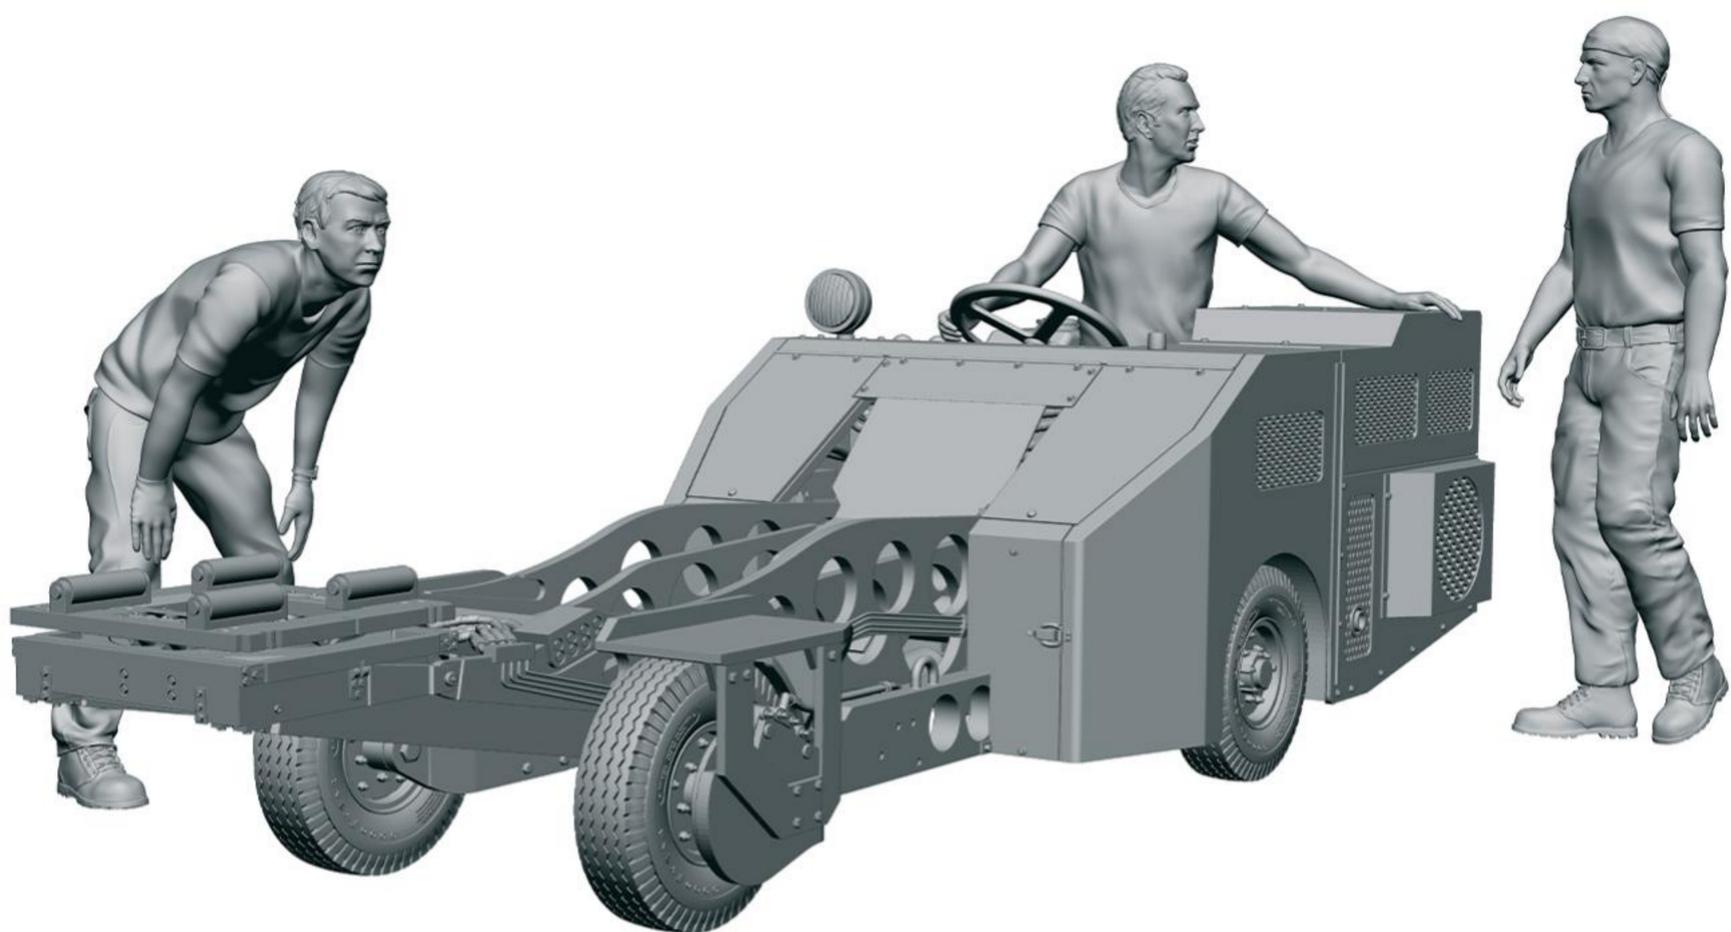

**DARK GREEN** H70  
C70

**TAN** H44  
C44

**FLESH** H51  
C51

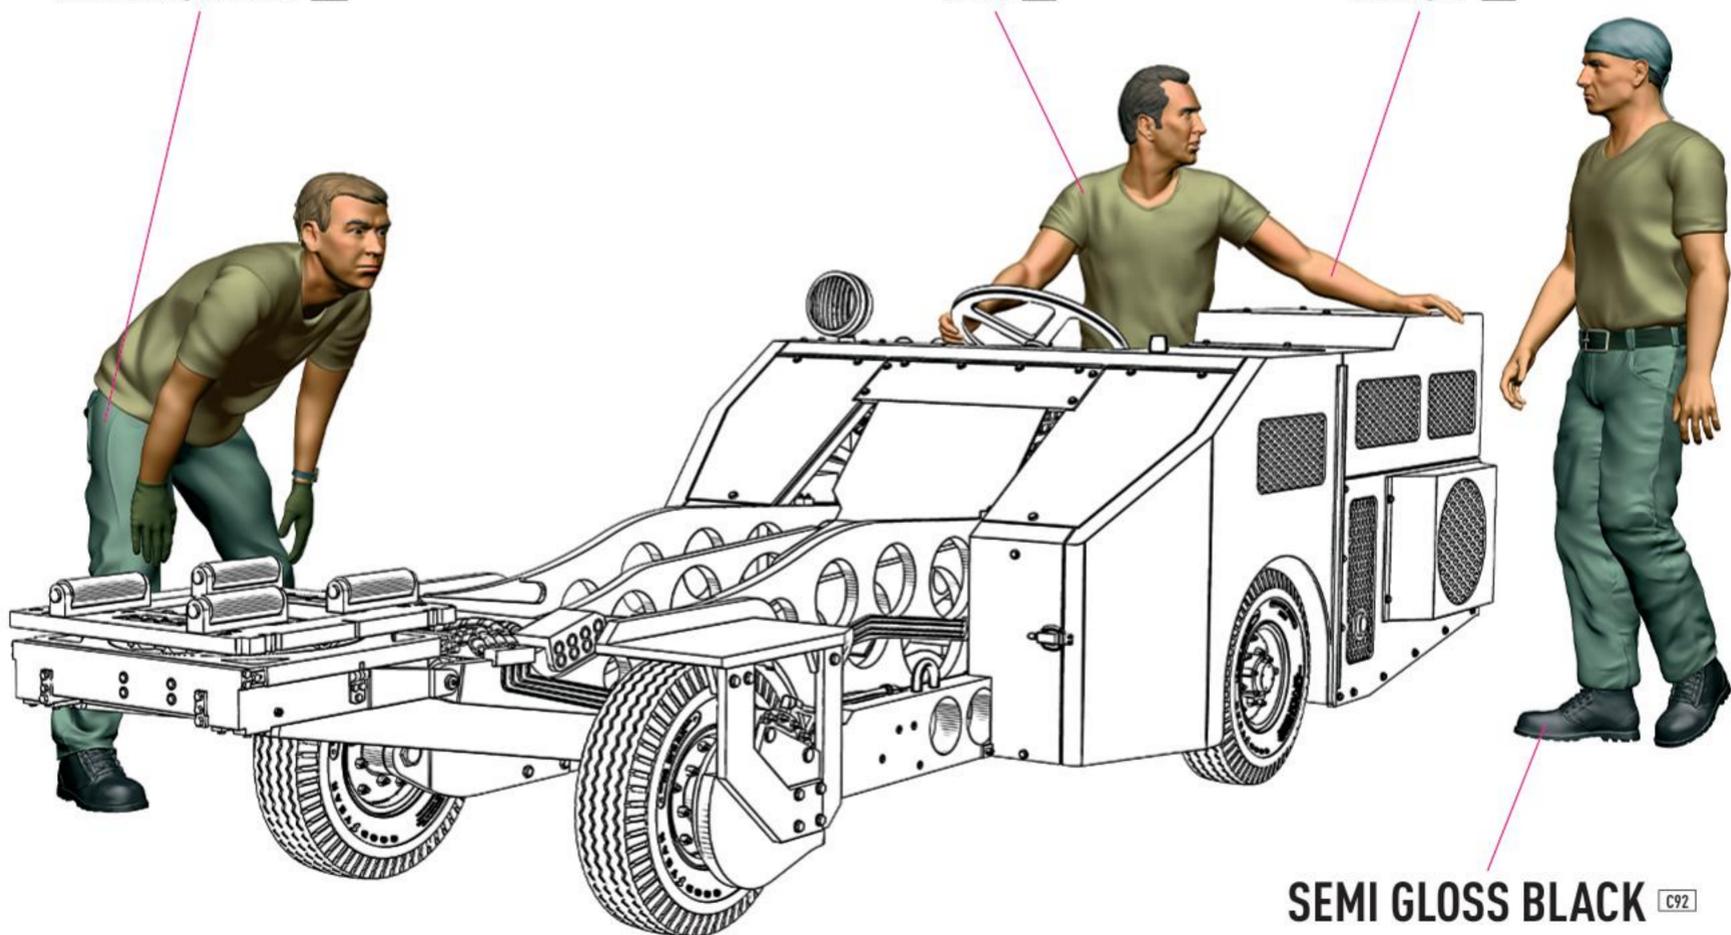

**SEMI GLOSS BLACK** C92

## PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
<b>CRED BROWN</b>	H47	C41
<b>TAN</b>	H44	C44
<b>FLESH</b>	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
<b>SEMI GLOSS BLACK</b>		C92
<b>DARK GREEN</b>	H70	C70