




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**

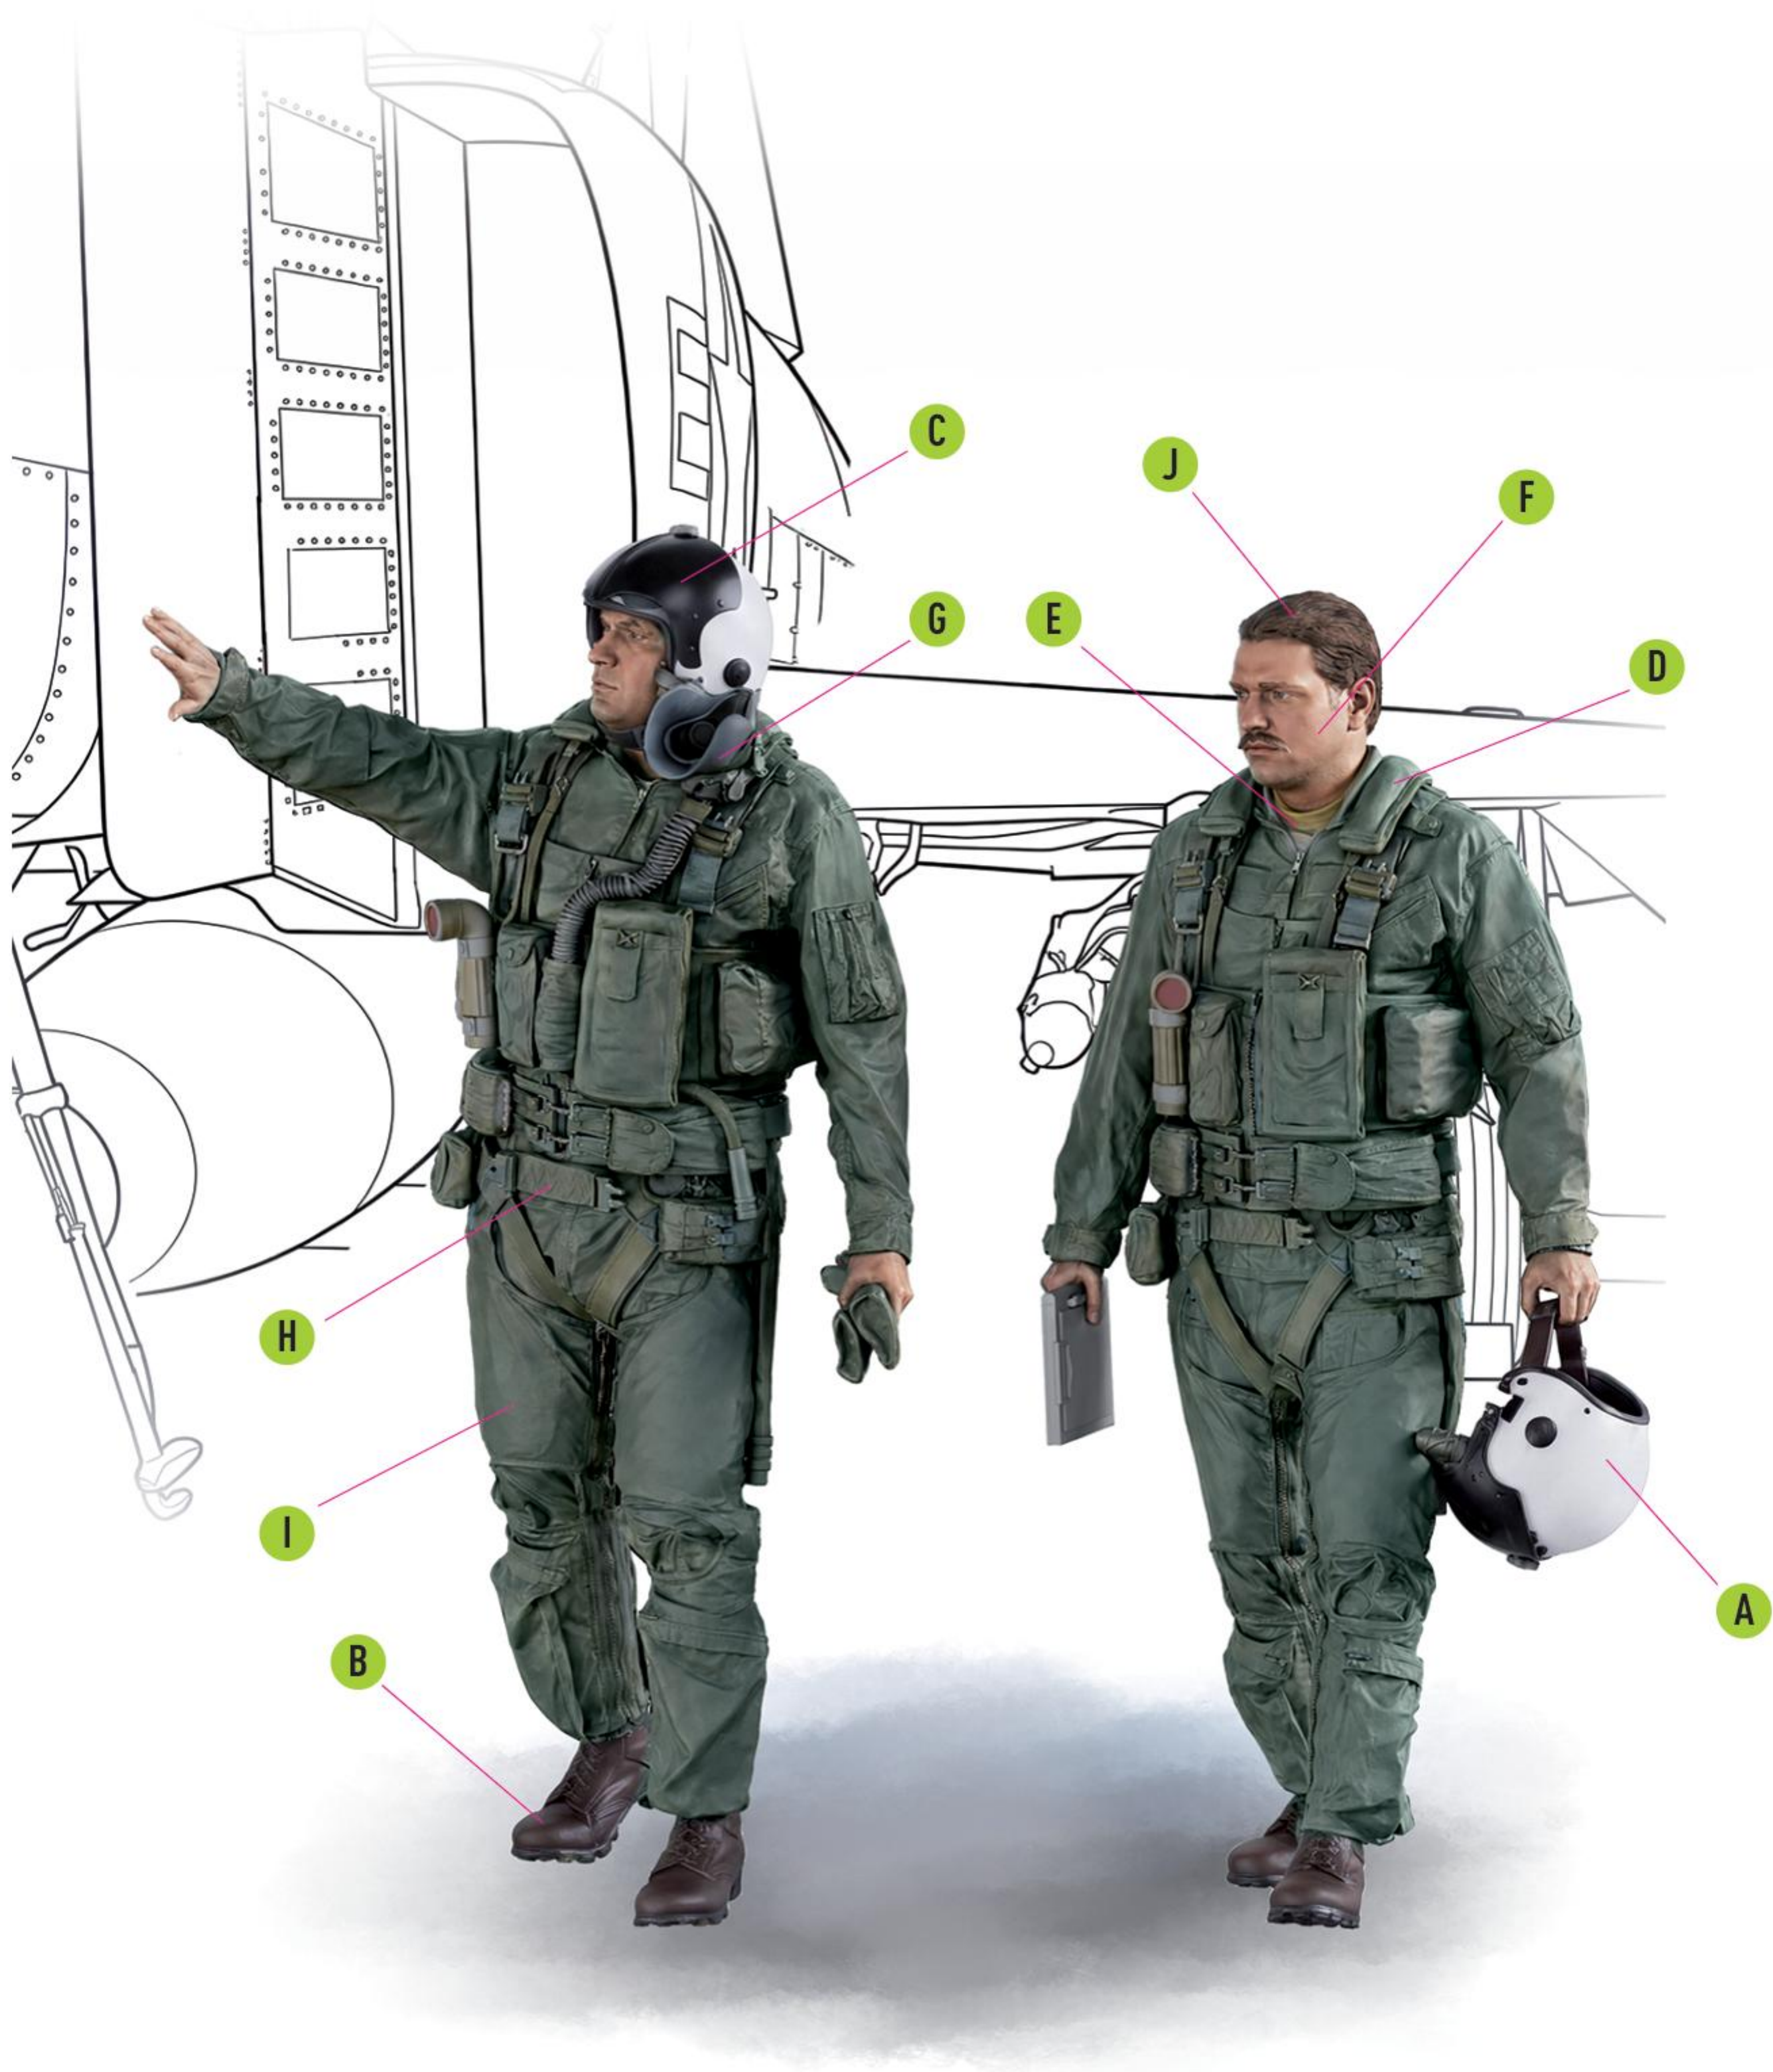

PAINT INSTRUCTION

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
A	OFF WHITE	H21	C69
B	RUSSET ROST BRAUN		C81
C	SEMI GLOSS BLACK		C92
D	FIELD GREEN	H340	C340
E	KHAKI	H55	C55

#	COLOR	GUNZE / AQEOUS	GUNZE / MR.COLOR
F	FLESH	H51	C51
G	DARK GRAY	H82	C31
H	OLIVE DRAB	H304	C304
I	KHAKI GREEN		C54
J	RED BROWN	H47	C41