




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL
FROM SUPPORTS**

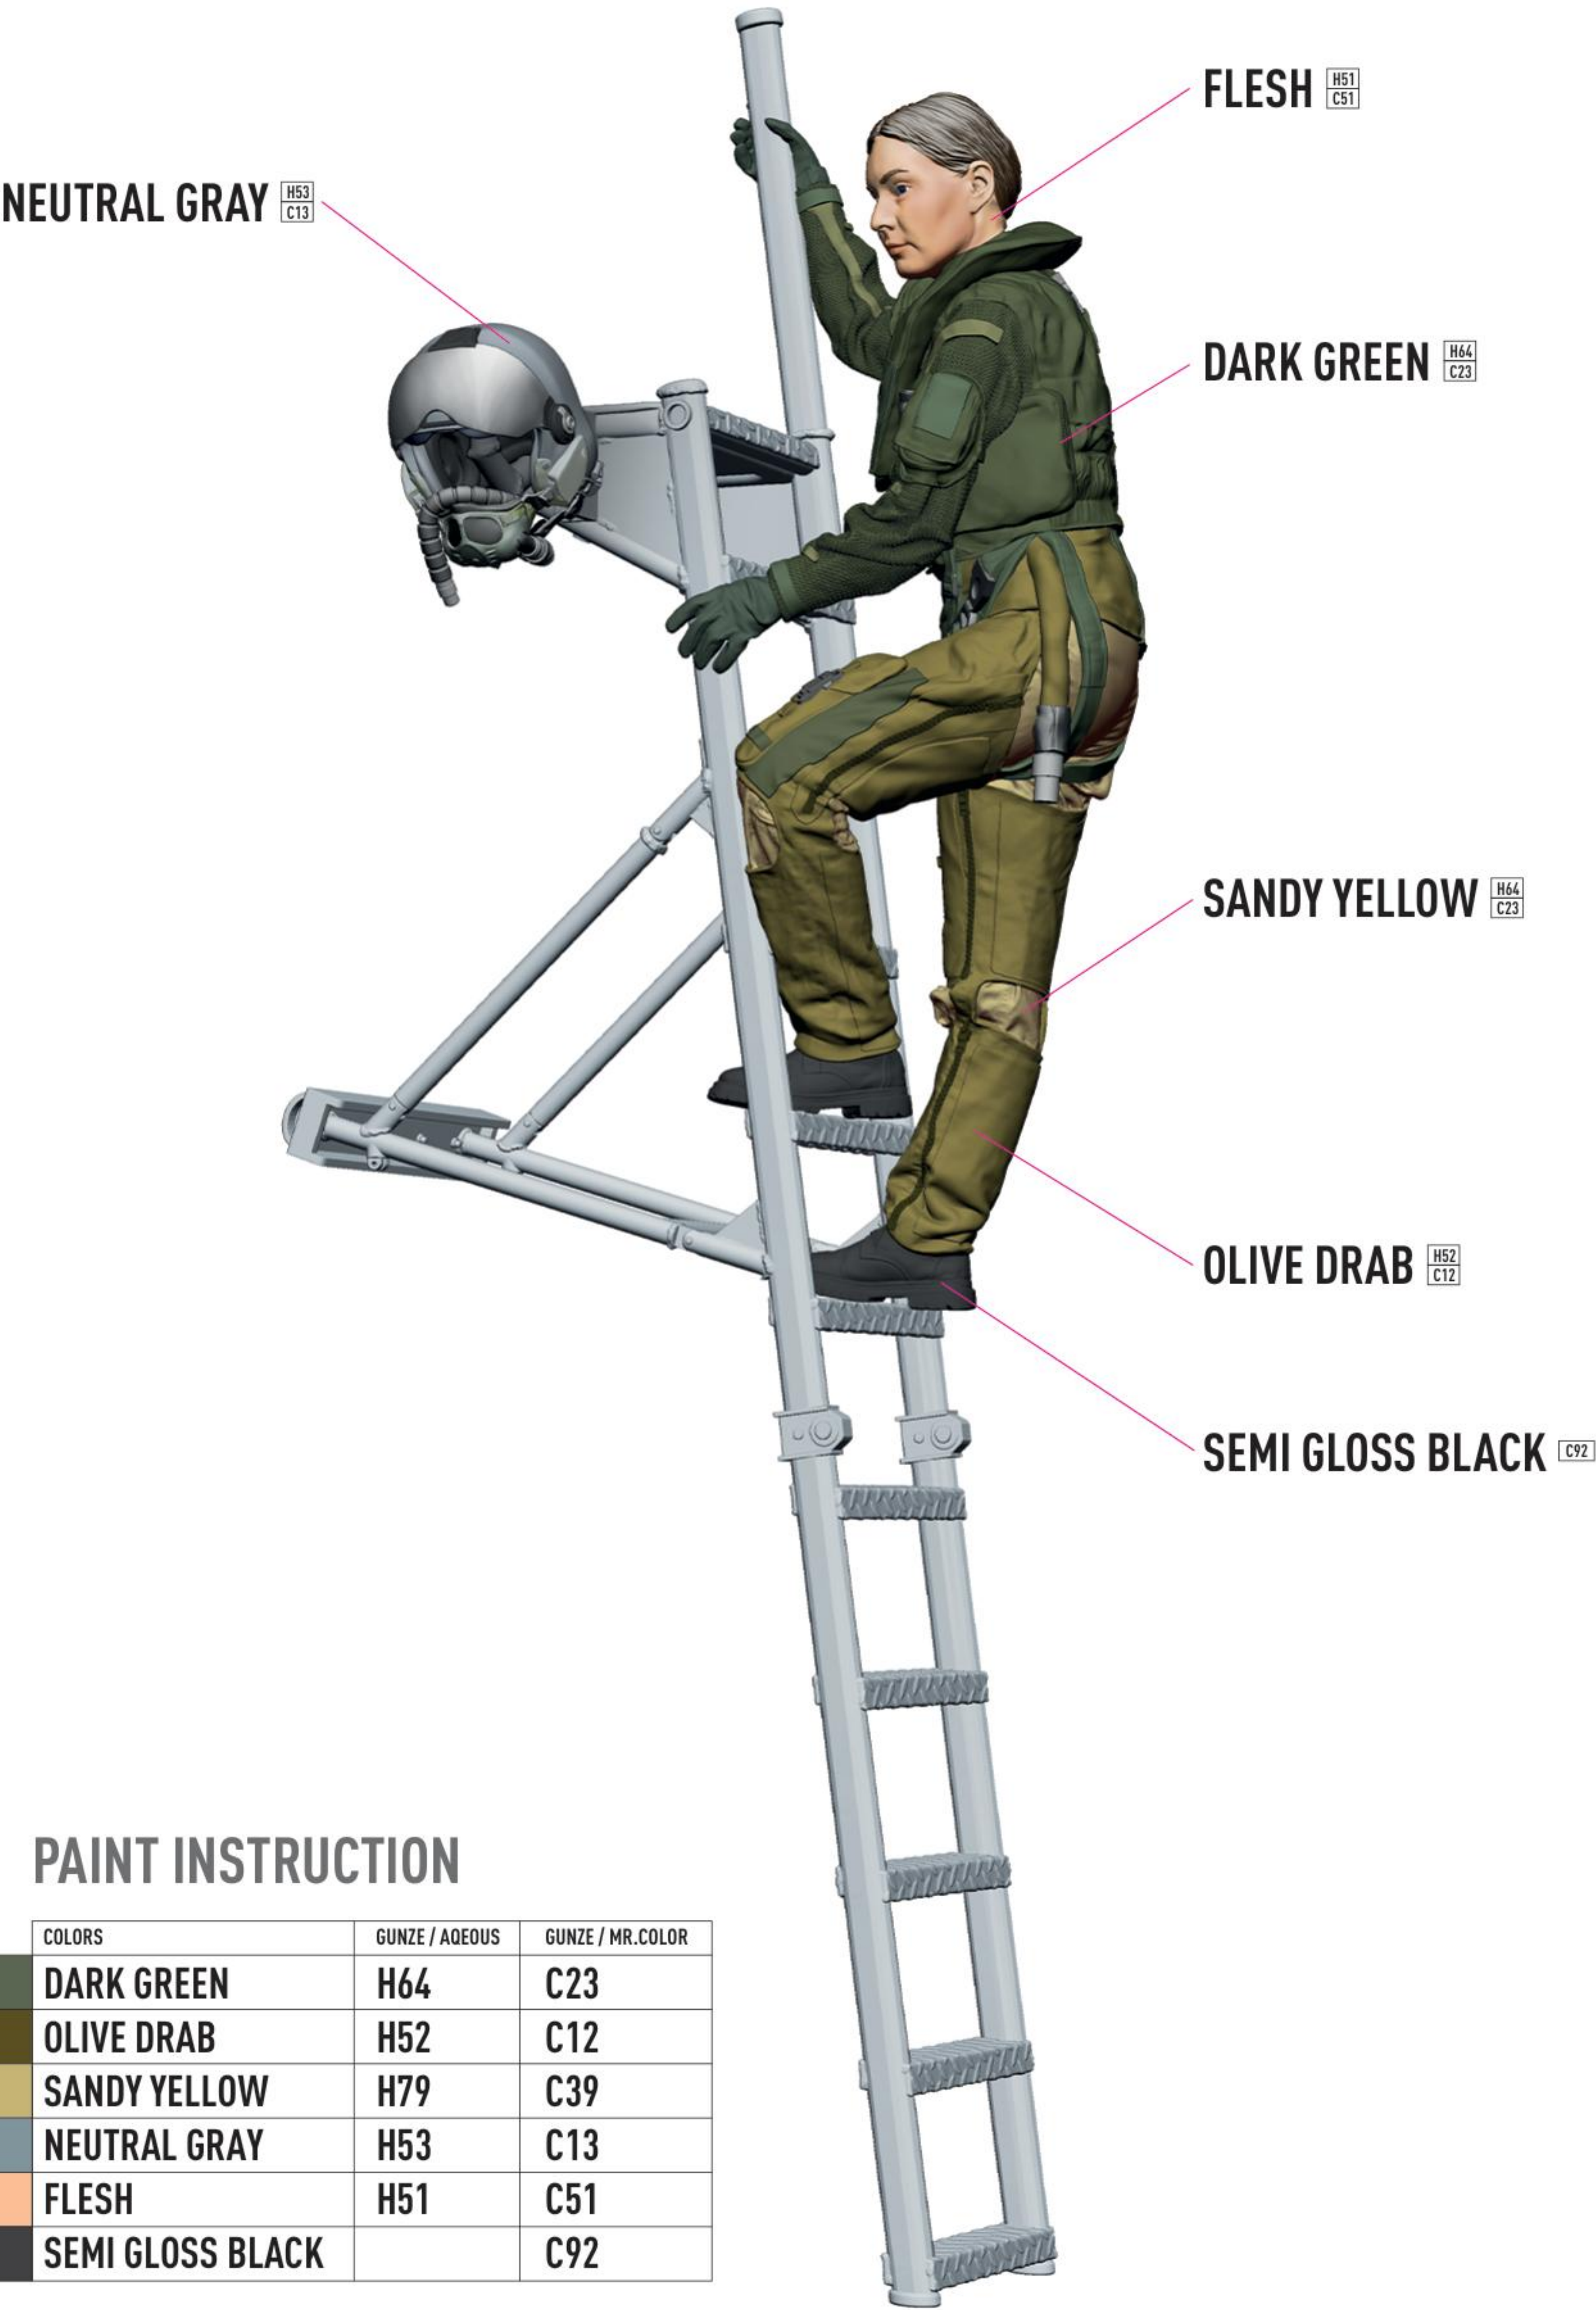

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
DARK GREEN	H64	C23
OLIVE DRAB	H52	C12
SANDY YELLOW	H79	C39
NEUTRAL GRAY	H53	C13
FLESH	H51	C51
SEMI GLOSS BLACK		C92